


TELETYPE

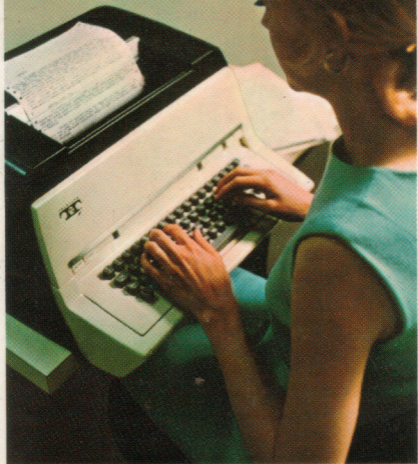

For information about Teletype data communications equipment and its applications contact: Teletype Corporation, Dept. SP-30, 5555 Touhy Avenue, Skokie, Illinois 60076.

machines that make data move

USA STANDARD PERFORATED TAPE CODE FOR INFORMATION INTERCHANGE

NULL	SOH	STX	ETX	EOT	ENQ	ACK	BELL	BS	HT	LF	VT	FF	CR	SO	SI	DLE	DC1	DC2	DC3	DC4	NAK	SYN	ETB	CAN	EM	SUB	ESC	FS	GS	RS	US
------	-----	-----	-----	-----	-----	-----	------	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	----	-----	-----	----	----	----	----

1	●																																					
2		●																																				
3			●																																			
4				●																																		
5					●																																	
6						●																																
7							●																															
8								●																														

SP	i	"	#	%	&	.	()	*	+	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?		
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	R	S	T	U	V	W	X	Y	Z	[\]	^	_	
~	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z	{		}	~	DEL



CONTROL FUNCTIONS
NON-TYPING

NON-TYPING

• Mark To obtain even parity, the characters and functions shown with shaded backgrounds have 8th bit marking.

Upon receiving code combinations for ' through '~ , monospace equipment such as Models 33 and 35 print respective characters @ through ^ .