

Honeywell

CARTRIDGE MODULE DRIVE

CMD

PRODUCT MANUAL
75888325

The information contained herein is the exclusive property of Honeywell Information Systems Inc., except as otherwise indicated, and shall not be disclosed or reproduced, in whole or in part, without explicit written authorization from the company. The distribution of this material outside the company may occur only as authorized.

R E V I S I O N R E C O R D															
R E V	DATE	TABLE OF CONTENTS SHEETS AFFECTED	MANUAL/SECTION REVISION STATUS												CHANGE AUTHORITY
			1	2	3	4	5	6	7	8	9	10	11	12	
A	78 Mar 22	ISSUE jarb	A	A	A	A	A	A	A	A				D. Ashby	
B	78 TC Apr. 24	ii, vi, ix, x	A	A	A	A	A	A	B	A				PL 22092	
C	78 TC JUN 8	ii thru xii	B	B	B	B	B	B	B	B				PL 22114	
D	78 Jul AUG 9		B	C	B	C	C	C	B	B				PL 22170	
E	78 9/1 P. Hanbin	ii	B	C	B	C	C	C	C	B				PL 22185	
F	78 OCT 20 P. Hanbin	(B/P 1) (Freeze) ii thru xii	C	D	C	D	D	D	E	C				PL 22224	
G	78 NOV 14 P. Hanbin	(Series Code #2) ii thru xii	D	E	D	E	E	E	F	D				PL 22289	
H	78 Dec 11 P. Hanbin	ii	D	E	D	E	F	E	F	D				PL 22335	
J	78 TC DEC 21	ii	D	E	E	F	G	E	F	D				PL 22356	
K	79 TC FEB 2	ii	D	E	F	F	H	G	F	D				PL 22389	
L	79 PS Feb 26	ii	D	E	G	F	H	H	F	D				PL 22431	
M	79 PS MAR 19	ii	D	E	G	F	H	J	G	D				PL 22437	
N	79 PS APR 18	ii	D	E	G	F	J	K	H	D				PL 22494	
P	79 PS APR 19	ii	D	E	G	F	K	K	H	D				PL 22511	
R	79 TC APR 30	ii	D	E	G	F	L	K	H	D				PL 22526	
S	79 PS JUN 5	ii	D	E	H	F	M	L	H	D				PL 22521	
T	79 PS JUN 06	ii	D	E	H	F	N	L	H	D				PL 22589	
U	79 PS July 6	ii	D	E	H	F	N	L	J	D				PL 22616	

Address comments concerning this manual to:

Technical Publications
Magnetic Peripherals Inc.
4000 Northwest 39th Expressway
Oklahoma City, Oklahoma 73112
or use the enclosed user comment sheet.

© 1978

Magnetic Peripherals Inc.

Printed in the United States of America
All Rights Reserved

PREFACE

This Manual provides the information needed to install, operate and maintain the Magnetic Peripheral Inc. Cartridge Module Drive (CMD) and is intended to serve customer engineers and operators who require detailed information about the Cartridge Disk Drive operations.

The total content of the Manual is comprised of eight sections, each having a unique publication number, and is contained in one volume. The manual's publication number is that of the Table of Contents and Front Matter (75888325). This number, along with the unit HPC number, should be used when making reference to the Cartridge Module Drive Product Manual.

The following table identifies the content of each volume:

	<u>SECTION NUMBER/TITLE</u>	<u>PUBLICATION NUMBER</u>
I	General Description	75888326
II	Operation	75888327
III	Installation & Checkout	75888328
IV	Theory of Operation	75888329
V	Diagrams	75888330
VI	Maintenance	75888331
VII	Parts Manual	75888332
VIII	Wire Lists	75888333

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
GENERAL DESCRIPTION		
1.1	INTRODUCTION	1-1
1.2	GENERAL DESCRIPTION	1-1
1.2.1	Physical and Functional	1-1
1.2.2	Standard Features	1-1
1.2.3	Optional Features	1-4
1.2.4	Major Components	1-4
1.2.5	Operational Characteristics	1-5
OPERATION		
2.1	INTRODUCTION	2-1
2.2	OPERATOR CONTROLS AND INDICATORS	2-1
2.3	OPERATING PRECAUTIONS	2-1
2.3.1	Power Up for On-Line Operation	2-1
2.3.2	Write Protect	2-5
2.3.3	Stop	2-5
2.3.4	Power Down	2-5
2.4	FAULT OPERATING INSTRUCTION	2-6
2.5	INPUT/OUTPUT LINES	2-6
2.6	DISK CARTRIDGE HANDLING AND STORAGE	2-6
2.7	DISK CARTRIDGE INSTALLATION	2-6
2.8	DISK CARTRIDGE REMOVAL	2-8
2.8.1	Normal Removal	2-8
2.8.2	Power Failure or Emergency Stop Removal	2-13
2.9	MAINTENANCE SWITCHES AND INDICATORS	2-14
INSTALLATION AND CHECKOUT		
3.1	INTRODUCTION	3-1
3.2	UNPACKING	3-1
3.3	SPACE ALLOCATION	3-2
3.4	INSTALLATION AND MAINTENANCE	3-2
3.4.1	Installation Mechanical Interfacing	3-2
3.4.2	Installation Procedure for Rack Mounting of the CMD	3-6.2
3.5	POWER REQUIREMENTS	3-7
3.5.1	Primary Power Requirements	3-7
3.5.2	Power Cable and Connector for CMD	3-8
3.6	CABLING AND CONNECTIONS	3-9
3.6.1	I/O and Power Cable Routing Information	3-9
3.7	GROUNDING	3-9
3.7.1	System Grounding Connections	3-9
3.7.2	Frame Ground	3-9
3.7.3	DC/Logic/Analog Ground	3-15

3.8	COOLING REQUIREMENTS	3-15
3.9	ENVIRONMENT	3-15
3.10	PREPARATION FOR USE	3-16
3.10.1	Sector Number Option Switches	3-16
3.10.2	I/O PWA	3-17
3.11	INITIAL CHECKOUT AND STARTUP PROCEDURE	3-20
3.12	ACCESSORIES	3-21
3.12.1	I/O Interface Accessories	3-21
3.12.2	Description of I/O Cable Char. & Connt. P/N	3-22
THEORY OF OPERATION		
4.1	INTRODUCTION	4-1
4.2	ASSEMBLIES	4-4
4.2.1	Power Supply	4-4
4.2.2	Drive Motor Assembly	4-6
4.2.3	Spindle Assembly	4-6
4.2.4	Actuator	4-6
4.2.5	Transducers	4-11
4.2.6	Blower System	4-12
4.2.7	Disks	4-13
4.2.8	Electronics Module	4-13
4.3	FUNCTIONS	4-14
4.3.1	I/O Operations	4-14
4.3.2	Power On/Off and Spindle Start/Stop Functions	4-17
4.3.3	Microprocessor Functions - General Description	4-18
4.3.4	Microprocessor Detailed Functional Description	4-27.1
4.3.5	Seek Operations	4-48
4.3.6	Read/Write Functions	4-72
DIAGRAMS		
5.1	INTRODUCTION	5-1
5.2	INTRACABLING DIAGRAM	5-1
5.3	CIRCUIT BOARD DIAGRAMS	5-1
5.3.1	Point-to-Point Logic Interconnections Between Circuit Boards	5-4
5.3.2	Schematic Diagram Interconnection Symbology	5-5
5.4	MAJOR ELECTRICAL DIAGRAMS	5-6
5.5	POWER SUPPLY DIAGRAMS	5-6
5.6	LOGIC DIAGRAM SYMBOLOGY	5-6
5.6.1	General Information	5-6
5.6.2	General Signal Annotation	5-6
5.6.3	Symbology	5-7
5.6.4	Function Symbology	5-8
5.6.5	Circuit Types and Waveforms	5-9

MAINTENANCE

6.1	INTRODUCTION	6-1
6.2	SAFETY AND SPECIAL MAINTENANCE PRECAUTIONS	6-1
6.2.1	Safety Precautions	6-1
6.2.2	Special Maintenance Precautions	6-1
6.3	MAINTENANCE TOOLS	6-2
6.4	MAINTENANCE MATERIAL	6-3
6.5	MAINTENANCE INDEX AND SCHEDULE	6-3
6.5.1	Maintenance Index and Schedule	6-3
6.5.2	Rem. & Rep. of Asm, PWA Bds, & I/O Cables	6-3
6.6	PREVENTIVE MAINTENANCE	6-5
6.6.1	Prefilter and absolute Filter Removal and Replacement	6-5
6.6.2	Actuator Assembly Inspection and Cleaning with Fixed Disk Module Still in the Drive	6-7
6.6.3	Inspect and clean carriage rails and bearings with Both Disk Modules Removed from the Drive	6-7
6.6.4	Check Power Supply Outputs	6-10
6.7	CORRECTIVE MAINTENANCE	6-10
6.7.1	Cover Removal and Replacement	6-10
6.7.2	Raising and Lowering the Base Deck Assembly	6-10
6.7.3	Slide Mounted CMD, Removal and Replacement	6-13.1
6.7.4	Spin Speed Sensor Removal and Replacement	6-14
6.7.5	Removal and Replacement of Static Ground Brush	6-14.1
6.7.6	Removal and Replacement of Cartridge Receiver Assembly	6-16
6.7.7	Fixed Disk Module Removal and Replacement	6-16.3
6.7.8	Procedure for Cleaning Spindle and Fixed Disk Module Area	6-16.6
6.7.9	Read/Write Head Removal and Replacement	6-16.7
6.7.10	Servo Head/Arm Removal and Replacement	6-18
6.7.11	Head Inspection and Cleaning	6-21
6.7.12	Spindle Motor Removal and Replacement	6-24
6.7.13	Blower Removal and Replacement	6-26
6.7.14	Spindle Removal and Replacement	6-26.3
6.7.15	Removal and Replacement and Power Supply, PWA Boards and Fuses	6-28
6.7.16	Heads Loaded Switch Removal and Replacement	6-29
6.7.17	Actuator Magnet Removal and Replacement	6-30.1
6.7.18	Carriage Assembly Removal and Replacement	6-30.2
6.7.19	Removal and Replacement of the Carriage Center Rail and/or Side Bearing	6-30.3
6.7.20	Remove and Replacement of velocity Transducer	6-30.4
6.8	DRIVE TESTS AND ADJUSTMENTS	6-31
6.8.1	General	6-31
6.8.2	Certification of Fixed Media	6-33
6.8.3	Switch Adjustments	6-35
6.8.4	Pulse Circuits Tests	6-36
6.8.5	Servo System Adjustments and Disabling Procedure	6-36
6.9	MAINTENANCE AIDS	6-55
6.9.1	Maintenance Switches and Indicators	6-55
6.9.2	Test Points	6-64

PARTS DATA

7.1	INTRODUCTION	7-1
7.2	ILLUSTRATIONS	7-1
7.3	PARTS LIST	7-1
7.4	ASSEMBLY BREAKDOWN	7-1
	7.4.1 Product Unique Parts	7-1
	7.4.2 Top Level Assembly	7-1
	7.4.3 Final Mechanical Assembly	7-1
7.5	REPLACEMENT PARTS	7-1
7.6	SPARE PARTS (SP)	7-1
7.7	PARTS LIST INSTRUCTIONS	7-2
	7.7.1 ILLUSTRATION PARTS LISTS	7-2
	7.7.2 Top-Down Assembly/Component Parts List	7-2
	7.7.3 Cross Reference Index	7-2
	7.7.4 Sheet Number Referencing	7-2

WIRE LISTS

8.1	INTRODUCTION	8-1
8.2	SYMBOLGY DEFINITION	8-1

LIST OF ILLUSTRATIONS

FIGURE NO.	TITLE	PAGE
1-1	Major Components of Cartridge Module Drive	1-2
1-2	Rack Mounted CMD Unit	1-3
2-1	Operator Controls and Indicators	2-2
2-2	Disk Cartridge Installation/Removal	2-7
2-3	Control/Mux PWA Showing Fault Ind. & Fault Reset Swch.	2-16
3-1	Carriage Locking Tool - Shipping Position	3-3
3-2	Rear Shipping Bolt Location	3-4
3-3	Deck Hold Down Bolts	3-5
3-4	Detailed Dimensions	3-6
3-5	Base Assembly and E Module Maintenance Envelope	3-6.1
3-6	Rack Mounting Details (with or without slides)	3-6.3
3-7	Slide/Drive Mounting Cross Section	3-6.5
3-8	Rack Mount Details for 36 inch Mounting	3-6.6
3-9	Rack Mount Details for 30 inch Mounting	3-6.7
3-9.1a	Start Up Current (220/230/24- V, 50 Hz)	3-7.1
3-9.1b	Start Up Current (110 - 120 V, 50/60 Hz)	3-7.1
3-10	Input Power Connector, 120V 60 Hz	3-8
3-11	Single Channel Interface	3-10
3-12	I/O Cable Installation	3-11
3-13	TAG Bus I/O Interface, "A" Cable	3-12
3-14	TAG Bux I/O Interface, "B" Cable	3-13
3-15	Grounding Option	3-14
3-16	Servo-Course Option Switches	3-18
3-17	I/O PWA Showing Switches and I/O Connector Location	3-19
3-18	I/O Connectors	3-23
4-1	Block Diagram	4-2
4-2	CMD Major Assemblies	4-5
4-3	Actuator Elements	4-8
4-4	Head Loading	4-10
4-5	Head/Arm Assembly Motion	4-10
4-6	Velocity Detection	4-12
4-7	I/O TAG and BUS Timing	4-15
4-8	Typical Read/Write Timing with Address Mark	4-15.1
4-9	Index, Sector and Interrupt Timing	4-16
4-10	Index and Sector During a Seek	4-16
4-10.1	Logic Number Select Code and Timing Diagram	4-16.1
4-10.1a	Sequence Power Lines - CMD	4-17.2
4-10.1b	Power Sequence Timing	4-17.3
4-11	Block Diag of Servo-Coarse PWA & Supporting Elements	4-20
4-12	Seek Control Block Diagram	4-22
4-13	Servo Head Change Operational Flow Chart	4-23
4-14	Microprocessor Hardware Block Diagram	4-24
4-15	MP Read Timing	4-26
4-16	Microprocessor Write Timing	4-27
4-17	Initial 1 Track Segment Timing	4-27.4
4-18	Microprocessor General Operation Flow Chart	4-28
4-19	Power-up Hardware Sequences Flow Chart	4-29
4-20	Initialization and Self Test Sequence Flow Chart	4-30
4-21	Stop Sequence Flow Chart	4-31
4-22	Microprocessor Start Sequence Flow Chart	4-32
4-23	Head Load Sequence Flow Chart	4-36
4-24	20 ms Clock Sequence Flow Chart	4-38

4-25	Seek and Segment End Interrupt Sequences Flow Charts	4-40
4-26	Fine Mode Sequence Flow Chart	4-43
4-27	Offset Sequence Flow Chart	4-45
4-28	RTZ Sequence Flow Chart	4-46
4-29	Operational Fault Sequence Flow Chart	4-47
4-30	Servo System General Block Diagram	4-50
4-31	Seek Velocity Profile	4-51
4-32	Block Diagram of Servo Fine Circuitry	4-56
4-33	Track and Servo Disk Layout	4-61
4-34	Servo System Waveforms - Positioner in Motion	4-62
4-35	Track Center and Cylinder Pulse Generation	4-64
4-36	Block Diagram of Analog portions of Servo System	4-70
4-37	Read/Write Control Timing	4-73
4-38	MFM Encoder/Write Compensator	4-76
4-39	NRZ to MFM Encoder Timing Diagram	4-77
4-40	Read/Write Preamp - Block Diagram	4-79
4-41	Read/Write - Block Diagram - P. 1/2 (Analog)	4-82
4-42	Read Analog/Data Latch Timing Diagram	4-83
4-43	Read/Write - Block Diagram - P. 2/2 (Digital)	4-84
4-44	Read Digital Timing - PLL Locked	4-85
4-45	Address Detection and Data Enable Timing Diagram	4-86
4-46	Fixed Sector Format	4-87
4-47	Variable Sector Format	4-88
5-1	Intracabling Diagram	5-2
5-2a	Typical Interconnection Sheet Entry	5-4
5-2b	Functionally Equivalent Symbols	5-6
5-3a	Typical Integrated Circuit	5-9
5-3b	Positive NAND Negative NOR	5-9
5-3c	Retriggerable, Resettable, Monostable Multivibrator	5-10
5-3d	"JK" Negative Edge Triggered Type F/F	5-10
5-3e	8080A Microprocessor	5-11
5-3f	"D" Type F/F	5-13
5-3g	"JK" Positive Edge Triggered Type F/F	5-14
5-3h	QUAL TTL "D" Type F/F	5-14
5-3i	BCD - Decimal Decoder	5-15
5-3j	500 Up/Down Counter	5-16
5-3k	4-Bit Binary Counter	5-17
5-3l	Serial In-Parallel Out 8-Bit Register	5-18
5-3m	Four FLIP-FLOP Shift Register	5-19
5-3n	1 Out of 4 Decoder	5-19
5-3o	System Controller/Bus Driver for Microprocessor System	5-20
5-3p	8255 Programmable Peripheral Interface (PPI) for Microprocessor	5-22
5-3q	I/O Port 8-Bit Parallel (8212)	5-25
5-3r	8253 Programmable Interval Timer for 8080 System	5-26
5-3t	Line Receiver, DRL/TTL Dual Differential	5-28
5-3u	Differential Voltage Comparator	5-28.1

5-3v	Phase-Frequency Detector	5-28.2
5-4	I/O CKT Board	5-29
5-5	CNTL/MUX Circuit Board	5-38
5-6	Servo Coarse Circuit Board	5-51
5-7	Servo Fine Circuit Board	5-64
5-8	Read/Write Circuit Board	5-75
5-9	Read/Write Preamp Circuit Board	5-85
5-10	Servo Preamp Circuit Board	5-91
5-11	Power Amp Circuit Board	5-95
5-12	Operator Control Circuit Board	5-98
5-13	Relay Control Circuit Board	5-101
5-14	Terminator Circuit Board	5-105
5-15	Component Board	5-107
5-16	Diagnostic/Hd Alignment Ckt Board	5-108
5-17	AC Pwr and DC Pwr Distr. Interlock Switches and Speed Sensor CKT Diagram	5-112
5-18	Power Supply Wiring Diagram	5-113
5-19	Power Supply Wiring Diagram	5-114
5-20	Mother Board	5-115
5-21	Regulator Board	5-118
6-1	Filter Removal and Replacement	6-6
6-1a	I/O Cable Installation and PWA Names/Locations	6-6.1
6-2	Removal of Power Amplifier for Access to Voice Coil	6-8
6-3	Carriage Rails and Bearings	6-9
6-4	Deck Hold Down Bolt Location	6-11
6-5	Accessing Underside of Electronics Module	6-12
6-6	Deck Raised to Maintenance Position	6-13
6-7	Removal and Replacement of Spin Speed Sensor Asm	6-15
6-8	Removal of Receiver Plate Assembly and Fixed Disk Pack	6-16.1
6-9	Fixed Disk Pack Locating Fixture and Protective Disk	6-16.2
6-10	Head/Arm Removal and Replacement and Alignment	6-19
6-11	Servo Head/Arm Assembly	6-20
6-12	Typical Head/Arm Components	6-21.1
6-13	Head Cleaning Motion	6-22
6-14	Drive Motor Assembly	6-25
6-15	Spindle Removal and Replacement	6-26.1
6-16	Blower Assembly	6-26.2
6-17	Power Supply Assembly	6-30
6-18	Velocity Transducer and Actuator Magnet Removal	6-30.5
6-19	Actuator Elements	6-30.6
6-20	Carriage Rail Removal and Replacement	6-30.7
6-21	Voice Coil Leadwire Connector	6-32
6-22	Certification of Fixed Media	6-34
6-22a	Cartridge-In-Place Switch Adjustment	6-35.2
6-22b	Deck Down Interlock Switch Adjustment	6-35.4
6-22c	Cartridge Access Door Interlock Switch Adj	6-35.5
6-23	Head Alignment Block Diagram	6-43
6-24	Head/Arm Removal and Replacement and Alignment	6-44
6-25	Guard-Band Waveform Pattern	6-45
6-26	Balanced Dibit Pattern	6-45

6-27	Carriage Locking Tool-Head Alignment Position	6-46
6-28	Carriage Restraint Block Adjustment	6-54.2
6-29	Flow Chart of Fault Display Logic	6-65
7-1	Product Configuration	7-3
7-2	Top Level Assembly	7-5
7-4	Final Mechanical Asm	7-6
7-5	Final Mechanical Asm	7-7
7-6	Final Mechanical Asm Details	7-8
7-7	Base Pan Assembly	7-9
7-8	Base Pan Assembly	7-10
7-9, 10, 11	Deck Assembly	7-11
7-12	Module Assembly	7-14
7-13	Carriage and Coil Assembly	7-15
7-14	Miscellaneous Sub-Assemblies	7-16
7-15	Spare Parts Provisioning	7-17
	Top Down Assembly Component Parts List	7-18
	Cross Reference	7-21

LIST OF TABLES

TABLE NO.	TITLE	PAGE
1-1	Operational Characteristics Summary	1-6
2-1	Controls and Indicators	2-3
2-2	Input/Output Lines (Std-1 Interface)	2-9
2-3	TAG Bus Decode	2-12
2-4	Fault Display Indicator Summary	2-15
3-1	Primary Voltage Requirements	3-7
3-2	Primary Current Requirements (Operating)	3-7
3-3	S1 Switch Settings vs Number of Sector per Revolution	3-17
3-4	I/O Cable and Terminator Part Numbers	3-21
3-5	I/O Cable Length and Tabs	3-21
4-1	Microprocessor Memory Address Code Assignments	4-27.2
4-2	Priority Interrupt Restart Instructions	4-27.3
4-3	Microprocessor I/O Port Signal Assignments	4-27.5
5.3-1	CMD Circuit Boards	5-1
5-1	Logic Symbology	5-7
5-2	Function Symbols	5-8
6-1	Maintenance Tools	6-2
6-2	Maintenance Materials	6-3
6-3	Maintenance Index and Schedule	6-4
6-4	Velocity Gain Adjustment Table	6-37
6-5	Description of Maintenance Switches and Their Functions	6-56
6-6	Interpretation of Control/Mux Fault Display Indicators	6-58
6-7	Microprocessor Fault Codes and Meanings	6-61
6-8a	Spindle Start and Stop	6-62
6-8b	Seek Operation	6-62
6-8c	RTZ and Head Load	6-63
6-8d	Head Retract	6-63
6-8e	Idle and Offset	6-64

1.1 INTRODUCTION

This manual applies to the CONTROL DATA Cartridge Module Disk Drive (CMD).

The CMD Cartridge Module Disk Drive is designed to interface with and provide peripheral storage capabilities for data processing systems.

1.2 GENERAL DESCRIPTION

1.2.1 PHYSICAL AND FUNCTIONAL

The standard CMD is a versatile rack mounted, high-performance, random access, mass-memory device with a 96 megabyte capacity. The device features a front-loading cartridge of 16 megabytes capacity with optional add-on memory capacity of 16, 48, or 80 megabytes from one, two, or three fixed disks. The CMD has a very fast average access time of 30 ms and the data-transfer rate is 9.67 MHz.

The Cartridge Module Drive can be connected to its associated controller in either a star or daisy-chain configuration of up to 8 CMD units, resulting in a maximum storage capacity of 768 megabytes.

A strapping option is provided in 16 megabyte increments on the fixed media surfaces. Programmable shunts on the Control/Mux PWA implement this option (i.e. a 96 megabyte unit may be strapped to become a lower capacity in 16 megabyte increments). See Figure 6-25.

The drive contains: a cartridge receiver; spindle, drive motor and braking system; fixed-media, read/write and servo heads; voice-coil positioner and track-following servo; an Electronics Module containing read/write, microprocessor, I/O, servo and drive control electronics; filtered-air supply; and a DC power supply. See Figure 1-1 for the location of these elements. A hinged front door provides access for the insertion and removal of the front-load cartridge. A removable cover provides access to the electronics, heads, actuator and power supply.

1.2.2 STANDARD FEATURES

The standard CMD is mountable in a 19-inch rack in 10.5 inches of rack space, extending 31.75 inches to the rear. (See Figure 1-2).

The following are standard features of the CMD:

- 16 MB front-load cartridge receiver (cartridge not included)
- Hard-sector configurations up to 127
- Spindle brake
- Address-mark detection
- Servo offset.
- Early/late data strobing


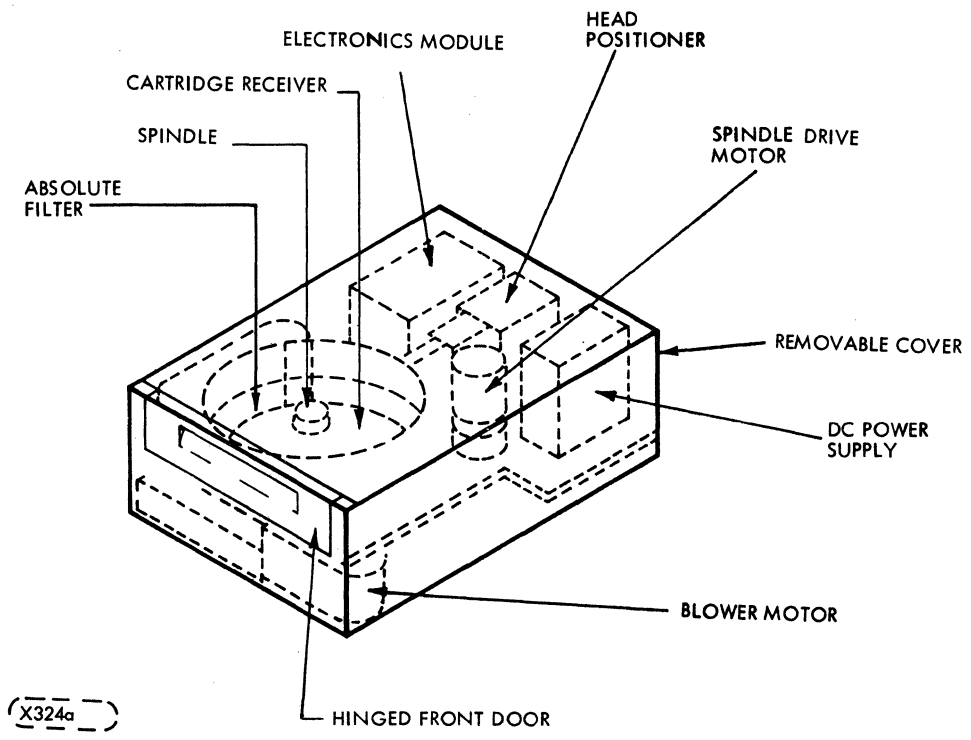


Figure 1-1. Major Components of Cartridge Module Drive

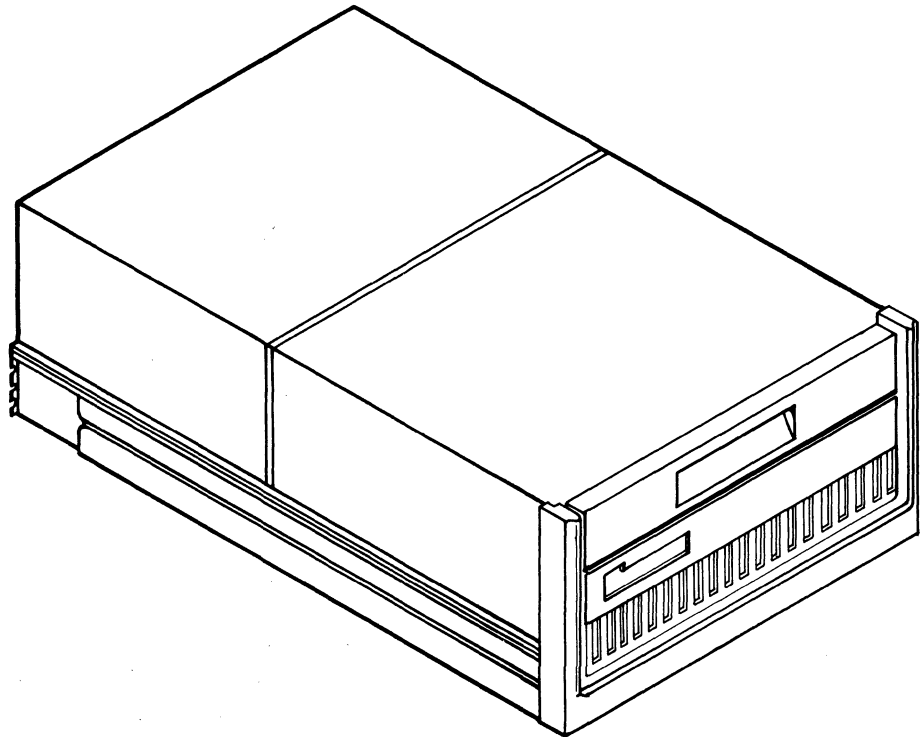

X075a

HEIGHT	10.5 In. (264mm)
WIDTH	19.0 In. (483mm) Max. (Panel) 17.25 In. (438mm) (Cover)
LENGTH	31.75 in. (806mm). Includes 1.25 in. (30mm) cable and switch clearance.
WEIGHT	170 lb (77.1 kg)

Figure 1-2. Rack Mounted CMD Unit

- Write pre-compensation
- Independent manual write protect on fixed and/or cartridge media
- Internal fault monitoring
- Microprocessor control logic

1.2.3 OPTIONAL FEATURES

The following are optional features of the CMD:

- Quietized Unit

The acoustically treated CMD is available as an option.

- Slides for Rack Mounting
- Power Options
- I/O Cable Terminators

The CMD can be supplied for operation with single-phase input power of 100 V, 60 Hz; 120 V, 50 or 60 Hz; or 220/240 V, 50 Hz.

1.2.4 MAJOR COMPONENTS

The following major components make up the CMD:

- Electronics Module

The logic is implemented using low power Schotky for commands and control logic and standard Schotky and ECL for the read/write logic. The microprocessor is designed with standard microprocessor building blocks. The logic is mounted on five PWA boards which plug into a Mother Board.

- Voice-Coil Head Positioner

Head positioning is performed using a closed-loop proportional servo system with acceleration, velocity and position feedbacks. The carriage is driven by a voice-coil linear actuator utilizing positioning information from dedicated servo surfaces.

- Deck and Spindle

A rigid cast-aluminum deck, precision spindle insures positive registration and seating of cartridge to spindle, and an AC induction motor.

- Air Supply and Filtering

A direct-drive blower provides cooling air. The surrounding room air entering the receiver is filtered by a 0.3-micron absolute filter. Environmental requirements are given in detail in Section 3.

- Cartridge Receiver

A front-load cartridge-receiving mechanism integral to the deck assembly facilitates the insertion and removal of cartridge media.

- Operator Control Panel

Controls and Indicators for the use of the operator are part of the front panel assembly. These are the START switch/indicator, the READY indicator, the FAULT reset switch/indicator, the PROTECT FIXED switch/indicator, and the PROTECT CART. switch/indicator. Details of these are given in Section 2. Additional switches/indicators for use by the customer Engineer only, are found on the Control/Multiplexor PWA, Servo Fine PWA, the I/O PWA and the Servo Coarse PWA in the Logic Assembly. These are discussed in detail in Section, Maintenance.

1.2.5 OPERATIONAL CHARACTERISTICS

Operational characteristics of the CMD are summarized in Table 1-1.

Table 1-1. Operational Characteristics Summary

Characteristics	Values		
TRACK DENSITY	384 TPI		
POSITIONING TIME			
Maximum Positioning time	55 ms (track 0 to 822)		
Track-to-track positioning time	6 ms		
Average positioning time	30 ms		
SPINDLE SPEED	3600 r/min (+2.5, -3.5%) Includes voltage and frequency variations specified in Table 3-1.		
LATENCY TIME (AVERAGE)	8.33 ms (at 3600 r/min)		
RECORDING			
Mode	MFM		
Density (inner track)	6038 bpi nominal		
(outer track)	4038 bpi nominal		
Bit rate (nominal)	9.677 MHz		
	<u>DRIVE CAPACITY</u>		
	<u>32 Mbyte</u>	<u>64 Mbyte</u>	<u>96 Mbyte</u>
Total number of removable disks	1	1	1
Total number of fixed disks	1	2	3
Servo surfaces	2	2	2
Data surfaces	2	4	6
Minimum Data tracks	1616	3232	4848
Spare tracks	30	60	90
Disk Diameter (inches)	14	14	14
(millimeters)	356	356	356
Track spacing (inches)	0.0026	0.0026	0.0026
DATA CAPACITY (unformatted)			
<u>No. of Fixed disks</u>	<u>1</u>	<u>2</u>	<u>3</u>
Bytes/Track	20 160	20 160	20 160
Bytes/Surface (808 Tracks)	16 289 280	16 289 280	16 289 280
Bytes/Unit	32 578 560*	65 157 120*	97 735 680*
*Includes 1 data surface on removable disk.			
UNITS PER CONTROLLER I/O CHAN	8 (Daisy chain or Star)		

2.1 INTRODUCTION

This section provides the instructions and information required to operate the CMD unit.

2.2 OPERATOR CONTROLS AND INDICATORS

Figure 2-1 depicts the locations of the operator controls and indications. All switches and indicators are preassembled on a printed circuit board and mounted behind the control panel assembly. The control panel contains separate write protect switches and indicators for fixed and removable disks. A functional description of the normal operator controls and indicators is given in Table 2-1. Maintenance indicators and switches are described in paragraph 2.10.

2.3 OPERATING PRECAUTIONS

CAUTION

Do not remove AC power from the unit with the circuit breaker until the disk has stopped rotating. The blower must remain ON anytime the disk is rotating to prevent the rotating disk from sucking in unfiltered air.

In addition to the above, the following precautions and practices should be observed while operating unit to obtain best performance and reliability of the equipment:

1. Keep the access door closed to prevent unnecessary entry of atmospheric dust.
2. If a pinging or scratching sound (caused by head-to-disk contact) is heard and persists, stop the unit by using the Stop and Power down procedure of this section and then call the customer service engineer.
3. To prevent damage and/or data loss, follow the Disk Cartridge Installation procedure of this section.
4. The operator should not attempt to override any interlocks in the system.

NOTE

Appropriate steps should be taken to safe guard valuable data until the head-to-disk contact can be remedied. Such steps may include leaving the unit powered down, replacing the data cartridge with a scratch cartridge, and/or immediate transfer of the data that is on the fixed disk. CALL CUSTOMER ENGINEER.

2.3.1 POWER UP FOR ON-LINE OPERATION


NOTE

Steps 1 and 4 to be performed by maintenance personnel only.

1. Verify connection of all power and I/O Cables.
2. Verify installation of proper unit select plug in front control panel.
3. Verify that START/STOP switch is in STOP position (out).
4. Actuate AC circuit breaker, CB1 (rear of the unit), and verify operation of blower motor.

CAUTION

THE CMD SHALL CONTAIN A CARTRIDGE AT ALL TIMES WHETHER OPERATING OR NOT. THIS IS NECESSARY TO INSURE PROPER SEALING OF SHROUD AREA FROM ENVIRONMENTAL CONTAMINANTS.

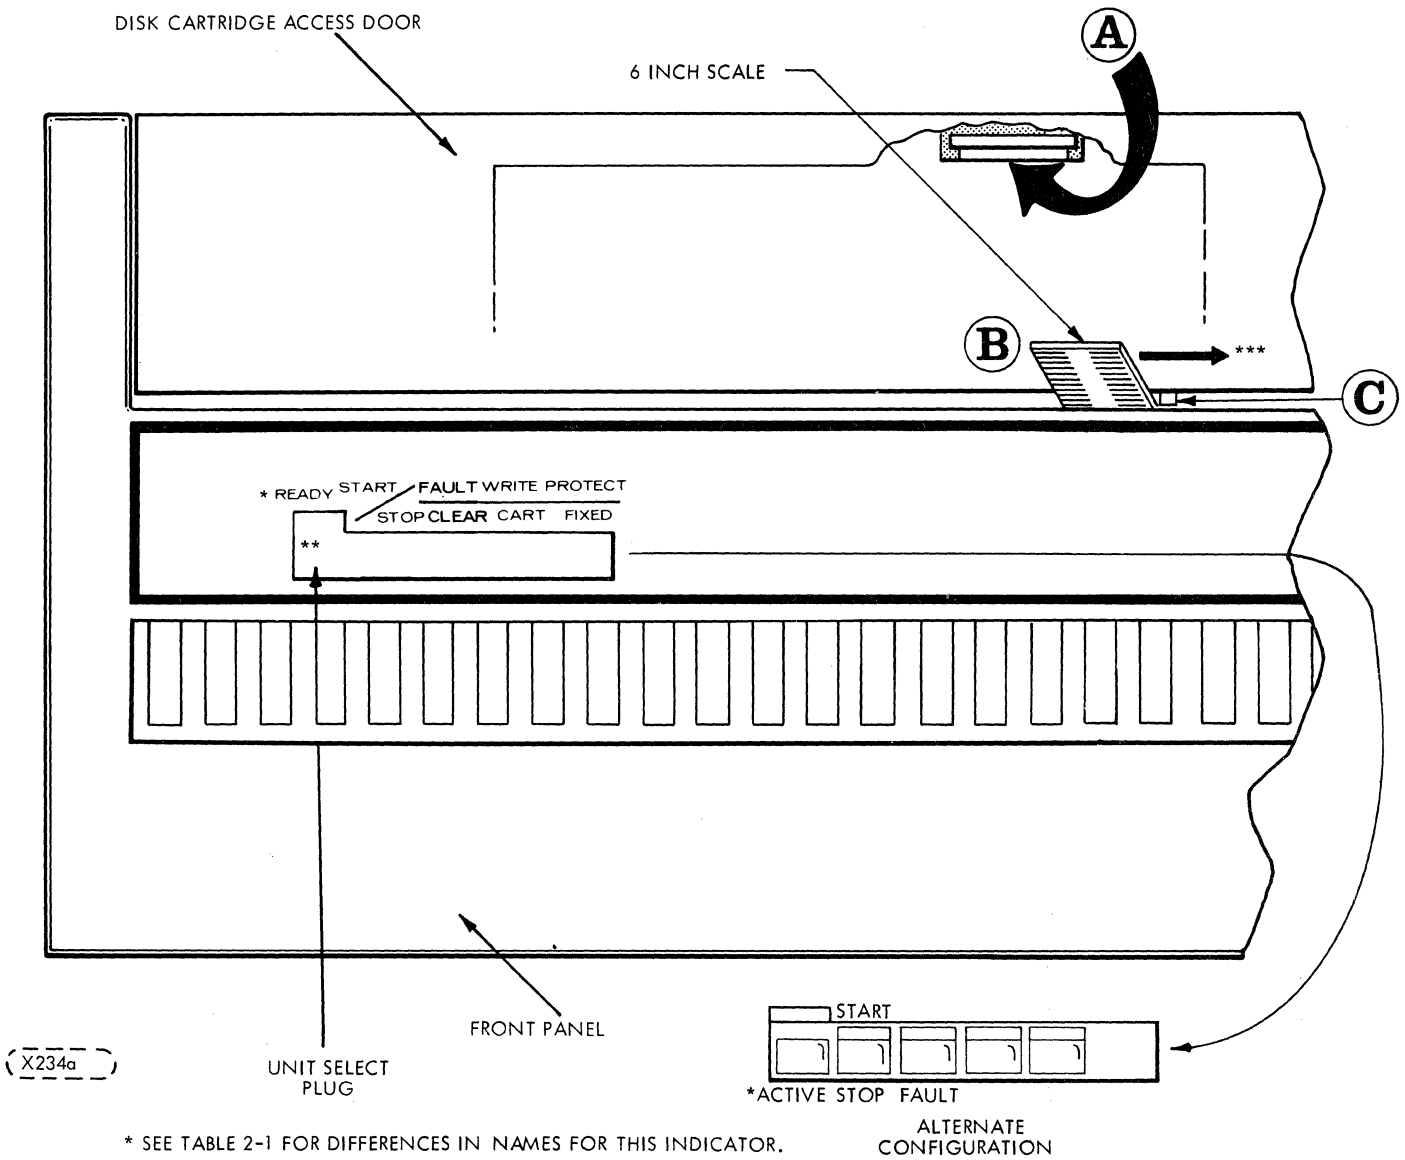

* SEE TABLE 2-1 FOR DIFFERENCES IN NAMES FOR THIS INDICATOR.
 ** A NUMBER FROM 0-7 WILL BE ON THE PLUG FACE.
 *** SEE PARAGRAPH 2.8.2.

Figure 2-1. Operator Controls and Indicators

Table 2-1. Controls and Indicators

Control or Indicator	Function
<u>Control Panel</u>	
START/STOP switch/indicator	<p>Start switch energizes spindle motor and initiates the first seek mode provided the following conditions are met:</p> <ol style="list-style-type: none"> 1. The AC circuit breaker is ON. 2. Disk cartridge loading door closed and latched with cartridge in place. 3. FAULT light is OFF (certain fault conditions do not exist - see Section 4). 4. Ground on the PICK and HOLD lines if in REMOTE start mode, or the LOCAL start mode has been selected once started, only ground on HOLD is required to start. (REMOTE/LOCAL start mode selection switch is on I/O PWA). (See Figure 6-27)
START indicator	<p>Located within the START/STOP switch, this indicator lights only when the START/STOP switch is operated inward, turns off when switch is released. Not all units have a START indicator.</p>
READY indicator	<p>Positioned above the unit select plug on units which have START indicator within the Start/Stop Switch. READY indicates unit ready status. READY indicator is illuminated whenever unit is up to speed and heads are loaded and no fault requiring manual intervention exists within the unit. The READY light will blink throughout the spindle start and stop procedure. On units which have the ACTIVE indicator above the Unit Select Plug, READY is the indicator within the START/STOP switch.</p>
ACTIVE indicator (optional)	<p>Indicator illuminates when read, write, RTZS or seek operation is in process. This is an optional indicator and is not on all units. When used, it is above Unit Select Plug.</p>

Table 2-1. Controls and Indicators (continued)

Control or Indicator	Function
<u>Control Panel</u>	
FAULT switch/indicator	Clears certain fault conditions when operated. Refer to Section 6, Maintenance.
FAULT indicator	Located within the FAULT switch. * Indicates any fault condition when illuminated. Turns OFF when fault condition cleared by operating the FAULT switch.
PROTECT FIXED switch/indicator	When operated inward this switch disables the write driver for the fixed media. Alternate Action switch. The indicator indicates that the fixed volume of the drive is write-protected.
PROTECT CART. switch/indicator	When operated inward this switch disables the write driver for cartridge. Alternate action switch. The indicator indicates that the removable volume cartridge of the device is write protected.
UNIT SELECT plug/socket	A plastic plug which generated the computer I/O channel unit number by closing coded switch contacts in the socket into which it fits. The top of the plug is marked with a number from 0 to 7 representing the unit number. The proper numbered plug is installed at installation time.
<u>DISK PACK ACCESS DOOR</u>	
Disk Pack Access Door Latch (See Figure 2-1)	The Disk Pack Access Door is unlatched by lifting with the fingers on the latch (A) that is under the lip of the recess in the access door. The latch will not release the door catch until after the spindle motor has stopped rotating and the interlock solenoid releases the catch. The START/STOP switch must also be released (OUT) before the solenoid will release the catch. In the event of the loss of AC power the interlock solenoid does not release the catch in order to prevent damage to the cartridge.

*Does not indicate Seek error.

5. Install disk cartridge in accordance with Disk Cartridge Installation procedure.
6. Operate the START/STOP switch and verify START/STOP indicator illuminates on those units which have the START indicator above the START/STOP switch. Also, verify that the READY indicator ceases blinking and remains constantly illuminated when the unit is up to speed and the heads are loaded.
7. Verify that FAULT indicator remains off.

NOTE

If FAULT indicator illuminates perform steps 1 through 3 of Fault Operating Instruction paragraph 2.4.

8. Within approximately 60 seconds after START/STOP switch is pressed, * READY is sent to the controller and the READY indicator illuminates. Disk drive is now ready to receive commands from the controller.

2.3.2 WRITE PROTECT

Operate the desired PROTECT switch (PROTECT FIXED or PROTECT CART.) and verify that the appropriate PROTECT lamp illuminates. Selected volume is now protected against controller Write commands.

2.3.3 STOP

The disk drive can be stopped whether or not the unit is in the process of performing one of its functions. If START/STOP switch is operated during a seek the carriage will immediately perform a retract, ceasing the function it was performing. If the START/STOP spindle stop procedure applies.

To stop:

1. Operate START/STOP switch and verify that the READY indicator blinks until the spindle has stopped and then extinguishes when the spindle has stopped.
2. Remove the cartridge (if desired) in accordance with Disk Cartridge Removal (Normal) procedure. The cartridge access door will not unlock until the READY indicator has stopped blinking and has extinguished.

2.3.4 POWER DOWN

Set main circuit breaker CB1 to "off", but only after spindle has stopped rotating. NOTE: this is normally performed by maintenance personnel.

*Proper state of PICK, HOLD and/or LOCAL/REMOTE is assumed.

2.4 FAULT OPERATING INSTRUCTION

If FAULT indicator illuminates during operation or power up proceed as follows:

1. Wait until READY stops blinking.
2. Operate FAULT switch. If lamp extinguishes, normal operation can be resumed. If FAULT lamp remains illuminated, proceed to step 2.
3. Operate START/STOP switch to STOP and allow spindle to stop rotating, then operate START/STOP switch to START. If FAULT lamp extinguishes, normal operation can be resumed. If lamp remains illuminated proceed to step 3.
4. Power down equipment in accordance with Stop and Power Down procedure. Turn AC circuit breaker off then power up in the normal manner again. If the fault indicator is still on, call customer service engineer.

2.5 INPUT/OUTPUT LINES

Complete operations of the disk drive including spindle start/stop can be performed by the controller, * provided the Start/Stop switch is in START position. Input/Output signals exchanged between disk drive and controller and their functions are explained in Table 2-2. I/O switch must be enabled and REMOTE/LOCAL switch must be in remote position. The Customer Engineer can configure to customer request.

2.6 DISK CARTRIDGE HANDLING AND STORAGE

The following practices should be observed when handling or storing disk cartridges. Refer to the manufacturer's instructions for more detailed maintenance and cleaning instructions, or refer to section 6 of this manual.

1. The cartridge dust cover should be on the cartridge while it is out of the disk receiver. This will insure a positive dust seal and immobilize the disk inside.
2. Cartridges can be stored flat or on the edge. Several can be stacked on top of one another. However, undue heavy loading should be avoided.

2.7 DISK CARTRIDGE INSTALLATION

The disk cartridge must be stored in the same environment as the CMD for 60 minutes immediately preceding its use. Make certain disk cartridge has been cleaned and maintained in accordance with accepted preventive maintenance procedures. Refer to Figure 2-2 for the following procedure.

1. Release latch under lip of access door recess (see Figure 2-1) and pull down cartridge access door.

NOTE

Power must be on, the Start/Stop switch out, and READY and FAULT lamps must be off to release lock on cartridge door.

2. To separate dust cover from the disk cartridge, push cover release button toward center of cartridge.

*Not including switching of AC input power to the unit.

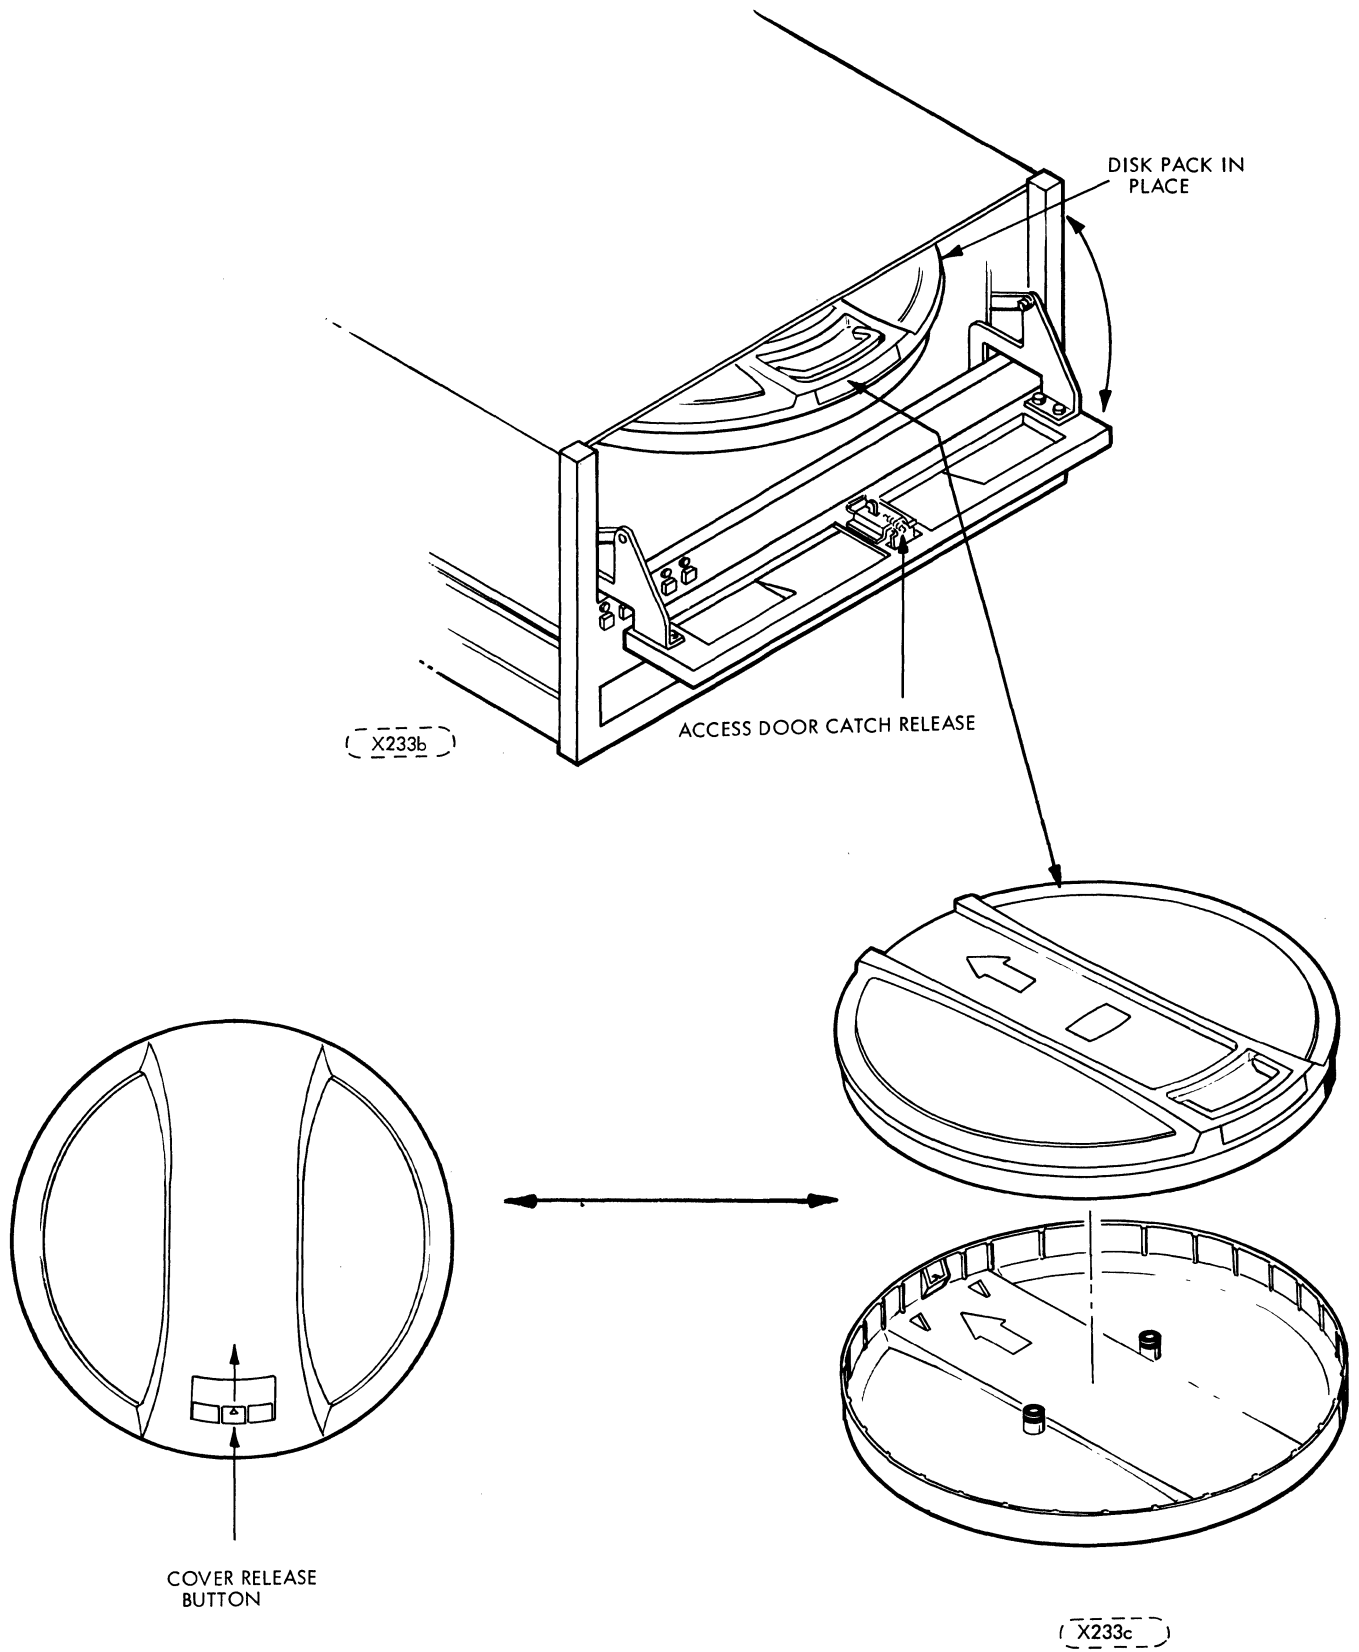


Figure 2-2. Disk Cartridge Installation/Removal

3. Disengage dust cover from disk cartridge. Set cover aside upside down to prevent dust from collecting within the cover.

CAUTION

Make certain that the read/write heads are fully retracted.

4. Slide disk cartridge into receiver track, ensuring that the head opening is toward rear of the machine.
5. Push handle down. Push cartridge rearward until it stops.
6. Close cartridge access door and press the door closed until it is latched. The cartridge slides into place on the spindle automatically as the access door is closed.
7. Store cartridge cover upside down in some convenient location.
8. Operate START/STOP switch to apply power to spindle motor.

NOTE

If the spindle motor will not rotate, disk cartridge access door may not be completely closed, the cartridge may not be properly seated on the spindle chuck or the cartridge receiver/base may not be all the way down on the lower chassis.

2.8 DISK CARTRIDGE REMOVAL

2.8.1 NORMAL REMOVAL

Refer to Figure 2-2 for the following procedure.

1. Operate START/STOP switch to STOP (out).
2. Pull down the Cartridge access door after the READY indicator ceases blinking and extinguishes entirely.
3. Pull the cartridge out of the receiver with sufficient force to overcome the detent action.
4. Place the dust cover in position on the cartridge and fold over top handle.

NOTE

The handle may be swung out to carry the cartridge but do not push the cover release button.

5. Close the access door if another cartridge is not to be installed.

Table 2-2. Input/Output Lines (STD-1 Interface)

SIGNAL	FUNCTION
<u>"A" Cable Output Lines*</u>	
DRIVE SELECT HOLD	Allows signal information to be received over the interface. This signal must be true in order for selection and control to take place.
TAG GATE OUT	Gates the desired tag decode to the CMD. TAG GATE OUT may be a pulse for Select, Head Address, High Cylinder, Low Cylinder, Target Register, and Error Recovery. It is a level for Control Select and Diagnostic.
TAG ($2^0 - 2^2$)	These three lines contain encoded information which is decoded in the drive to produce the tag function codes listed in Table 2-3.
BUS OUT (0 - 7)	Address and control data are transferred on these 8 lines. The significance of the information on these lines is indicated by the decode of three TAG lines. See Table 2-3.
POWER SEQUENCE PICK } POWER SEQUENCE HOLD }	Power sequencing levels. Ground on these two will cause the first CMD in sequence to begin the Spindle Start sequence. Once the first is up to speed, the PICK signal is transferred to the next active CMD and repeated until all active CMD units are up to speed. Individual CMD units may be started and stopped manually once power sequencing is completed. All units power down spindles when ground on SEQUENCE HOLD is removed.
<u>"A" Cable Input Lines*</u>	
SECTOR**	Pulse derived from the servo track which divides each track into sectors. Up to 127 sector pulses are available per sector depending on the setting of sector select switches in the CMD.
INDEX**	While accessing a given volume this signal occurs once per revolution, and its leading edge is considered the leading edge of sector zero, typically 2.5 μ s.

*See Figure 3-7 for interface cabling configuration

** See end of Table.

Table 2-2. Input/Output Lines (continued)

SIGNAL	FUNCTION
<u>"A" Cable Input Lines (continued) *</u>	
TAG GATE IN	This line when true indicates that the information on the BUS IN lines is valid.
BUS IN	Unit ID, status and capacity information for the selected CMD are transferred on these 8 lines. The significance of the information on these lines is indicated by the code sent on the TAG OUT lines from the controller. See Table 2-3.
<u>"B" Cable Output Lines *</u>	
R/W DATA	This bidirectional line carries data which is to be read from or recorded on the disk. In the Write Mode, NRZ Data is transmitted to the drive. In the Read Mode, Data is NRZ also.
WRITE CLOCK	This line transmits the Write Clock signal which must be synchronized to the NRZ Write data (see Section 4). The Write Clock is the SERVO CLOCK retransmitted to the CMD by the controller.
<u>"B" Cable Input Lines *</u>	
SERVO CLOCK	The SERVO CLOCK is a phase-locked 9.677 MHz (+2.5%, -3.5%) clock generated from the selected servo track dabit.
INTERRUPT	When true this line indicates that a Sector Ready Interrupt condition has occurred. This is true when the target sector register compares with the present sector register internally and RPS is enabled. The leading edge of the interrupt signal occurs at the trailing edge of the respective sector or index pulse. This signal is not gated with select.

*See Figure 3-7 for interface cabling configuration

**See End of Table.

Table 2-2. Input/Output Lines (continued)

SIGNAL	FUNCTION
<u>"B" Cable Output Lines (continued) *</u>	
MODULE ADDRESSED	When this line is true it indicates the CMD was addressed during the last tag 000 operation. In a Daisy Chain "A" cable system this line may be used to determine if multiple selection has occurred. It may be used to select the proper data and clock lines to be used in the controller.
SEEK END	When true this line indicates that a Seek Operation has been completed or a Seek Error has occurred.
READ CLOCK (optional)	Defines the beginning of a data cell. It is an internally derived clock signal and is synchronous with the detected data. This signal is transmitted continuously when the unit is selected.

*See Figure 3-7 for interface cabling configuration

**Both index and sector pulses are inhibited during selection of a data head on the other volume until the first index detected after initiation of a seek, and during an RTZ.

Table 2-3. TAG Decode Truth Table (STD-1) Interface

BUS OUT Δ_7

BUS LINES TAG CODE	0	1	2	3	4	5	6	7
SELECT 000			ZERO	ZERO	2^3	2^2	2^1	2^0
			FETCH DRIVE CAPACITY	ZERO				
ERROR RECOVERY 001	EARLY STROBE	LATE STROBE	+ OFFSET	- OFFSET		FETCH MPF		
DIAGNOSTIC 010	RTZ	CLEAR ATTEN- TION	CLEAR CHECK DIAG.	CLEAR FAULT STATUS	CLEAR ERROR RECOVERY	CLEAR RPS		
HEAD/VOLUME ADDRESS 011	VOLUME SELECT Δ_4 Δ_6	REM/ FXD. Δ_5				2^2	2^1	2^0
HIGH CYLINDER 100							2^9	2^8
TARGET REGISTER 101	LOAD TARGET REGISTER	2^6	2^5	2^4	2^3	2^2	2^1	2^0
LOW CYLINDER 110	2^7	2^6	2^5	2^4	2^3	2^2	2^1	2^0
CONTROL 111	TRANSFER SECTOR COUNT	WRITE GATE		READ GATE	ADDRESS MARK ENABLE			

BUS IN Δ_8

BUS LINES TAG CODE	0	1	2	3	4	5	6	7
SELECT 000	DEVICE ID Δ_1	DEVICE ID Δ_1	DEVICE ID Δ_1	ATTEN- TION	2^3	2^2	2^1	2^0
	Δ_2 2^7	Δ_2 2^6	Δ_2 2^5	Δ_2 2^4	Δ_2 2^3	Δ_2 2^2	Δ_2 2^1	Δ_2 2^0
ERROR RECOVERY 001			MPF INVALID	2^4	2^3	2^2	2^1	2^0
DIAGNOSTIC 010	NO HEAD SELECT	WRITE FAULT	(W+R) OFF CYL.	W•R FAULT	VOLTAGE FAULT	HEAD SELECT FAULT	SEEK ERROR	WRITE PROTECTED
HEAD/VOLUME ADDRESS 011							WRITE PROTECT CARTRIDGE	WRITE PROTECT FIXED
HIGH CYLINDER 100								
TARGET REGISTER 101	ECHO/ SECTOR INVALID	SECTOR 2^6	2^5	2^4	2^3	2^2	2^1	2^0
LOW CYLINDER 110								CHECK DIAG.
CONTROL 111	AM FOUND		ON CYL.	UNIT READY	SECTOR INVALID		OFFSET ACTIVE	CHECK DIAG.

Δ_1 DEVICE ID CODE FOR CMD IS (101)

Δ_2 DRIVE CAPACITY CODE:
16 MBYTES (000), 32 MBYTES (001),
64 MBYTES (011), 96 MBYTES (101)
NOTE: (000) CART ONLY; ALL OTHERS-CART. + FXD.

Δ_7 UNDEFINED BUS OUT BITS MAY BE ONE OR ZERO.

Δ_4 0 = HEAD SELECT ONLY
1 = VOLUME SELECT AND HEAD SELECT

Δ_5 0 = CARTRIDGE VOLUME
1 = FIXED VOLUME

Δ_6 VOLUME CHANGE INFORMATION IS STORED
AND EXECUTED WITH TAG CODE 110.

Δ_8 UNDEFINED BUS IN BITS ARE ZERO

(X326a)

2.8.2 POWER FAILURE OR EMERGENCY STOP REMOVAL

Refer to Figure 2-1 for the following two procedures.

NOTE

These two procedures below to be performed only by the Customer Engineer.

1. Wait approximately 3 minutes for cartridge to stop spinning.
2. Open cartridge access door. This automatically removes cartridge from spindle chuck. Door will not open if a problem exists. Power must be ON and Start/Stop switch out to retract door latch solenoid.

AC Power should not be turned OFF while heads are loaded or disks rotating. If AC must be turned off do not allow it to stay off if emergency retract fails to retract the heads. Retract the heads by hand before removing AC power again.

NOTE

If heads have not retracted FAULT indicator will remain OFF but spindle will continue to rotate until heads can be manually retracted (in the case where AC power is still applied). Top cover of unit must be removed to manually retract heads (see Section 6, Maintenance).

3. With light downward pressure at the front edge of the cartridge (to release from detent) pull cartridge out from receiver.
4. Place cartridge cover in position on bottom of cartridge.
5. Close the access door if another cartridge is not to be installed.

In an emergency (emergency only) if the cartridge access door will not open proceed as follows:

1. Make sure the spindle motor is completely stopped. Either observe the motor with the top cover of the unit off or wait a full 3 minutes after initiating a stop.
2. See Figure 2-1. Insert a 6 inch steel scale (B) between the access door and the front panel. Push the small tab (C) to the right with the scale. This unlocks the door allowing the door release (A) to be operated while the tab (C) is being pushed to the right.
3. Perform steps 3, 4 and 5 above.
4. Close the door in the normal manner when ready to do so.

2.9 MAINTENANCE SWITCHES AND INDICATORS

Maintenance switches and indicators are provided for aiding the maintenance personnel in diagnosing problems in the drive. These switches and indicators are mounted on the printed circuit boards in the Electronics Module and they should only be operated by maintenance personnel.

A set of seven LED fault display indicators are mounted on the top of the Control/Mux PWA in the electronics module. Two types of faults can be displayed on these indicators: non-microprocessor or logic detected faults and error conditions detected by the Servo-Course PWA microprocessor (called the Microprocessor Fault Summary). Table 2-4 lists the logic detected faults and the Microprocessor Fault Summary errors displayed. Figure 2-3 shows the fault display indicators on the Control/Mux PWA and the reset switch (S1) which resets the display and brings up new information which is displayed on the indicators. The FAULT CLEAR switch on the drive front Panel also resets the logic detected faults but does not reset the Fault history flip-flops as S1 on the Control/Mux PWA does. Also, the FAULT CLEAR switch does not operate to place microprocessor faults on the LED fault displays as S1 does. In addition to logic detected faults and Microprocessor Fault Summary the fault indicators can display the present cylinder address (from the last seek) and velocity status of the servo system (slow, fast or OK). The use and operation of the switches and indicators is described in more detail in Section 6-8 and 6-9 in the Maintenance Section.


Table 2-4. Fault Display Indicator Summary

<u>IND</u>	<u>LOGIC DETECTED FAULT</u>	<u>MICROPROCESSOR DETECTED FAULT</u>
CR1	NO HEAD SELECT FAULT (NH)	CR1 not used
CR2	OFF	ON
CR3	WRITE FAULT	HIGHEST ORDER M. P. FLT CODE SUMMARY BIT (2 ⁴). *
CR4	WRITE OR READ WHILE OFF CYL. (W-R)	M. P. FAULT CODE BIT 2 ³ .
CR5	WRITE AND READ FAULT (W+R)	M. P. FAULT CODE BIT 2 ² .
CR6	VOLTAGE FAULT (VF)	M. P. FAULT CODE BIT 2 ¹ .
CR7	HEAD SELECT FAULT (HS)	M. P. FAULT CODE BIT 2 ⁰ .

*In the Microprocessor Fault Code Summary mode two types of information are displayed: The phase of operations where the fault occurred and the type fault. From 1 to 12 phases could be displayed and from 1 to 16 faults. All of the applicable phases are displayed in serial order first and then all of the fault codes applicable in serial order. See Table 6-7 for more details. Below is a table of phases and faults which may be displayed on CR3 - CR7.

<u>PHASE INDICATORS</u>		<u>PHASE INDICATORS</u>	
<u>CODE (HEX)</u>	<u>PHASE</u>	<u>CODE (HEX)</u>	<u>PHASE</u>
01	Return to Track Center	07	Head Load
02	Wait for Coarse Seek Comp.	08	Await AGC during
03	After Seek Settling		Head Load
04	Idle Loop	09	Await Track Center-
05	Return to Zero Motion		Load or RTZ
06	End of Velocity Table	0A	Settling-Load or RTZ
		0B	OFFSET Active
		0C	Clear OFFSET Settling

<u>FAULT INDICATORS</u>	
<u>CODE (HEX)</u>	<u>FAULT TYPE</u>
0F	Spindle did not Start/Stop in 2 minutes 10 or 14 was noted
10	Spindle Start GT 70 SEC max
11	No spindle movement or not up to speed in 2 MIN
12	Motor Overheated
13	Solid State Relay Failure
14	Stop Timeout
15	Emergency Retract Failure
16	Normal Retract Failure
17	Cylinder Address GT 822
18	OFF Track GT 1200 USEC
19	Unexpected AGC in Head Load
1A	Lost AGC
1B	Speed Too Low
1C	Lost Speed Pulses
1D	Allowed Time Expired
1E	No Track Lock in Settling

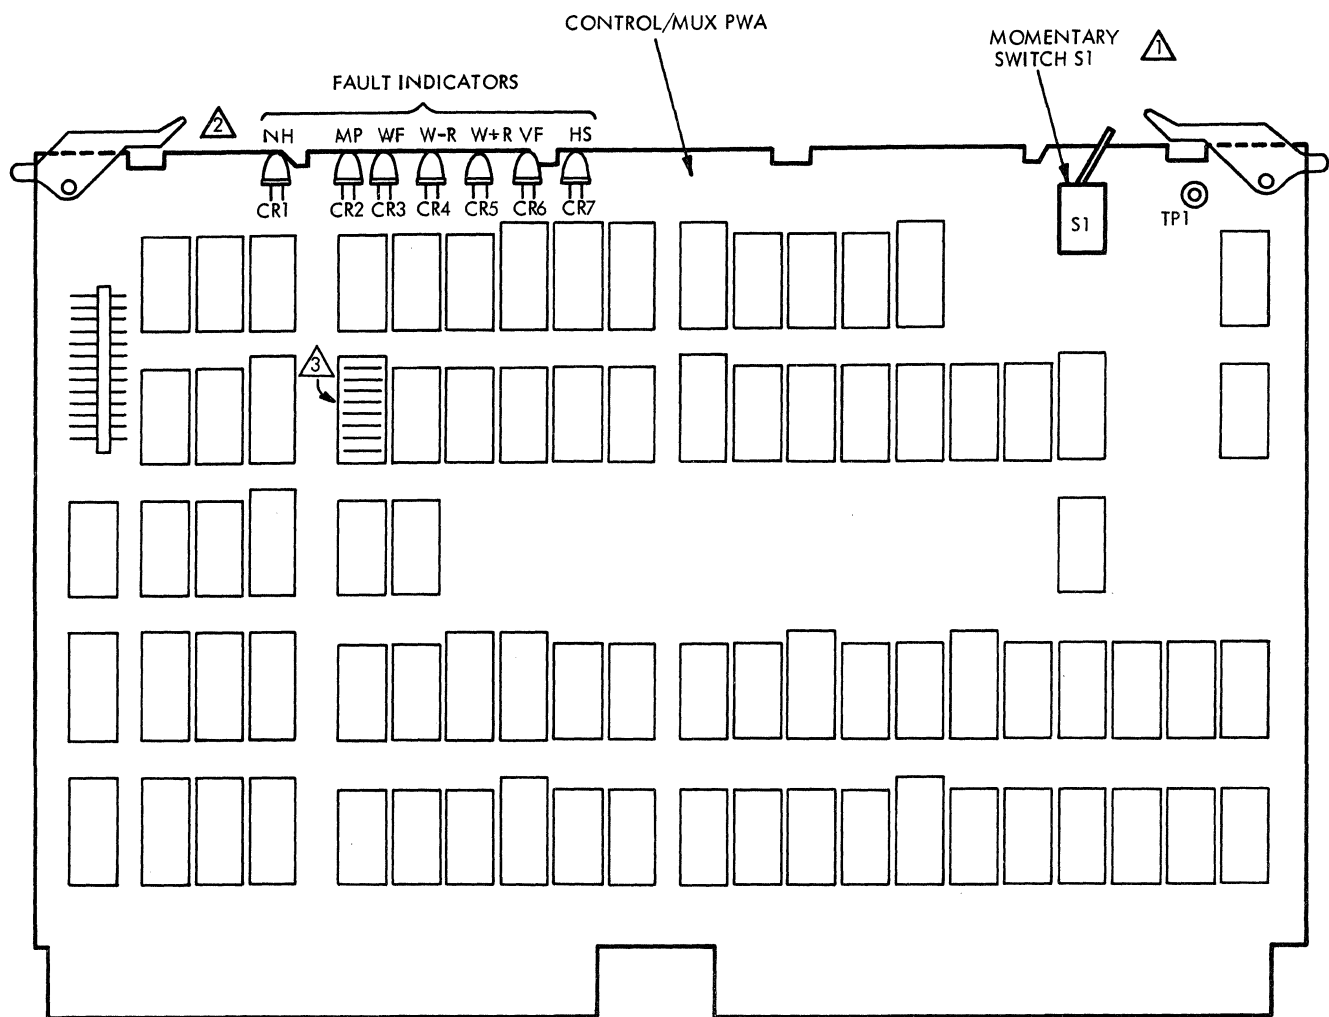

(X310a)

- ① SHOWN IN "OFF" POSITION
- ② THE FAULT TYPE ABBREVIATIONS SHOWN ARE ETCHED ON THE PWA UPSIDE DOWN NEXT TO THE APPLICABLE INDICATOR.
- ③ SELECT DRIVE CAPACITY USING JUMPERS

Figure 2-3. Control/Mux PWA Showing Fault Indicators and Fault Reset Switch

3.1 INTRODUCTION

This section provides the information and procedures necessary to install the CMD.

3.2 UNPACKING

During unpacking, exercise care so that any tools being used do not cause damage to the unit. As the unit is unpacked, inspect it for possible shipping damage. All claims for this type of damage should be filed promptly with the transporter involved. If a claim is filed for damages, save the original packing materials. Unpack the unit as follows:

- A. Remove the top cover and inspect various items such as circuit boards, carriage assembly, and read/write heads for shipping damage. See Section 6 for procedure.
- B. Check that all packing material pieces are removed, and that the unit is clean inside.
- C. Refer to Figure 3-1. Remove the screw (4) which secures the carriage locking tool (1). Lift the Locking tool to remove the pin (2) from the hole in the carriage (6). Swing the locking tool around to the operating position (B). Reinstall the screw to secure the locking tool to the magnet in the operating position.

CAUTION

Do not position the carriage manually. Such action could cause the read/write heads to load and to cause damage to the heads and disk.

The unit should never be shipped or even be moved any significant distance without the carriage lock pin in place to prevent the heads from loading and damaging the disk and/or heads.

- D. Remove rear shipping bolt using a 3/16 inch hex driver. See Figure 3-2. Stow the shipping bolt in the hole provided to the left of the magnet as shown in the figure. Before shipping this bolt must be installed in the center hole again.
- E. Remove deck hold down bolts (B) (Figure 3-3, sheet 2 of 2) and stow them below the deck in the base pan together with all the hardware as shown. Before re-shipping the unit, re-install the (B) bolts in the shipping position as shown. For operation, do not store the shipping bolts (B) so that the bolt electrically connects the deck with the base pan or the isolation of DC and AC grounds will be lost.
- F. If deck hold down bolts (A) were removed to raise deck these should be replaced before placing the unit in operating. Before reshipping the unit it should be inspected to make certain that the "A" bolts and the "B" bolts have been securely installed (see Figure 3-3).
- G. Replace the unit cover. The cover should remain installed even if the unit is to be operated within a rack.
- H. A plastic cover is shipped in place of a cartridge. Remove the plastic cover and install a cartridge before operating.

3.3 SPACE ALLOCATION

Figure 1-2 shows the unit overall dimensions for determining space allocation. In addition, Figure 3-4 gives detail dimensions.

See paragraph 3.10 for installation procedure.

3.4 INSTALLATION AND MAINTENANCE

Required connections to the device are power/signal cables and system ground consistent with normal peripheral equipment grounding practices. The physical requirements are adequate clearances for maintenance and air intake/exhaust. Detailed instructions for maintenance are found in Section 6 of this manual.


CAUTION

The CMD shall contain a cartridge at all times whether operating or not. This is necessary to insure proper sealing of shroud area from environmental contaminants.

3.4.1 INSTALLATION MECHANICAL INTERFACING

This section contains the mechanical interface specifications for the CMD. Figures 3-4 through 3-9 provide mechanical dimensions or mounting details for the various configurations. All dimensions are in inches and millimeters and are listed in tables in each figure. All dimensions are nominal and subject to the normal manufacturing tolerances. See section 3.6.2 concerning cable retract mechanisms for rack mounted drives.

*See Section 3.8 "Cooling Requirement" which specifies the cooling required to maintain the intended reliability of the CMD.

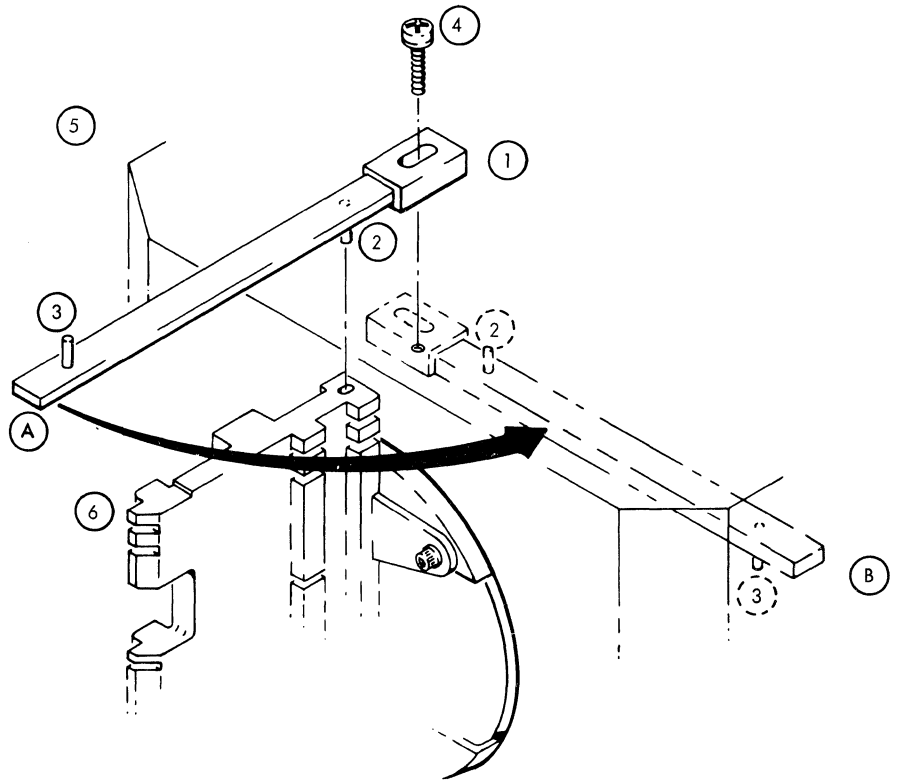

(X231a)

- (A) CARRIAGE LOCK PIN (1) IN SHIPPING POSITION.
- (B) CARRIAGE LOCK PIN (1) IN OPERATING POSITION

Figure 3-1. Carriage Locking Tool - Shipping Position


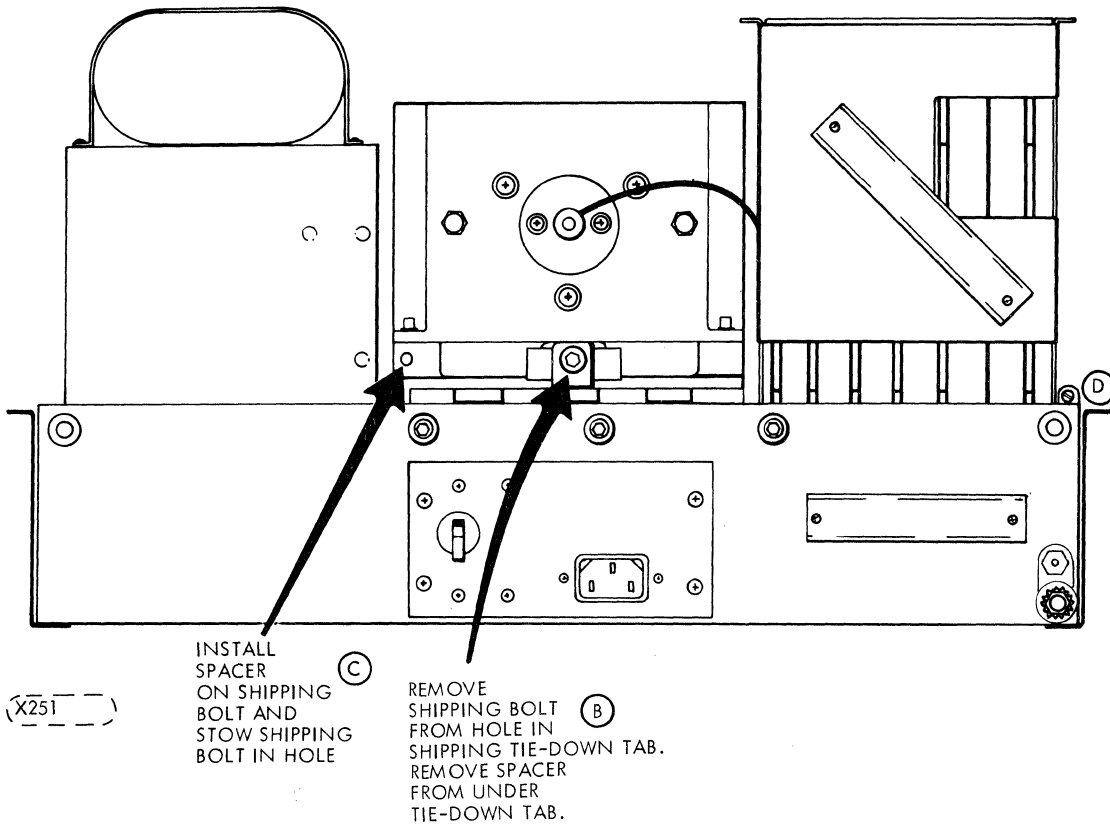


Figure 3-2. Rear Shipping Bolt Location

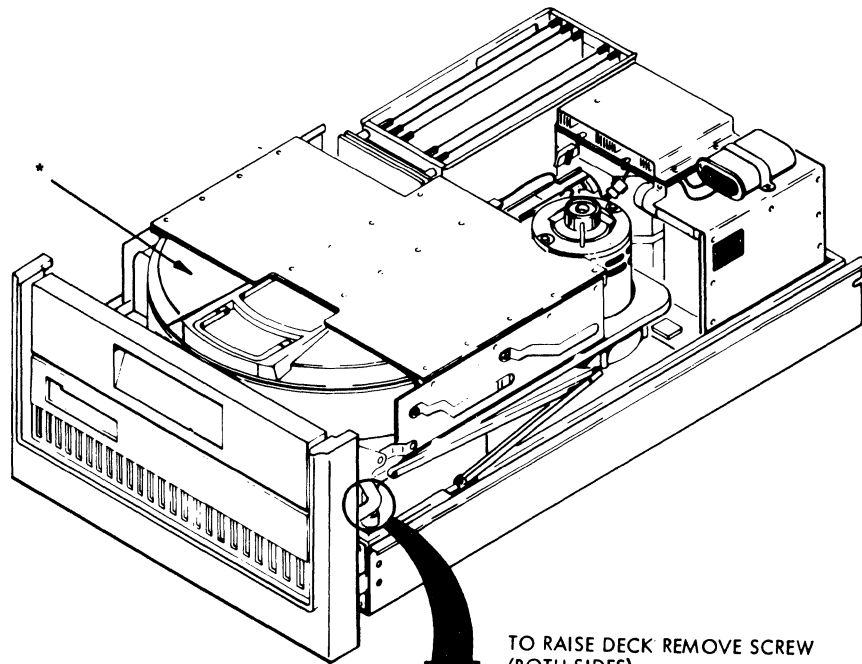


TO RAISE DECK REMOVE SCREW
(BOTH SIDES)

OR

(A)

INSURE BOLT IS INSTALLED BEFORE OPERATING OR
SHIPPING UNIT (BOTH SIDES)


* PLASTIC COVER IS NORMALLY
SHIPPED IN PLACE OF
CARTRIDGE

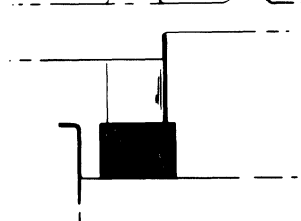

(X250)

Figure 3-3. Deck Hold down Bolts (Sheet 1 of 2)



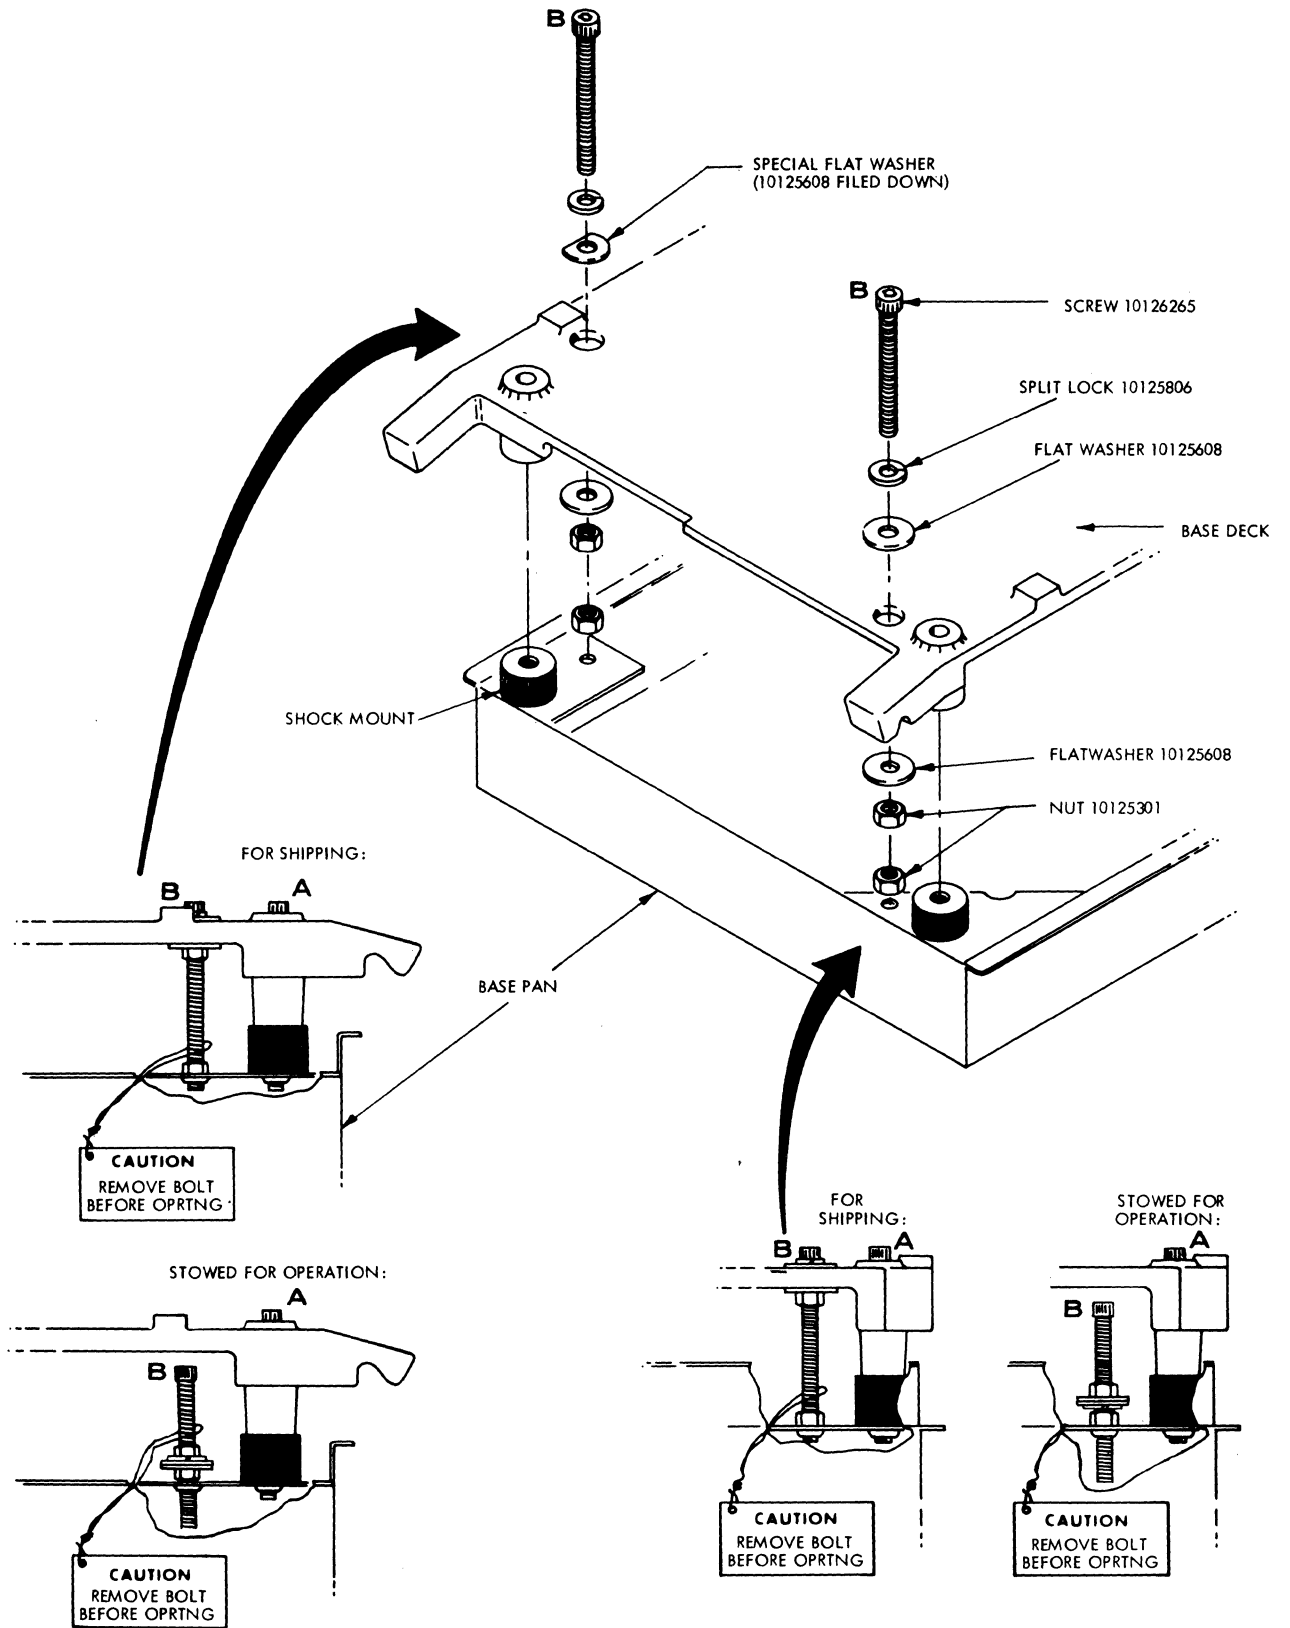


NOTE: RETAIN CAUTION TAG FOR POSSIBLE FUTURE SHIPPING

Z107

Figure 3-3. Deck Hold down Bolts (Sheet 2 of 2)

36" RACK

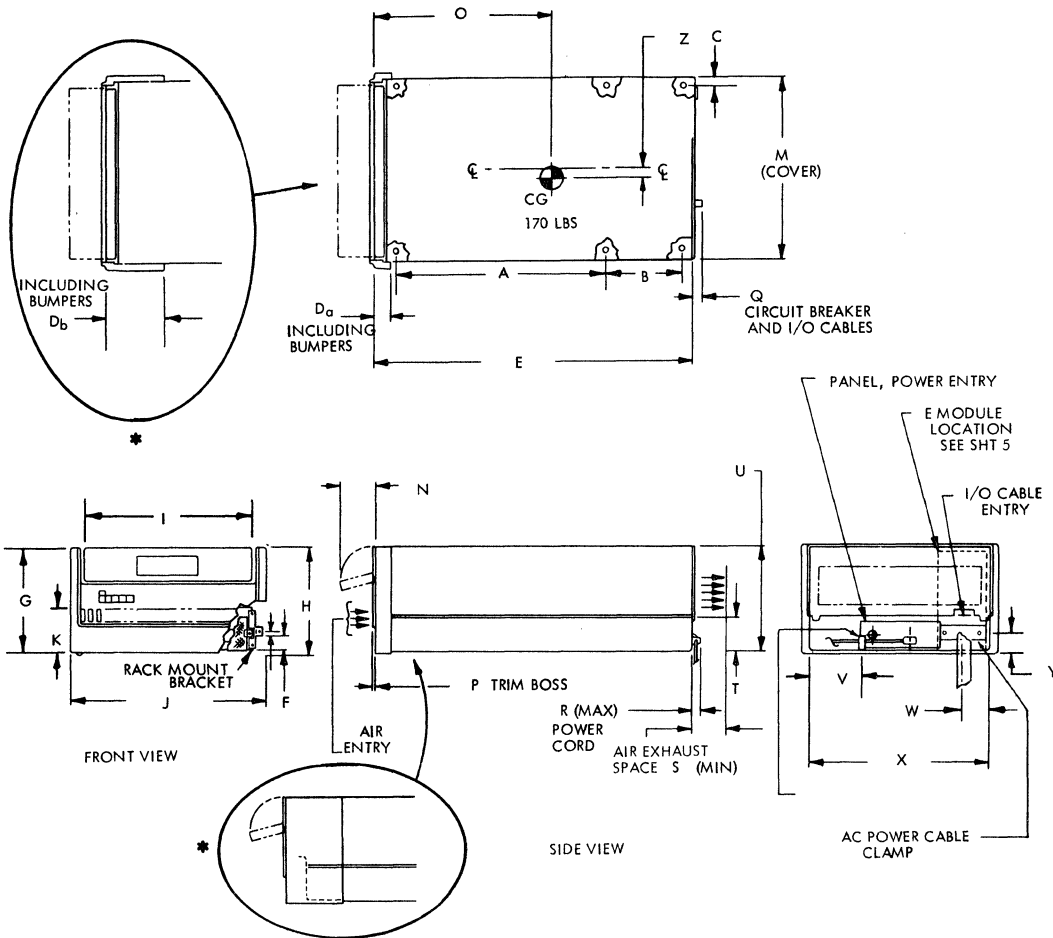


* 30 INCH (762 mm) RACK MOUNT CASE ENVELOPE

DIMENSION	INCHES	MILLIMETERS
A	17.76	451.1
B	10.0	154.0
C	0.38	9.7
D _a	1.50	38.1
D _b	2.53	64.3
E	30.50	774.7
F	1.25	31.0
G	10.28	261.1
H	10.34	262.7
I	17.0	431.8
J	18.94	481.1
K	4.4	111.8
L	0.50	12.5
M	17.50	444.5


DIMENSION	INCHES	MILLIMETERS
N	4.25	108.0
O	17.25	438.2
P	0.38	9.7
Q	0.75	19.1
R	1.25 max	31.7 max
S	1.25 min	31.7 min
T	3.38	85.9
U	10.15	257.8
V	5.5	139.7
W	2.80	71.1
X	16.70	424.2
Y	1.7	43.5
Z	0.90	22.9

XX215

Figure 3-4. Detailed Dimensions

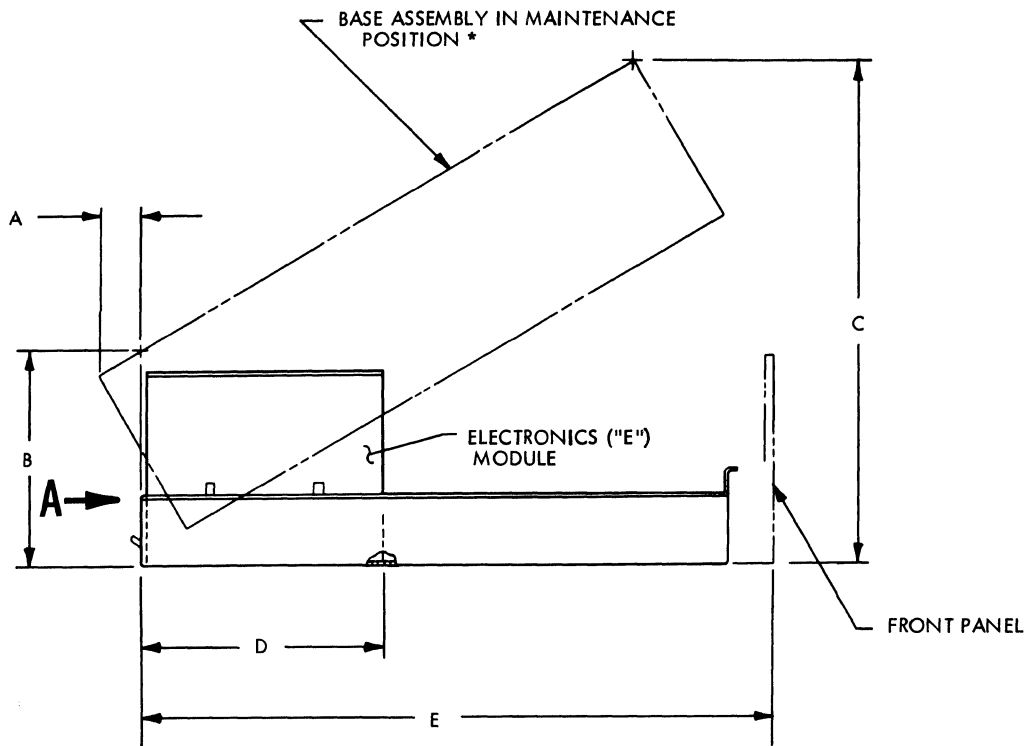

NOTE:
 * "E" MODULE MUST BE IN MAINTENANCE POSITION TO RAISE THE BASE ASSEMBLY

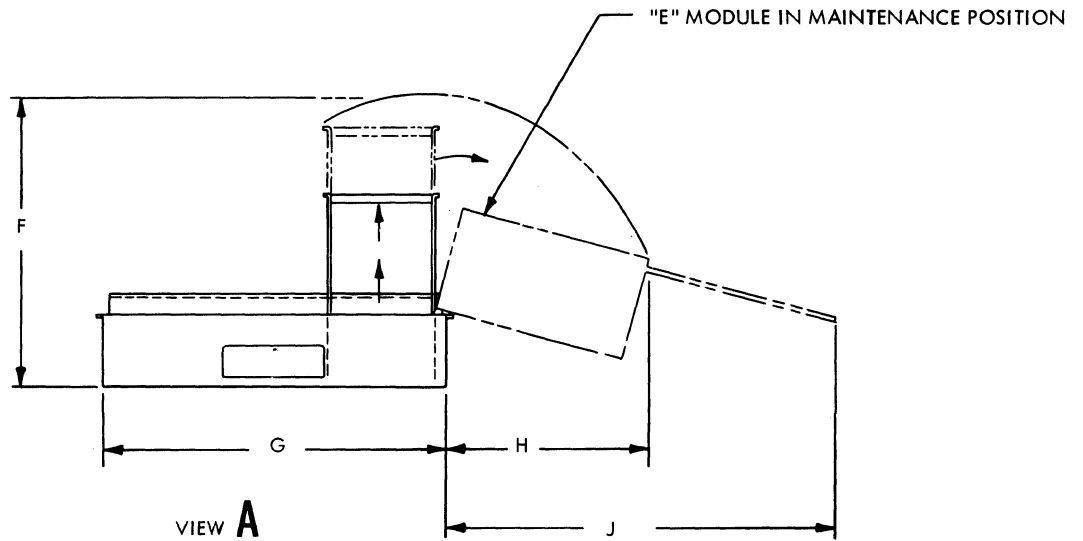


DIMENSION	INCHES	MILLIMETERS	REMARKS
A	2.00 MAX	50.8	"E" MODULE RAISED TO MAINTENANCE POSITION
B	10.50 MAX	266.7	
C	24.50	622.3	
D	12.50	317.5	
E	30.50 REF	774.7	
F	14.20	360.7	
G	16.70 REF	424.2	WITH BOARD EXTENSION
H	9.80 MAX	248.9	
J	18.80	477.5	

XX204a

Figure 3-5. Base Assembly and E Module Maintenance Envelope

3.4.2 INSTALLATION PROCEDURE FOR RACK MOUNTING OF THE CMD

1. Adjust the rack rails (22) front-to-back separation dimension or the slide length or both (see detail "A" Figure 3-6) so that the slide fixed member can be mounted to the front and back rack rails as shown in details "A" and "B" of Figure 3-6. Dimensional specifications for installation are given in Figure 3-8 or 3-9.
2. Adjust the side-to-side separation of the rails (if possible) so that the width specification is met (Figure 3-8 or 3-9).
3. If the chassis mounting rail (4) and the slides are shipped attached, remove screw (5) which holds the two together. The hex nut removed with screw (5) can be discarded but save the flat washer, split lock washer and the screw.
4. Disengage mounting tooth (8) from its slot (24) in the mounting rail, thus separating slides and mounting rail. Separate both slide sets from mounting rails.
5. Using three 10-32 x 3/8 screws attach the chassis mounting rail (4) to the base pan (3) of the CMD.
6. Install the slides into the rack cabinet at the desired location (see Figure 3-6 Details "A" and "B"). Loosen the adjusting screws, nut and washers (13, 15, 16 and 17) to adjust the length of the fixed slide number (7). Position the slides so that the inside edges of the fixed slide members are 17.82 inches (452.7 mm) apart. Make sure that the slides are horizontal and equidistant from the base of the cabinet. To mount the slides, use one #10 lock washer (26) and one #10 flat washer (27) on each #10-32 mounting screw (2). Insert the screw (2) through the cabinet mounting rail holes and the slots on the slide mounting surfaces and then into the holes in the nut plates as illustrated in Figure 3-6, details "A" and "B". Tighten screws.
7. Press the full extension release (11) (see arrow in Figure 3-6) on each side and pull the slides out to their full extension, approximately 29 inches (740 mm). The slides will lock again at full extension.
8. Enlist the aid of one or two more persons to assist in placing the CMD on the slides. First note Figure 3-6 detail "D", which shows the mounting tooth (8) on the chassis mounting rail (4) and the slot (24) into which the tooth fits.
9. Lift the CMD and place it so that it rests with each chassis mounting rail (4) resting on the top of the slide on each side. Once the CMD is resting on the slides it can be slid toward the rear of the rack until the mounting tooth (8) engages in the slot (24) and the mounting block (25) on each chassis mounting rail (4) fits into the slot (18) in each slide. If one or both of the chassis mounting rails (4) does not sit properly on the slides, the hardware which mounts the slides to the rack rail should be loosened slightly and the distance between the slides adjusted to allow each chassis mounting rail (4) to sit properly on the top of each set of slides.
10. Place flat washer (21) and lock washer (6) on screw (5) and insert the screw in the hole (23). The matching hole in the base pan should be automatically lined up with hole (23), but if it isn't the three screws (2) may have to be loosened slightly and the CMD moved slightly until hole (23) lines up with the hole in the base pan. Now insert screw (5).
11. Tighten screws (2) and (5) on both sides. Tighten the screws (20) if they were loosened while adjusting the separation of the slides.
12. With both hands unlock the slides by simultaneously pushing the spring locks (9) inward and pushing the CMD into the rack.
13. If the CMD is to be secured to the rack to prevent it from being slid out from the rack, refer to section 6.6.1. Remove the front panel per instructions and install screw (8) in Figure 6-1 which is the same type as (20) in Figure 3-6. Reinstall the front panel.

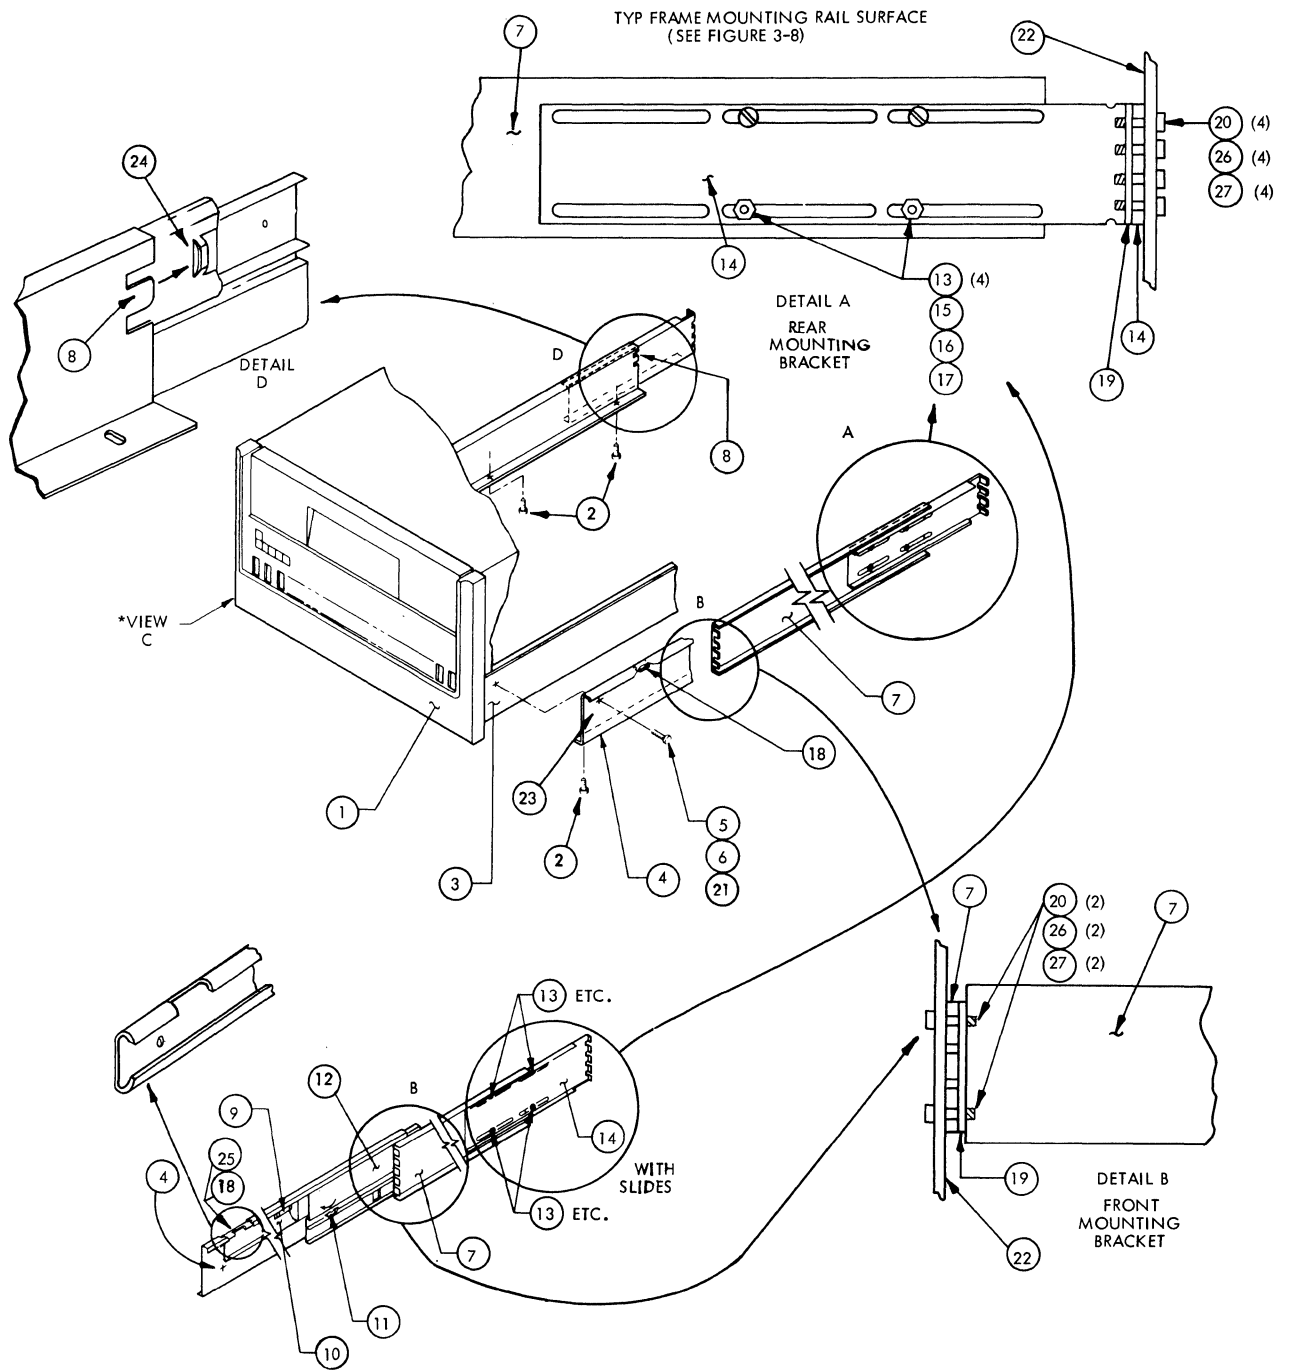

*SEE FIGURE 3-7.


XX202a

Figure 3-6. Rack Mounting Details (with or without slides) (Sheet 1 of 2)

List of Items Tagged in Figure 3-6.

1. CMD Front Panel
2. Screw, Mach., Pan Hd 10-32 x 3/8, P/N 10127142
3. CMD Base Pan
4. Chassis Mounting Rail
5. Screw, Mach., Pan Hd 6-32 x 3/8, P/N 10127113
6. Washer, Lock #6, P/N 10125803
7. Fixed Slide Member
8. Mounting Tooth (fits into Item (24)).
9. Full Extension Lock
10. Outer Slide
11. Full Extension Release
12. Inner Slide
13. Adjusting screws
14. Rear Recess Bracket
15. 16 & 17. Washers, nut used on #13.
18. Mounting block on chassis mounting rail (4) (fits into item (25)).
19. Plate, nut
20. Screw, Mach., Pan Hd 10-32 x 5/8, P/N 10125108
21. Washer, flat #6
22. Rack rail
23. Hole in fixed slide member for screw item #5 above.
24. Mounting slot on end of outer slide member (10)
25. Mounting slot on top side of outer slide member (10)
26. Washer, lock #10, P/N 10125805
27. Washer, plain, flat, #10, P/N 94279113

Figure 3-6. Rack Mounting Details (Sheet 2 of 2)

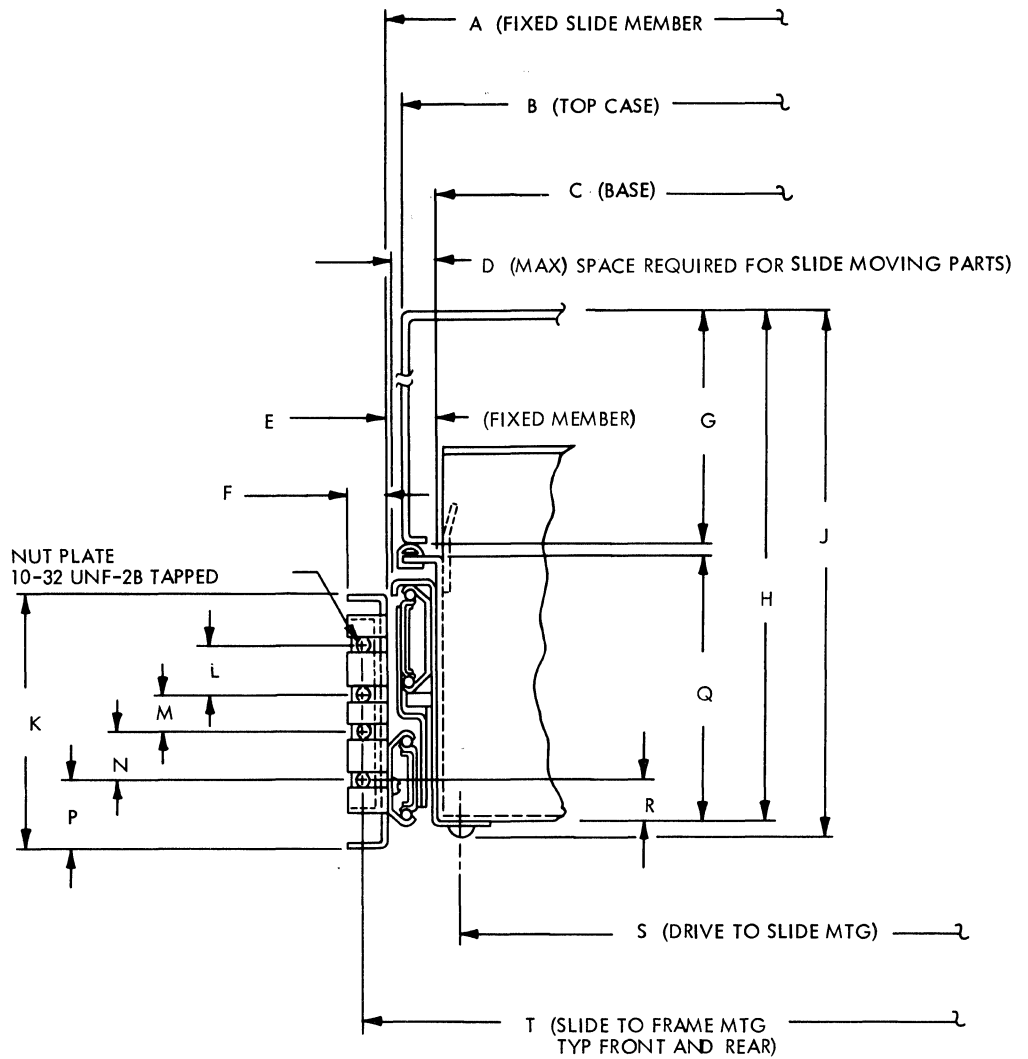


VIEW C
FRONT PANEL REMOVED

DIMENSION	INCHES	MILLIMETERS	DIMENSION	INCHES	MILLIMETERS
A	17.82	452.6	L	0.625	15.9
B	17.50	444.5	M	0.500	12.7
C	16.70	424.2	N	0.625	15.9
D	0.52	13.2	P	0.88	22.4
E	0.56	14.2	Q	3.38	85.9
F	0.50	12.7	R	0.63	16.0
G	6.66	169.2	S	15.98	405.9
H	10.15 REF	257.8	T	18.312	465.1
J	10.34 REF	262.6			
K	3.24	82.3			

XX207a


Figure 3-7. Slide/Drive Mounting Cross Section

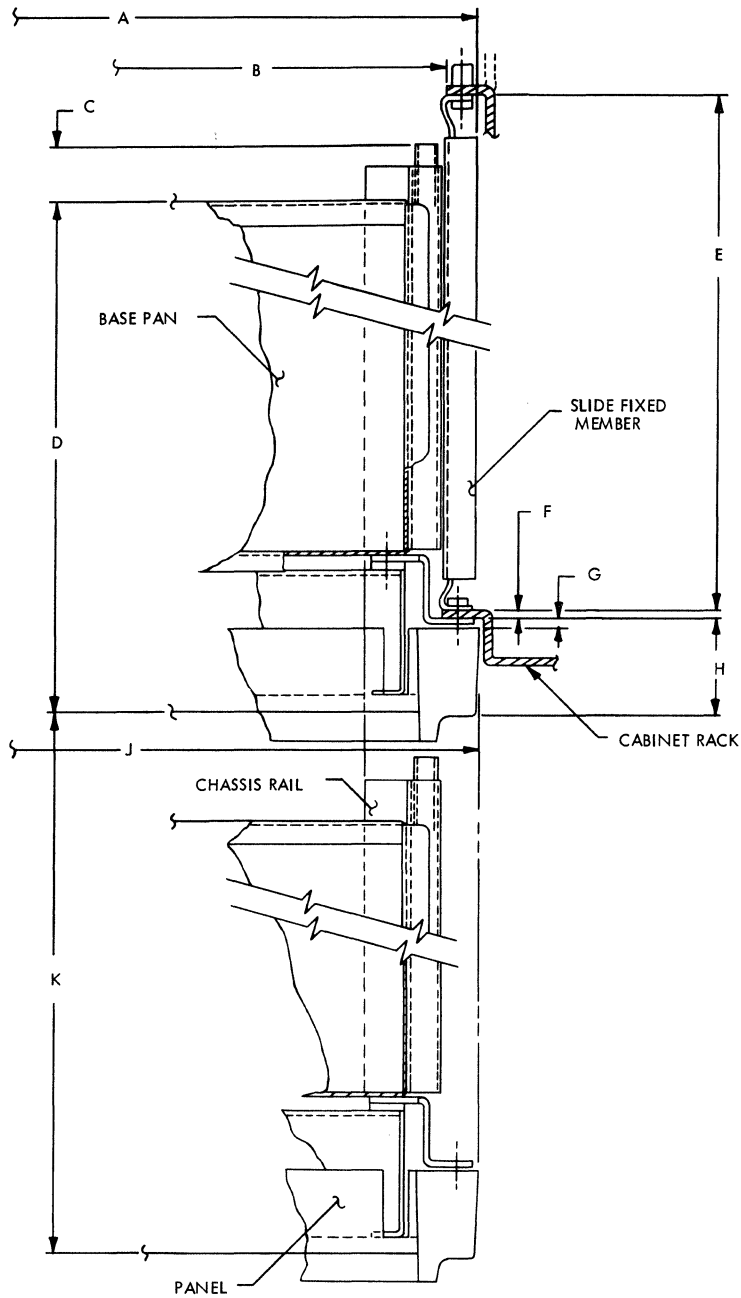

DIMENSION	INCHES	MILLIMETERS	REMARKS
A	18.82	478.0	MIN ALLOWABLE CABINET CLEARANCE FOR FIXED SLIDE MEMBER
B	17.75	450.9	MIN ALLOWABLE CABINET OPENING FRONT AND REAR
C	1.18	30.0	
D	30.50	774.7	CASE
E	28.00 thru 33.75	711.2 thru 857.25	SLIDE ADJUSTMENT LIMITS
F	0.12	3.1	REFERENCE
G	0.12	3.1	BUMPER
H	1.50	38.1	
J	19.00	483.6	MAXIMUM
K	33.00	838.2	TRAVEL MAINTENANCE POSITION

XX206a

Figure 3-8. Rack Mount Details for 36 Inch (914mm) Mounting

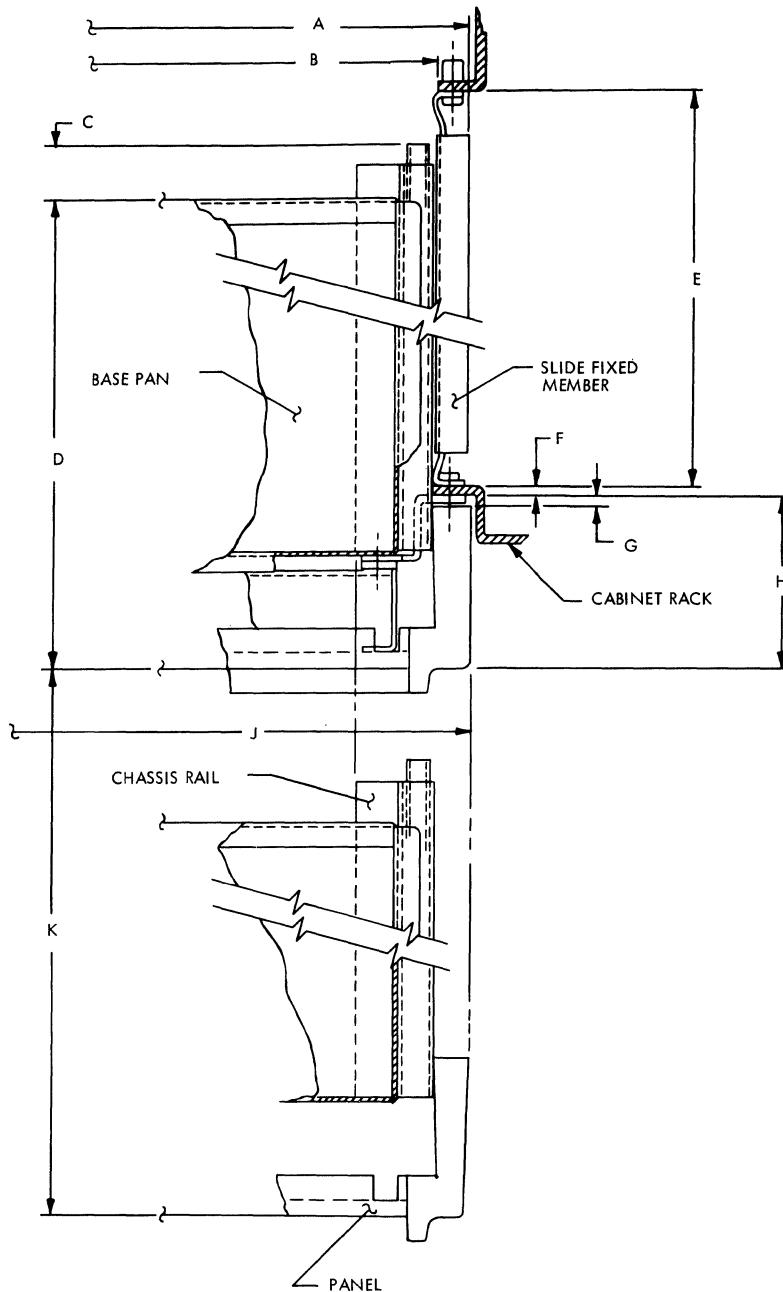

DIMENSION	INCHES	MILLIMETERS	REMARKS
A	18.82	478.0	MIN ALLOWABLE CABINET CLEARANCE FOR FIXED SLIDE MEMBER
B	17.75	450.9	MIN ALLOWABLE CABINET OPENING FRONT AND REAR
C	1.18	30.0	
D	30.50	774.7	CASE
E	28.00 thru 33.75	711.2 thru 857.25	SLIDE ADJUSTMENT LIMITS
F	0.12	3.1	REFERENCE
G	0.12	3.1	BUMPER
H	2.62	66.6	
J	19.00	482.6	MAXIMUM
K	32.00	812.8	TRAVEL MAINTENANCE POSITION

XX205a

Figure 3-9. Rack Mount Details for 30 inch (762mm) Mounting



3.5 POWER REQUIREMENTS

3.5.1 PRIMARY POWER REQUIREMENTS

The primary voltage and current requirements are shown in Tables 3-1 and 3-2. Start up current is shown in Figures 3-9.1a and 3.9.1b.

All devices use single phase power.

Table 3-1. Primary Voltage Requirements

<u>VOLTAGE</u> (VAC)	<u>TOLERANCE</u> (VAC)	<u>FREQUENCY *</u> (Hz)	<u>TOLERANCE</u> (Hz)
100	+7, -10	60	+0.6, -1.0
120	+ 8, -18	60	+0.6, -1.0
120	+ 7, -16	50	+0.5, -1.0
220	+15, -22	50	+0.5, -1.0
230	+16, -23	50	+0.5, -1.0
240	+17, -24	50	+0.5, -1.0

*Install correct motor pulley and belt according to primary power frequency and voltage.

Table 3-2. Primary Current Requirements (Operating)

<u>Unit Status</u>	<u>AC Power</u> (VAC/Hz)	<u>Line Current</u> (Max. Values)	<u>Peak* Current</u>	<u>Consumption</u> kW
Disks and Carriage in Motion	100/60	8.2	15.0	0.950
	120/60			
	120/50			
	220/50			
	230/50			
Disks not in motion (standby)	240/50	4.0	7.5	0.25
	100/60			
	120/60			
	120/50			
	220/50			
	230/50	1.0		
	240/50			

*Occurs on initial spin-up of disk for 30-second maximum duration.

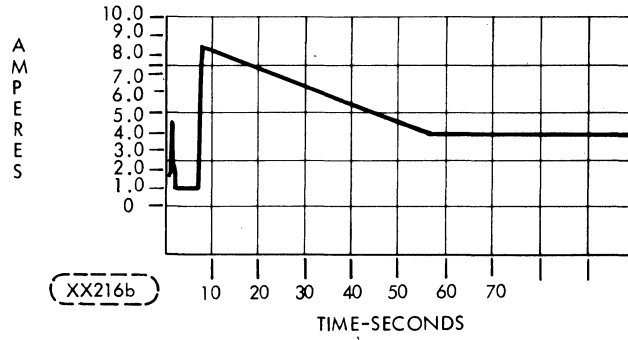


Figure 3-9.1a. Start Up Current (220/230/240 V, 50 Hz)

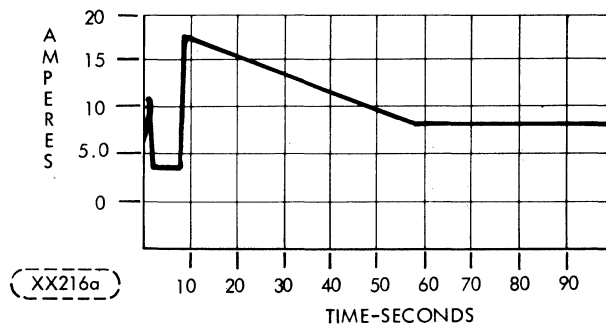


Figure 3-9.1b. Start Up Current (100 - 120 V, 50/60 Hz)

3.5.2 POWER CABLE AND CONNECTOR FOR CMD

The power cable is 6 feet (1.83 meters) long. Connectors are defined as:

<u>Description</u>	<u>CDC P/N</u>	<u>NEMA Configuration</u>
120 V 15 A 60 Hz 10 2-pole 3-wire receptacle connector at CMD end, 2-pole 3-wire plug connector at power source end.	75778719	5-15 R 5-15P

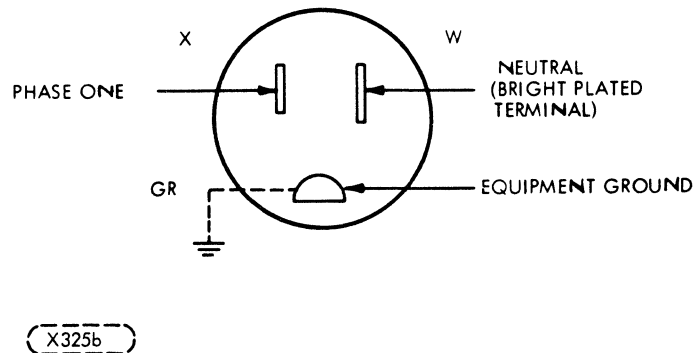


Figure 3-10. INPUT POWER CONNECTOR, 120 V 60 Hz (power source plug end)

A color-coded power cable is supplied with the 50-Hz CMD, but the 50-Hz power source end connector must be furnished by the user. The cable color code and unit power requirements are as follows:

<u>DESCRIPTION</u>	<u>COLOR-CODE</u>
220/230/240 V 50 Hz	Brown - Phase One Blue - Neutral Green and yellow - AC Equipment Ground

3.6 CABLING AND CONNECTIONS

3.6.1 UNIT INTERCABLING

Inspect the cabling in the unit for proper seating of the connectors. Lift up and swing out the electronics module (see Section 6.7.2) and check that the connectors on its underside are properly seated on the wirewrap pins. Figure 5-1 shows proper locations for these. See Section 3-12 "Accessories" for applicable cable/connector part numbers.

All input/output cables exit at the rear of the disk drive (see Figure 3-12). Refer to Figure 3-13 and 3-14 for connector pin/signal assignments for these cables. The function of each signal name is described in Table 2-2. If a terminator is used it is plugged into J2 on the I/O PWA (see Figure 3-12). Figure 3-11 shows the intercabling and terminator placement for the various drive connection arrangements. Shown are the star cabled system and the daisy chained system. A single drive would be connected as shown for the star configuration. Terminators are not furnished with each unit but must be ordered as needed for the particular system configuration into which the CMD will be integrated.

3.6.2 I/O AND POWER CABLE ROUTING INFORMATION

Rack Mount Drives

It is recommended that a cable retract mechanism be incorporated in the rack design. However, due to the variations in rack and cabinet configurations it is not possible to configure a mechanism or a method to satisfy all requirements and therefore such a device is not offered. Retract Mechanisms can be purchased from a number of different manufacturers.

A note of caution: Additional I/O cable lengths are required to raise the E module to the maintenance position.


3.7 GROUNDING

3.7.1 SYSTEM GROUNDING CONNECTIONS

The CMD frame and "DC" (DC power, Logic and analog signal) grounds are not separate when the units are shipped. However, they can be disconnected by the user. To do so disconnect the metal ground strap between the AC and DC ground studs (see Figure 3-12) at the rear of the unit. This can be done by loosening the outside nut on each ground stud and rotating the strap away from the frame ground stud or by complete removal.


3.7.2 FRAME GROUND

All parts of the CMD frame and base deck and all associated metallic parts (not including the Electronics Module frame which is DC ground) are bonded together through low impedance contacts. A frame-to-system ground point is provided at the rear left corner of the base pan (as viewed from the front of the CMD). The CMD should be grounded to the system at this point as mentioned in paragraph 3.7.1.

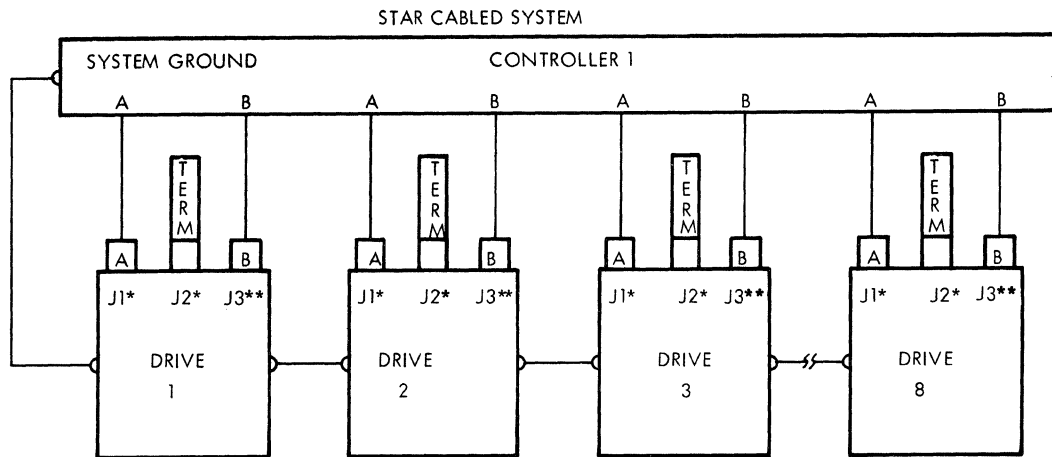

NOTES:

1. Maximum individual A cable lengths = 50 feet.
2. Maximum individual B cable lengths = 50 feet.

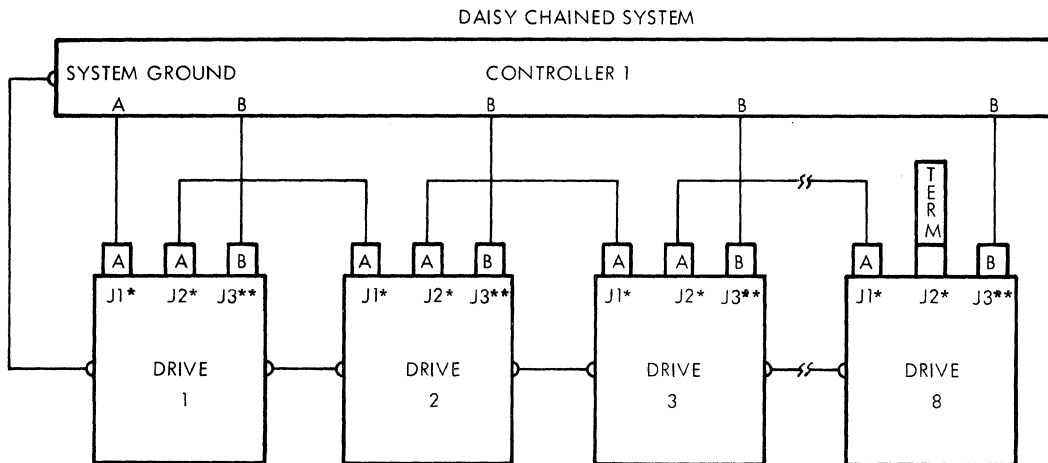

X263a

NOTES:

1. Termination of "A" cable lines are required at controller receivers and the last unit of the daisy chain or each unit in a star.
2. Termination of "B" cable receiver lines are required at the controller. The unit's cntl/mux card has termination integrated into its assembly.
3. Maximum cumulative A cable length = 100 feet.
Maximum individual B cable length = 50 feet.

- * I/O PWA
- ** CNTL/MUX PWA

Figure 3-11. Single Channel Interface

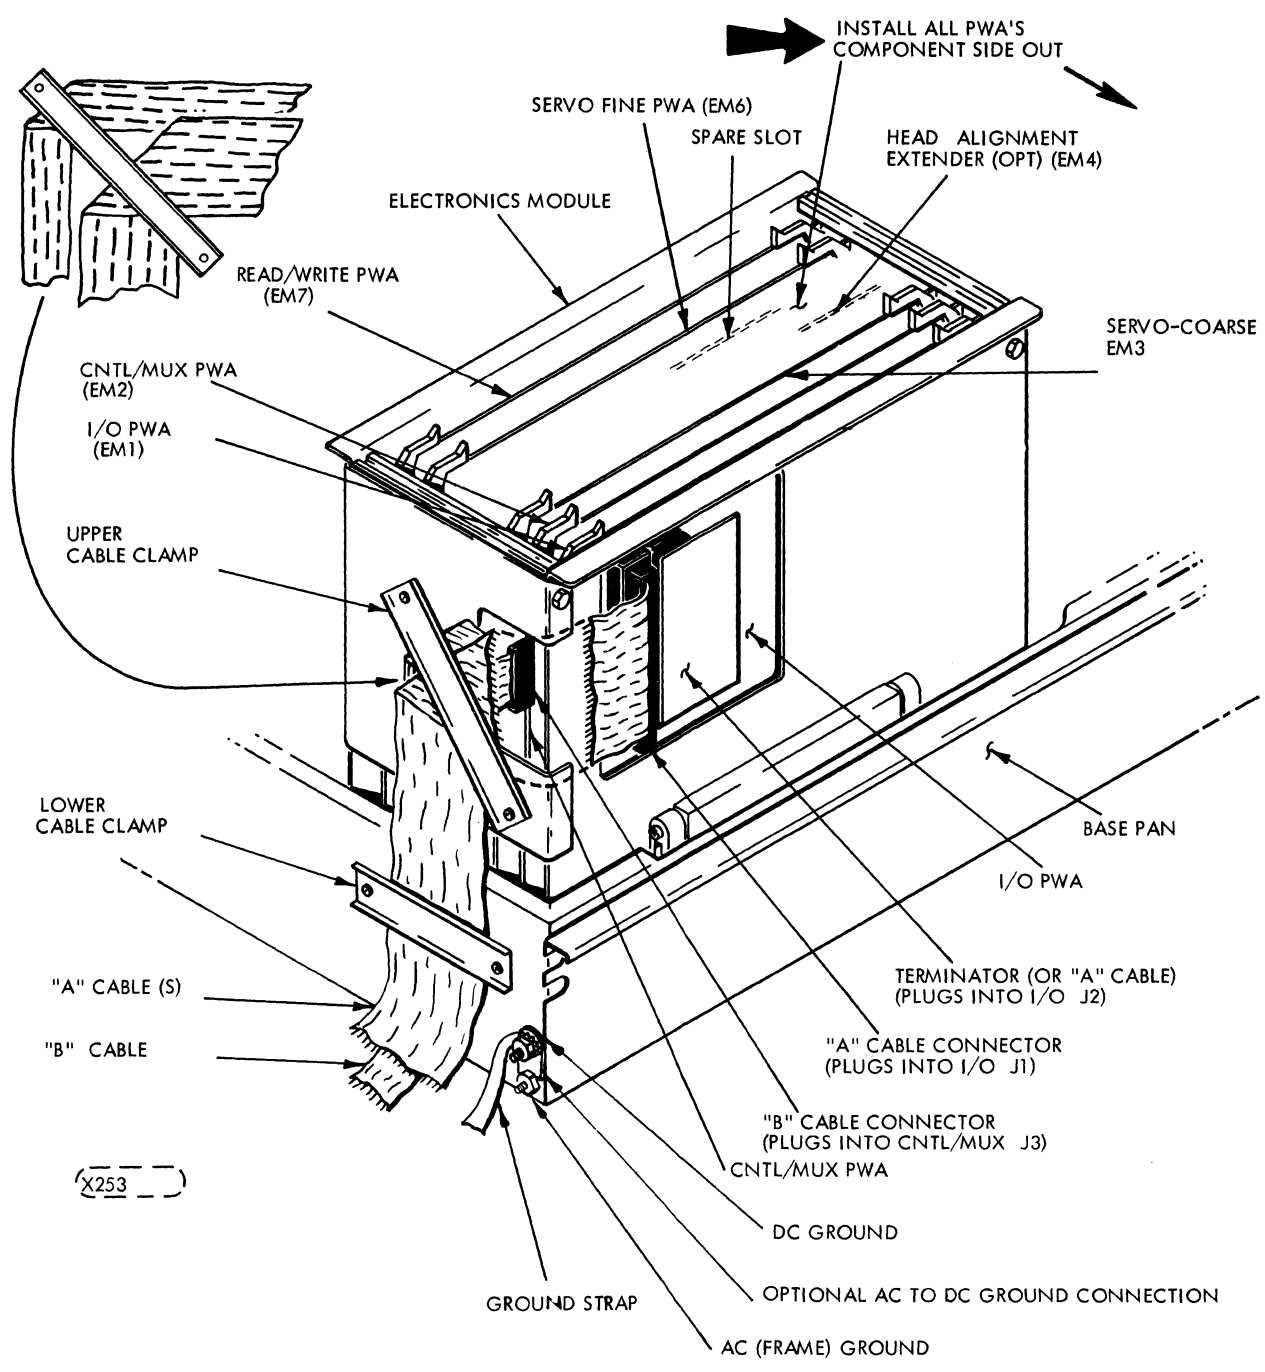


Figure 3-12. I/O Cable Installation and PWA Names/Locations

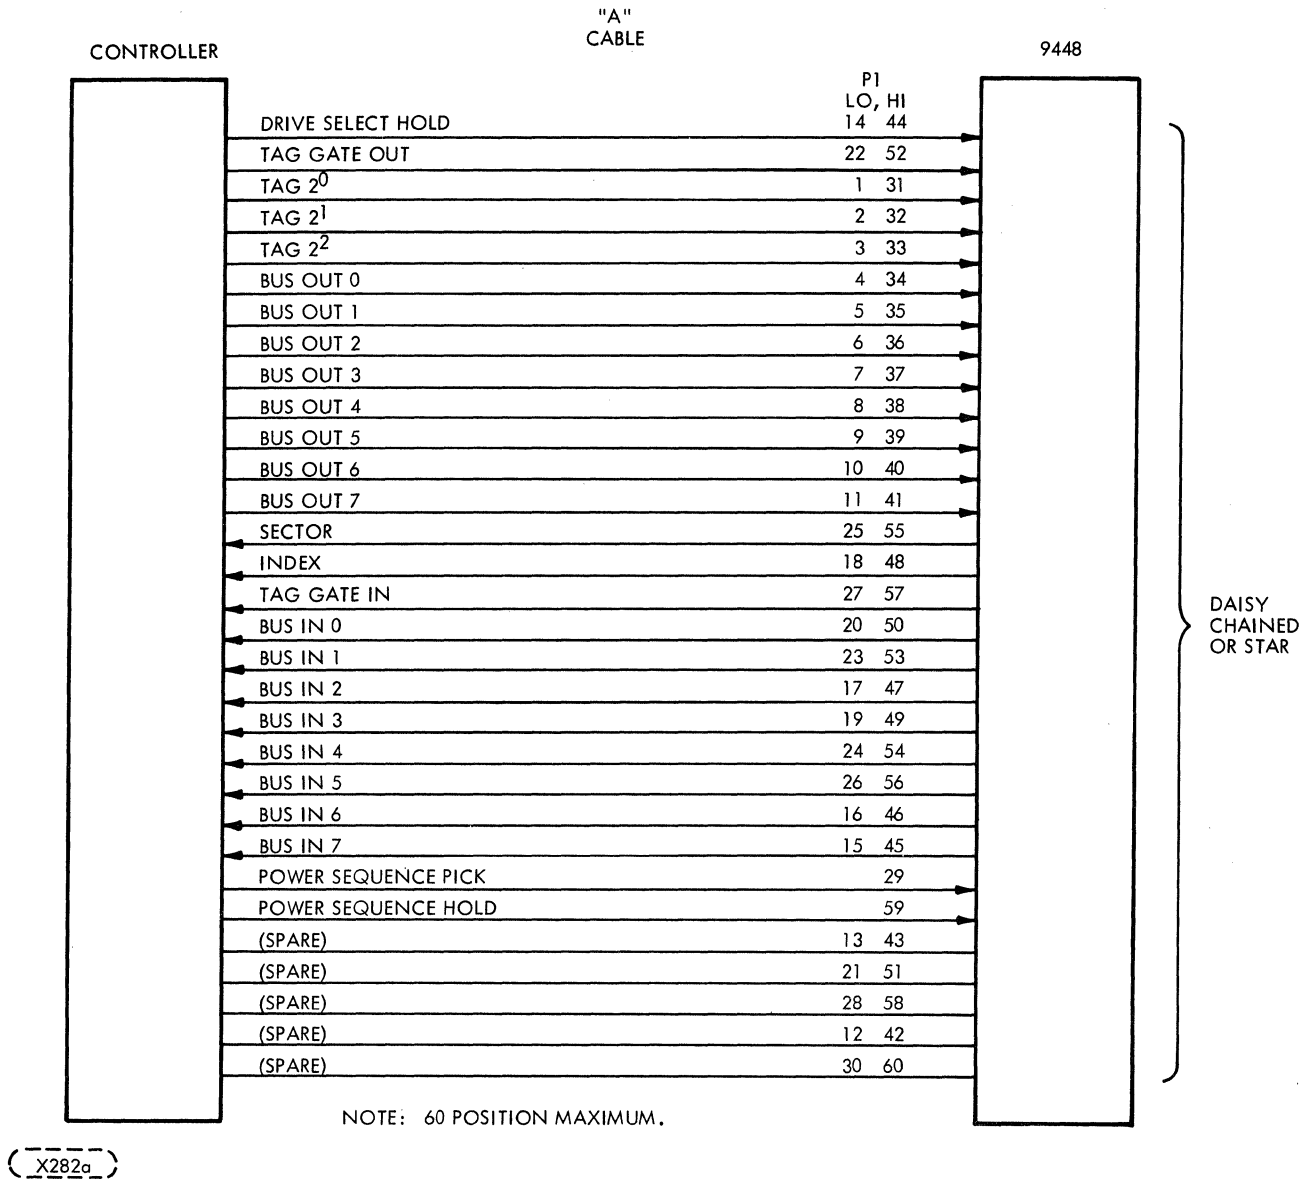


Figure 3-13. TAG Bus I/O Interface, "A" Cable

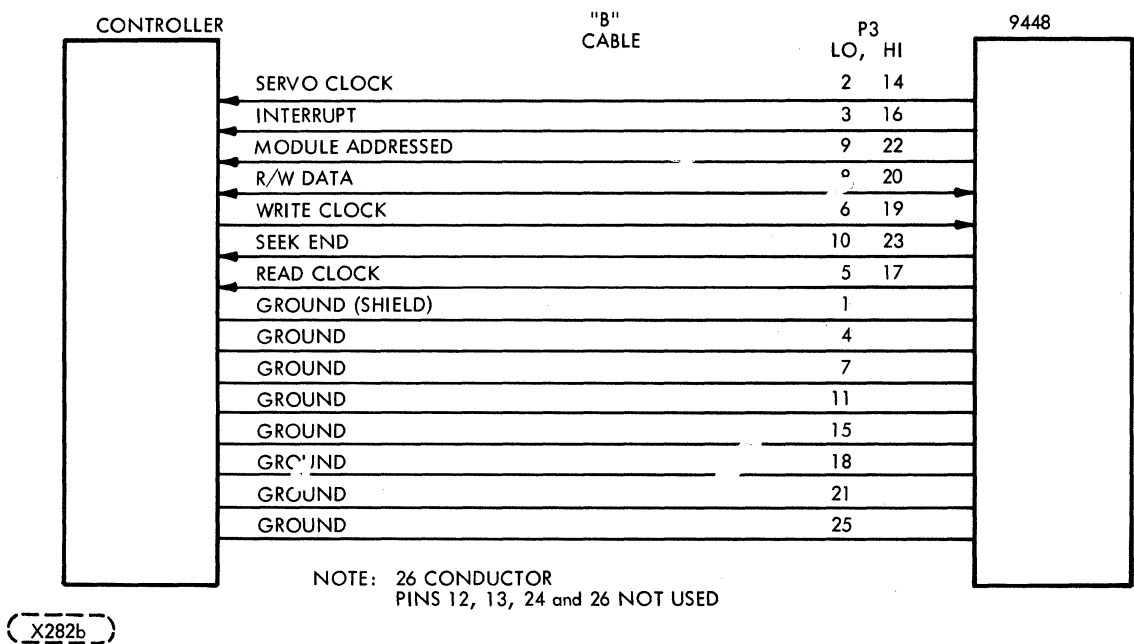


Figure 3-14. TAG Bus I/O Interface, "B" Cable

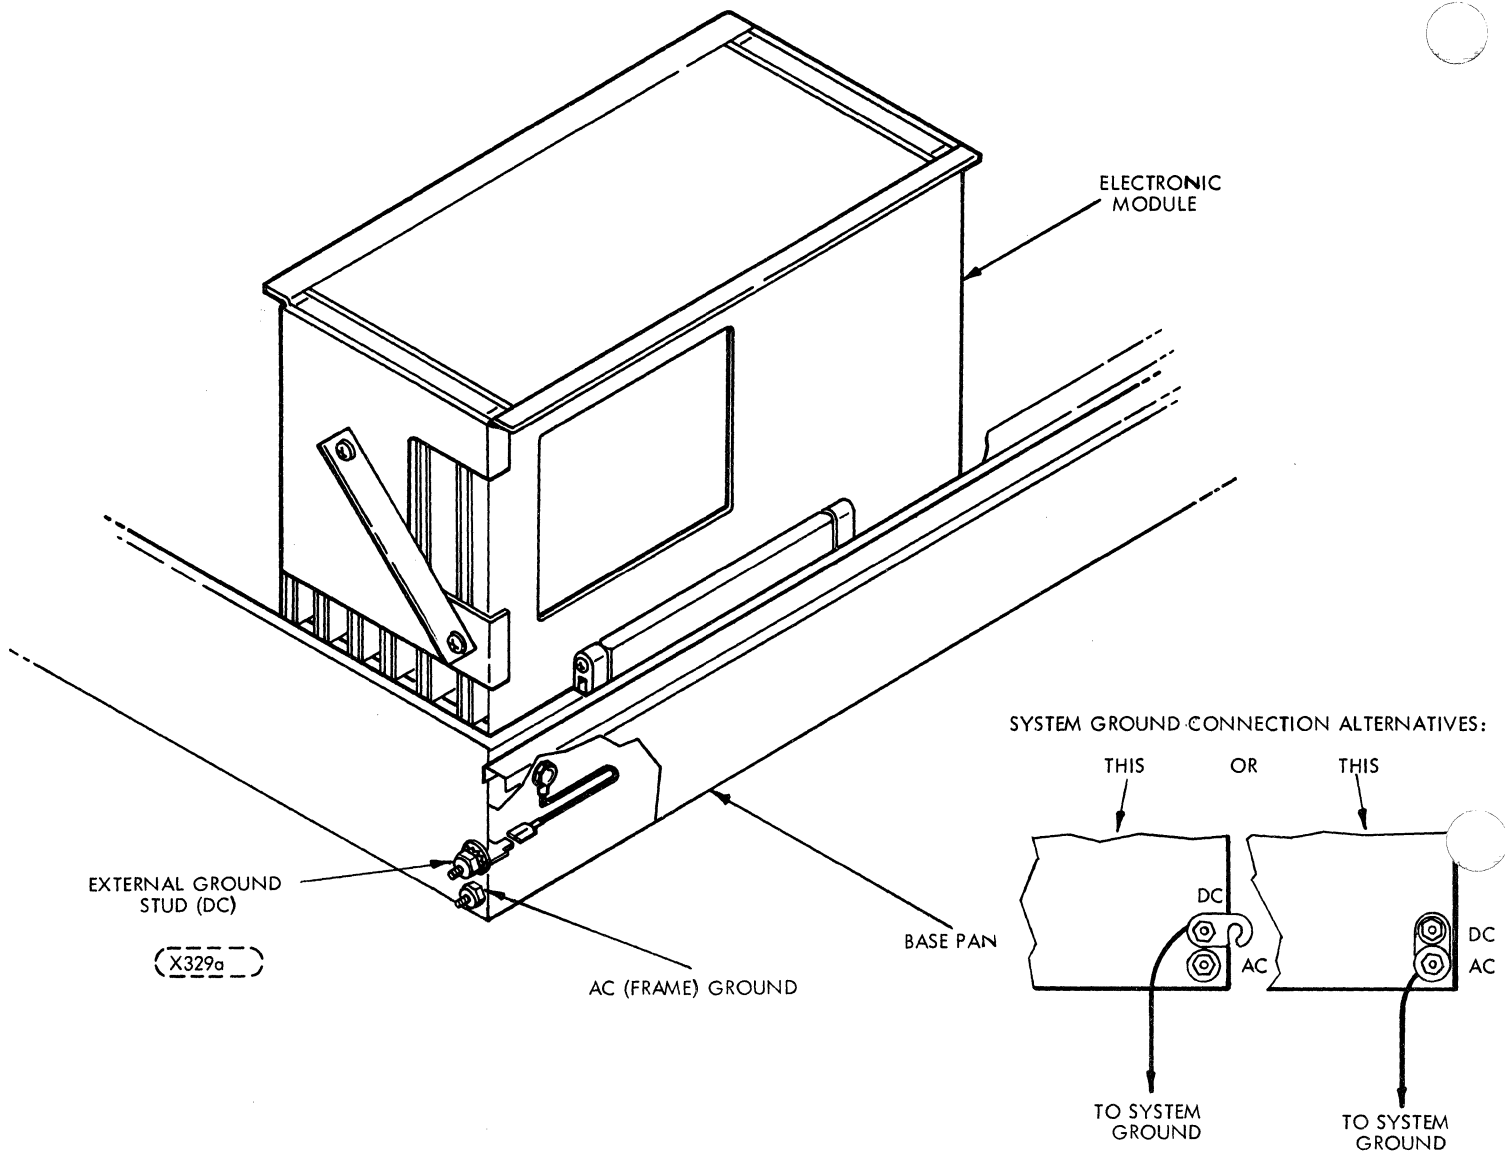


Figure 3-15. Grounding Option

3.7.3 DC/LOGIC/ANALOG GROUND

The CMD electronic circuits (DC power, logic and analog signals) utilize a common ground which is separate from AC or frame ground unless connected together at one point as described in paragraph 3.7.1. If static charge build-up on the frame becomes a problem when frame and DC grounds are separate it may help to connect the two together at one point through a one megohm resistor in parallel with a 0.47 μ F capacitor.

3.8 COOLING REQUIREMENTS

Cooling air is drawn in at the front of the unit and exhausted through the rear. A minimum of 1 1/4 inch (32 mm) clearance must be provided at the rear of the unit to maintain unrestricted air flow. A positive pressure near the rear exhaust should not exceed 0.03 inches of water (7.47 Pascal).

3.9 ENVIRONMENT

Operating and storage environmental limits of the unit are as follows:

Operating Environment

*Relative Humidity	20% to 80%
***Ambient Temperature	+50°F (10°C) to +95°F (35°C)**
Temperature Gradient	18°F/hour (10°C/hour)
Humidity Gradient	10%/hour

Storage Environment (up to 3 months)

*Relative Humidity	10% to 90%
Ambient Temperature	-14°F (4.4°C) to +122°F (50°C)**
Temperature Gradient	27°F/hour (15°C/hour)
Humidity Gradient	10%/hour

Transient Environment (up to one week)

*Relative Humidity	0% to 100%
Ambient Temperature	-40°F (-40.4°C) to +158°F (65°C)**
Temperature Gradient	36°F/hour (+20°C/hour)
Humidity Gradient	10%/hour

*Providing there is no condensation

**Maximum temperature reduced by 1.95°F/1000 ft. (1.08°C/305 m)

***Ambient Temperature - Inlet Air can reach 95°F provided the maximum air temperature at the hottest point around the 4 sides (excluding front & rear) of the device does not exceed 125°F.

3.10 PREPARATION FOR USE

3.10.1 SECTOR NUMBER OPTION SWITCHES

The number of sector pulses per disk revolution can be selected by positioning sections 1 through 7 of an 8 section DIP option switch on the Servo-Coarse PWA. See Figure 3-16. The settings of the DIP switch (S1) are factory set to customer requirements. The output from a section of the DIP switch will be a logic "0" when the "ON" or left side of the switch is pushed in ("ON" is embossed on the lower left corner of the switch also). The output of a switch is logic "1" when the right side of a switch is pushed in ("OFF"). * Table 3-3 lists the number of sector pulses generated per disk revolution for each switch section setting of sections 1 through 7. Switch Section 8 is used for maintenance purposes and its use is described in Section 6 of this manual. For normal operation switch section 8 should be left in the ON position. "OFF" (right side pushed in) displays the actuator velocity adjustment and "ON" allows display of microprocessor faults and present seek address. Position S1-8 to "ON".

Switches S1-1 through S1-7 are interpreted by the microprocessor on the Servo-Coarse PWA as a seven digit binary number, with S1-1 being the least significant bit and S1-7 being the most significant bit. Any number of sectors from 1 to 128 can be selected. The unique settings of the switch for each customer are shown in a document called "Device Specifications and Switch Selections" which is included in the front of every manual when shipped. These specifications can be used to check the switch settings of the unit before it is put into operation.

*NOTE: The logic signals required from the switches are ON = 0, OFF = 1. Therefore, when switches 2 through 7 are pushed down on the ON side and switch 1 is pushed down on the OFF side, the selection being made is one sector (S1-1 output is active LOW). When all switches are pushed down on the OFF side, the selection is 127 sectors.


Table 3-3. S1 Switch Settings vs Number of Sectors per Revolution

S1--							Number of Sectors (in decimal)	Includes Sector Numbers
7 64	6 32	5 16	4 8	3 4	2 2	1 1 (Binary Weight)		
0	0	0	0	0	0	1	1	0
0	0	0	0	0	1	0	2	0-1
0	0	0	0	0	1	1	3	0-2
0	0	0	0	1	0	0	4	0-3
0	0	0	0	1	0	1	5	0-4
			:					
			:					
0	0	0	1	0	0	0	8	0-7
			:					
			:					
0	0	1	0	0	0	0	16	0-15
			:					
			:					
0	1	0	0	0	0	0	32	0-31
			:					
			:					
1	0	0	0	0	0	0	64	0-63
			:					
			:					
1	1	1	1	1	1	0	126	0-125
1	1	1	1	1	1	1	127	0-126

*The intervening values follow the binary/decimal number equivalence rules and can easily be filled in by the reader.


3.10.2 I/O PWA

The I/O PWA contains two switches. The toggle switch S1 selects remote (at the controller) or local (CMD control panel) control of the power sequence lines. The toggle switch S2 provides manual capability of inhibiting drive transmitted signals except for Read/Write Clocks and Data. Before operating the CMD, position these two switches to the desired positions (see Figure 3-17).

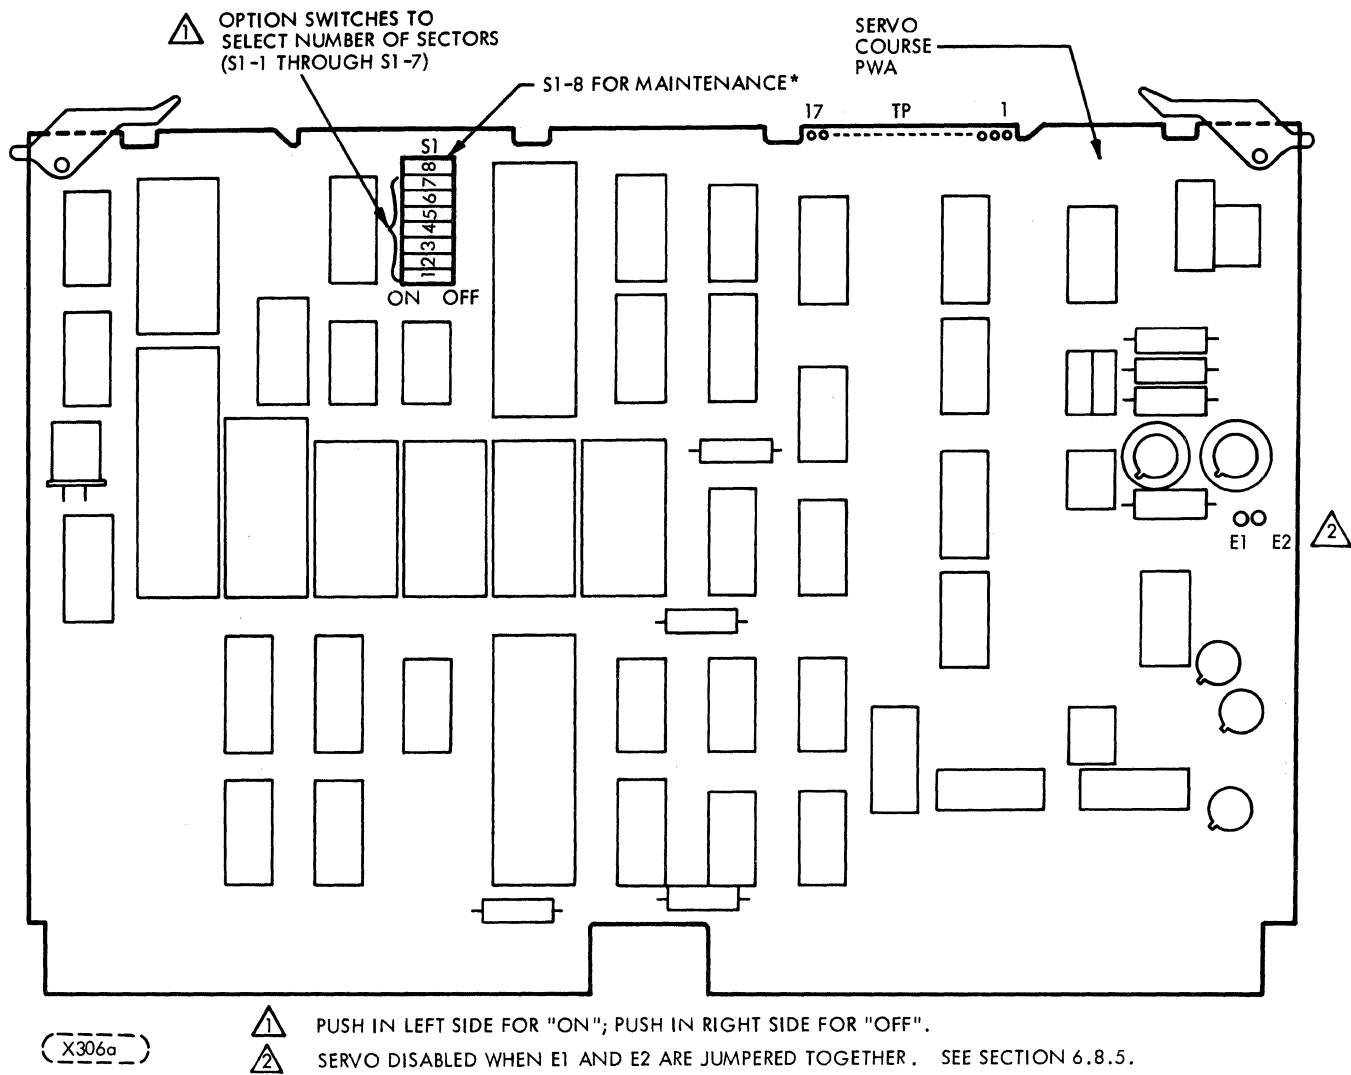

*Section 6.9.1 discusses the use of S1-8.

Figure 3-16. Servo-Coarse Option Switches

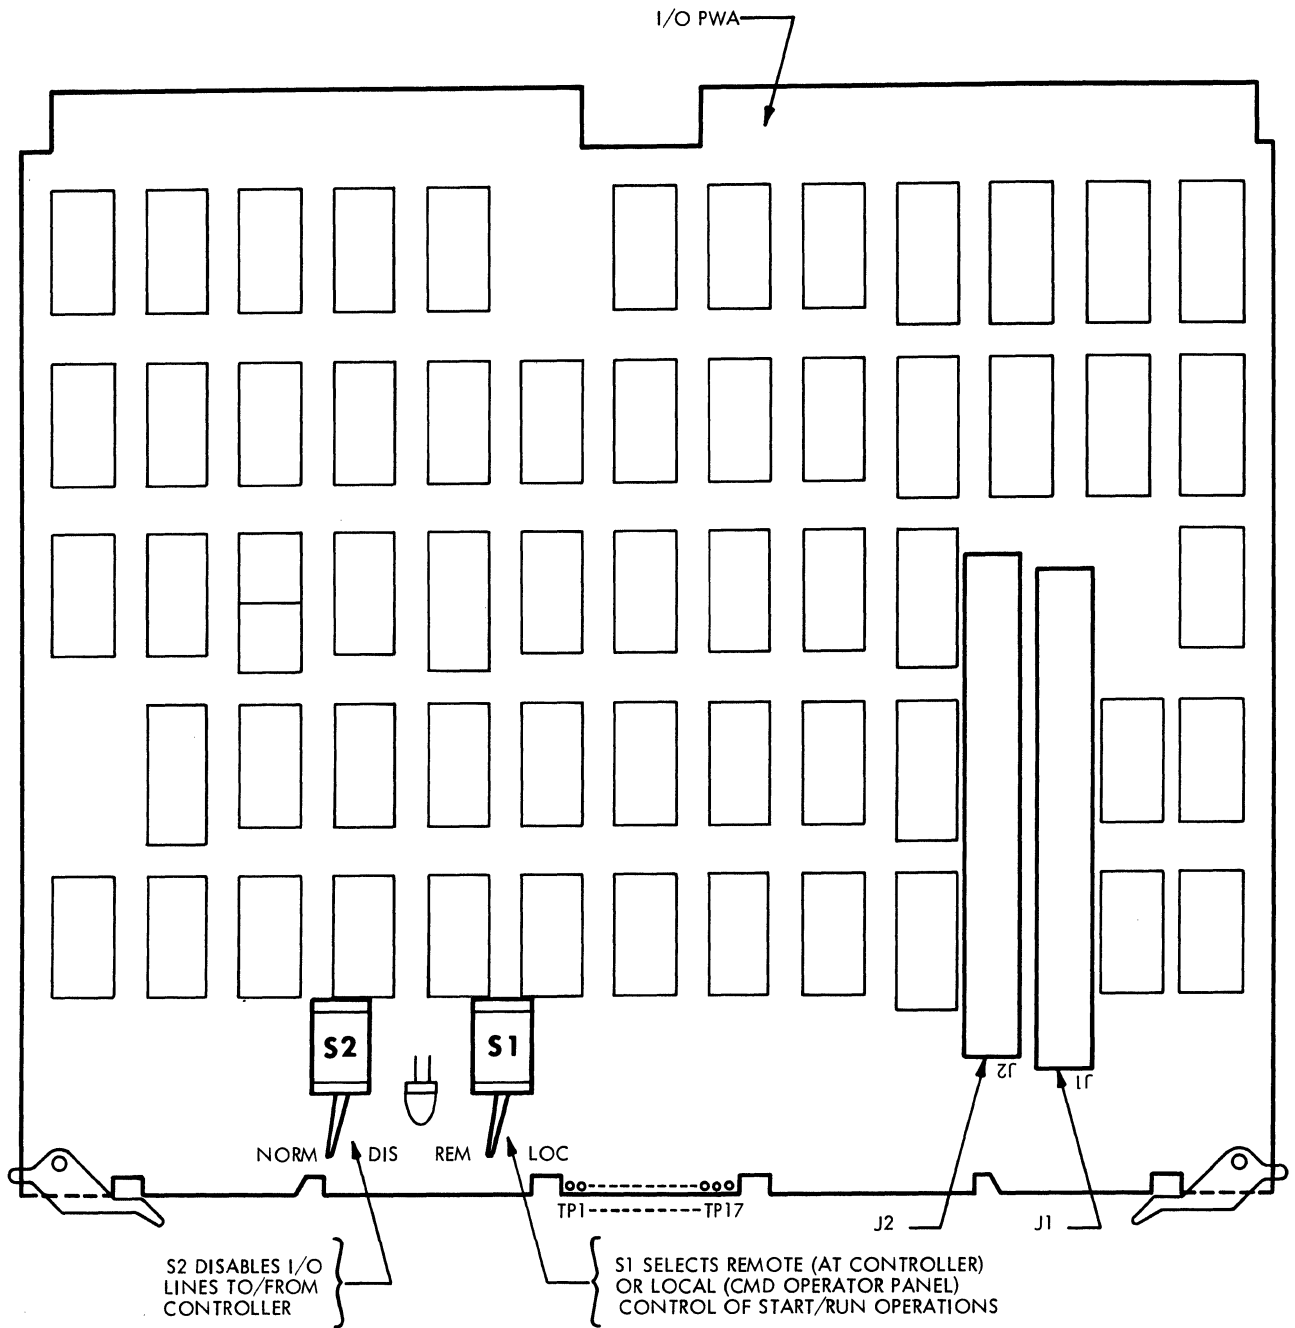

(PWA SHOWN UPSIDE DOWN SO SWITCH POSITION LABELS WILL BE RIGHT SIDE UP)

X307a

Figure 3-17. I/O PWA Showing Switches and I/O Connector Location

3.11 INITIAL CHECKOUT AND STARTUP PROCEDURE

This procedure should be used to make the first power application to the unit. The procedure assumes that the preceding procedures and requirements of this section have been performed.

1. Check that the AC power circuit breaker is OFF.

The AC power circuit breaker should never be positioned to OFF while the disk is rotating. Without blower operating contamination will be sucked into unit.

2. Open the top cover (see Section 6 for procedure).

Do not position the carriage manually. Such action could cause damage to the read/write heads and/or disk surfaces.

3. If it hasn't already been done check that the interior of the unit is clean.
4. Make certain that the input power cable is connected to the correct AC power source.
5. Install the terminator in J2 of the I/O PWA if star configuration is used for the system. For Daisy chain configurations, the terminator is installed in the last device only.
6. Turn on AC power circuit breaker. Make certain that the blower is operating.
7. Remove Plastic cover shipped in place of a cartridge and install a cartridge per paragraph 2-7.
8. On the I/O PWA switch the REM/LOC switch to LOC.
9. Operate the START switch on the operators panel.
10. Check to see that the spindle drive motor is operating.
11. The positioner drives the carriage forward to load the read/write heads at track 00 in a maximum of 70 seconds.
12. Operate START switch to STOP and check to see that the heads FULLY UNLOAD and the spindle stops.
13. On I/O PWA, switch REM/LOC switch to REM, unless the system requirement is for the power sequencing control to be at the unit rather than remote.
14. Install I/O cables per Section 3.6.
15. Replace top cover.
16. Apply power to the unit. Wait until heads are loaded (READY light illuminated) and run on-line diagnostics as applicable (if available).

3.12 ACCESSORIES

3.12.1 I/O INTERFACE ACCESSORIES

I/O Interface Accessory items required, but not furnished with the device are shown in the following tables:

Table 3-4. I/O Cable and Terminator Part Numbers

DESCRIPTION	QUANTITY REQUIRED	NOTE	PART NO.
"A" Cable (Controller to Device) (Same Connector on each end) (See para. 3.12.2)	One per Device in star, one per multi-spindle installation in Daisy chain	2, 3	775642XX
"A" Cable (Device to Device) (Same Connector on each end) (See para. 3.12.2)	One less than total devices in the Daisy chain	1, 2, 3	775642XX
"B" Cable (Controller to Device)	One per Device	3	775643XX
Terminator	One per Device in star, one per multi-spindle installation in Daisy chain	3	75841300

1. Multiple, number of cables required depends on number of units in daisy chain.
2. Last two digits denote length. (For cable length see Table 3-5.)
3. In systems using the dual channel operation, twice the number of cables and terminators are required.

The above accessories are required but not included with the units; they must be purchased separately.

Table 3-5. I/O Cable Length and Tabs

PART NO. TAB	CABLE LENGTH IN FEET									
	5	6	8	10	15	20	25	30	40	50
"A" Cable 775642XX	00	01	02	03	04	05	06	07	08	09
"B" Cable 775643XX	00	01	02	03	04	05	06	07	08	09

3.12.2 DESCRIPTION OF I/O CABLE CHARACTERISTICS AND CONNECTOR PART NUMBERS

3.12.2.1 "A" Cable (See Figure 3-18)

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>MPI P/N</u>	<u>BERG P/N</u>	<u>P/N SPECTRA-STRIP</u>
1	Connector (60 Pos)	94361115	65043-007	
2	Flat Cable (twisted-pair), 30 pair, 28 AWG	95043902		3CT-6028-3-05-100
3	Contact, Insert	94245603	48048	-----

"A" Cable Mating Receptacle on Unit or Controller

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>MPI P/N</u>	<u>AMP P/N</u>
4a	60 pin, right angle header	94369804	3-86479-4
4b	60 pin, vertical header	94385129	3-87227-0

3.12.2.2 "B" Cable (See Figure 3-18)

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>MPI P/N</u>	<u>AMP P/N</u>
5	Connector (26 pos.)	65853402	3399-3000
6	Connector Pull Tab	92004801	3490-2
7	Flat Cable (26 pos.) with ground plane and drain wire.	95028509	3476-26

"B" Cable Mating Receptacle on Unit or Controller

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>MPI P/N</u>	<u>AMP P/N</u>
8a	26 pin, right angle header	94369802	1-86479-0
8b	26 pin, vertical header	94385112	1-87227-3

3.12.2.3 I/O Cable Characteristics


"A" Cable

Type: 30 twisted pair, flat-cable
 Twists per inch: 2
 Impedance: 100 ±10 ohms
 Wire size: 28 AWG, 7 strands
 Propagation time: 1.6 to 1.8 ns/ft
 Maximum cable length: 100 ft cumulative
 Voltage Rating: 300 V rms


"B" Cable (with ground plane)

Type: 26 conductor, flat cable with ground plane and drain wire
 Impedance: 65 ohms (3M P/N 3476-26)
 Wire size: No. 28 AWG, 7 strands
 Propagation velocity: 1.65 ns/ft (nominal)
 Maximum cable length: 50 ft
 Voltage Rating: 300 V rms


60 RECEPTACLE
CABLE "A" CONNECTOR

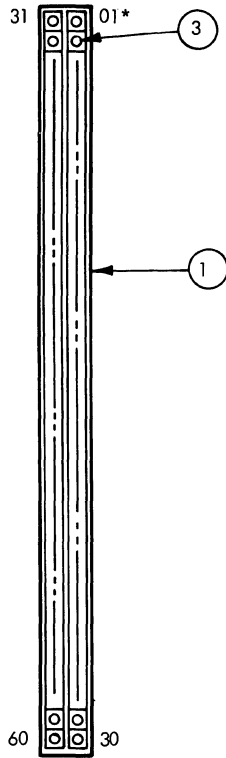


60 PIN MATING
PWB "A" CONNECTOR ON
ON UNIT OR CONTROLLER

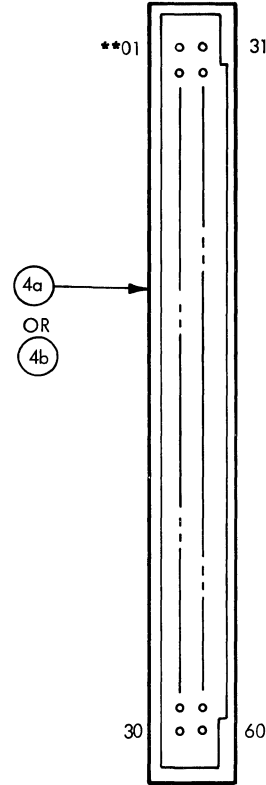

26 RECEPTACLE
CABLE "B" CONNECTOR

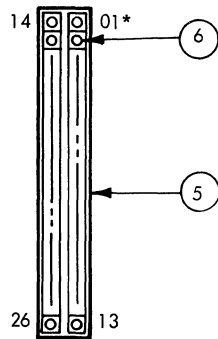

26 PIN MATING
PWB "B" CONNECTOR
ON UNIT OR CONTROLLER

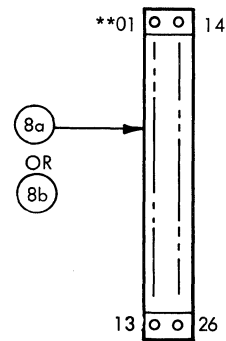

* CONNECTORS AS PURCHASED
MAY NOT HAVE RECEPTACLE
NUMBERS MARKED ON THEM

** PIN NUMBERS ETCHED ON PWB

XX214a

Figure 3-18. I/O Connectors



4.1 INTRODUCTION

The theory of operation for the drive is organized into two parts. The first part describes the major mechanical assemblies. The second part describes the power functions, the logical functions, and the signals exchanged with the controller. Logic signal names are followed by the symbol +L or -L indicating that the active (Logic "1") level of the signal is high (+4 Volts for TTL and -0.8 Volts for ECL) or low (nominal 0 Volts for TTL and -1.7 Volts for ECL) respectively. For example, the signal SEG-END-INT/+L indicates the signal is at a nominal +4 Volt level when active (logic "1"). Connector and pin nomenclature used in the text will be the same as that used in the wire lists. Following is a list of the connector designators used (see also Figure 5-1).

Electronics Module PWA Connectors

EM1	I/O PWA
EM2	Control/Mux PWA
EM3	Servo-Coarse PWA
EM4	Head Alignment PWA
EM5	Spare
EM6	Servo-Fine PWA
EM7	Read/Write PWA

Other Assemblies which may be referred to in this section

RC	Relay Control PWA
PA	Power Amplifier Assy.
OP	Operator Control Panel
CMPB	Component PWA
SP	Servo Preamplifier
RWP	Read/Write Preamplifier
TM	Terminator PWA
VT1	Velocity Transducer
CR1	Spin Speed Sensor

Each Electronics Module (EM) PWA has two connectors called P1 and P2. These plug into J1 and J2 of the Mother Board PWA. In addition, ten other connectors connect to the wire wrap pins of the EM Mother PWA. These are EMP1 through EMP10 on the wire lists and they route signals to/from assemblies other than Electronics Module PWAs. On the schematics, signals which connect between the Electronics Module PWAs will be labeled J1 or J2 plus pin number. For example, P1-B41 on the Servo-Fine PWA schematic is the "FXD-ADR/-L" signal which comes via the Mother Board connections from P1-A41 which is the CNTL/MUX PWA. The Intracabling diagram with the schematic for each of these two PWAs shows the connection of "FXD-ADR/-L" between them. Connectors labeled J1 or J2 on the Electronics Module PWA schematics refer to interconnection signals, i. e., signals going through the EMP1 through EMP10 connectors to assemblies not in the Electronics Module, such as the Servo Preamp PWA. The intracabling diagram (or interconnection diagram, as the case may be) with each schematic indicates the figure number where the signal in question is found as a source or destination. For example, the signal "P-DIBIT-REM" is shown on sheet 2 of the Servo-Fine schematic as an input from somewhere coming in on P1B04. A look at the intracabling diagram for the Servo-Fine PWA shows that P1B04 as found on sheet 2 of the Servo-Fine PWA schematic has as its source/destination the schematic of Figure 10 (meaning 5-10) which is the figure for the Servo Preamp schematic. A look at figure 5-10 sheet 2 shows "P-DIBIT-REM" going out on J2-01. The interconnection Diagram

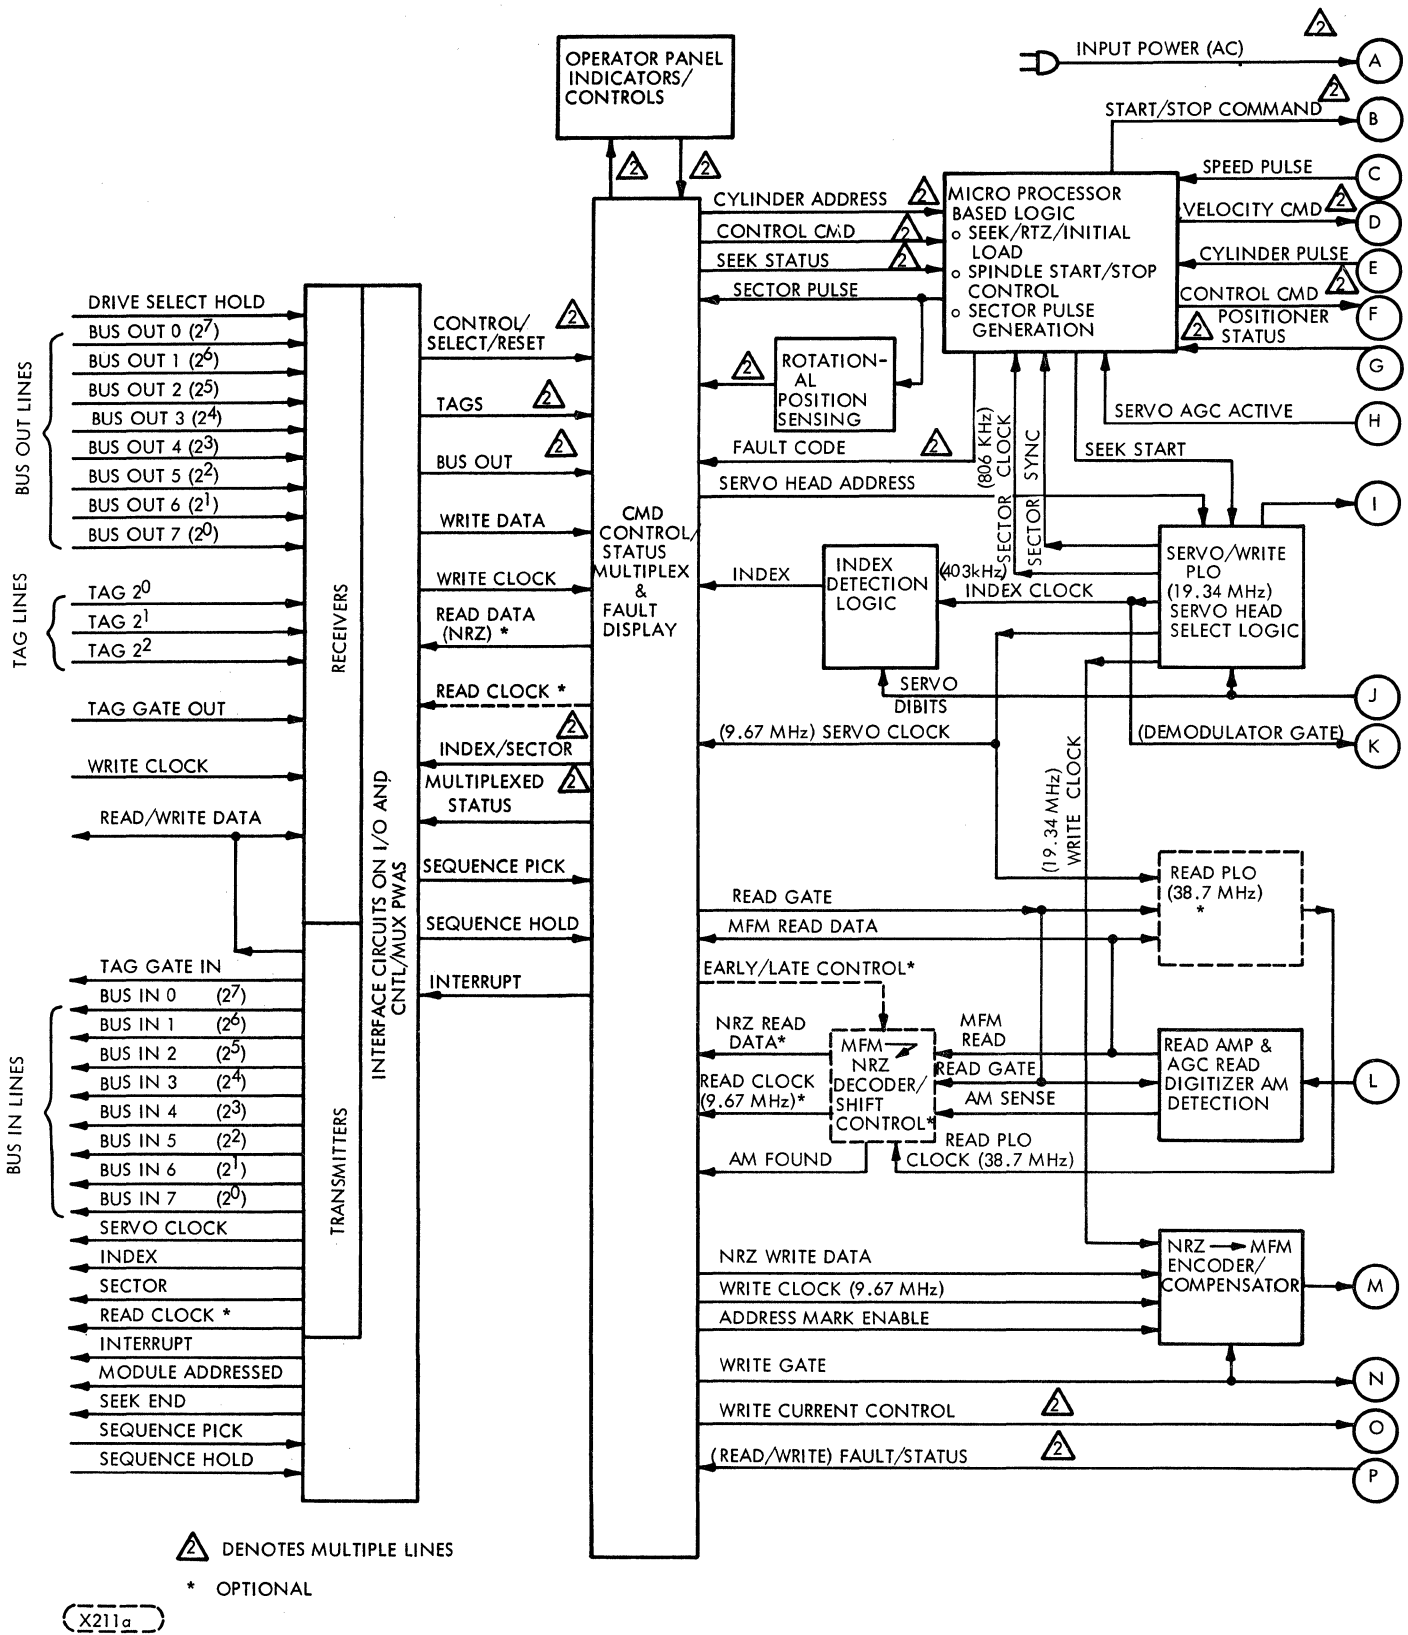


Figure 4-1. CMD Block Diagram (STD-1 Interface) (Sheet 1 of 2)


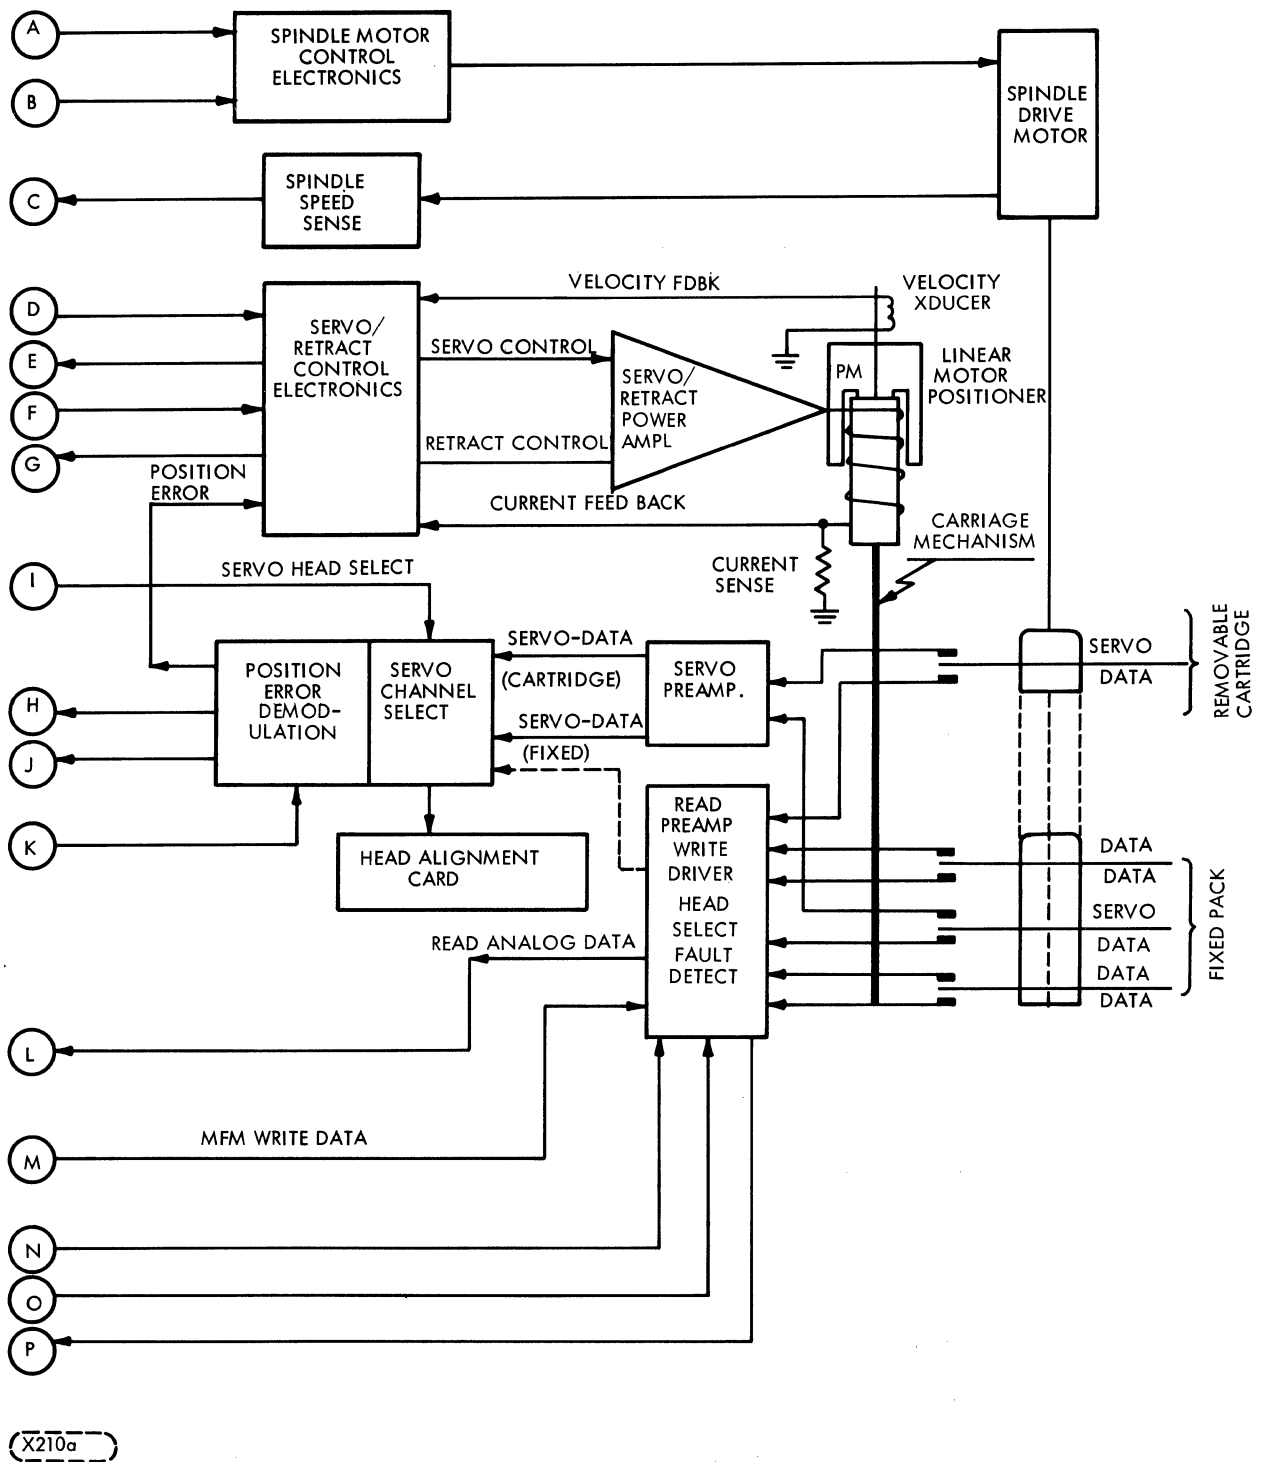


Figure 4-1. CMD Block Diagram (STD-1 Interface) (Sheet 2 of 2)

of Figure 5-10 sheet 1 indicates J2-01 goes to P1B04 of Figure 5-7. A look at Figure 5-1 (the interconnection diagram for the whole unit) shows that there is a cable going from J2 of the Servo Preamp to P1 of EM6 which is the Servo-Fine PWA.

Integrated circuit components are designated as follows:

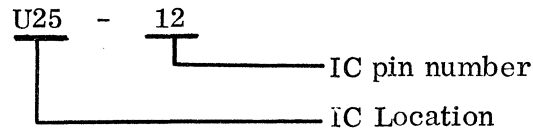

Functional descriptions are frequently accomplished by simplified diagrams. These diagrams are useful both for instructional purposes and as an aid in troubleshooting. The diagrams have been simplified to illustrate the principles of operation; therefore, some elements are omitted. The logic diagrams in Section 4 of this manual should take precedence over the diagrams in this section whenever there is a conflict between the two types of diagrams.

The descriptions are limited to drive operations only. In addition, they explain typical operations and do not list variations or unusual conditions resulting from unique system hardware or software environments. Personnel using this manual should already be familiar with principles of operation of the computer system, the controller, programming considerations (including the correct sequencing of I/O commands and signals), and track format (i.e., data records and field organization).

4.2 ASSEMBLIES

Figure 4-2 illustrates the physical placement of the various major assemblies comprising the CMD. Figure 4-1 illustrates the functional relationships of these assemblies. The following paragraphs describe the operation of these assemblies.

4.2.1 POWER SUPPLY

Each drive has its own self-contained power supply. The power supply is located in the rear and cooled by air from a blower at the front of the drive cabinet. The power supply consists of a linear transformer and associated filter capacitors to supply ± 5 , ± 20 , and ± 32 Volts. The ± 5 Volt supply and the ± 20 Volt supply are internally regulated.

The power supply has the following outputs:

1. ± 20 Volts for use in generating ± 15 Volts, ± 12 Volts and ± 6 Volts all of which are used in the various analog circuits (i.e., servo and Read/Write), and ± 12 Volts for the microprocessor and the microprocessor memory circuits.
2. ± 5 Volts for the logic.
3. ± 32 Volts for use by the voice coil positioner and the emergency retract relay.

Power is made available to the drive through a line filter and the closed contacts of the AC POWER circuit breaker. When the AC POWER circuit breaker is closed, the blower motor starts and all of the DC voltages go on. When the START switch contacts are closed (at the control panel) the microprocessor causes the solid state relay SSR1 and K1 to apply power to the spindle motor, assuming that the deck is down, the cartridge is seated

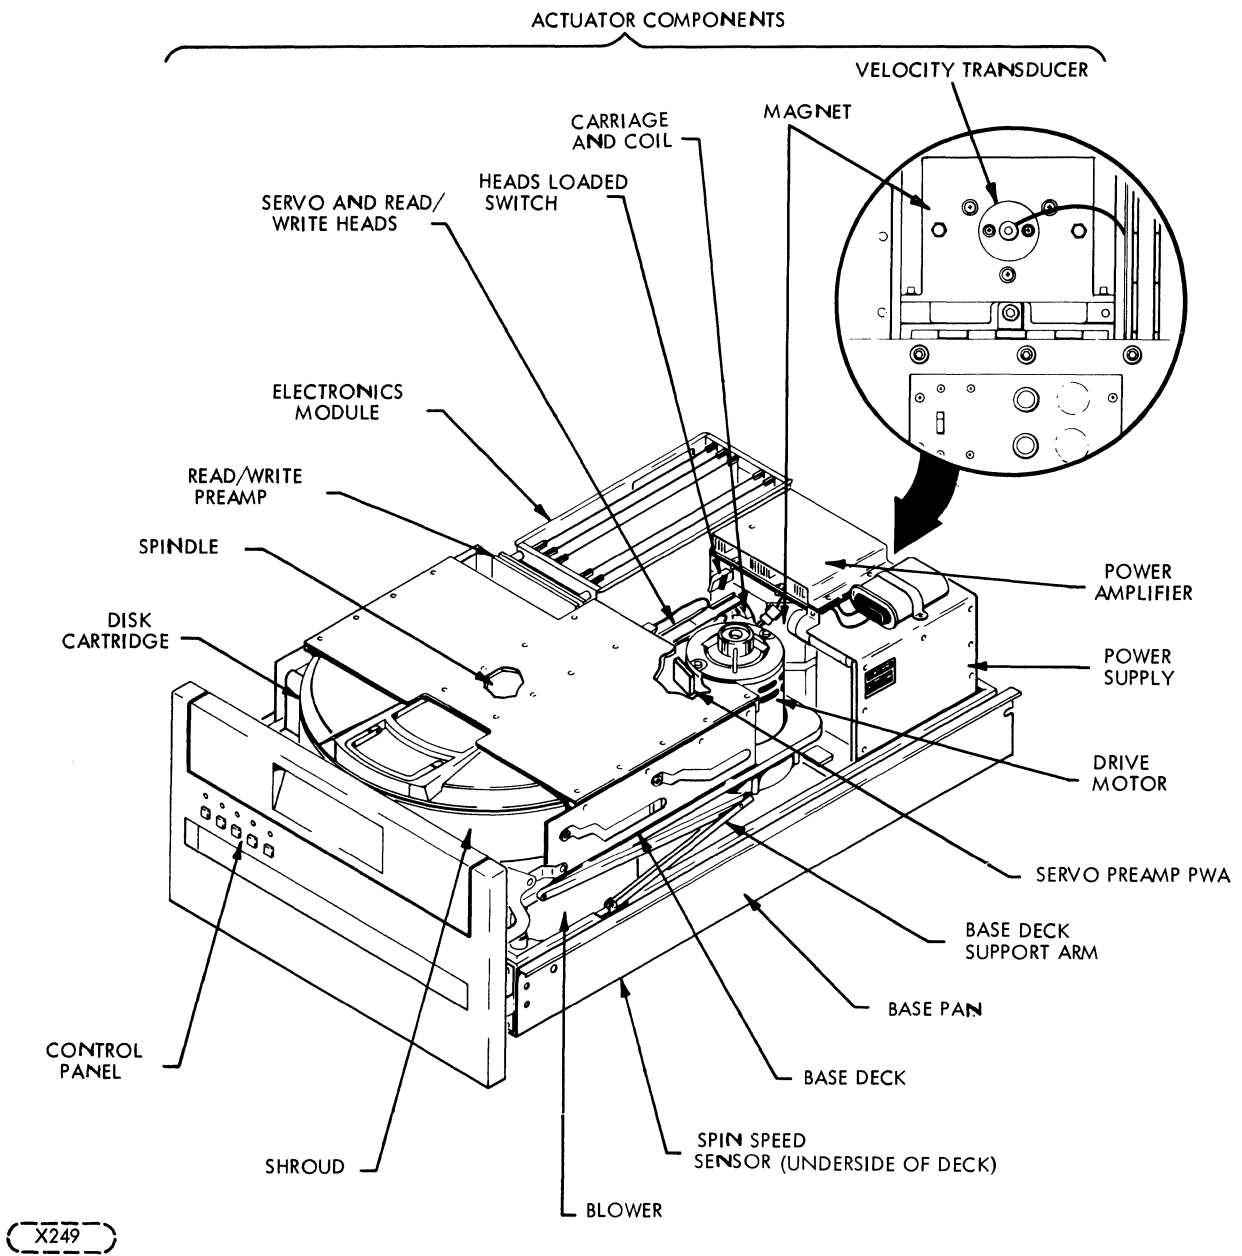


Figure 4-2. CMD Major Assemblies

CAUTION

With AC power circuit breaker in OFF position AC power is still applied to AC line filter. To completely remove all AC power from unit AC line cord must be disconnected from power source.

and the cartridge access door is closed.

4.2.2 DRIVE MOTOR ASSEMBLY

The drive motor drives the spindle assembly. The motor is a 1/4 hp unit of the induction type. The motor is secured to a mounting plate which in turn attaches to the base casting. The motor mounting plate is secured to the underside of the deck using insulating hardware so that AC current from the motor does not circulate in the base deck. Power is transferred to the spindle via a flat, smooth-surfaced belt that threads over the pulleys of the spindle and drive motor. A motor tensioning spring maintains a constant tension on the motor mounting plate to keep the belt tight. The motor is connected to chassis ground via wire in motor harness.

The temperature of the drive motor is monitored by an internal thermal overload switch. If the switch opens SSR1 is opened and the microprocessor operates the relay (K1) which removes power from the motor. The loss of spindle speed causes retraction of the heads. The drive motor thermal overload switch closes again when the temperature has dropped to a safe level. The electronics detects the closed condition of the switch and the M.P. operates relay K1 which connects power to the motor again subsequent to manual intervention to reset the Fault. At least two minutes must elapse before the motor can start again.

4.2.3 SPINDLE ASSEMBLY

The spindle assembly is the physical interface between drive motor and disks. The surface of the spindle magnetic mounting plate mates directly with the steel ring on the bottom of the disk cartridge, and the spindle hub is counter-sunk in the center to accept a steel alignment ball in the center of the bottom of the disk cartridge. The mating surfaces of the disk cartridge and spindle are engaged by a force of 35 ± 5 lbf (157 ± 22 N). When the cartridge access door is opened it operates a mechanism which applies the necessary force to separate the cartridge disk from the spindle magnet and moves the cartridge forward where the operator can grasp it for removal. The steel ball in the center of the cartridge hub centers the disk cartridge when it is installed in the unit.

The spindle is driven by a flat belt linking the spindle drive pulley to the drive motor pulley.

A ground spring is mounted at the lower end of the spindle assembly. The ground spring is mounted so that it is always in contact with the shaft to bleed off any accumulation of static electricity on the spindle through a ground strap. Mounted on the bottom of the spindle is a disk with 16 slots in its periphery. The disk periphery passes through a slot in the Spin Speed Sensor which puts out a pulse every time one of the 16 slots passes through the Spin Speed Sensor slot. See also Paragraph 4.2.5 for Spin Speed Sensor details.

4.2.4 ACTUATOR

The actuator consists of the coil and carriage, rail bracket assembly, and magnet assembly. The actuator (Figure 4-3) is the device that supports and moves the read/write and track servo heads. The forward and reverse motions of the carriage on the carriage track are controlled by a servo signal. The basic signal is generated by the microprocessor on the Servo-Coarse PWA and processed by a power amplifying stage.

The power amplifier output is applied to the voice coil positioner (part of carriage). The signal causes a magnetic field about the voice coil positioner. This magnetic field reacts with the permanent magnetic field existing in the air gap of the magnet assembly. The reaction either draws the voice coil into the permanent magnet keep field or forces it out. Signal polarity determines the direction of motion, while signal amplitude controls the acceleration of the motion.

The voice coil positioner is a mandril-wound coil that is free to slide in and out of the gap section forward face of the magnet assembly. Fastened to the positioner is a head/arm receiver which holds up to 6 read/write heads and two servo heads. The head/arm receiver mounts on the coil and carriage assembly that moves along the carriage rail on six anti-friction bearings. Movement of the positioner in or out of the magnet causes the same motion to be imparted to the entire carriage assembly. This linear motion is the basis for positioning the read/write and track servo heads to a particular track of data on disk pack. (Refer to Head Loading paragraph for detailed information on read/write head loading and unloading.)

The positioning signal is applied to the voice coil positioner via two flexible, insulated, metal straps, the ends of which are secured to the carriage and bearing assembly. There is a third metal strap which grounds the carriage to the base deck assembly.

During any seek operation an I/O command gives the microprocessor the cylinder address to be accessed. The microprocessor compares this cylinder address with the current cylinder address which is stored within the M. P. memory and then issues a command to the positioner to move toward the new cylinder location with an acceleration and velocity that is proportional to the difference in position. The positioner moves in the direction of the new cylinder address under control of a velocity feedback loop, with the velocity signal being supplied by a velocity transducer.

The transducer is a two-piece device, one piece stationary and the other movable. Refer to the Transducer paragraph for a complete description.

The actuator contains a stop mechanism to limit extremes in forward and reverse movement. The forward stop assembly consists of two rubber bumpers located in the shroud vicinity. If the carriage moves too far toward the disks the two bumpers contact the upper and lower front sides of the carriage. If the carriage is retracted far enough away from the disks the rear of the head/arm receiver contacts two rear cylindrical bumpers which protrude out of the front face of the magnet assembly.

4.2.4.1 Head Loading

The read/write heads must be loaded to the disk surfaces before exchanging data with the controller. The heads must be removed (unloaded) from this position and driven clear of the disks either when power is removed from the unit or when the disk velocity falls below about 3240 r/min. The head load/unload cam actions are identified in Figure 4-4.

Heads are loaded by moving the aerodynamically shaped head face toward the related disk surface. When the cushion of air that exists on the surface of the spinning disk is encountered, it resists any further approach by the head. Head load spring pressure is designed to just equal the opposing cushion pressure (function of disk r/min) at the required height. As a result, the head flies. However, if the head load spring pressure exceeds the cushion pressure (as would happen if the disks lost enough speed), the head stops flying and contacts the disk surface. This could cause damage to the head as well as the disk surface.

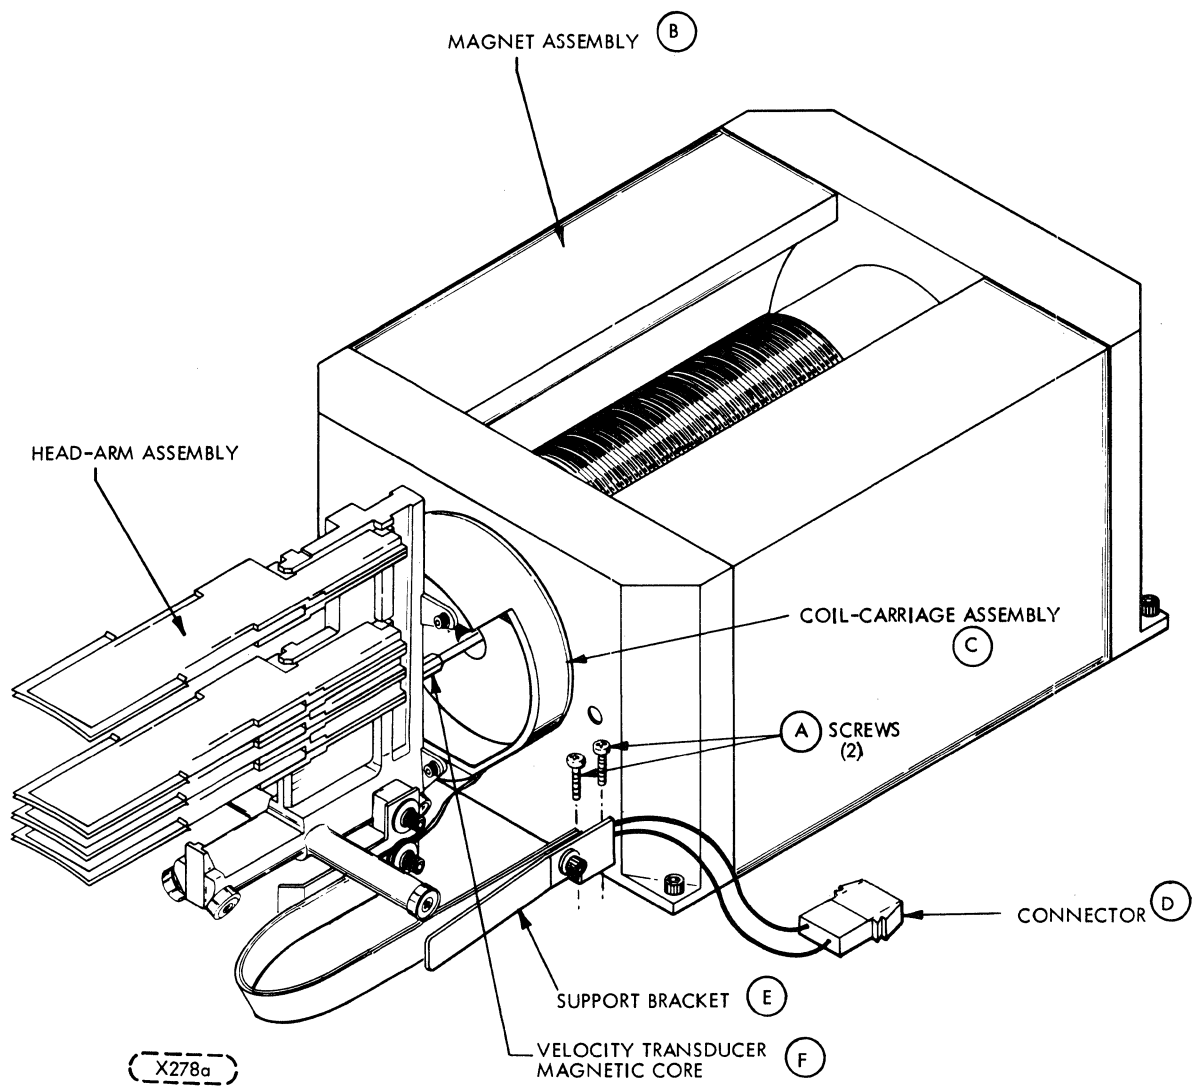


Figure 4-3. Actuator Elements (Voice coil slightly extended from retracted position)

To prevent damage to the heads and/or the disks during automatic operation, loading occurs at controlled velocity only after the disks are up to speed and the heads are over the disk surfaces. For the same reason, the heads unload automatically and are retracted controlled velocity if the disk r/min drops out of tolerance. During manual operations, heads should never be loaded on a disk that is not rotating. Head loading is a part of the Start Load function. Pressing the START switch initiates disk rotation and purge. Purge is 15 seconds after reaching 2700 r/min.

After the purge, the spindle RPM must be about 3240 r/min. If so, the microprocessor specifies a load command and the carriage moves forward toward track 0. Head loading occurs during this forward motion. The carriage continues to move toward the spindle until the servo detects track 0.

The head load spring (Figure 4-4) is designed to maintain a constant loading force. While the heads are retracted, head cams on the actuator housing bear against the head load spring cam surfaces. The cams support the loading force and hold the heads in the unloaded position. As the carriage moves forward, the head load spring cam surface rides off the head cam just after the read/write heads move out over the disk surface. The loading force moves the head face toward the air layer on the surface of the spinning disk until the opposing forces balance.

The heads loaded switch status reflects the state of the read/write heads (loaded or unloaded). This status is used in the microprocessor. The switch mounts on a bracket attached to the magnet top and is transferred by carriage motion. Whenever the carriage is fully retracted, the switch state reflects the unloaded status of the heads. As the carriage moves forward during a Power On/Load, the switch transfers at a point within about 0.1 inch forward of the retracted stop. This switch status remains unchanged until the carriage is retracted to the same position and, as such, does not precisely indicate the loaded/unloaded status of the heads. Precise status is determined by the logic when the servo track head senses dibits. This switch is interlocked to the drive motor via the microprocessor which will not allow spindle power to be removed until the heads are fully unloaded.

Head unloading occurs whenever power to the unit is removed, STOP switch is placed in STOP position, a voltage fault occurs or disk r/min drops below tolerance. Signals from the microprocessor cause the voice coil to drive the carriage in reverse from its current location toward the retracted stop. (Either normal or emergency methods can be used. Refer to Stop Sequence paragraph for additional information.) As the carriage retracts, the cam surfaces encounter the head load springs and each head rides vertically away from the related disk surface. The carriage continues back to the retracted position and stops.

4.2.4.2 Head/Arm Assemblies

Eight head/arm assemblies are mounted on the carriage. A read/write head assembly mounted at the end of a supporting arm structure. A track servo head/arm assembly consists of a read coil head assembly mounted at the end of a supporting arm structure.

The head assembly (Figure 4-5), which includes a cable and plug, is mounted on a gimbal spring which, in turn, is mounted on a head load spring. This method of mounting allows the head assembly to pivot (independent of the arm) tangentially and radially relative to a data track on the disk surface. Such motion is required to compensate for possible irregularities in the disk surface.

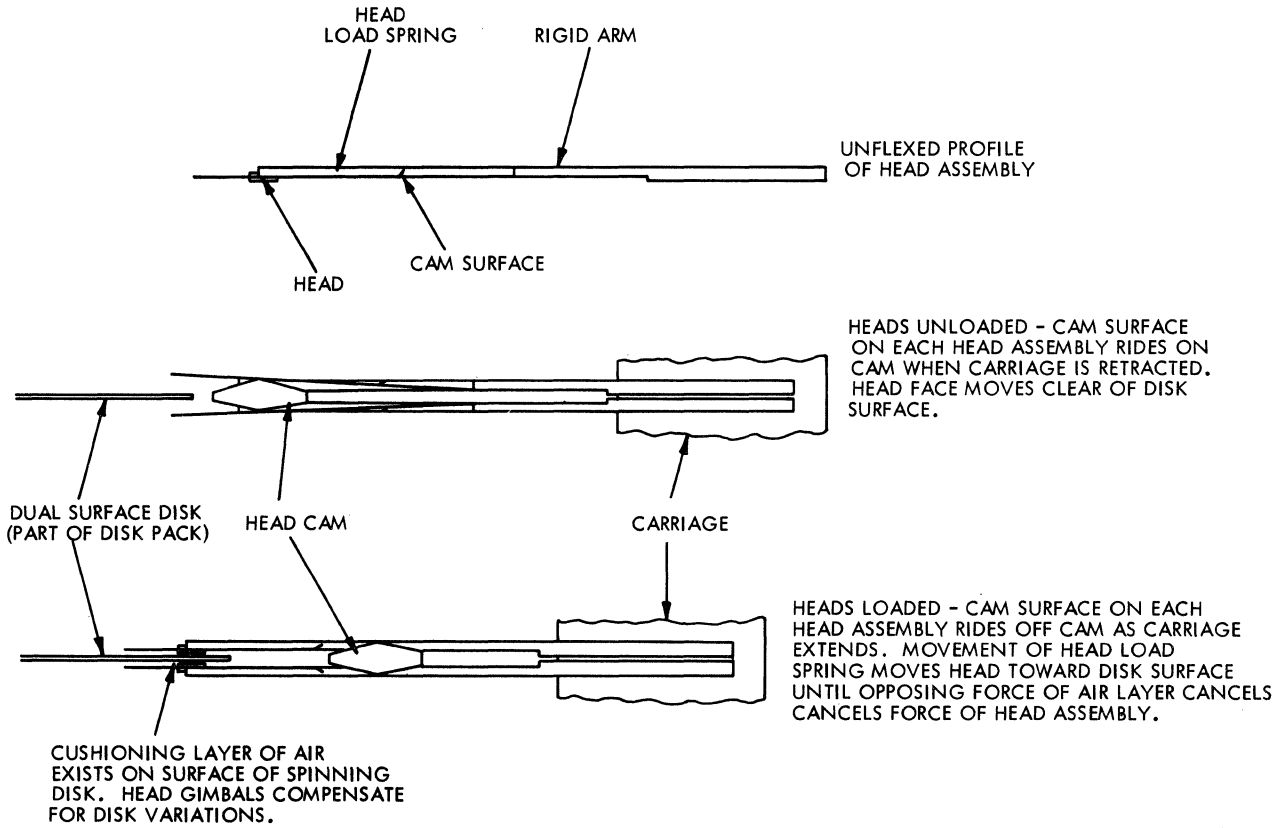


Figure 4-4. Head Loading

X263b

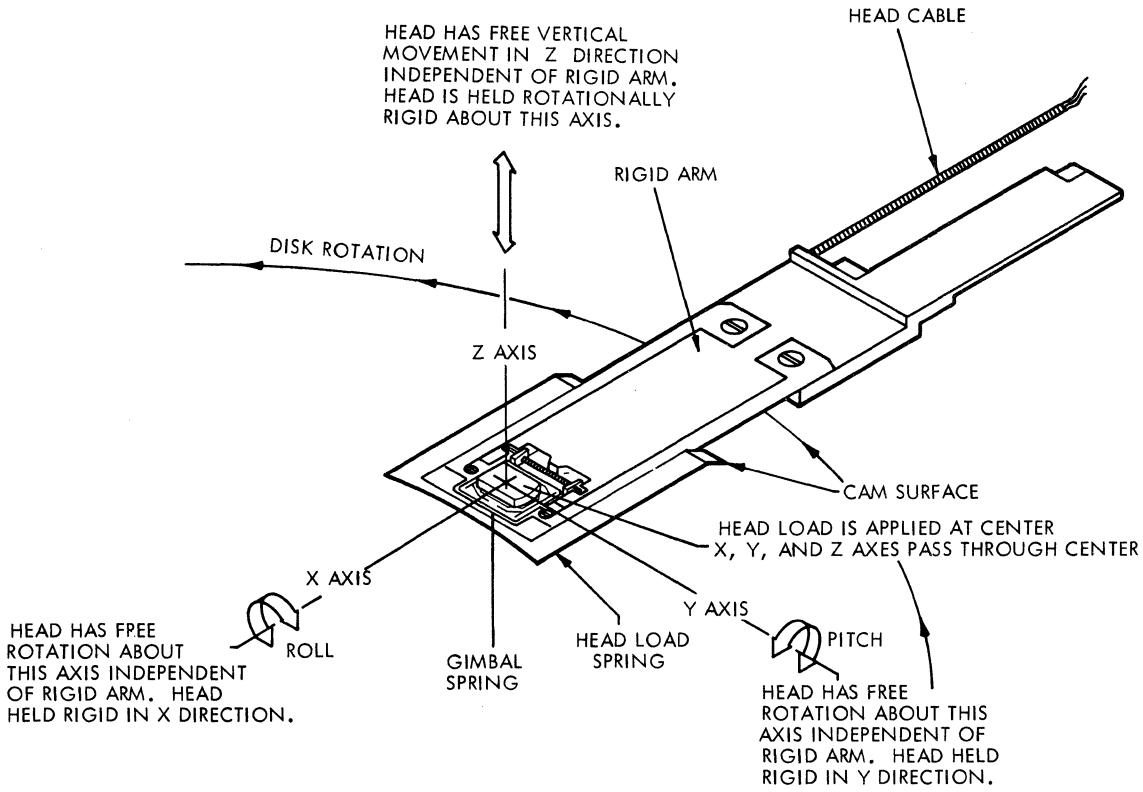


Figure 4-5. Head/Arm Assembly Motion

X254b

The arm structure consists of a floating arm secured to a heavier fixed arm. The end of the fixed arm opposite the head mounts in the carriage receiver. The floating arm is mounting point for the head and is necessarily flexible so that it can flex during load and unload motions, onto and off of the cam surfaces.

During head loading, each floating arm is driven off the related cam and unflexes to force a head toward the air cushion on the spinning disk surface. The force applied by the floating arm causes the heads to fly or float on the air cushion. Vertical motion by a disk surface (due to warpage or imperfection) is countered by a move in the opposite direction by the gimballed head and/or floating arm. As a result, flight height remains nearly constant.

4.2.5 TRANSDUCERS

The deck assembly contains two transducers: spin speed sensing transducer and velocity transducer. These transducers provide signals that are used by the microprocessor to generally control the progression of most machine operations.

4.2.5.1 Spin Speed Sensor

The Spin Speed Sensor generates a voltage pulse whenever a slot in a disk on the bottom of the spindle passes through the Spin Speed Sensor. The slot in the disk allows light from an infrared light emitting semiconductor to strike a light sensing semiconductor whose output current increases during the time the light through the disk slot strikes it. The resulting output is a train of pulses approximately 120 microseconds in duration with a pulse occurring once every millisecond (approximately). The period between Spin Speed Sensor pulses is checked by the microprocessor firmware every 20 ms (heads loaded, positioner in fine mode) and if the spin speed is greater than about 3200 r/min, an enable is provided for relay K2*. If the spin speed (r/min) is insufficient, the pulse repetition rate is reduced and this fact is detected by the microprocessor. This has either of two effects:

1. If the heads are not loaded K2 will not be energized and the microprocessor will not initiate the load sequence.
2. If the heads are already loaded, K2 is opened, and thus the voice coil is disconnected from the power amplifier and connected to the emergency retract circuit. The heads are immediately unloaded at a controlled velocity to the retracted stop.

In addition the "Spindle r/min Lost" fault will be stored in the microprocessor memory and the unit becomes "not ready." Displaying microprocessor-detected faults is discussed in section 2.10.1. The Spin Speed sensor is illustrated in Figure 6-7.

4.2.5.2 Velocity Transducer

The Velocity Transducer (Figure 4-6) is a two-piece device consisting of a stationary tubular coil/housing and a movable magnetic core.

The magnetic core is connected via the extension rod to the rear surface of the carriage assy. All motion of the carriage is therefore duplicated by the magnetic core. As the core moves, an emf is induced in the coil. The amplitude of the emf is directly related to the velocity of the core (and carriage). The polarity of the emf is an indication of the

*Figure 5-13.

direction of motion by the core (and carriage). The transducer output drives a summing operational amplifier located on the Servo Coarse PWA in the Electronics Module. This signal is used by the servo logic to control acceleration/deceleration and velocity of the carriage during Seek operations.

4.2.6 BLOWER SYSTEM

The blower system provides positive pressure in the disk area. The presence of this elevated pressure results in an outward dispersion of air preventing ingestion of contaminated air. This air flow greatly reduces possible contamination and resulting damage to the disk surfaces and the read/write heads.

Power to the blower motor is available whenever the AC POWER circuit breaker is on.

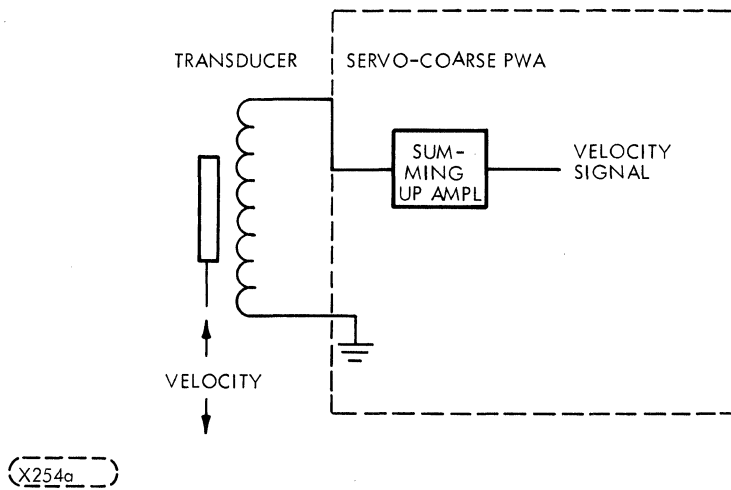
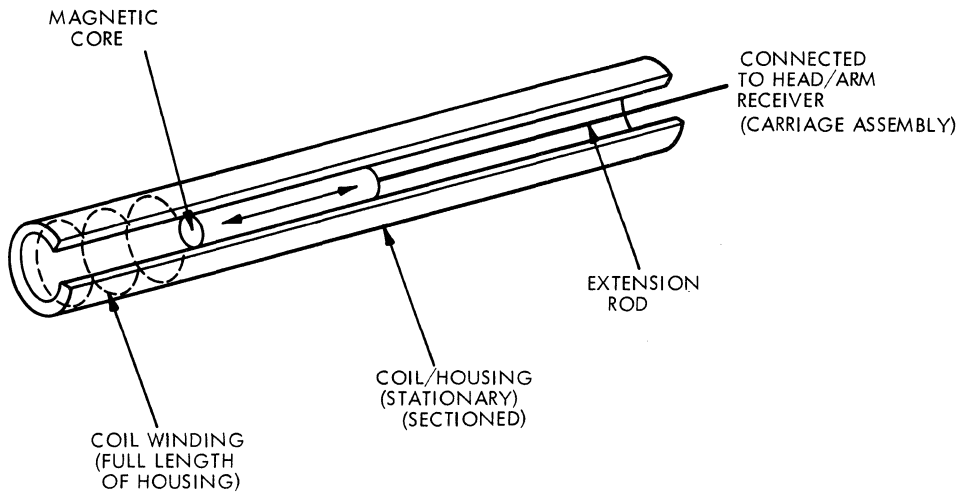


Figure 4-6. Velocity Detection

4.2.7 DISKS

The disks are the recording media for the drive. The disks are 14 inches outer diameter. Three disks are mounted on the spindle (non-removable) by the operator and one center-mounted on a hub in an operator removable cartridge. The recording surface of each disk is coated with a layer of magnetic iron oxide and related binders and adhesives. The three fixed disks as a subassembly are called the Fixed Module.

On the fixed disks there are five recording surfaces and one track servo surface, and on the cartridge disk one surface is a recording surface and the other is a track servo surface. The servo surfaces contain prerecorded information that is used by the micro-processor to position the heads to the desired track.

The 823 recording tracks are grouped in a 2.14 in (53.4 mm, approx.) band near the outer edge of the disk. Track 822 has a diameter of approximately 9 inches (230 mm, approx.); the diameter of track 0 is about 13 inches (330 mm, approx.). The tracks are spaced about 0.0026-inch (0.063 mm, approx.) apart.

The disk cartridge has a two-piece container. The bottom cover can be removed by simply pushing the cover release button toward the center of the bottom cover (see Figure 2-2). Removing the bottom cover reveals an inner cover which protects the lower disk surface. Removing the bottom cover only gives access to the head access hole and the ring and hub that mounts on the spindle magnetic hub. This design protects the disk cartridge from physical damage and greatly reduces the possibility of contamination of the disk recording surfaces.

4.2.8 ELECTRONICS MODULE

The Electronics Module Assembly consists of a "mother board" and seven slots for printed wiring assembly boards (PWAs) that plug into connectors mounted on the mother board (EM1 through EM7). The mother board provides the connections between the seven PWA connectors and furnishes the power busses which make available various Power Supply furnished voltages to the PWAs. Access to the inter and intra-Electronics Module connections is gained by lifting upward on the Electronics Module and swinging it outward so that it hangs over the side of the unit. The module is held in this position by a sliding support mounted on the side of the base pan. This is referred to in this as the maintenance position.

The Electronics Module contains all of the easily removeable PWAs. There are other PWAs (i. e., Servo Preamp, Read/Write Preamp, Power Amp, Relay Control, Operator Panel Control and component board) in the unit but these are not the plug-in type and are not part of the Electronics Module. The Electronics Module boards are 7 1/2 by 10 1/2 inches (19 by 26.8 mm) and are installed vertically in numerically identified positions. The theory of operation for the PWAs is covered in Section 4.3, FUNCTIONS.


The Electronics Module frame is at "DC" ground and is isolated from frame or AC ground unless a wire at the rear of the unit is connected to the frame ground stud tab at the rear, left side of the frame. See Section 3.7 "Grounding". Connecting AC to DC ground is a customer option.

4.3 FUNCTIONS

4.3.1 I/O OPERATIONS

Input/Output signal definitions are shown in Table 2.2. Pin number assignments are shown in Figures 3-8 and 3-9.

The timing characteristics interface signals are shown in Figures 4-7, 4-8, 4-9, and 4-10.

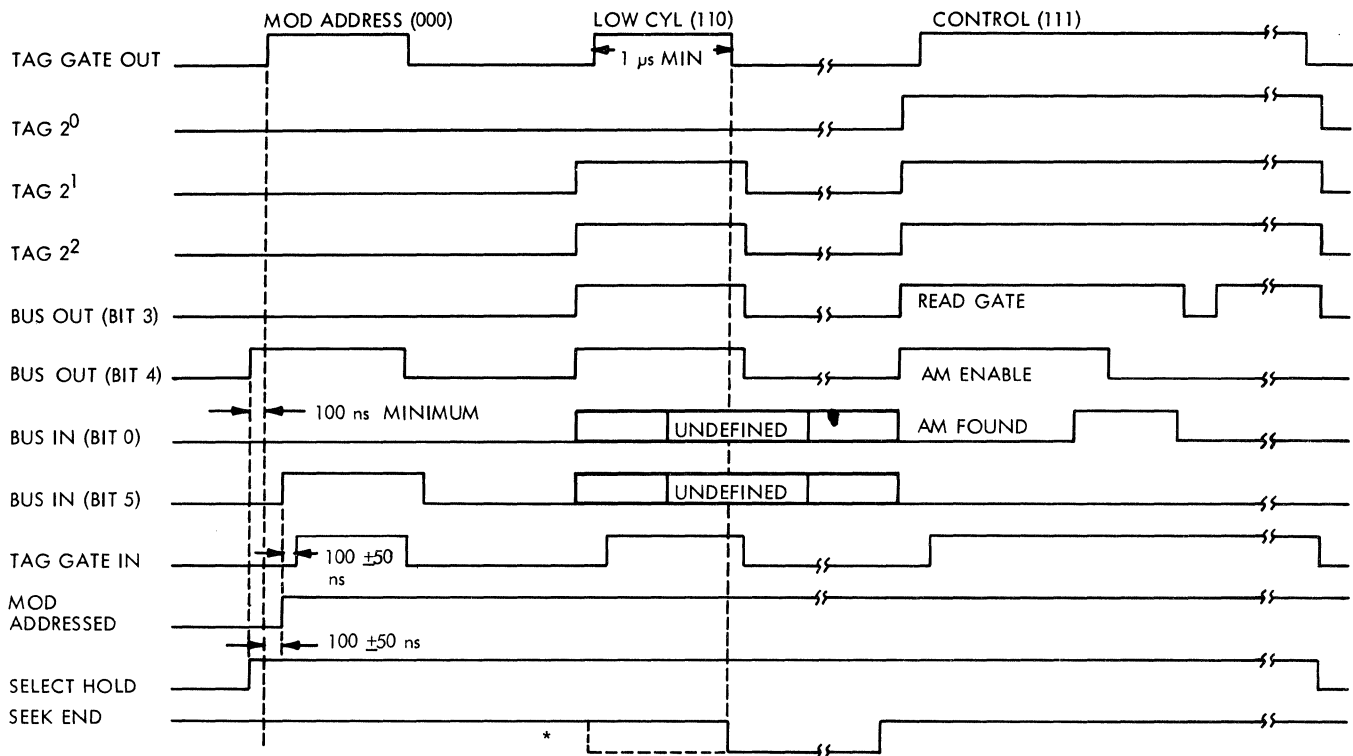

* RESET AT RISING EDGE OF TAG 110 IF OFFSET ACTIVE AND 'END OFFSET' OPTION IS SELECTED.

X281a

Figure 4-7. I/O TAG and BUS Timing

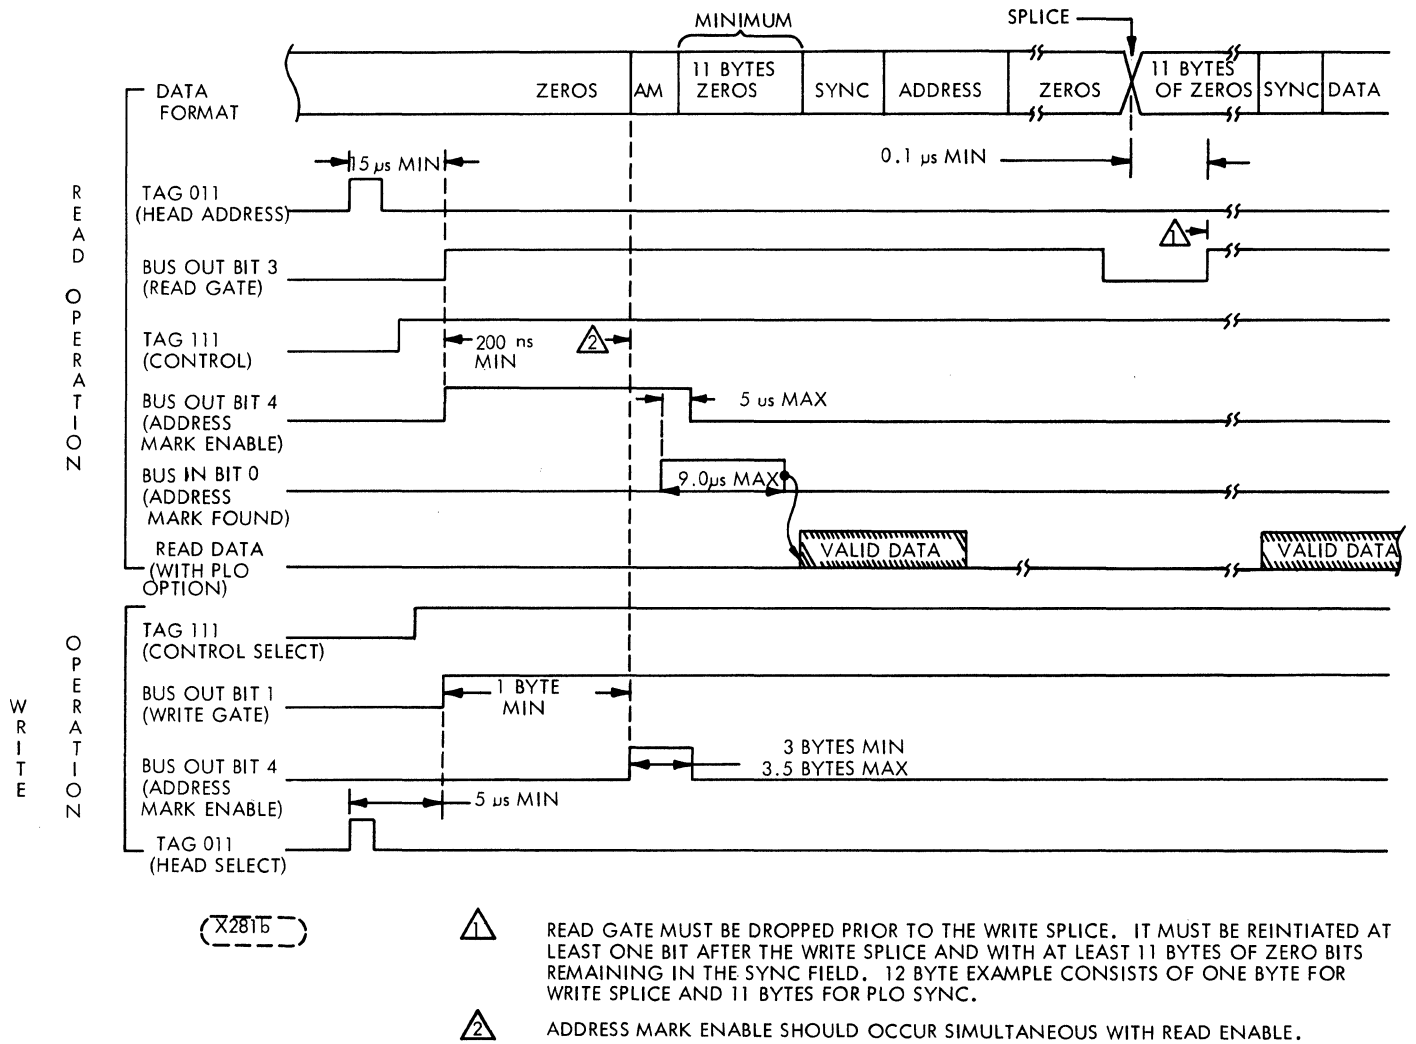


Figure 4-8. Typical Read/Write Timing with Address Mark

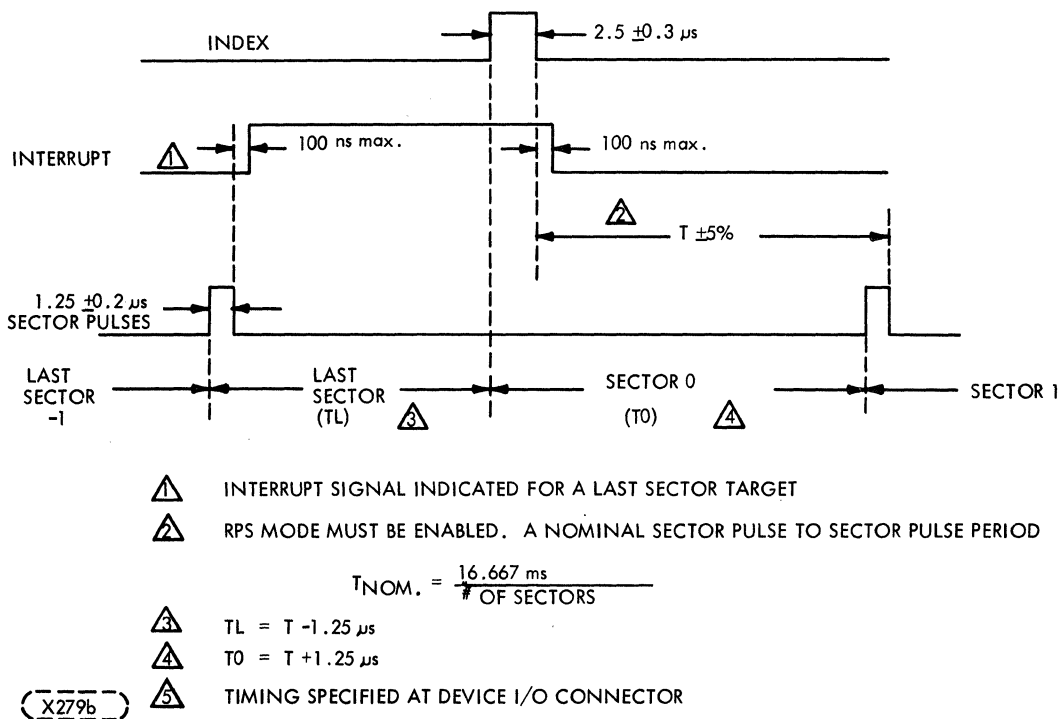


Figure 4-9. Index, Sector and Interrupt Timing

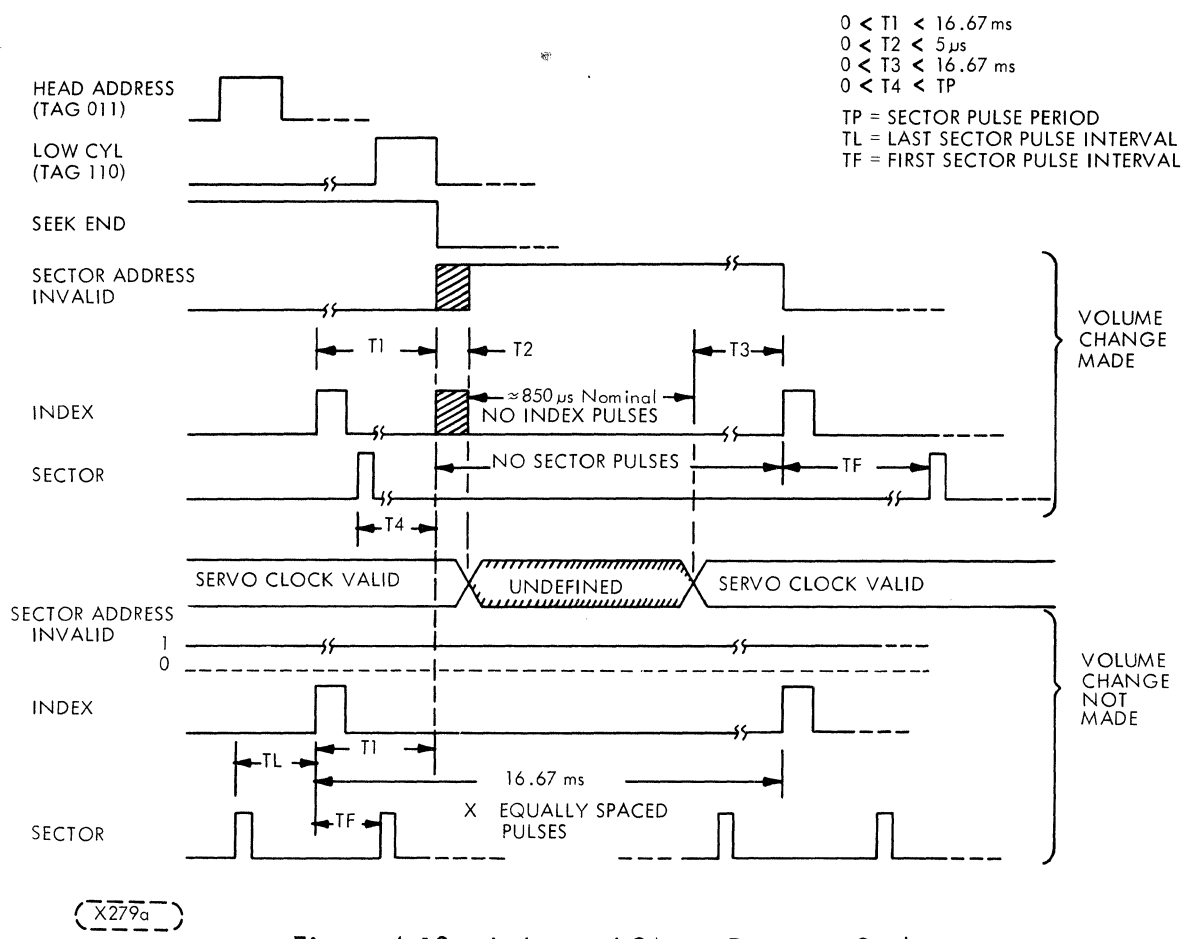


Figure 4-10. Index and Sector During a Seek

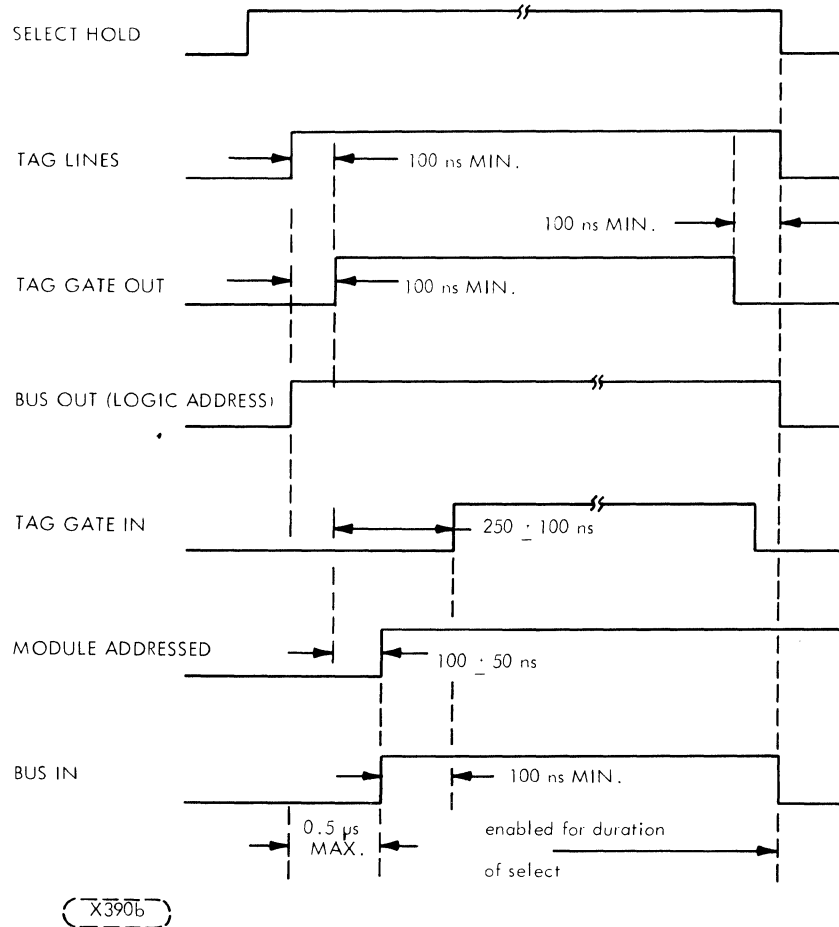


Figure 4-10.1. Logic Number Select Code and Timing Diagram



4.3.2 POWER ON/OFF AND SPINDLE START/STOP FUNCTIONS

4.3.2.1 Power Sequencing Pick and Hold

Power Sequencing requires AC and DC power on, START indicator/Switch ON, and REMOTE START switch (switch selectable in CMD) in the Remote position. Applying ground to the Pick and Hold lines will cause the first CMD in sequence to power up. Once this CMD is up to speed (see paragraph 4.3.2.3), the Pick signal is transferred to the next active CMD and repeated until all active CMD's are powered up. Individual CMD's may be started and stopped manually once power sequencing is completed.

Interrupting the Hold line will cause all units to unload heads and stop the spindle. Single unit start up can be controlled by momentarily closing the Pick line with the Hold line grounded. Successive units will start each time the Pick line is grounded. Power sequencing circuits and timing are shown in Figures 4.10.1 and 4.10.2.

When in Local Start mode, each CMD is independently operated by its respective START switch.

A Pick or Hold is considered to be present from the Controller when a ground is present on the Pick or Hold lines. Each Pick and Hold Source must sink 4 mA per device. The Controller can provide this ground either through a mechanical contact (relay or switch) or through an electronic circuit. The maximum voltage considered as ground is 0.4 V. The open circuit voltage is 5 VDC max.

Pick and Hold Lines may be tied together and driven from a single source.

CMDs may be used in systems which are designed to recover automatically after power outages or brown out condition exceeding the transient voltage. To achieve this, the systems must monitor line power and utilize the CMD power sequencing functions to stop and restart the CMDs when an outage occurs. Upon restart the CMD must be initialized by the use of Clear Error Recovery, Clear Check Diagnostic, Clear Fault Status and RTZ. These must be executed after the CMD has achieved the Ready state.

4.3.2.2 Power On Sequence

Manually closing the AC POWER circuit breaker starts the blower motor running and applies AC power to the power supply, which in turn supplies DC voltages to the electronics. The DC power is fused but not switched and powers the electronics whenever the AC POWER circuit breaker is on. Once DC power is on the spindle start up sequence can begin.

4.3.2.3 Spindle Start Sequence

The start up of the CMD Spindle Motor is sequenced by microprocessor firmware and by relays (refer to Figure 4-11 and 4-19).



The spindle start sequence is as follows for a local controlled start:


1. Operating the START switch applies ground to a line (START) that passes through three other interlock switches - the deck down, cartridge seated and cartridge access door closed switches - and then goes as START/-L to PPI* port U36 on the Servo-Coarse PWA.
2. The microprocessor continually loops through a routine and as part of the routine it interrogates PPI port U36 and detects that the START/STOP switch is in the START position and that the SEQ-HOLD/-L signal is active low, which it will be with the REM/LOC switch in LOC position (I/O PWA).
3. After some checks the microprocessor sends out the command to PPI port U36 to activate RUN/-L which causes relay K1 on the Relay control PWA to connect the AC lines, to the spindle motor. Then the M. P. activates the Solid State Relay SSR1 which connects AC power to the motor through K1.
4. The start up is monitored by the microprocessor and if the start up is too slow or does not occur an operational fault is stored in the microprocessor memory, AC power will be removed from the motor and the start will be aborted.
5. If the spindle speed gets above 3200 r/min before a 3-minute timeout, READY indicator ceases blinking and remains illuminated and the heads load.

The flow chart of Figures 4-19, 4-20, 4-22 and 4-23 illustrates the details of the power on sequence for a local start.

4.3.2.4 Spindle Stop


The spindle stop sequence is mainly under the control of the microprocessor so refer to Section 4.3.3 and Figure 4-21 for more information. The spindle stop sequence should never begin with the opening of the AC circuit breaker, because opening the AC circuit breaker turns off the blower which may allow the motion of the disk to suck in contaminated air that could cause head/disk contact. The spindle stop sequence begins when the START/STOP switch is released or when the controller deactivates the SEQ-HOLD/-L line (removes ground). The microprocessor detects the open START switch contacts and sets the "Start-Stop Cycle Flag" and enters the carriage retract subroutine. The M. P. stores a count in its internal operations counter which takes 30 seconds to count down to -1. The M. P. turns off the AC power to the spindle and turns on the DC to the field to brake the motor. When the spindle speed drops below 14 r/min the M. P. sets a second counter and turns off the DC to the motor field when the 2 second count-down is over.

*See Section 4.3.4 for details of the microprocessor components.

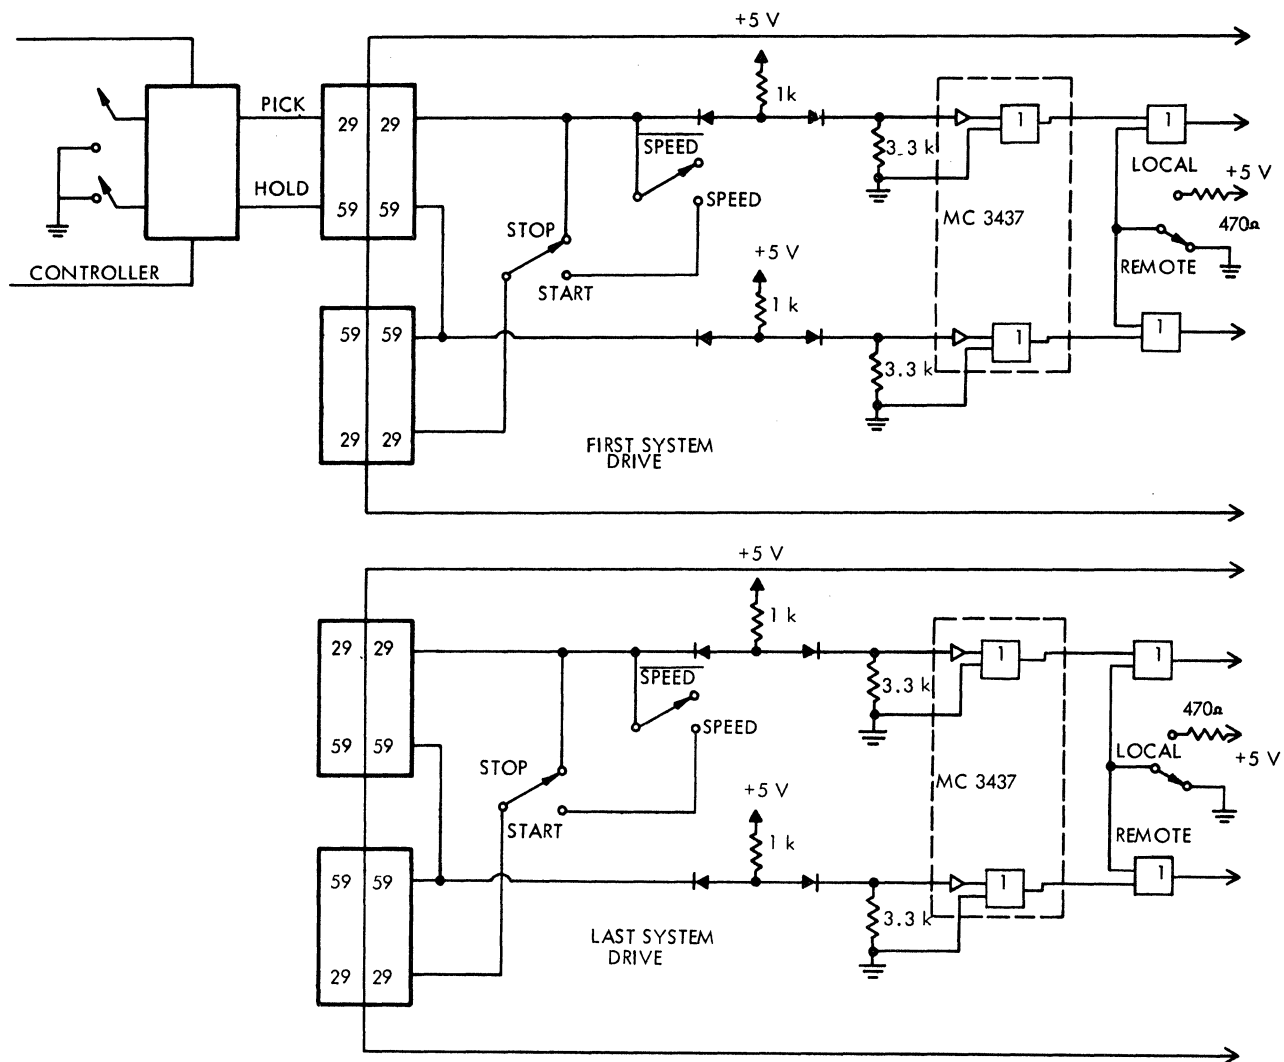

X397a

Figure 4-10.1. Sequence Power Lines - CMD

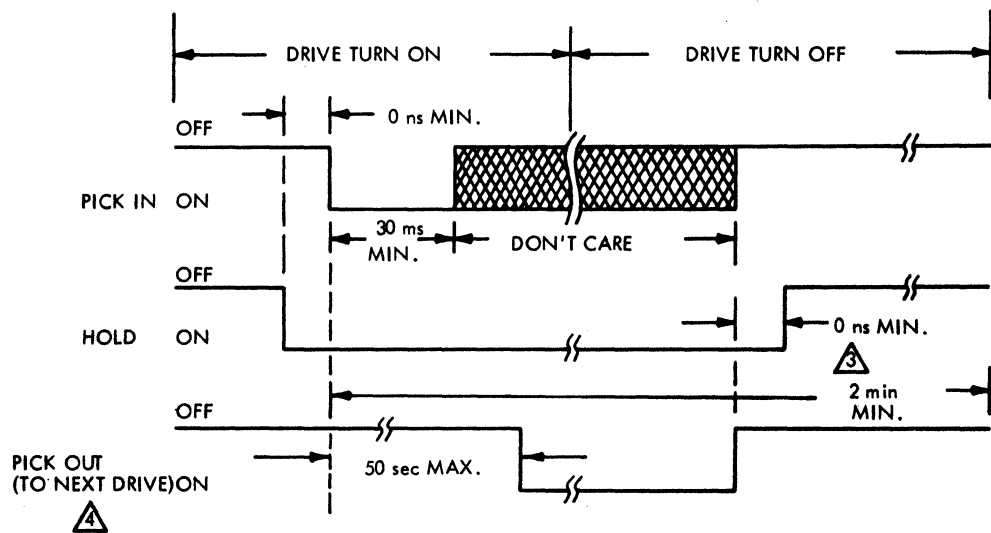

- 1 SEQUENCE SHOWN FOR ONE DRIVE.
- 2 "OFF" IS OPEN CIRCUIT; "ON" IS DC GROUND.
- 3 MINIMUM TIME BEFORE REINITIATION OF TURN ON SEQUENCE.
- 4 TIMING IS BASED UPON A PROPER DRIVE TURN ON OPERATION

X391b

Figure 4-10.2. Power Sequence Timing

4.3.3 MICROPROCESSOR FUNCTIONS-GENERAL DESCRIPTION

Functions which the Microprocessor and associated logic perform are as follows:

- Spindle Start/Stop and Spindle speed monitoring
- Servo Coarse positioning
- Sector pulse generation
- Servo head change
- Microprocessor self diagnostics performance
- Control the monitoring and displaying of faults connected with the above five functions.

General descriptions of these functions are discussed in the following paragraphs. **

4.3.3.1 Spindle Start/Stop and Spindle r/min Monitoring

● Spindle Start/Stop

The switch and control lines determining whether the spindle should be started or stopped are monitored periodically. There is a delay built into the monitoring routines so that noise on these signals is ignored. During execution of the spindle start routine a test is performed to determine whether or not spindle rotation actually begins. If not, the start is aborted and the fault indicator illuminated. During execution of the stop routine the brake is applied and spindle spin speed is monitored until approximately 14 r/min is attained. Then, after a short interval for complete stop to occur, access is allowed to the cartridge, if the START/STOP switch is in the STOP position.

Since the brake and start cycles produce the greatest power dissipation in the motor, the minimum interval between start cycles is limited to two minutes.

● Spindle Spin Speed

A disk having 16 slots is attached to the spindle with an infrared emitter and detector on opposite sides of the disk. The time interval between two slots is measured by counting passes through a short program loop. The time resolution possible is ± 16 microseconds with an 8080 having a 500 nanoseconds cycle period. The nominal interval between pulses from the disk at 3600 r/min is 1042 microseconds. The worst case mechanical tolerances can introduce an error of about 1%. Thus the total error is about 3%.

*See Table 6-7 for error codes.

**See General Block Diagrams in Figures 4-11 and 4-14.

When the heads are loaded and the positioner is in the fine mode, the processor is interrupted every 20 milliseconds for a determination of spindle spin speed. If the speed is too low, the heads are retracted and becomes "not ready" with a fault.

If the infrared pulse emitter should fail, an emergency stop procedure will be used by the microprocessor since spindle speed monitoring will not be possible.

4.3.3.2 Servo Coarse Positioning

Servo coarse positioning includes head load, head unload, return-to-zero and controlling the positioner velocity during a seek, i.e., movement from the origin cylinder to the destination cylinder. The CMD positioner servo is of the well proven linear motor-tachometer feedback type.

- Head Load

When spindle spin speed is determined to be correct, and no faults exist, a 10 ips forward velocity command is given the positioner servo to initiate loading the heads. After the outer guard band is detected (i.e. "AGC ACTIVE" is detected), the servo is switched from the coarse (velocity) mode to the fine (track following) mode. After a delay of about 3 milliseconds from the time that the center of track 0 is first detected, the "ready" and "on-cylinder" signals will be set true.

- Head Unload

Head unload is normally accomplished using the positioner servo under control of the microprocessor. A 10 ips reverse velocity command is given until the carriage closes the contacts on the heads loaded switch. The microprocessor senses the switch closure and removes the reverse velocity command, causing the Servo to stop moving. Relay K2 is de-energized so that the voice coil is disconnected from the servo amplifier and connected to the emergency retract circuit which maintains automatically the retracted condition. Should the positioner servo fail or should there be a voltage fault which would prevent microprocessor operation, an emergency retract circuit is activated.

- Return to Zero

Return-to-zero is accomplished by giving the positioner servo a 6 ips reverse velocity command until about 10 mils outside track 0 where the outer guard band is detected (rev. EOT). Then a 1 ips forward velocity command is given and the head load procedure is entered at the point just after the outer guard band has been detected. If a seek error caused the head unload, the head load procedure will be entered.

- Seek Control

The profile of distance to be traveled at a given velocity for any seek is stored in a table. When initiating a seek, the appropriate initial velocity command is found by means of a binary search procedure to locate the entry point in the table. The distance to be traveled (number of cylinders to be traversed) at the initial velocity is also a result of the search procedure. Thereafter, distance and velocity are taken from the table. When the end of the table is reached, the coarse positioning portion of the seek is completed and the servo is switched from the coarse (velocity) mode into the fine (track following) mode.

(velocity) mode into the fine (track following) mode.

Distance and velocity information is placed by the microprocessor into a next distance register and a next velocity register from where it is transferred into a current distance counter and current velocity register. Each time "next" information becomes "current" information the microprocessor refills the two "next" registers with "next" information. See Figure 4-12. With each cylinder pulse, the value in the current distance counter is

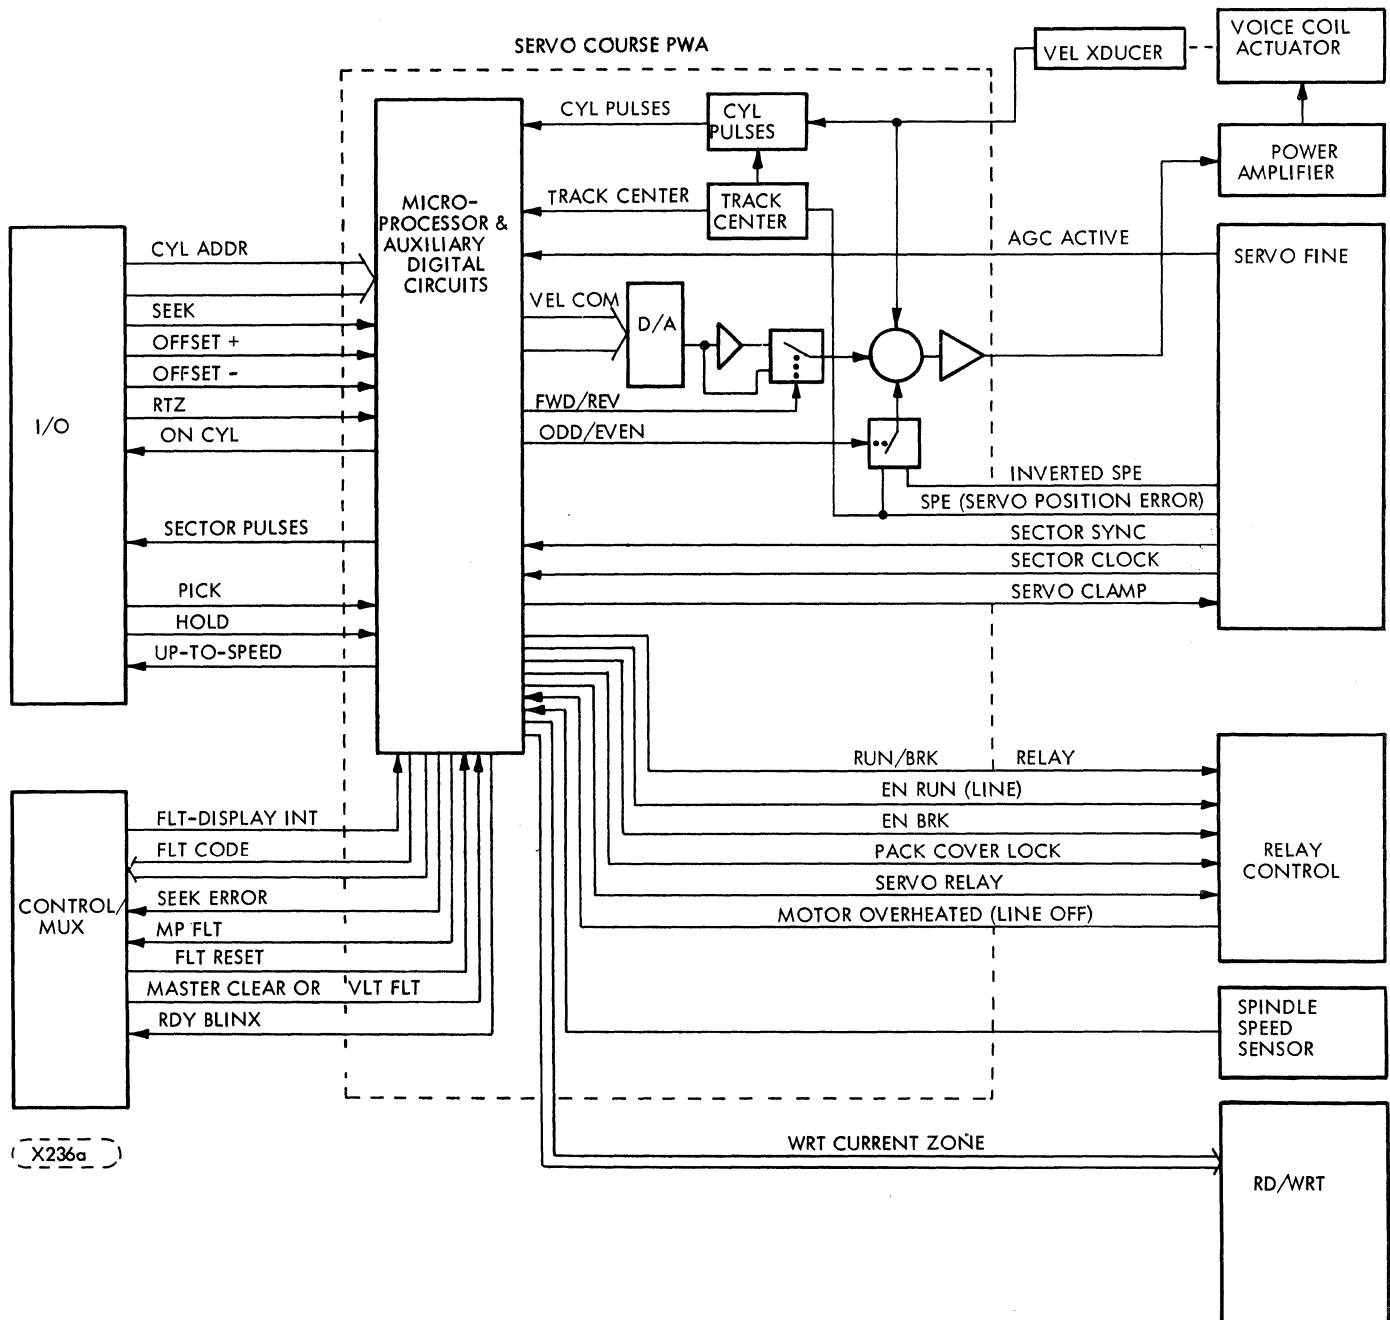


Figure 4-11. Block Diagram of Servo-Coarse PWA and Supporting Elements

decremented. When the counter reaches zero, the value in the next distance register is transferred into the current distance counter, the value in the next velocity register is transferred into the current velocity register and the processor interrupted (see "Interrupt Logic", Section 4.3.4.3) so that new values will be loaded into the "next" registers.

The next distance register and current distance counter are implemented by one section (counter 0) of a type 8253 programmable counter (see Figure 5-3r), the next velocity register is implemented by one port of type 8255A programmable peripheral interface (see Figure 5-3p), and the current velocity register is implemented by two four-bit register logic elements (see Figure 5-3h).

4.3.3.3 Sector Pulse Generation


Sector pulses are obtained through division of an 806 kHz clock (derived from the servo surface) by the number of clock cycles per sector. The frequency divider is synchronized by the Index pulse (also derived from the servo surface). The sector pulse generator is one section of a type 8253 (U2) programmable counter operating as a frequency divider. The microprocessor reads the status of a set of switches to determine the number of sectors per revolution, computes the divisor, and loads the 8253 with the divisor.

4.3.3.4 Servo Head Change

When the system controller commands a read/write volume change (fixed to removable or vice versa) the microprocessor must initiate a change to the selection of the servo head. The microprocessor does not change the selection of the servo head, however, until the controller follows the "new" volume address with a seek command, which the microprocessor verifies before changing the selection of the servo head to match the selection of the read/write volume. After the validity of the seek has been verified, the M. P. switches the SVO CLAMP/-L signal active for 100 microseconds. The servo head selection change occurs at the beginning of the 100 microsecond period and then the phase locked loop circuitry locks in on the servo signals coming off the newly selected servo surface during the 100 microsecond period. Before the seek to a new track can begin the track center signal (TRK CEN/-L) must have been active for at least 1 millisecond, indicating that the newly selected servo head has locked on to the track nearest its position when the servo head selection change occurred. Figure 4-13 is a flow chart which illustrates the events described above.

4.3.3.5 Microprocessor Self Diagnostics

Every time the power comes up on the CMD the microprocessor performs a series of self diagnostic tests. It performs a CRC test on the ROM, a write/read test on the RAM, a write/read test of the programmable ports, and a test of the interrupt system. The CMD will not become ready if any of the tests fail. Refer to Section 2.10, 4.3.8 and 6.9 for more details on the microprocessor diagnostics.

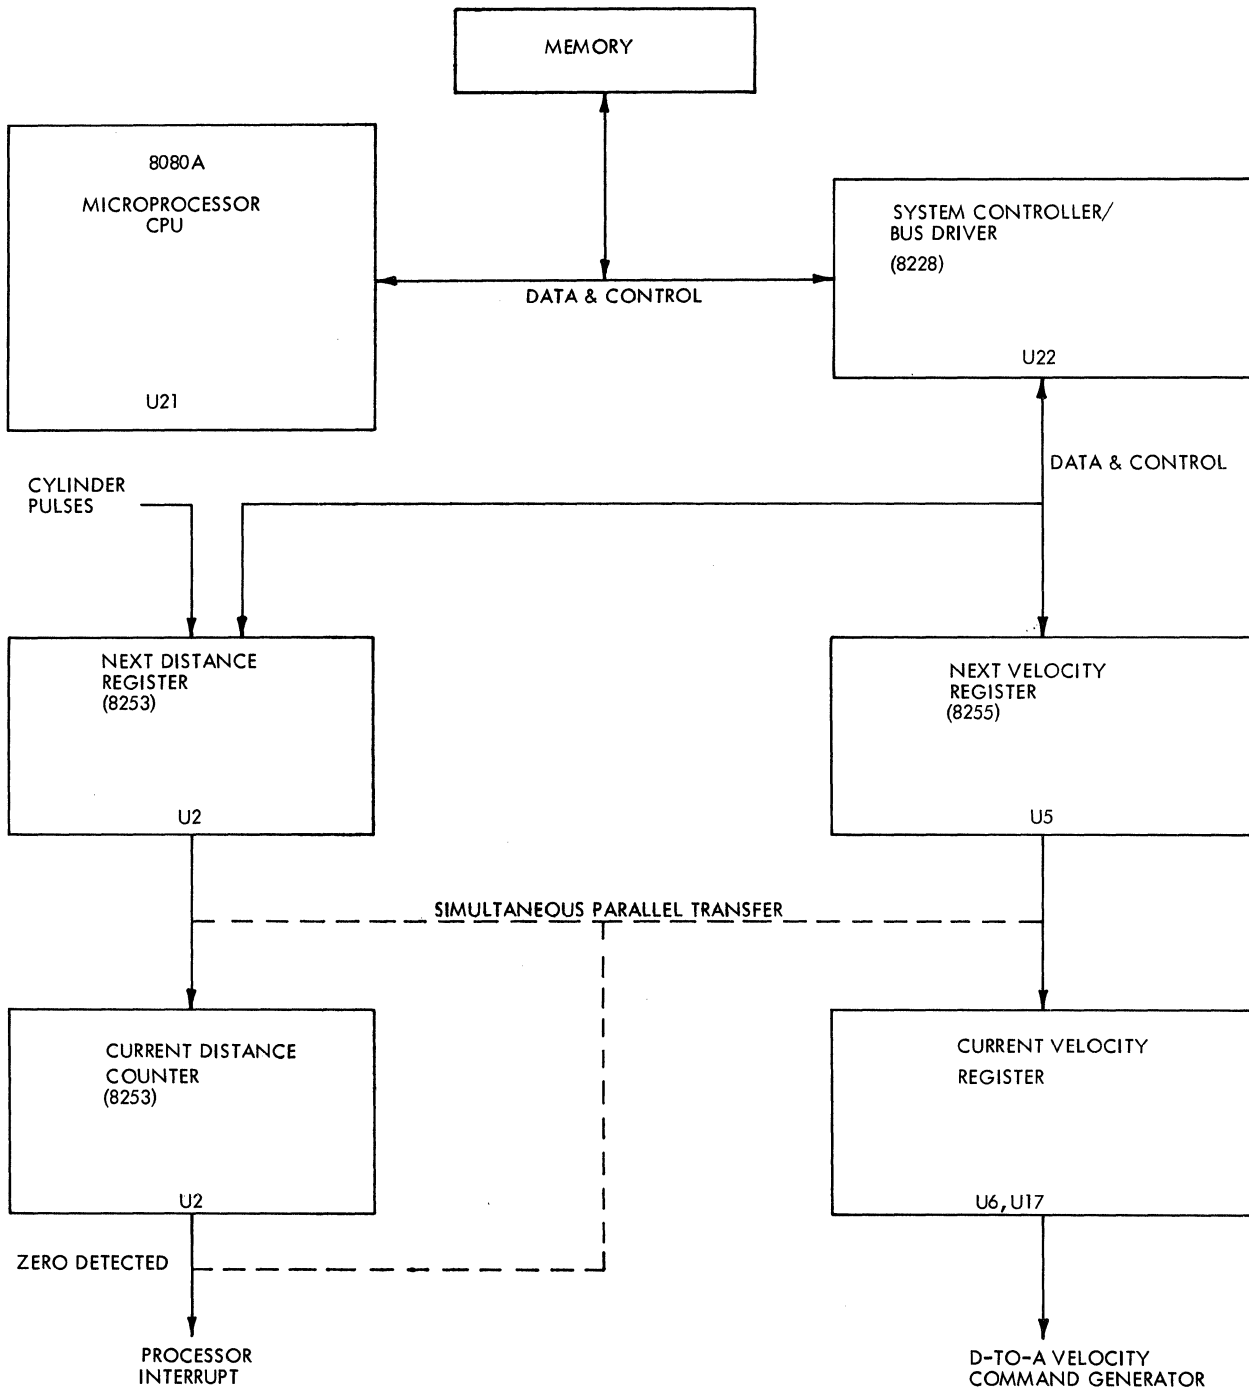

(X243)

Figure 4-12. Seek Control (Digital Portion) Block Diagram

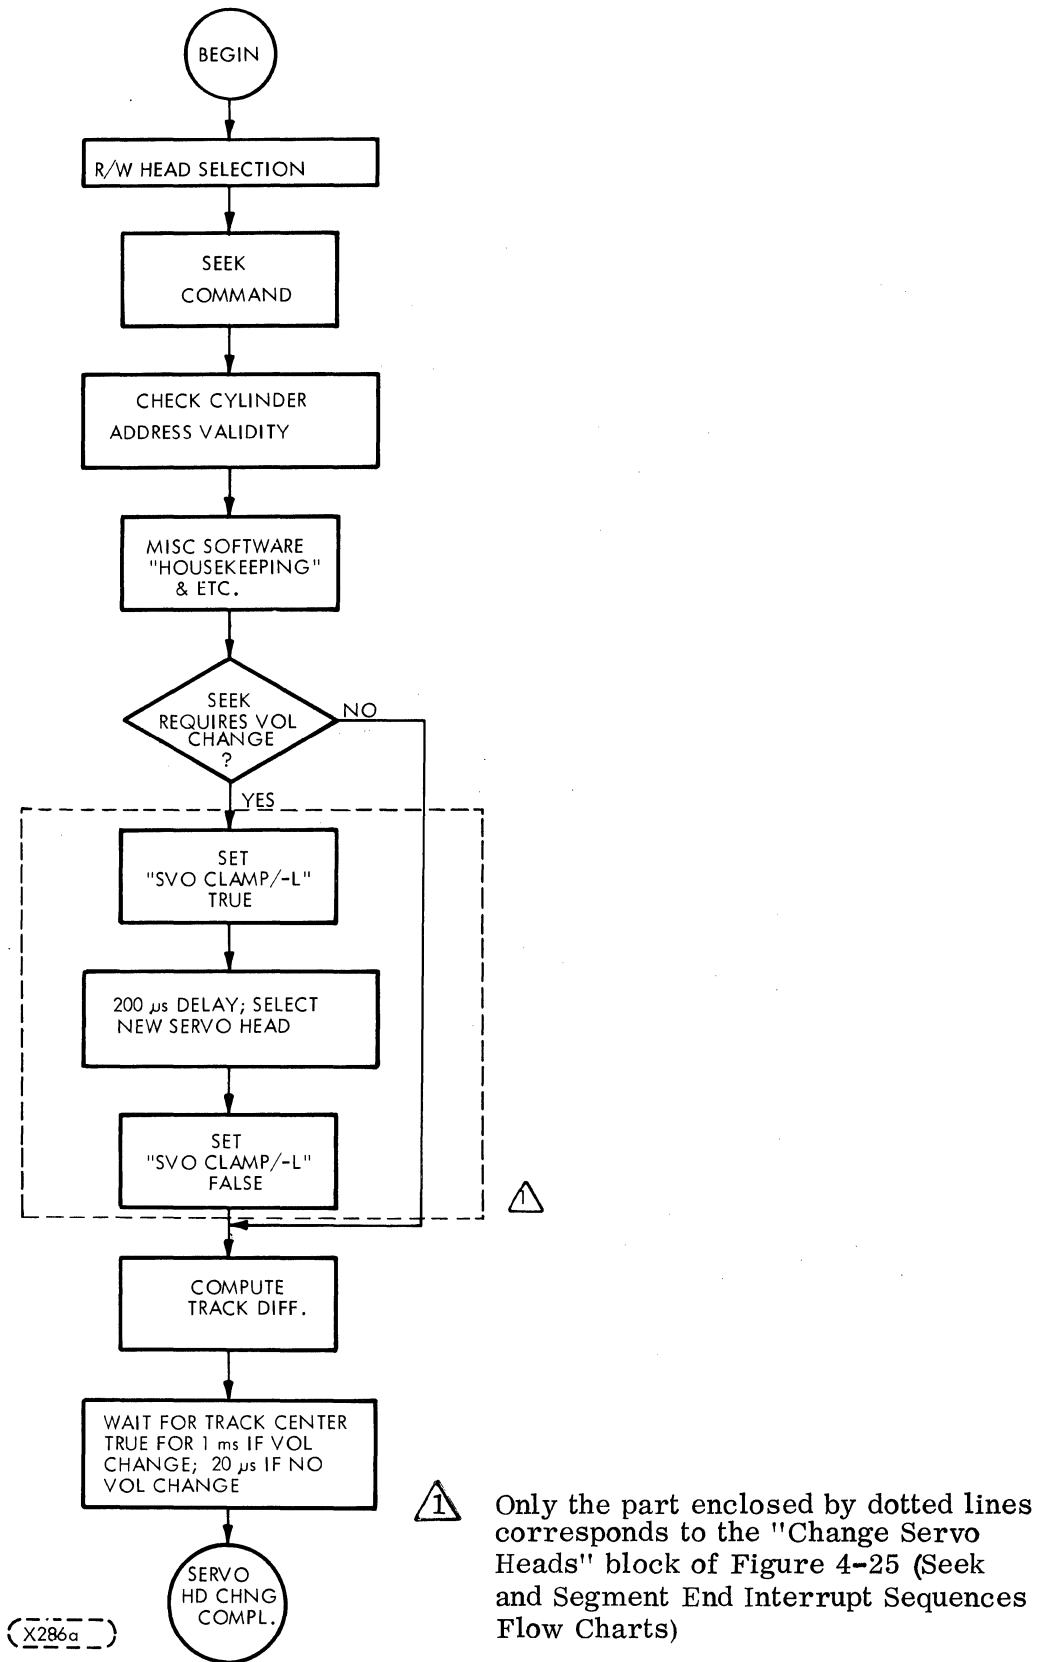


Figure 4-13. Servo Head Change Operational Flow Chart



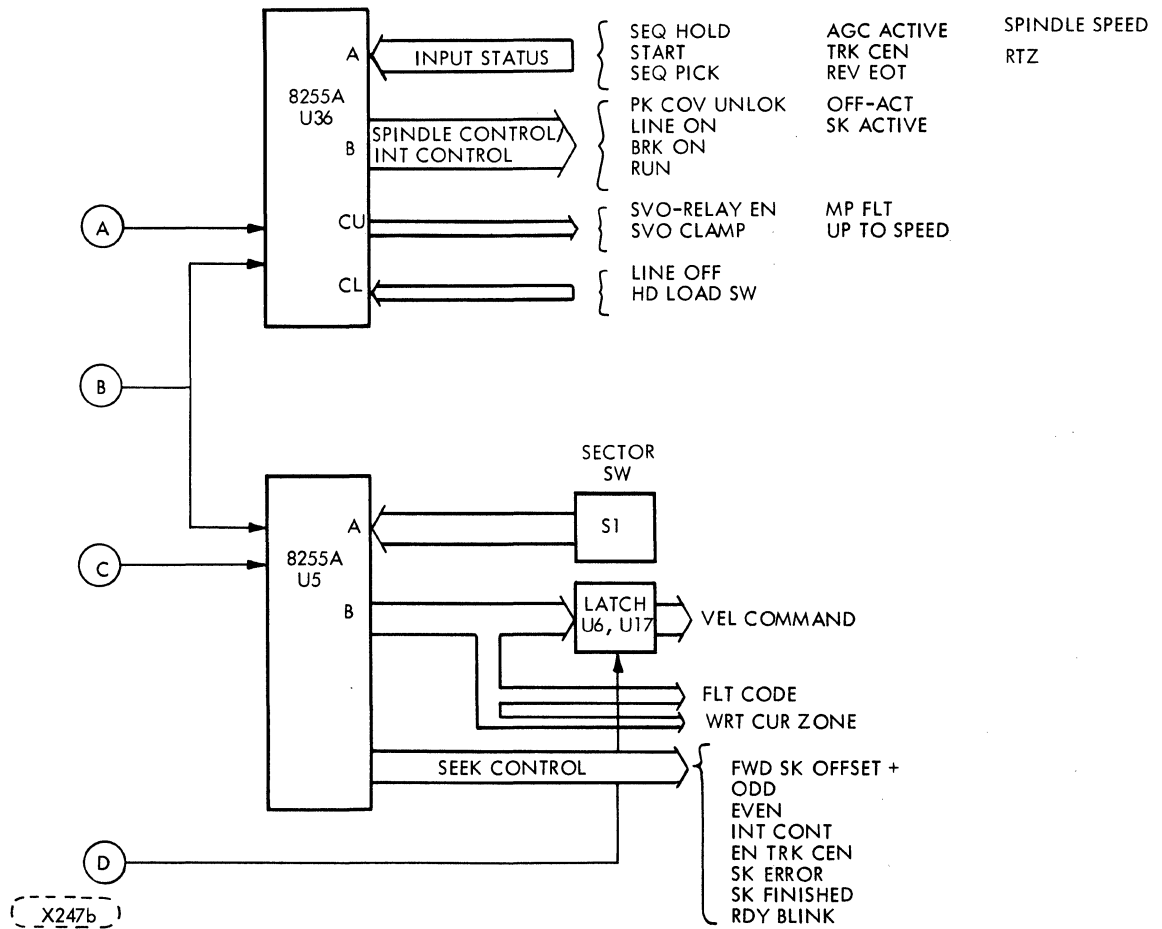


Figure 4-14. Microprocessor Hardware Block Diagram (Sheet 2 of 2)

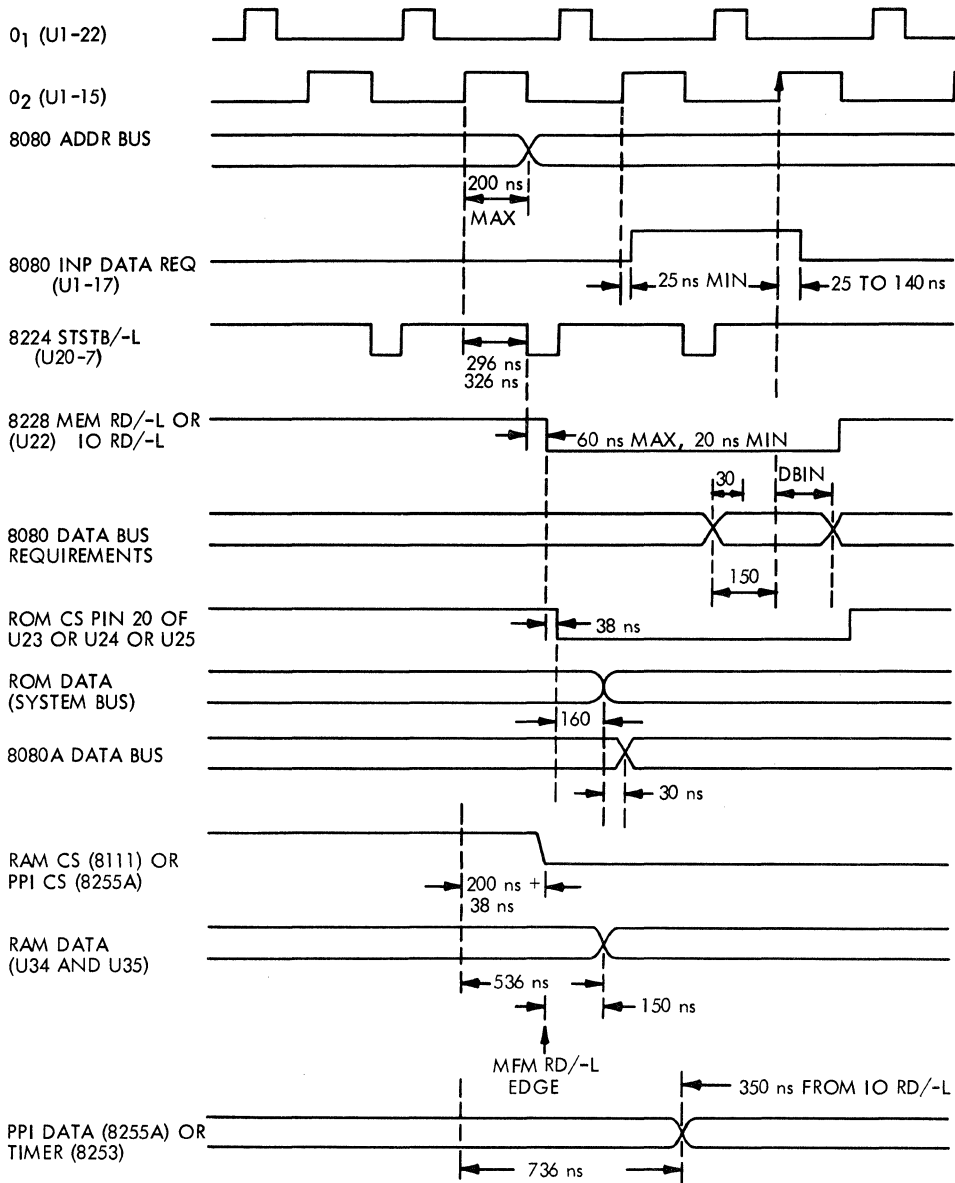

XX014a

Figure 4-15. MP Read Timing

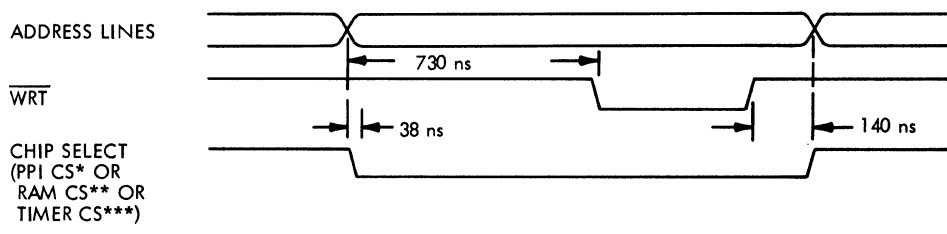

*PPI CS SETUP = 20 ns MIN REQUIRED
 **RAM CS SETUP = 150 ns MIN
 ***REQUIREMENTS SAME AS PPI

XX014b

Figure 4-16. Microprocessor Write Timing



4.3.4 MICROPROCESSOR DETAILED FUNCTIONAL DESCRIPTION

4.3.4.1 Microprocessor Hardware Description

The basic Microprocessor hardware consists of a processor (8080A), clock generator (8224), system controller and bus driver (8228), instruction memory (8708/8308), data memory (8111), interrupt logic, programmable timer (8253), and programmable peripheral interface units (8255A, called PPI). These elements are tied together on three common buses - control, data, and address. The timing relationships for these buses to perform memory read and write and I/O read and write are shown in Figure 4-15 and 4-16.

4.3.4.2 Memory Address Code Assignments

The address decode logic of U13 provides the address line decoding which selects memory chips, I/O ports and etc. Table 4-1 shows the memory address codes used to select memory chips, select and control I/O ports and the interval timer and to generate certain "software Strobes". The high order bit (MADR-F/+L) is used to select either chips/functions within the CMD, or to select memory external to the CMD via PWA slot EM4 (for factory test). It should be noted that for clarity and consistency Table 4-1 shows all of the memory address codes as "+L" (nominal +4 V = Logic "1") However, the A, B and C address lines are actually mechanized as "-L" logic (nominal 0 V is logic "1") in most places shown in the schematics.

4.3.4.3 Interrupt Logic

The interrupt logic consists of interrupt flip-flops and latches, an interrupt instruction encoder and an interrupt port. Offset, seek and RTZ operations impose interface response times on the microprocessor which require circuitry that will (1) memorize the command, (2) cause an interrupt and (3) drop ON CYLINDER. Flip-flops on the I/O and Servo Coarse PWAs store the commands from the controller. The interrupt logic is on the Servo Coarse PWA and it operates as follows. The interrupt encoder (U27) generates the interrupt to the 8080 microprocessor and prioritizes and encodes the interrupts into a 3 bit binary code AAA when the 8080A responds to the interrupt, U26 forces the code 11AAA111 onto the data bus for the 8080 to use as a Restart instruction. The Restart instruction saves a return address and transfers 8080 program control to the instruction whose address is eight times the AAA field of the Restart instruction. The new instruction at 8 X AAA is the first instruction in the subroutine that services the requirements of the particular function that caused the interrupt.

Table 4-1. Microprocessor Memory Address Code Assignments

FUNCTION	MEMORY ADDRESS LINES MADR F/+L THRU MADR 0/+L															
	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
External Address (EM4)	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	*
Internal Addresses																
Memory: ROM U23	0	0	0	0	0	0	-	-	-	-	-	-	-	-	-	-
ROM U24	0	0	0	0	0	1	-	-	-	-	-	-	-	-	-	-
ROM U25	0	0	0	0	1	0	-	-	-	-	-	-	-	-	-	-
RAM U34, U35	0	0	1	0	0	0	0	0	-	-	-	-	-	-	-	-
Input Ports Addressed as Memory (U42, U43)																
LO-CYL	0	0	0	1	1	1	-	-	x	x	x	x	-	-	-	-
HI-CYL	0	0	0	0	1	1	-	-	x	x	x	x	-	-	-	-
***I/O Ports: PPI-1 (U5)												**				
Control	0	0	0	0	0	0	0	0	x	x	x	x	x	x	x	x
Port A	0	0	0	1	1	0	0	0	x	x	x	x	x	x	x	x
Port B	0	0	0	1	0	0	0	0	x	x	x	x	x	x	x	x
Port C	0	0	0	0	1	0	0	0	x	x	x	x	x	x	x	x
PPI-2 (U36)																
Control	0	0	1	0	0	0	0	0	x	x	x	x	x	x	x	x
Port A	0	0	1	1	1	0	0	0	x	x	x	x	x	x	x	x
Port B	0	0	1	1	0	0	0	0	x	x	x	x	x	x	x	x
Port C	0	0	1	0	1	0	0	0	x	x	x	x	x	x	x	x
***Timer: (U2) Mode																
CNT 0	0	1	0	0	0	0	0	0	x	x	x	x	x	x	x	x
CNT 1	0	1	0	1	1	0	0	0	x	x	x	x	x	x	x	x
CNT 2	0	1	0	0	1	0	0	0	x	x	x	x	x	x	x	x
Software Strokes:																
LD-VEL-RD-INT	0	1	1	1	1	1	0	0	x	x	x	x	x	x	x	x
RES-SK-INT	0	1	1	1	1	0	0	0	x	x	x	x	x	x	x	x
RES-EXT-INT	0	1	1	1	0	1	0	0	x	x	x	x	x	x	x	x
RES-RTZ	0	1	1	1	0	0	0	0	x	x	x	x	x	x	x	x
RES-OFF-INT	0	1	1	0	1	1	0	0	x	x	x	x	x	x	x	x
RES-SPD-LCH	0	1	1	0	1	0	0	0	x	x	x	x	x	x	x	x
RES-SEG-END-INT	0	1	1	0	0	1	0	0	x	x	x	x	x	x	x	x
SET-INT	0	1	1	0	0	0	0	0	x	x	x	x	x	x	x	x

* "-" indicates address line is used to address a memory cell within the selected device.

** "x" indicates that the bits are not used.

*** Address qualified by I/O Rd or I/O write.

Table 4-2 lists the Restart instruction produced by each interrupt and the priority attached to each interrupt.

Table 4-2. Priority Interrupt Restart Instructions

PRIORITY	INTERRUPT	RESTART INSTRUCTION
1	Clock (20 ms)	CFH (11001111)
2	Segment End	D7H (11010111)
3	External	DFH (11011111)
4	Offset	E7H (11100111)
5	Maintenance Fault	EFH (11101111)
6	Seek	F7H (11110111)
		AAA

Clock (20 ms) Interrupt:

Counter #1 of the 8253 Programmable Interval Timer produces an interrupt every 20 ms which is the priority 1 Clock interrupt in Table 4-2. Firmware decrements two counters stored in RAM with the 20 ms clock and uses the two counters for various large timeout functions required by the CMD operations.

Segment End Interrupt:

Counter #0 of the 8253 produces the Segment End interrupt when the seek control logic requires the next velocity command as described in Section 4.3.3.2, "Seek Control". Refer also to the timing diagram of Figure 4-17. For the initial part of a seek the firmware loads a count into the "next distance" register of Counter 0 (using I/O WRT/-L) and then transfers that count (using "LD-VEL-RD-INT/-L") into the "present distance" register in Counter 0. The count transferred into the "present distance" register is the number of cylinders to be traversed at the "current velocity" in registers U6 and U17. The "next distance" is transferred into the "next distance" register at the same time. Figure 4-17 illustrates the case where the heads are programmed to travel a one track segment at the "present velocity" at the end of which the "segment end interrupt" occurs.

External Interrupt:

External Interrupt is reserved for later use.

Offset Interrupt:


A change in offset command lines detected by an edge detector circuit generates the offset interrupt. The microprocessor then commands an offset position through the velocity command port (PPI-1, Port B) to the D to A converter. In the fine mode (closed loop) the D to A output is a position offset, but in the coarse mode (open loop) the D to A output is a velocity command.

Maintenance Fault Interrupt:

The maintenance fault interrupt occurs as a result of a request from the Control/Mux PWA to output through the velocity command port any stored fault codes. This interrupt also triggers the velocity measurement routine if the microprocessor detects that switch S1-8 on the Servo-Coarse PWA is in the OFF position. The State of S1-8 is sensed through PPI-1 port PA7.

Seek Interrupt:

The Seek Interrupt initiates a seek operation. The flow chart of Figure 4-25 illustrates the Seek and Segment End Interrupts.

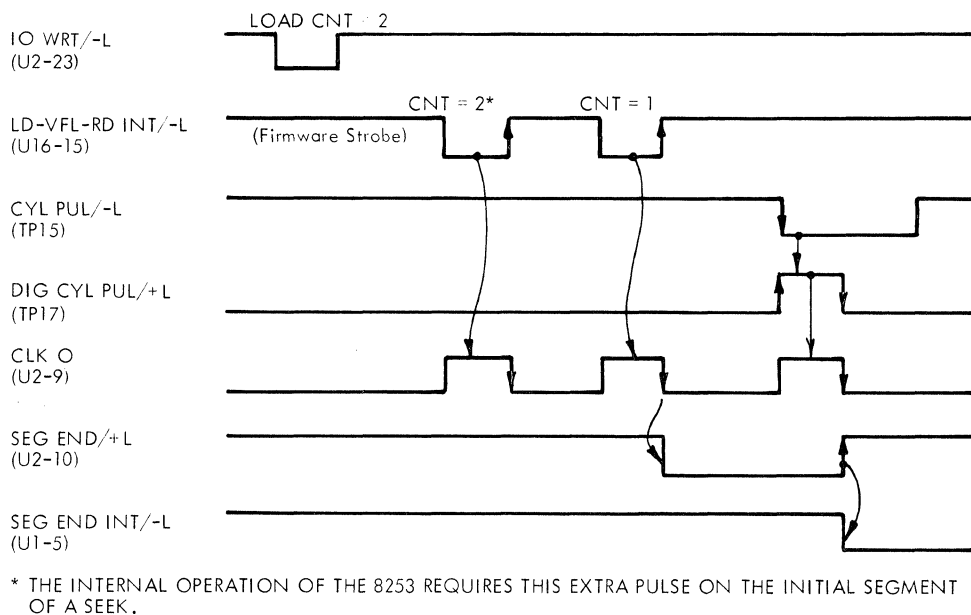

XX032a

Figure 4-17. Initial 1 Track Segment Timing (Seek Operation)

4.3.4.4 Microprocessor I/O Logic

The input/output logic consists of two programmable peripheral interface PPI chips (U5 & U36; type 8255A) and two multiplex chips (U42 & U43; type 74LS257). A binary 1 of 8 decoder (U16; type 74LS138) provides strobe pulses for the M. P. I/O logic. These are shown in their relationship to each other in the block diagram of Figure 4-14. Table 4-3 which follows lists the I/O ports and their functions.

Table 4-3. Microprocessor I/O Port Signal Assignments.

PPI 1 (U5)	Source/Destination	Function
PORT A	(Inputs)	
PA0	Sector Selection Switch S1-1 (LSB)	These seven inputs select the number of sector pulses per revolution. See also Table 3-3.
:	through Sector Selection Switch	
:	S1-7	
:		
PA6		
PA7	Sector Selection Switch S1-8	
PORT B	(Outputs)	
PB0	Output Velocity commands to Vel. com. registers or maintenance codes to Fault Displays on CNTL/MUX PWA	During a seek these signals are servo velocity commands and during execution of a maintenance fault display the 5-bit error code is output. See Table 6-6 for more information the Fault Displays.
:		
:		
:		
:		
:		
PB7		
PORT C	(Outputs)	Port C is the seek control port.
PC0	RDY BLINK/-L	Turns on and off at a 1/4 second rate during spindle start and stop. When servo relay is enabled 0 volts on this line specifies a ready condition (heads loaded and on-cylinder).
PC1	SK FINISHED/+L	Enables ON-CYLINDER when a seek is completed.
PC2	SK ERROR/+L	A seek error has occurred (Table 6-7).
PC3	EN TRK CEN/+L	Enables 60 Hz run-out filter on the signal position error input. Actuated when in fine mode after track center has been detected.
PC4	INT CONT/-L	When active "low", enables all interrupts. When "high", disables all but 20 ms clock int.
PC5	EVEN/-L	Selects "+" polarity of signal position error (SPE) from Servo Fine PWA and closes servo loop (fine mode).
PC6	ODD/-L	Selects "-" polarity of SPE and closes servo loop (fine mode).

Table 4-3. (contd.)

PPI 1 (U5)	Source/Destination	Function
PC7	FWR SK OFFSET+/-L	Selects polarity of D/A output which defines the direction of movement for a seek and the direction of position offset for an offset.
PPI 2 (U36)		
PORT A	(Inputs)	Port A is hardware status inputs
PA0	SEQ PICK	Interface control line for sequencing start of spindle motor.
PA1	Not used	
PA2	REV EOT/-L	When active LOW the positioner has moved into outer guard band. It is used during an RTZ to tell the M. P. to reverse motion and lock on track 0.
PA3	TRK CEN/-L	Defines when the positioner is on track (see also Section 4.3.5.3).
PA4	AGC ACTIVE	Signal from servo fine PWA which defines when the positioner is out of the servo recorded zone.
PA5	SPIN PULSE (shrunk)	Used to measure spindle speed.
PA6	START/-L	Local Start Switch input.
PA7	SEQ HOLD/-L	Interface control line for sequencing start of spindle motor.
PORT B	(Outputs)	Spindle control port.
PB0	OFFSET-ACT/+L	Defines when a position offset is active so that when the offset is removed, ON CYLINDER may or may not drop according to option selected.
PB1	PK COV UNLOK/-L	When active LOW allows access to removable disk pack.
PB2	Not used	

Table 4-3. (contd.)

PPI 2 (U36)	Source/Destination	Function
PB3	RUN/-L	Controls the RUN relay which connects either a solid state relay controlled AC line or a transistor controlled DC line to the spindle motor windings.
PB4	BRK ON/-L	When active LOW and PB3 is HIGH this line turns on the DC brake current through the RUN relay to the motor.
PB5	LINE ON/-L	When active LOW and PB3 is active LOW this line turns on the solid-state relay which controls the spindle motor through the RUN relay.
PB6	SK-ACTIVE/-L	Disables the Seek Interrupt and Offset Interrupt latches during a seek.
PB7	Not used	
PORT C	(Inputs)	
PC0	HD LOAD SW/+L	This signal is active HIGH when the heads are loaded (the switch is open--not activated).
PC1	Not used	
PC2	Not used	
PC3	LINE OFF/+L	Indicates solid-state relay (SSR) is disabled. If this line is active HIGH at the same time that LINE ON from PB5 is active LOW it indicates to the M. P. that the motor-over-heated switch has opened so the M. P. sets a fault.
PORT C	(Outputs)	
PC4	UP-TO-SPEED/+L	Active LOW when the spindle motor has exceeded 80% of 3600 r/min during spindle start. Goes HIGH if r/min drops below 80% anytime the heads are loaded.
PC5	MP FLT/+L	Indicates a M. P. fault condition.

Table 4-3. (contd.)

PPI 2 (U36)	Source/Destination	Function
PC6	SVO CLAMP/-L	Used on Servo Fine PWA. At the beginning of a seek operation requiring a volume change this signal triggers the servo head change. It inhibits the sector and index pulses and selects a greater than normal bandwidth for the servo clock.
PC7	SVO RLY EN/+L	When active HIGH this signal connects the normal servo power amplifier to the actuator through the servo relay. When LOW it switches the servo relay so the emergency retract amplifier is connected to the actuator.
U42, U43 Multiplexor Ports *		Outputs on Data bus lines DB-0 thru DB-7
"1" INPUTS (all)	CYL-ADDR-0/+L thru CYL-ADDR-7/+L	Lower eight bits of cylinder address read at the beginning of a seek.
"0" INPUTS		
0	CYL-ADDR-8/+L	Two high order bits of cylinder address.
1	CYL-ADDR-9/+L	
2	FLT-RESET/+L	Input from Control/Mux PWA requesting M. P. fault reset.
3	MP-MC/+L	M. P. checks this line during a master clear routine to determine if an RTZ or MC-VLT-FLT produced the MC condition.
4	LED FAULT/-L	Status from Control/Mux PWA indicating a fault condition exists. The M. P. will not load heads when this is active LOW.
5	OFFSET+/-L	Indicates a positive offset request.
6	OFFSET-/+L	Indicates a negative offset request.
7	VOL CHANGE/-L	M. P. checks this line at the beginning of each seek to see if a volume change is required.

*See end of Table for notes.

Table 4-3. (contd.)


PPI 2 (U36	Source/Destination	Function
U16 Binary/1:8 Decoder		Software strobes decoded from input addresses
U16-15	LD-VEL-RD-INT/-L	Loads contents of velocity port into Velocity Command Registers and strobes the Segment End Counter. Also this strobe allows the reading of the interrupt instruction port for diagnostic purposes.
U16-14	RES-SK-INT/-L	Resets seek interrupt flip-flop.
U16-13	RES-EXT-INT/-L	Available for later external use.
U16-12	RES-RTZ/-L	Resets RTZ latch and MP-MC latch.
U16-11	RES-OFF-INT/-L	Resets offset interrupt latch.
U16-10	RES-SPD-LCH/-L	Resets speed latch.
U16-9	RES-SEG-END-INT/-L	Resets the segment end interrupt flip-flop.
U16-7	SET-INT/-L	Checks interrupt related hardware for diagnostic purposes.

*These are addressed as memory, not as I/O. That is, the address is qualified by MEM READ.

4.3.4.5 Microprocessor Operation Flow Charts


Flow charts illustrating microprocessor operation sequences are given in Figure 4-17 through 4-30.

Operation described by the flow charts can be interrupted at most any point in the flow when an interrupt to the M. P. occurs. Register contents and anything else necessary is saved (if applicable) until operation returns from processing the interrupt and performing whatever operation is called for (if applicable).

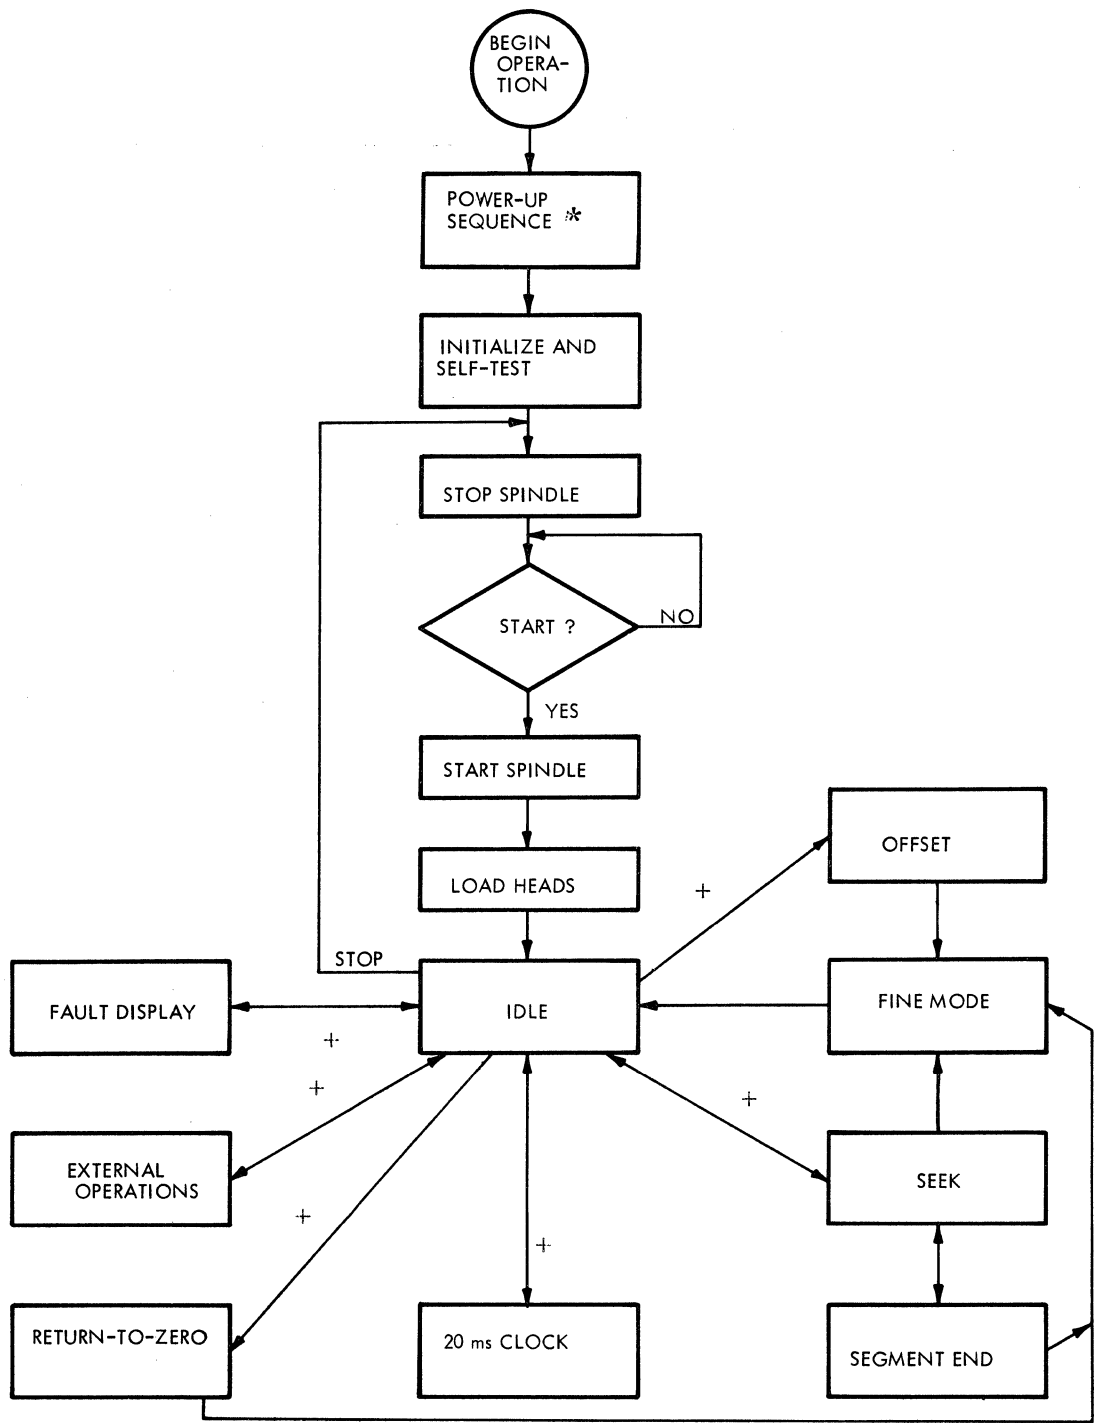

(X305a) * INCLUDES SOME HARDWARE OPERATIONS NOT INVOLVING MICROPROCESSOR
 +Interrupt from Idle.

Figure 4-18. Microprocessor General Operation Flow Chart

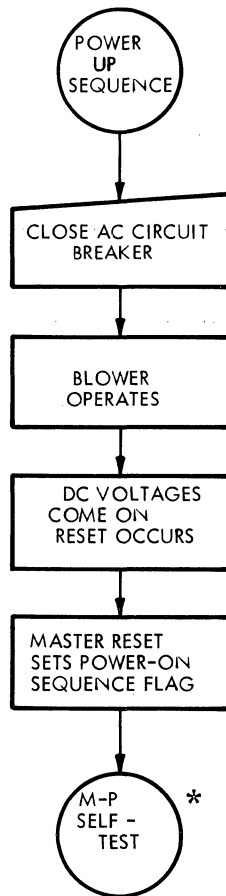


X316b

NOTE: THESE ARE HARDWARE SEQUENCES OTHER THAN THOSE INVOLVING THE MICROPROCESSOR.


*Figure 4-20.

Figure 4-19. Power-up Hardware Sequences Flow Chart

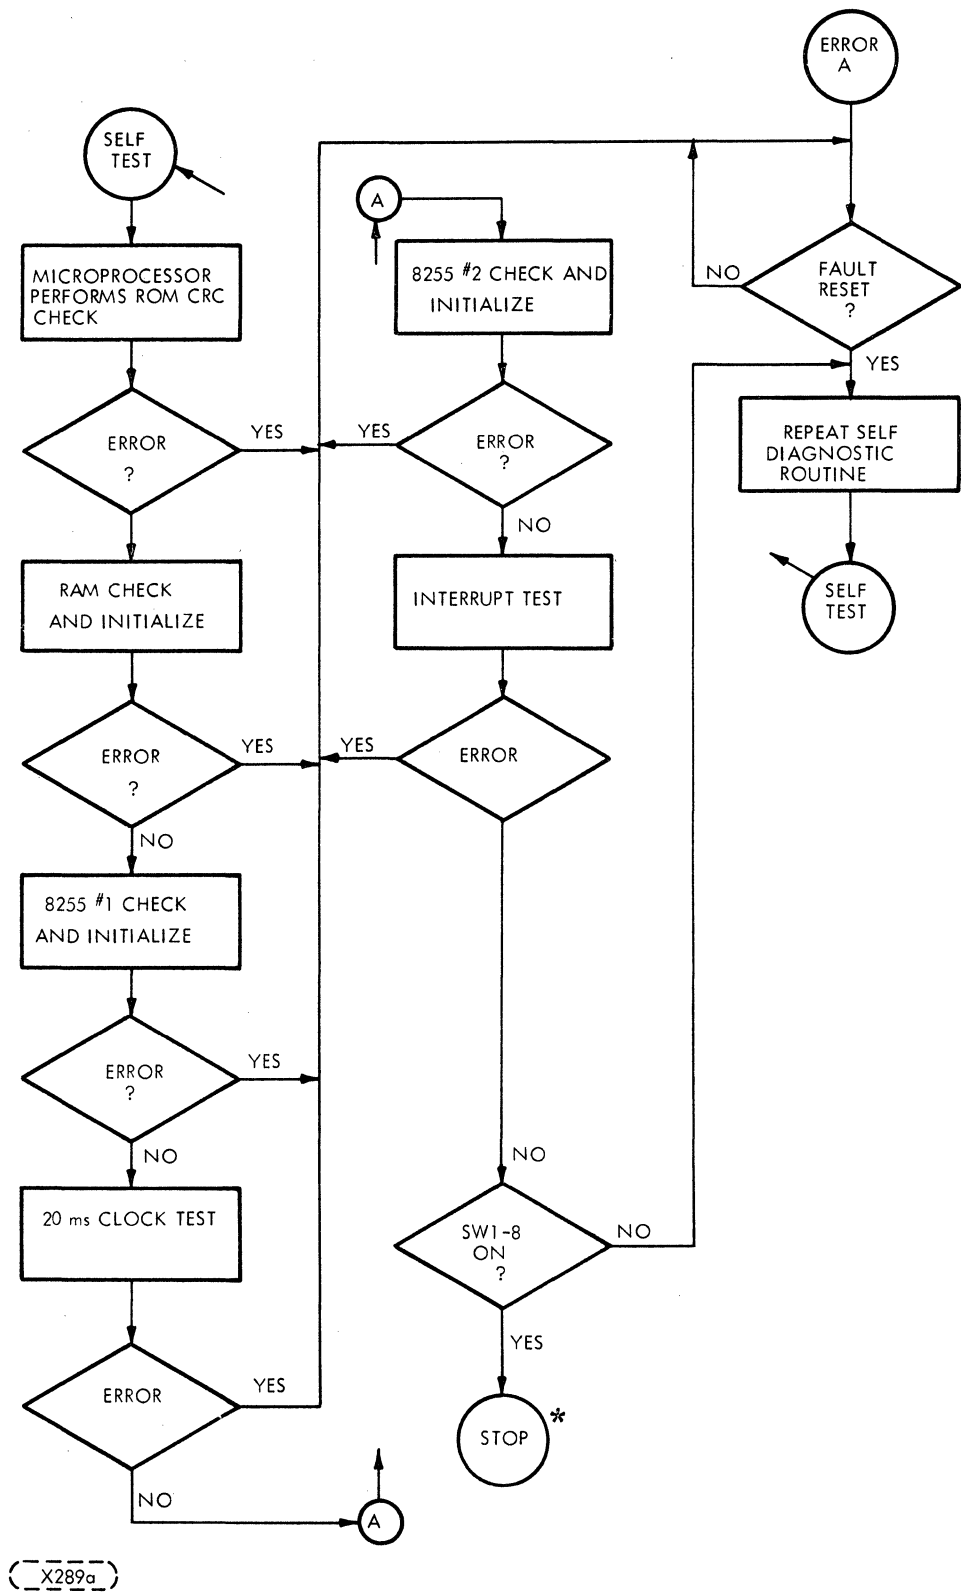


*Figure 4-21

Figure 4-20. Initialization and Self Test Sequence Flow Chart

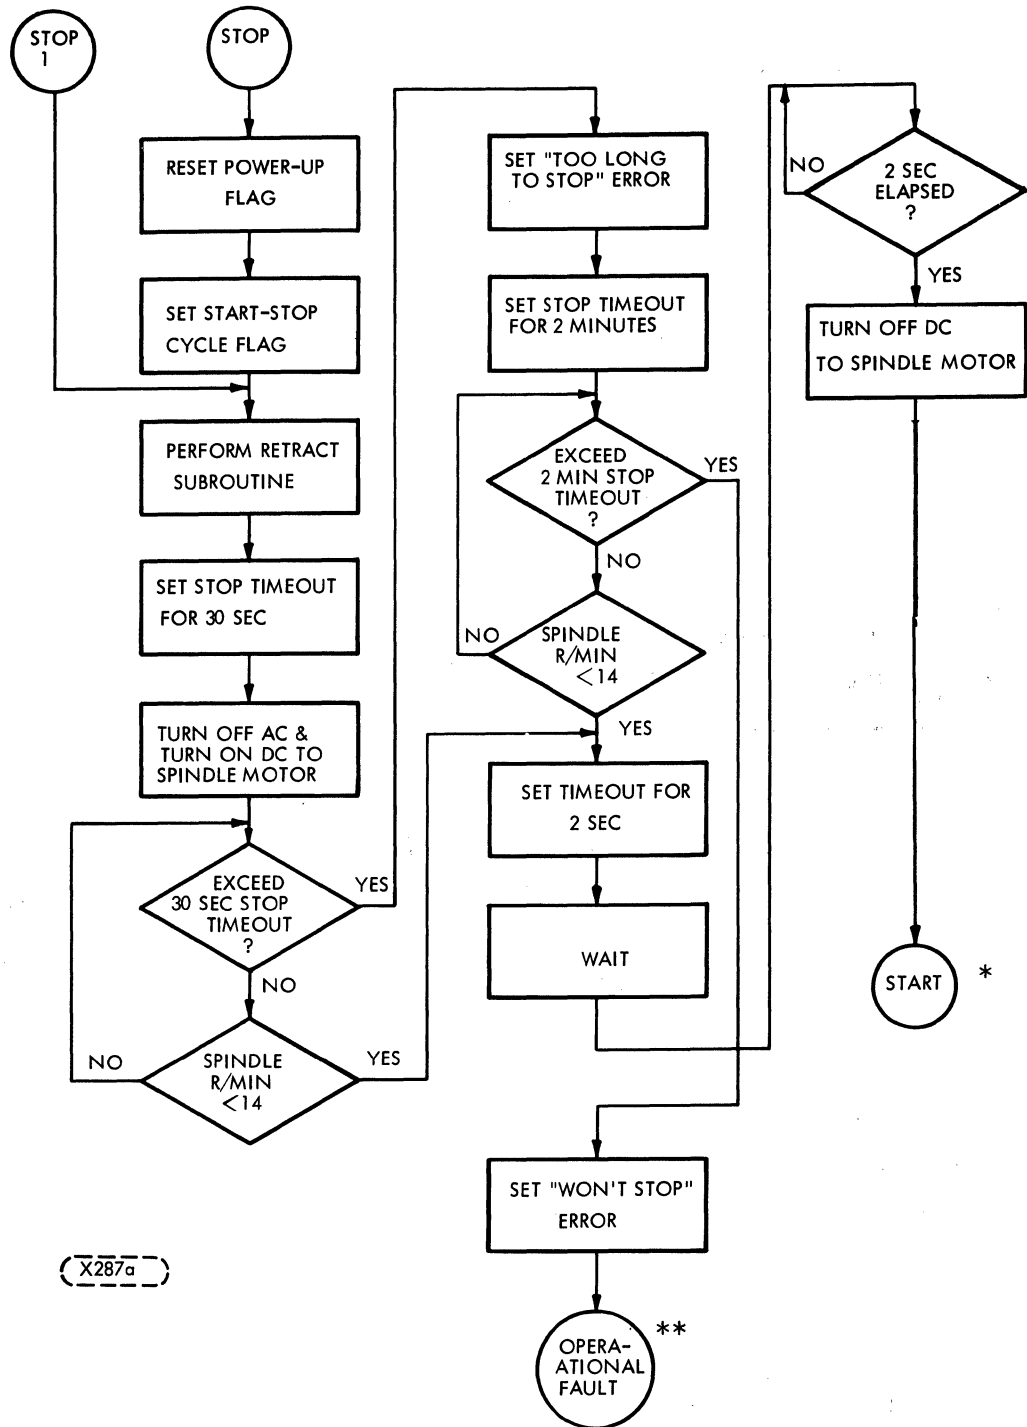

* Figure 4-22
 ** Figure 4-29

Figure 4-21. Stop Sequence Flow Chart

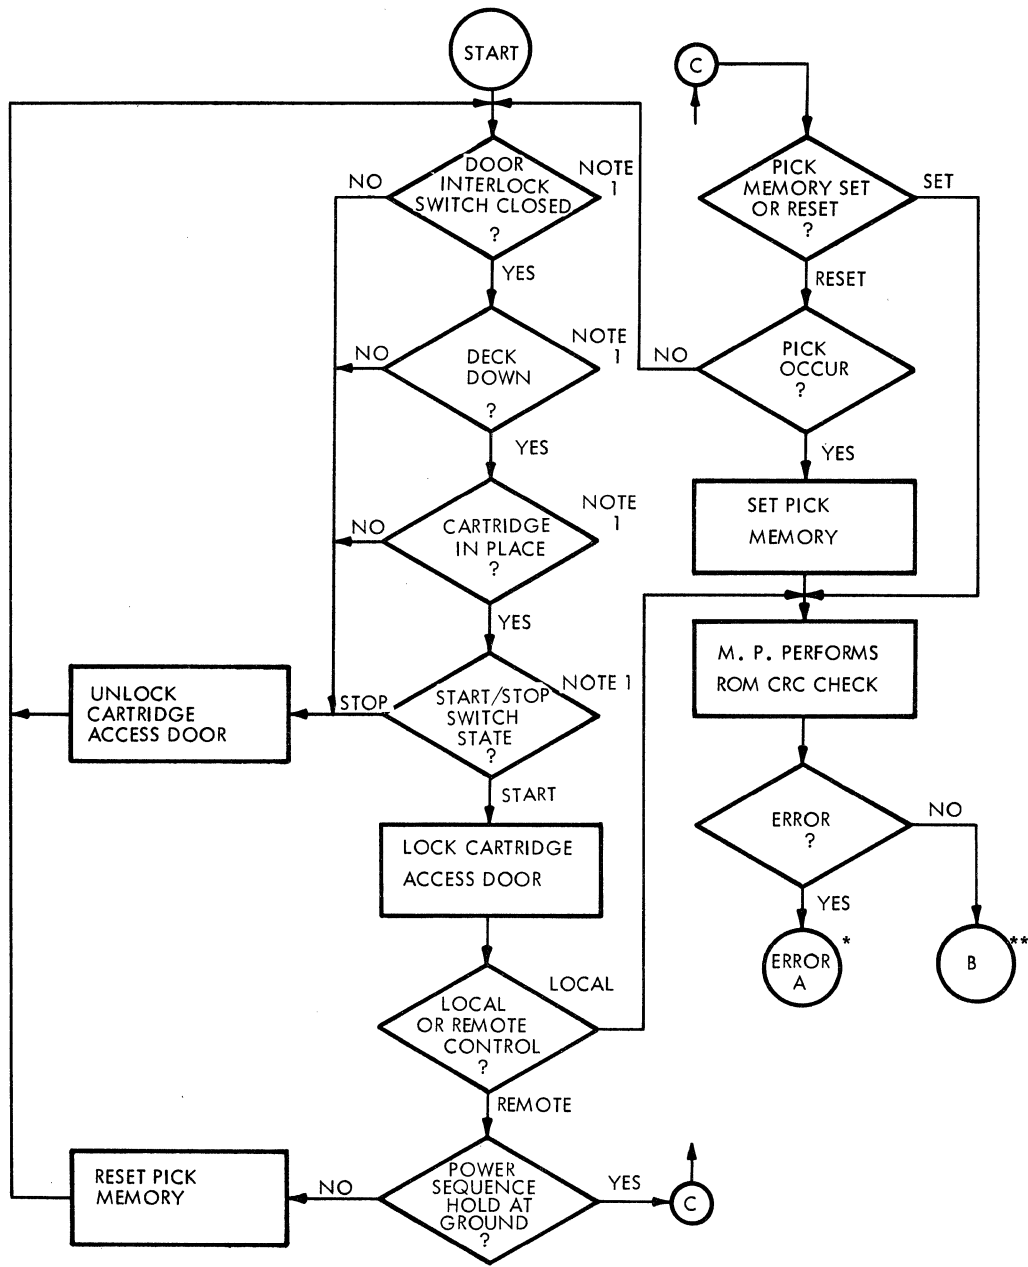


X362

* FIGURE 4-19
 ** SHEET 2 OF THIS CHART

*Figure 4-20
 **Sheet 2 of this Chart

Figure 4-22. Microprocessor Start Sequence Flow Chart (Sheet 1 of 3)

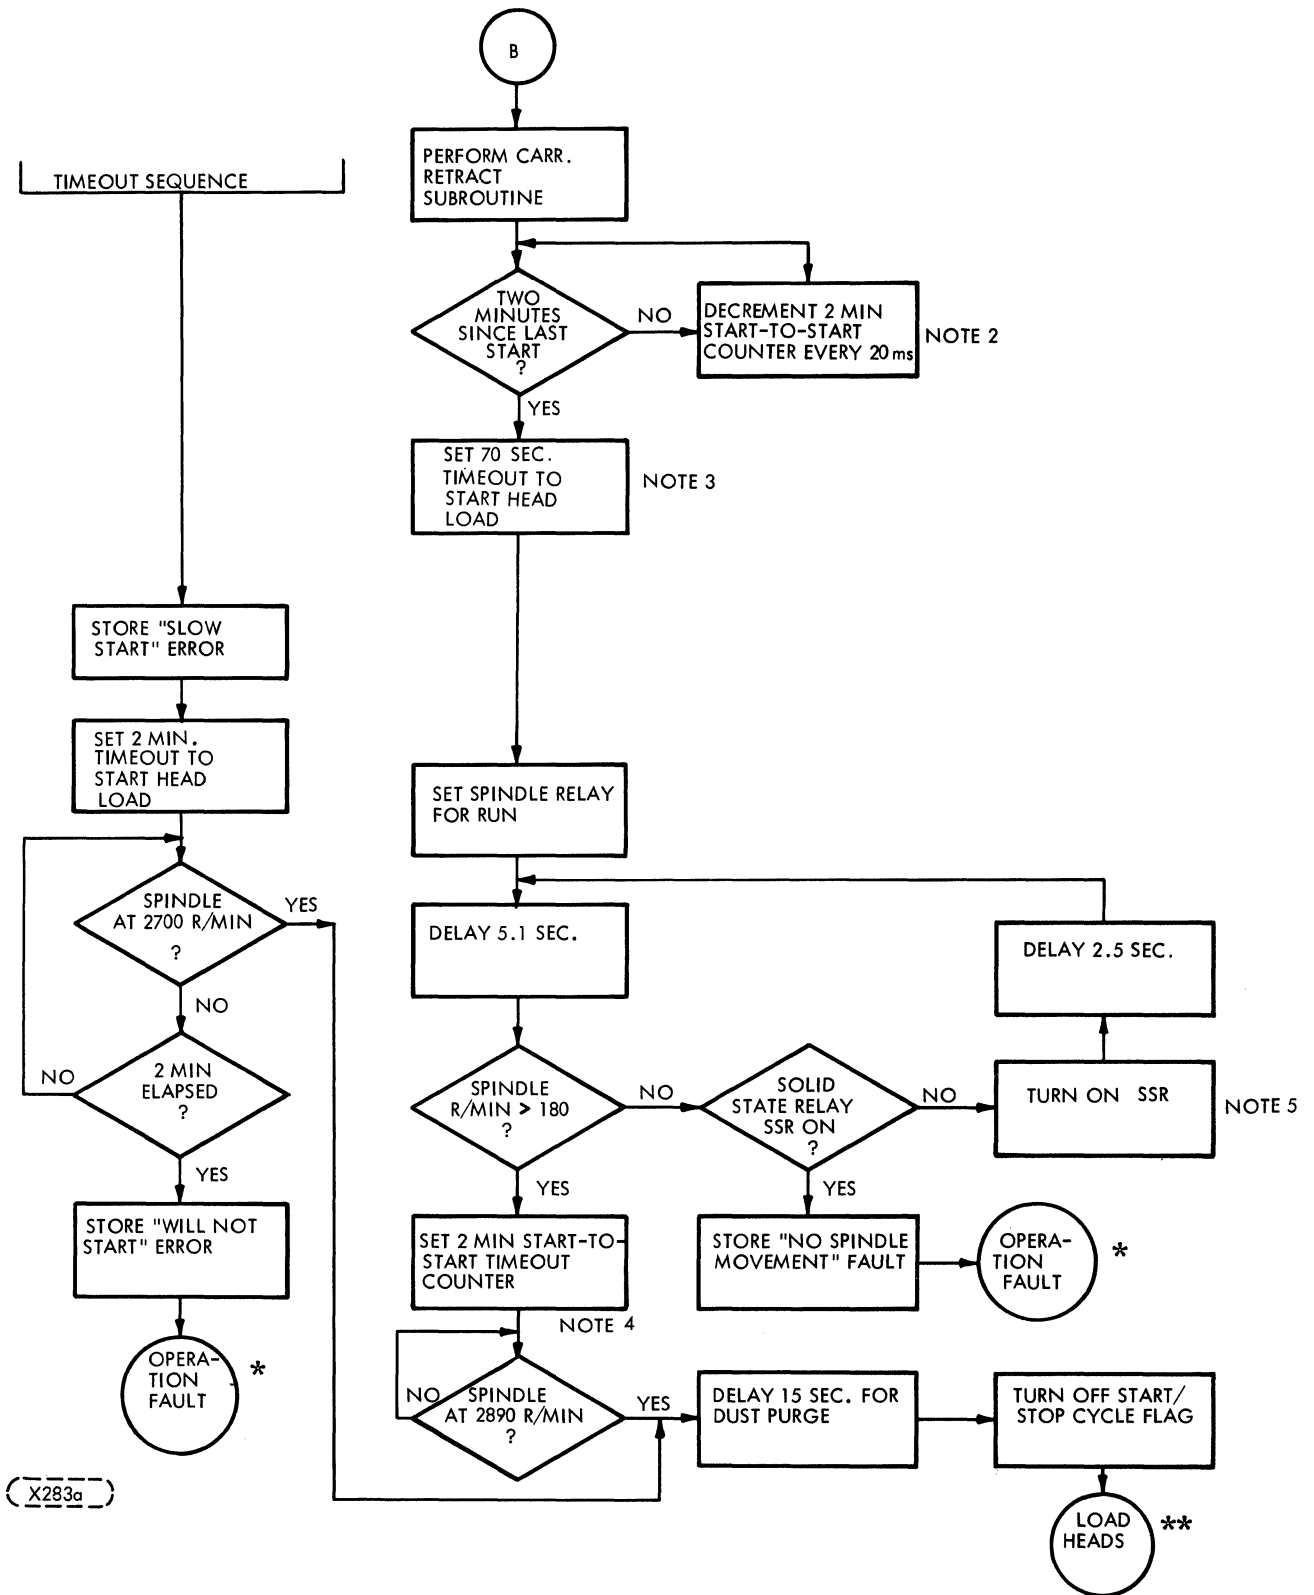

* Figure 4-29
 ** Figure 4-23


Figure 4-22. Start Sequence Flow Chart (Sheet 2 of 3)



START Sequence Notes

- Note 1. These decision boxes are not operations taking place in the software or firmware, but only represent hardware interlocks which must be in the correct state before depressing the START switch will cause anything to happen. The microprocessor does not look at the state of these switches but they must be closed before the START switch can indicate "START".
- Note 2. A few blocks previous to this point in the flow chart it was found that the START/STOP switch indicates Start. However, a two minute timer will not allow operation to proceed until the two minute interval has elapsed. The two minute timer counter is decremented by the 20 ms idle interrupt clock (see Idle Interrupt Flow Chart). See also Note 4 below.
- Note 3. The Spindle motor must reach 2890 r/min before 70 seconds has elapsed or a "too slow start" error will be stored in the fault store. A 70 second counter is set up to mark off the 70 second period and if it times out before 2890 r/min is reached a two minute counter is set up. If the two minute counter times out, the operational fault routine is called to stop the spindle. "Will not start" error is also stored in the fault store. These timing events occur in parallel to the events of the Power-up Sequence Flow Chart. A timeout could occur anywhere during the flow of events depicted, depending on what caused the delay in the spindle start up sequence.
- Note 4. The two minute Start-to-Start Timer mentioned in Note 2 is initially set up at this point in the sequence. Regardless of what else may happen, a new start cannot begin after this time has been started until it has timed out after two minutes have elapsed.
- Note 5. This loop tests to see if the spindle motor has started yet. If the Solid State Relay that controls power to the motor is on but the speed fails to rise above 180 r/min a "no spindle movement" fault is stored in the Fault store, and the operational fault routine routes operation to the stop sequence.

Figure 4-22. Start Sequence Flow Chart (Sheet 3 of 3)

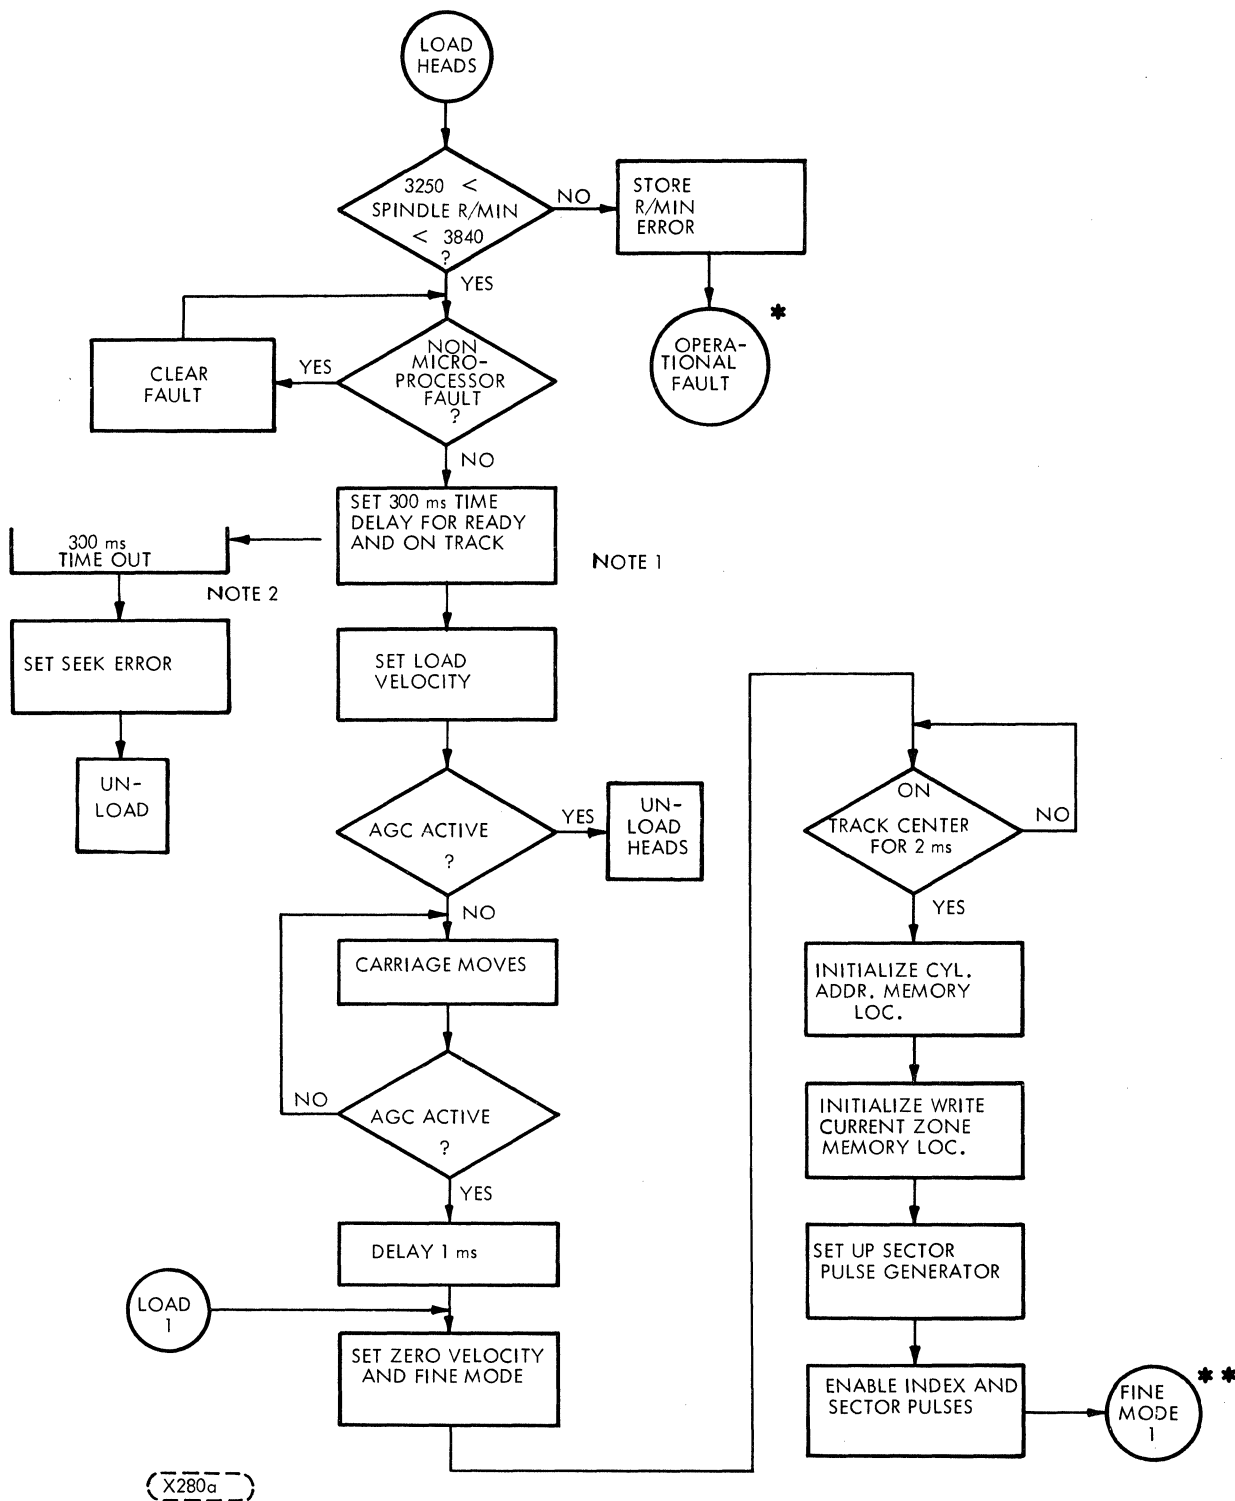

* Figure 4-29

** Figure 4-26


Figure 4-23. Head Load Sequence Flow Chart (Sheet 1 of 2)

Figure 4-23. Load Heads Sequence Flow Chart Supplementary Notes.

Note 1. To time the head load operation a counter is set up which takes 300 ms to decrement to -1. If the counter times out, i.e., reaches -1 before the "Ready and on-track" condition occurs a Seek Error is stored in the M. P. fault storage. The time-out could occur at anytime during the Head Load or Fine Mode sequences, so the time-out sequence is shown off to the side of the main flow chart. If the "Set Ready" box in the Fine Mode flow chart is reached before the 300 ms time-out occurs, the 300 ms time-out counter is stopped.

Note 2. When the 300 ms time-out has occurred the heads are unloaded and a Seek Error is stored in the M. P. Fault Storage.

Figure 4-23. Head Load Sequence Flow Chart (Sheet 2 of 2)

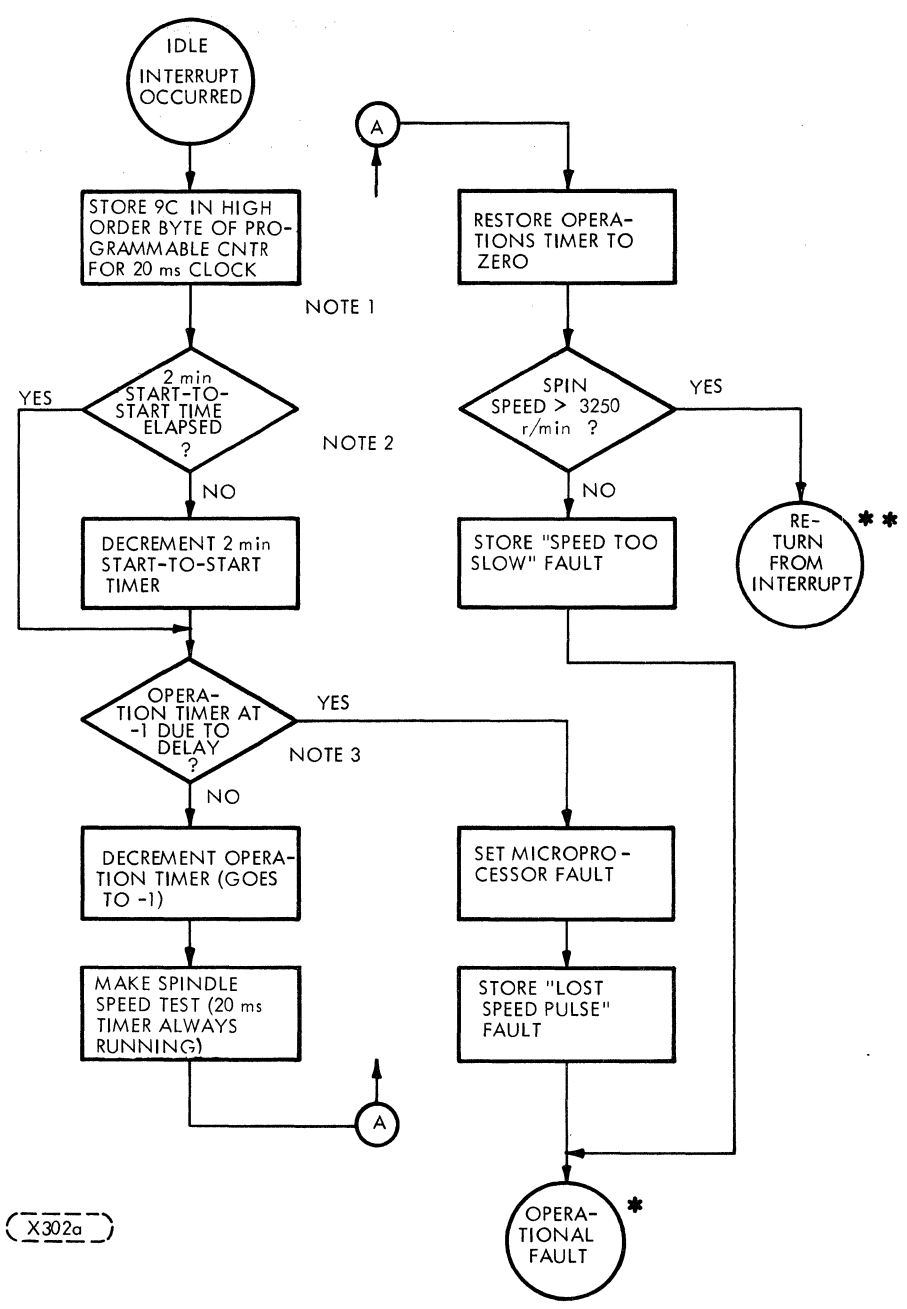

* Figure 4-29

** Return to the routine which was interrupted.

Figure 4-24. 20 ms Clock Sequence Flow Chart (Sheet 1 of 2)

20ms Clock Sequence Flow Chart Notes.*

Note 1. The Microprocessor loads 9CH into the high order byte of a 16 bit programmable counter U2. The counter is clocked by the 2 MHz 8080 Clock until it reaches zero, at which time the CPU is interrupted. The output of U2 is a level every 20 milliseconds when the CPU is able to process the interrupt and, as part of the interrupt subroutine, reload the 9CH value into U2 and restart the count-down.

Though it doesn't show up in all of the flow charts, the 20 ms clock counter is continually being decremented by the 2 MHz 8080 Clock. At the end of 20 ms the CPU is again interrupted.


Note 2. To measure off a 2 minute Start-to-Start interval, the CPU loads a 16 bit location in RAM with a number to be decremented by the 20 ms clock (see note 1). When the number has been decremented to -1 (2 minutes elapsed) a new start may be initiated (assuming the power up sequence is complete). This portion of the flow chart is not of any importance to the rest of the flow shown on the chart, and is only of concern in the Start Sequence. It is only shown here because of its relation to the 20 ms clock which decrements the 2 minute counter. The second sheet of the Power-On Sequence Flow Chart contains the box where the Start-to-Start timer was originally started.

Until a stop and an attempt to start again occurs the 2 minute Start-to-Start timer is not connected with any of the ongoing operations of the unit. The release of the START switch (STOP) does not depend on whether or not the two minute Start-To-Start Timer has timed out; a stop may occur anytime after a start.

Note 3. There is a location in RAM called the Operations 16 bit Timer which is used for storing some number which will be counted down to provide a time interval for some operation. The number stored there depends on the operation. When this counter location is used in the motor spindle speed check sequence it is loaded with zero. When the 20 ms clock interrupts the CPU the Operations Timer is checked for -1 which it will not be if everything is operating correctly. After the -1 check the timer is decremented to -1 and then the spindle speed check is made. After the spindle speed check is complete the Operations Timer is loaded again with zero. If during the spindle speed check some fault occurs (a CPU interrupt, for example) and the spindle speed check is not completed before the 20 ms clock times out, the operations Timer does not get set back to zero. When the -1 check is made the contents will still be zero. This is a fault condition and will be handled in accordance with the fault routines.


*Valid only for Idle Sequence

Figure 4-24. 20 ms Clock Sequence Flow Chart (Sheet 2 of 2)

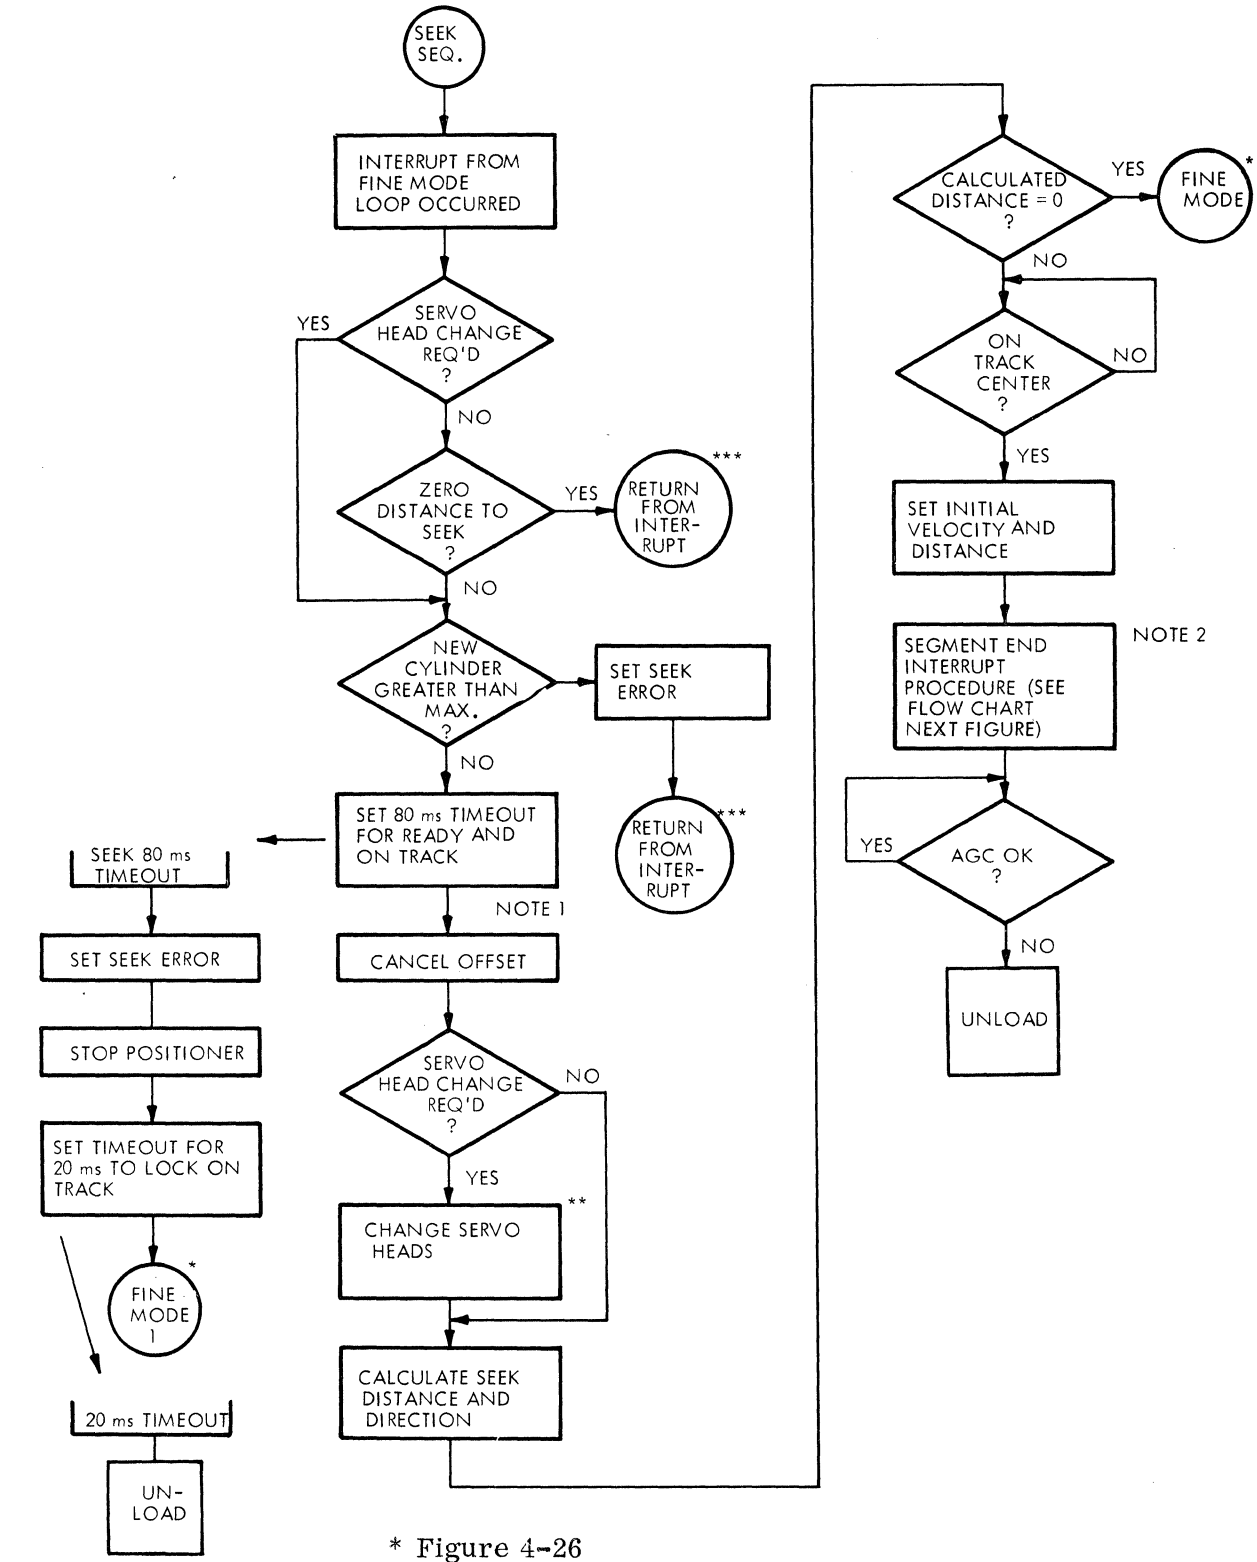

* Figure 4-26
 ** Figure 4-13
 *** Return to routine which was interrupted

Figure 4-25. Seek and Segment End Interrupt Sequences Flow Charts (Sheet 1 of 3)

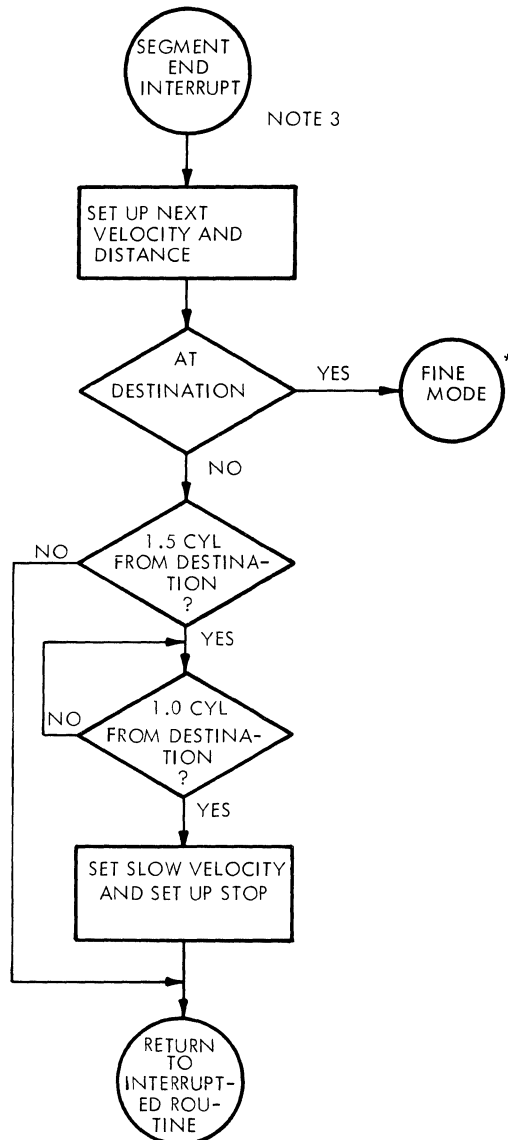

(X290a)

*Figure 4-26

Figure 4-25. Seek and Segment End Interrupt Sequences Flow Charts (Sheet 2 of 3)

Figure 4-25. Seek Sequence Flow Charts Supplementary Notes

- Note 1. From the time a seek begins until the selected head is "Ready and on Track" less than 80 ms should have elapsed. The M. P. sets up counter at this point to measure off the 80 ms time period. The counter could time out at any point in the seek or fine mode sequences if a malfunction occurs. For this reason the timeout sequence flow lies off to the side of the main flow.
- Note 2. One or more distance/velocity segments makes up a seek operation. At the completion of the first segment the "Segment End Interrupt" occurs to signal the microprocessor that the next distance/velocity segment (if any) should be given to the servo system and the seek continued or operation switched to fine mode if at destination. See Note 3. The M. P. makes a continual check on the AGC system and unloads the heads when the AGC malfunctions.
- Note 3. The Segment End Interrupt sets up the next distance/velocity segment. If final destination cylinder has been reached operation enters the "Fine Mode." A destination cylinder of greater than 1.5 cylinders away returns operation to the main seek routine which continues to monitor AGC while awaiting the next segment end interrupt. When the next segment end interrupt occurs the M. P. provides the "next distance and velocity" value. When only one cylinder from the destination cylinder the M. P. sets up slow velocity and stop operation. Less than one cylinder to destination left initiates Fine Mode Operation. Whenever the segment end interrupt occurs the logic circuits place the most recent "next distance and velocity" value in the "present distance and velocity" register.


Figure 4-25. Seek and Segment End Interrupt Sequences Flow Charts (Sheet 3 of 3)

Item No.	Drawing No.	Description	Remarks
50	24500063-3	Res 1/4W 5% 1K	
51	24500071-6	Res 1/4W 5% 2.2K	
52	94360436-3	Res 1/4W 5% 23.7K	
53	94360164-1	Res 1/4W 1% 46.4	
54	94360308-4	Res 1/4W 1% 1.21K	
55	94360184-9	Res 1/4W 1% 75.0	
56	94360200-3	Res 1/4W 1% 100	
57	94360204-5	Res 1/4W 1% 110	
58	94360228-4	Res 1/4W 1% 196	
59	94360232-6	Res 1/4W 1% 215	
60	94360236-7	Res 1/4W 1% 237	
61	94360244-1	Res 1/4W 1% 287	
62	94360248-2	Res 1/4W 1% 316	
64	94360264-9	Res 1/4W 1% 464	
65	94360268-0	Res 1/4W 1% 511	
66	94360288-8	Res 1/4W 1% 825	
67	94360300-1	Res 1/4W 1% 1.00K	
68	94360328-2	Res 1/4W 1% 1.96K	
69	94360332-4	Res 1/4W 1% 2.15K	
70	94360336-5	Res 1/4W 1% 2.37K	
71	94360352-2	Res 1/4W 1% 3.48K	
72	94360348-0	Res 1/4W 1% 3.16K	
73	94360168-2	Res 1/4W 1% 51.1	
74	94360364-7	Res 1/4W 1% 4.64K	
75	94360484-3	Res 1/4W 1% 75.0K	
76	94360388-6	Res 1/4W 1% 8.25K	
77	94360400-9	Res 1/4W 1% 10.0K	
78	94360420-7	Res 1/4W 1% 16.2K	
79	94360428-0	Res 1/4W 1% 19.6K	
80	94360500-6	Res 1/4W 1% 100K	
81	15137903-9	Volt Reg 79M12	
82	15161100-1	Volt Reg 78M12	
83	51706300-4	Diode IN4454	
84	77612970-2	MVAM2	
85	75887594-2	Inductor 5% 8.2uH	
86	75887599-1	Inductor 5% 22 uH	
87	75887575-1	Inductor 5% .22uH	
88	94227201-4	Cap 500V +1PF 5	
89	94227207-1	Cap 500V +1PF 15	
90	94227214-7	Cap 500V +1PF 33	
91	94240417-9	Cap 50V 10% 33	
92	94240419-5	Cap 50V 10% 47	
93	94227225-3	Cap 300V 2% 91	
94	94227242-8	Cap 100V 2% 470	
95	94240428-6	Cap 50V 10% 560	
96	94227244-4	Cap 100V 2% 560	
97	94240409-6	Cap 50V 10% 1500	
98	94240402-1	Cap 50V 10% 2200	
99	94240411-2	Cap 50V 10% .01uF	

Figure 5-8. Read/Write Circuit Board (Sheet 9 of 10)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
100	94361416-4	Cap 50V +80-20% .022uF	
101	94240442-7	Cap 50V 10% .033uF	
102	94240444-3	Cap 50V 10% .047uF	
103	94361400-8	Cap 50V +80-20% 10uF	
104	24504342-7	Cap 10V 20% 2.2uF	
105	24504378-1	Cap 20V 20% 2.2uF	
106	24504380-7	Cap 20V 20% 4.7uF	
107	24504348-4	Cap 10V 20% 6.8uF	
108	93533118-1	Pin, Rolled	
109	82311900-3	Inject/Eject-Card	
110	95683502-9	Stud, Press	
111	92583002-8	Nut Lock	
112	24504339-3	Cap 35V 20% 6.8uF	
113	24504350-0	Cap 10V 20% 10uF	
114	24504352-6	Cap 10V 20% 22uF	
115	94240416-1	Cap 50V 10% 27	
116	94227246-9	Cap 100V 2% 680	
117	77612165-9	Terminal, Slotted	
118	50241500-3	Volt Reg 6.2V	
119	92498021-2	Terminal Swaged	
120	94360422-3	Res 1/4W 1% 16.9K	

Figure 5-8. Read/Write Circuit Board (Sheet 10 of 10)

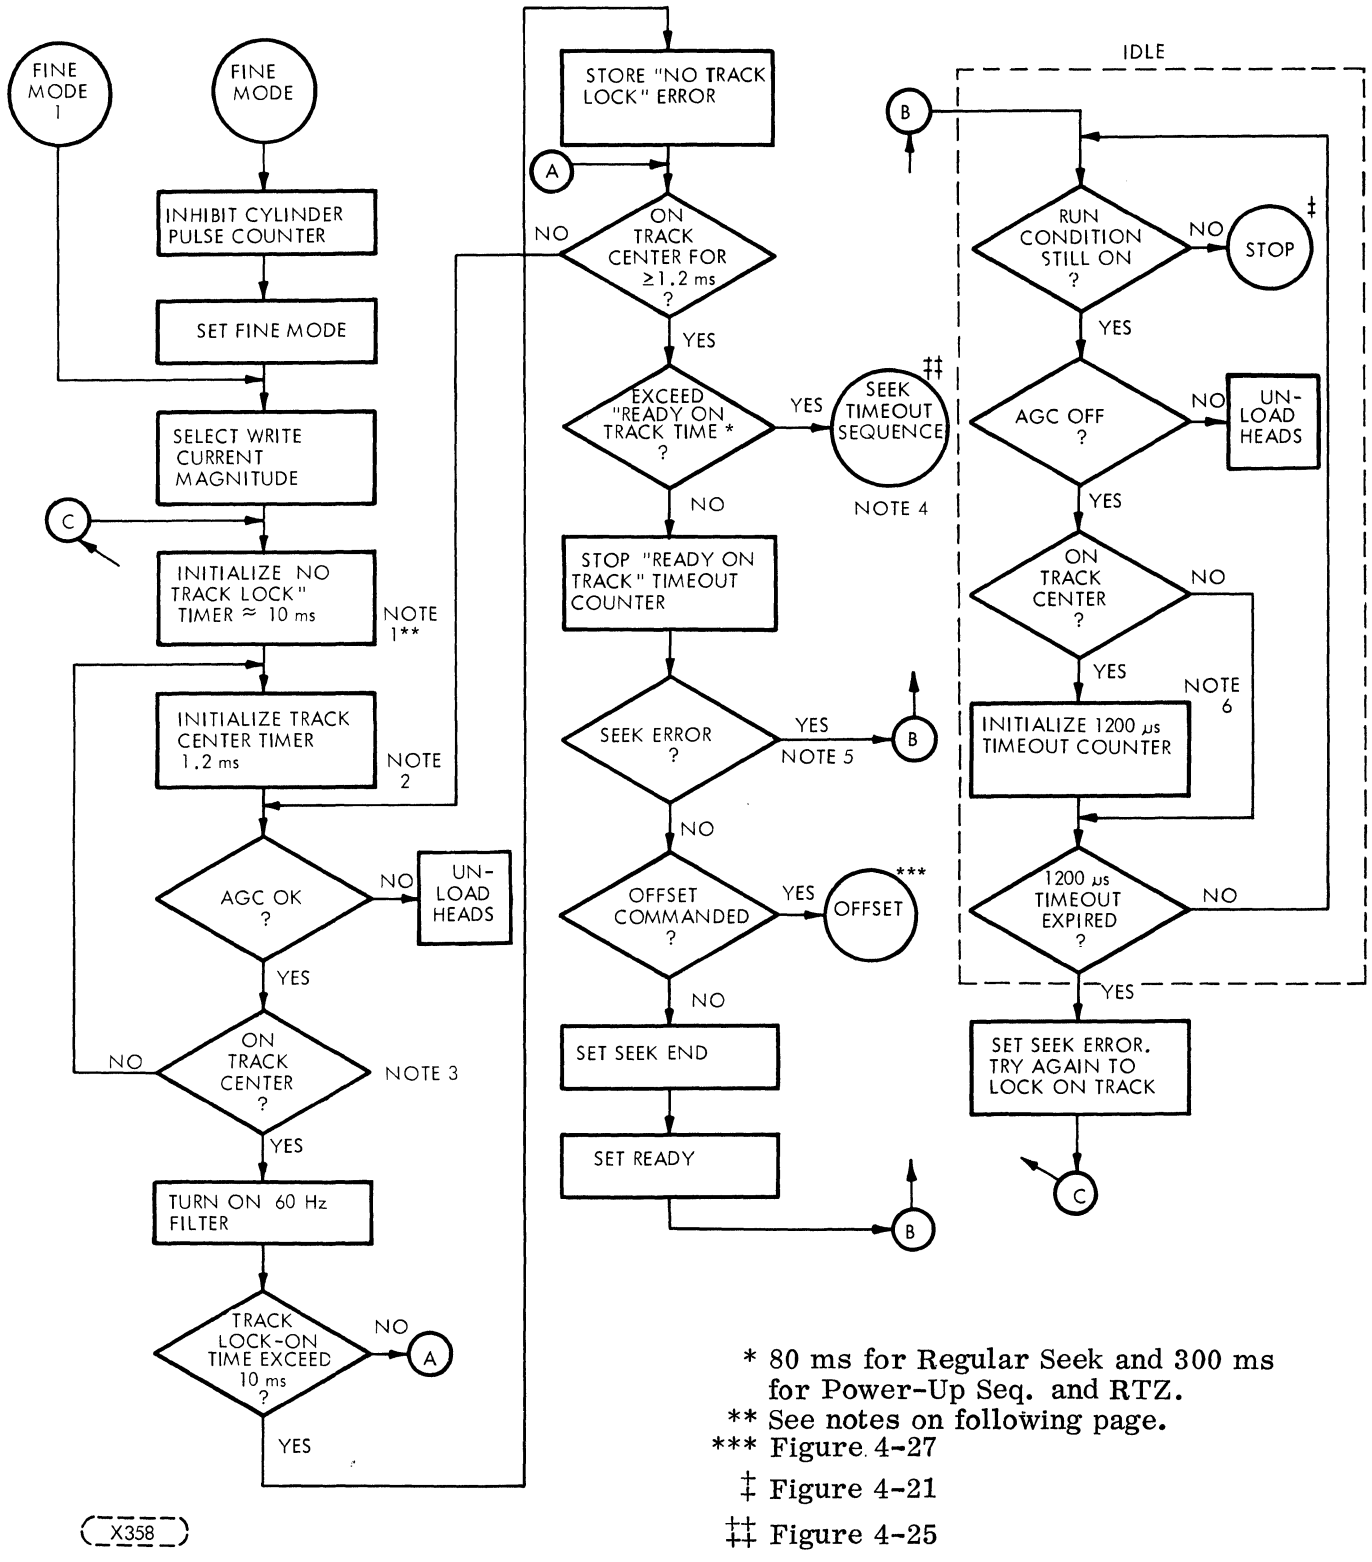

* 80 ms for Regular Seek and 300 ms for Power-Up Seq. and RTZ.
 ** See notes on following page.
 *** Figure 4-27
 ‡ Figure 4-21
 †† Figure 4-25

(X358)

Figure 4-26. Fine Mode Sequence Flow Chart (Sheet 1 of 2)

Figure 4-26. Fine Mode Flow Chart Supplementary Notes.


- Note 1. During the fine mode of a seek, the time to lock onto track center can not exceed approximately 10 ms or the M. P. Stores a "NO TRACK LOCK" error.
- Note 2. Once the head locks on track the time locked on track should be at least 1.2 ms or the attempt to lock on track will be repeated. The 10 ms timer is still running and will time out if too many attempts are required to lock on track. The M. P. Stops the 10 ms timer if on-track for more than 1.2 ms.
- Note 3. In the event of a malfunction affecting the units ability to get and stay on track center, operation could conceivably never get past here, in which case the 80 ms (seek operation) or 300 ms (RTZ or head load operation) timeout could occur. See note 4.
- Note 4. Operation must reach this point before the 80 ms (seek) or 300 ms (RTZ or head load) timeout occurs or operation goes to the "Seek Timeout Sequence" in Figure 4-25.
- Note 5. A seek error could have occurred previous to this point due to a timeout of one of the timers during the seek, or an error could occur due to the failure to stay on track once having reached track center. See Note 6.
- Note 6. The servo system continually works to keep the heads of the selected volume on track center. If the heads stay on track center the 1200 μ s counter never times out because the timer is repeatedly initialized before timeout occurs. If the heads get off and don't get back on track center before 1200 μ s elapses, a seek error is stored in the M. P. fault storage. The M. P. then goes back to  and tries the 10 ms lock-on sequence again. Operation loops continually in the flow enclosed by the dotted lines. This corresponds to the "IDLE" block in Figure 4-18. Operation leaves the Idle phase when an interrupt to the M. P. occurs. The 1200 μ s counter operation is suspended until operation returns.

Figure 4-26. Fine Mode Sequence Flow Chart (Sheet 2 of 2)


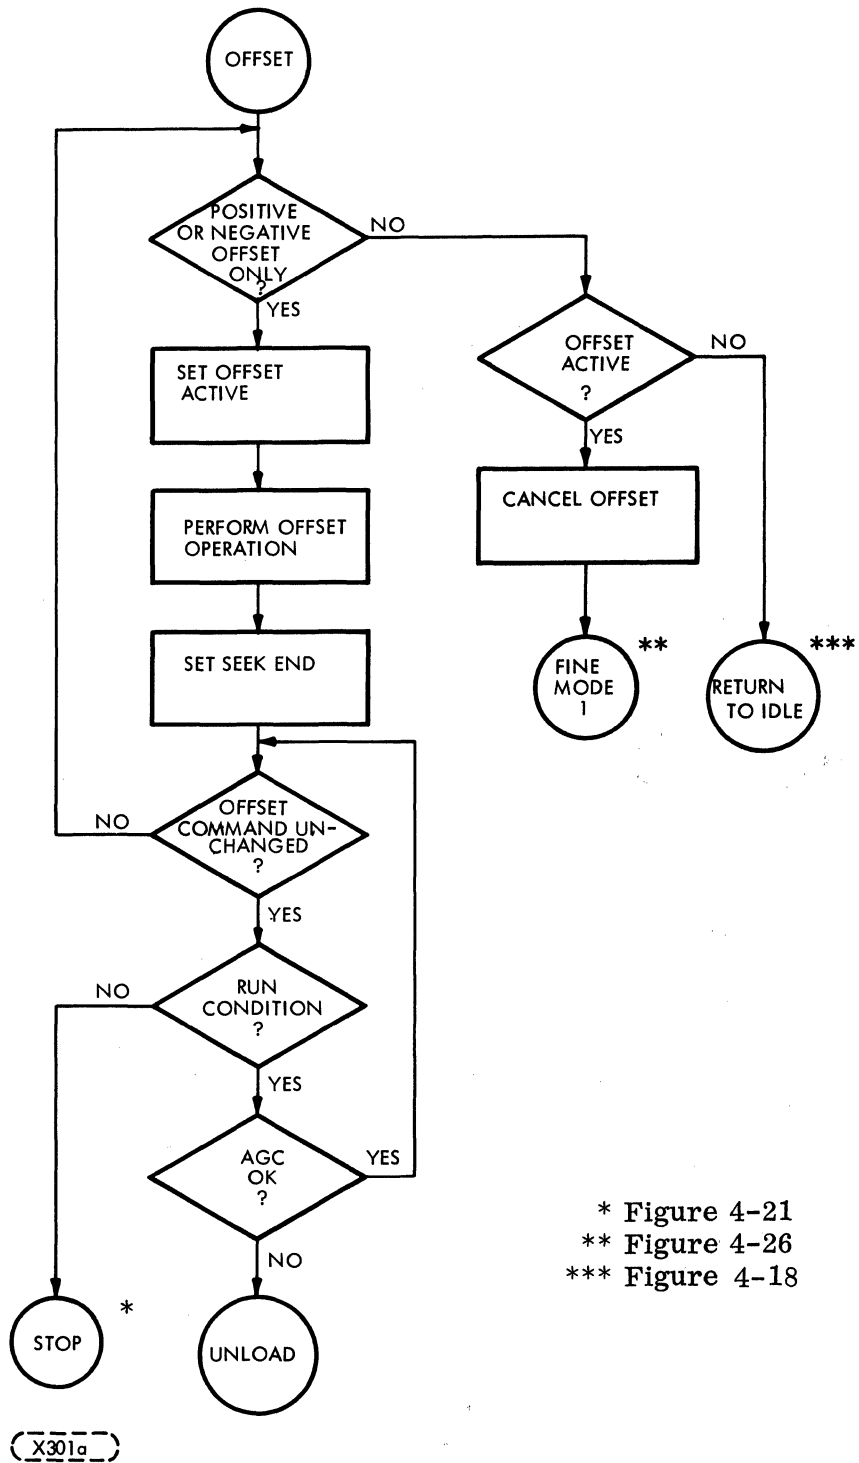



Figure 4-27. Offset Sequence Flow Chart

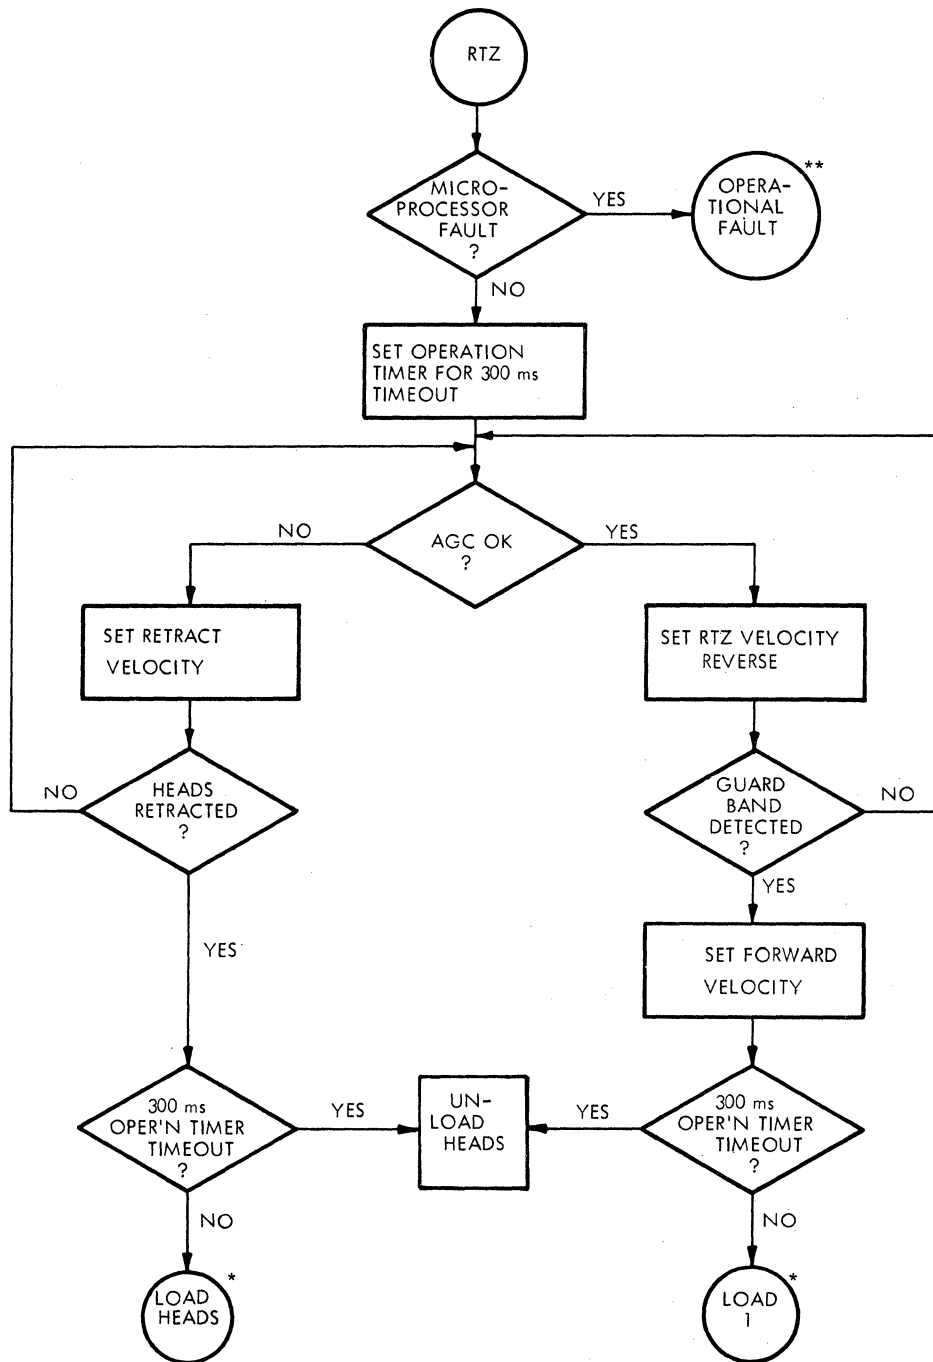

X293a

* Figure 4-23
 ** Figure 4-29

Figure 4-28. RTZ Sequence Flow Chart (Sheet 1 of 3)

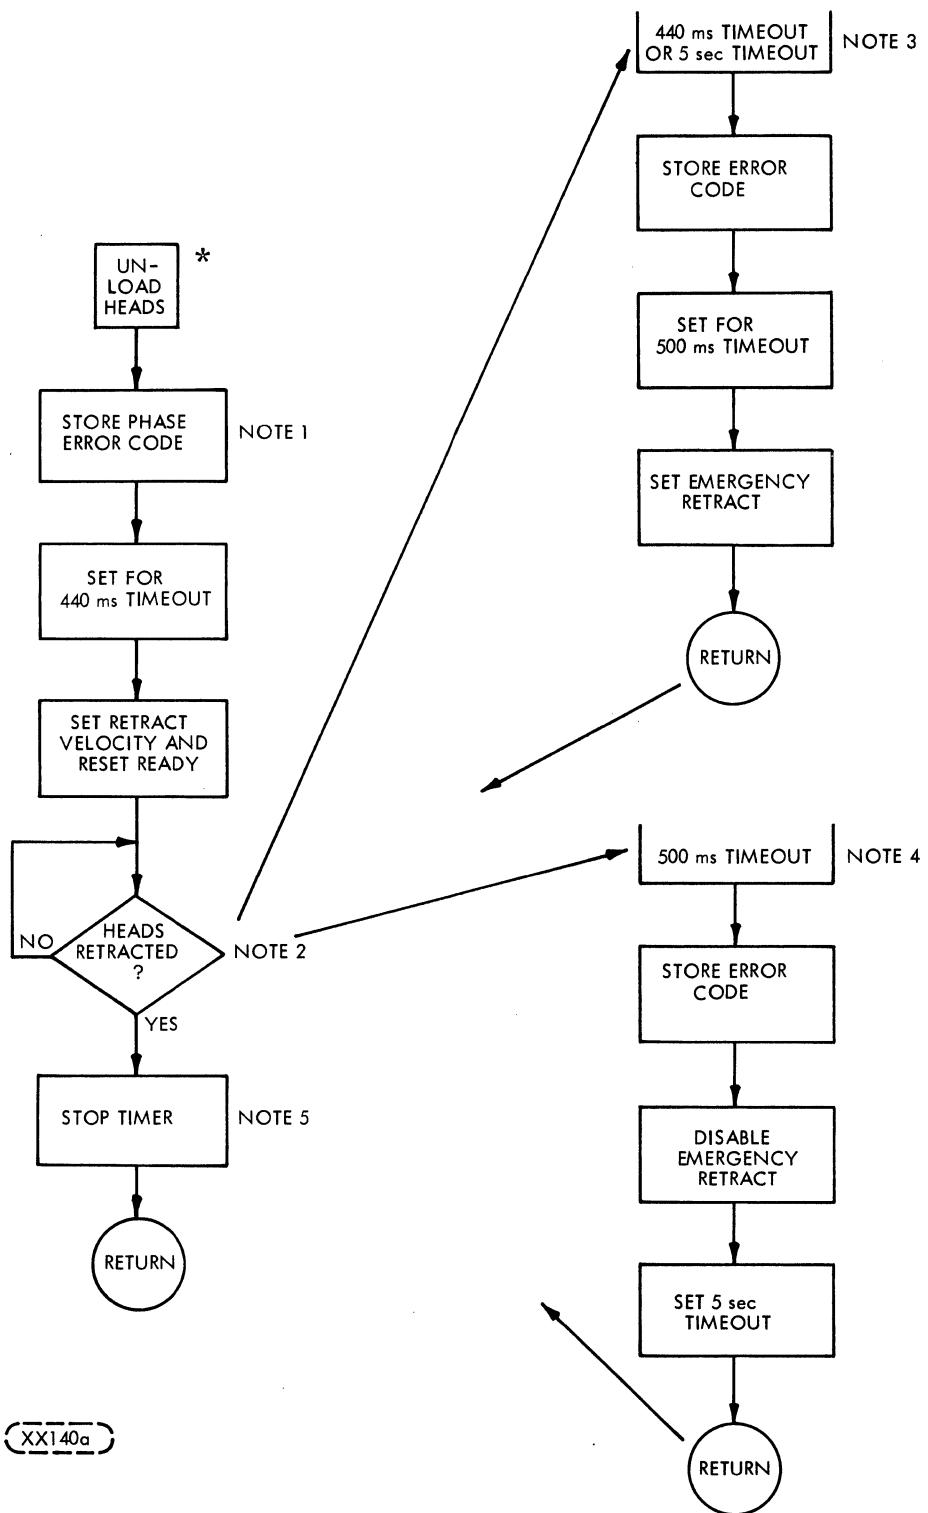


*"UNLOAD HEADS" also referred to on Figures 4-23, 25, and 26

Figure 4-28. RTZ Sequence Showing Heads Unload Flow (Sheet 2 of 3)

Notes on "UNLOAD HEADS" Sequence of Flow.

- Note 1: The code indicating the phase of operation where the error occurred and the error code are given in Table 6-7 in Section 6.
- Note 2: During the wait for "Heads Retracted" condition the two time-out sequences "A" and "B" will also occur alternately if retract cannot be accomplished. (See Note 3 and 4 below).
- Note 3: If the 440 ms time-out occurs flow sequence "A" takes place during the wait for the heads to become fully retracted. The error code denoting the time-out (see Table 6-7) is stored, a 500 ms time-out is set and the emergency retract is set. Operation returns to the "HEADS RETRACTED?" state. Flow sequence "A" also applies if the 5 second time-out occurs (see note 4 below).
- Note 4: When the 500 ms time-out occurs the flow sequence "B" takes place during the wait for the heads to become fully retracted. The applicable error code is set (see Table 6-7), the emergency retract is disabled (to prevent 100% duty cycle of the power applied for emergency retract), and a 5 second time-out is set up. Operation returns to the "HEADS RETRACTED?" state.
- Note 5: When the "Heads Retracted" condition is detected the timers (set for the time-outs shown) will be stopped.

Figure 4-28. RTZ Sequence Showing Heads Unload Flow (Sheet 3 of 3)

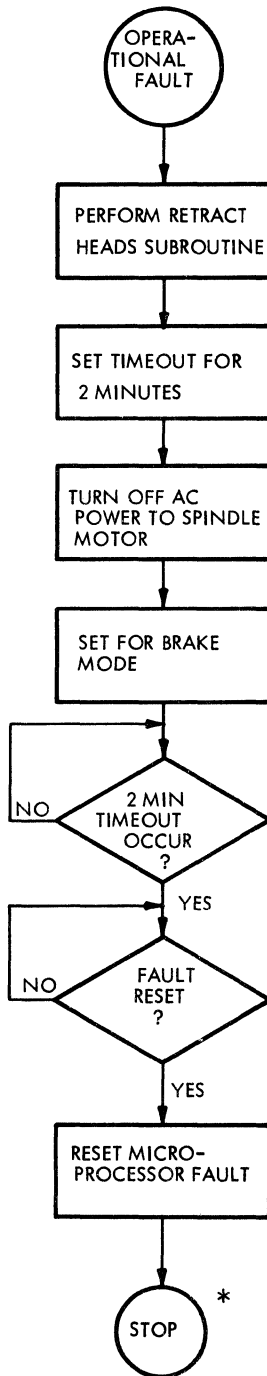

(X290b)

* Figure 4-21

Figure 4-29. Operational Fault Sequence Flow Chart

4.3.5 SEEK OPERATIONS

4.3.5.1 General

Seek operations are performed by the positioning servo system of the CMD which is made up of both digital and analog circuitry. The details of most of the digital portion are covered in Sections 4.3.3 and 4.3.4 which describe the Microprocessor and auxiliary digital circuits. This section discusses mostly the operation of the analog portions with occasional references to microprocessor and other digital circuitry where applicable. Certain functions related to but not directly involved in positioning will also be described in this section.

The positioning servo system of the CMD is a closed loop servo system containing a position loop, a velocity loop, an acceleration loop and a compensation loop. Figure 4-30 is a very simplified block diagram of the CMD servo system. The compensation loop is not shown for simplicity. The velocity and acceleration loops are analog while the position loop is a combination of digital and analog circuitry.

4.3.5.2 Simplified Positioning Operation

This section gives a simplified, overall description of the operation of the positioning servo system.



1. The positioning operation begins when the system controller communicates a SEEK command to the CMD. The CMD microprocessor receives the SEEK command and initiates and controls the positioning operation. There are also times when the microprocessor initiates a positioning operation without being commanded to do so by the system controller.
2. The microprocessor calculates the number of cylinders to be traversed during the positioning action by comparing the present cylinder number (stored in M. P. memory) with the destination cylinder number.
3. The microprocessor searches a table of velocity profiles for the correct velocity profile required for the commanded repositioning, and for the correct entry point into the table.
4. The digital (binary) number representing the initial velocity is taken from the velocity profile table and converted to an analog voltage in a digital-to-analog (D/A) converter.
5. The digital to analog converter output voltage is amplified and applied to the voice coil linear positioner.
6. The positioner begins moving toward the location of the destination cylinder.
7. An analog voltage proportional to positioner acceleration is fed back to provide the proper acceleration profile to the positioner.
8. A velocity transducer (see Section 4.2.5.2) senses the positioner velocity and feeds back a voltage proportional to velocity. This velocity feedback is subtracted from the positioning voltage applied from the D/A converter (item 4 above) creating a "following error" signal which continues to provide drive to the voice coil.

9. The positioner ceases accelerating when the desired "initial" velocity is reached and continues at the "initial" velocity until the microprocessor commands a change in velocity.
10. The position loop provides head positioning information to the positioning servo system. The positioning information includes the following:
 - a. A signal that indicates the displacement of the heads from their nominal track centerline.
 - b. Cylinder pulses during seeks to indicate each cylinder crossing.
 - c. Signals that indicate that the position of the heads is outside of the region of the normal data cylinders.

Information for the position loop is derived from the track servo head (Figure 4-33) which is physically similar to a data read/write head, except that it does not write. The track servo head reads information known as "dibits" from the servo track surface of the disk. "Dibit" is a shortened term for dipole bit.


11. The microprocessor and associated digital circuits monitor position and number of tracks traversed using cylinder crossing information and change the velocity number in the D/A converter as required to provide the proper velocity profile for the positioning action in process. Figure 4-31 shows a velocity profile for a long seek. Every operation is made up of one or more of the distance/velocity segments like those shown in the expanded section.
12. When the positioning operation is completed to less than one cylinder away from the destination cylinder operation enters what is called the servo fine mode. In the servo fine mode fine position feedback derived from the track servo signal is switched in to bring the heads on track. The microprocessor monitors the time required to complete the seek and signals a seek error if the seek is not completed in time or if the heads do not stay on track when the track is reached.
13. The fine mode positioning circuit remains active following completion of a seek. If the servo head drifts off of its centered position, the track servo signal will no longer be at a null. The signal, functioning as the fine position analog signal acts as a position error signal to drive the positioner back into position.

SERVO FUNCTIONAL ELEMENTS

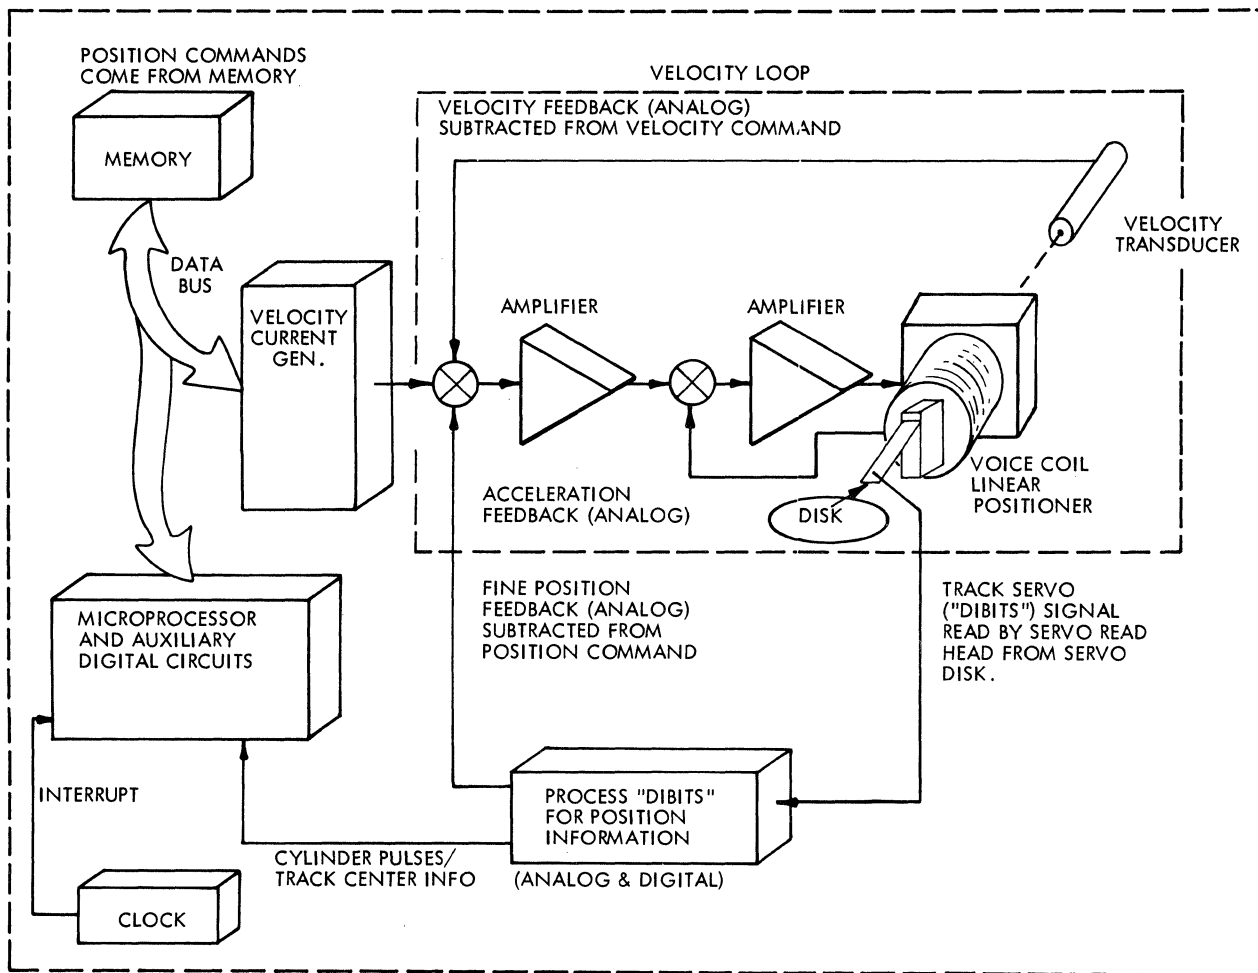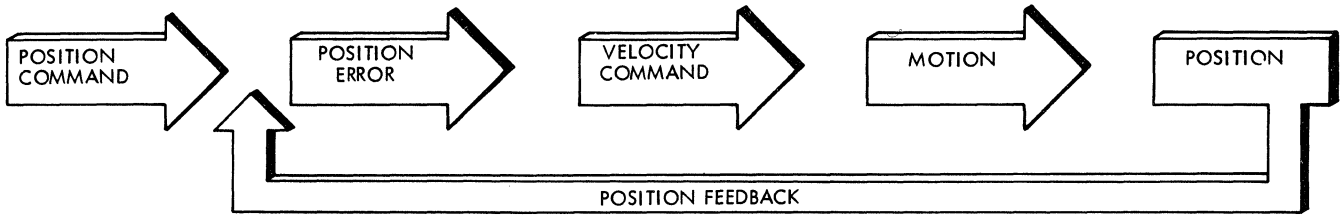

XX191a

Figure 4-30. Servo System General Block Diagram

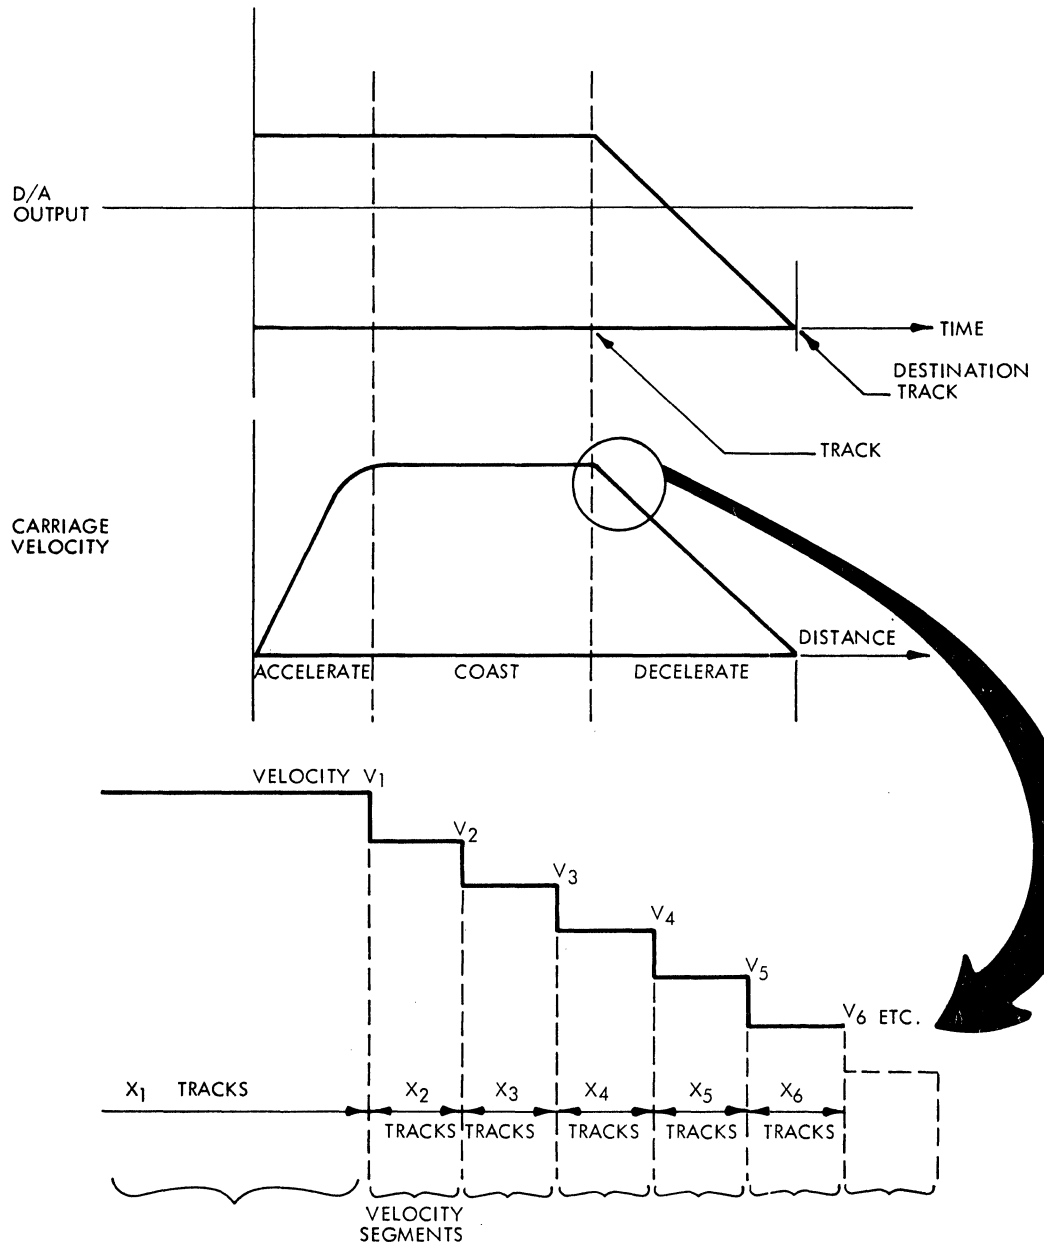

XX190a

Figure 4-31. Seek Velocity Profile

4.3.5.3 Detailed Positioning System Theory of Operation

Position Loop Details

The source of positioning information for the position loop is the servo surface of each disk module.

The servo head reads information from the servo track surface of the disk module. This information is known as dibits; dibit is a shortened term for dipole bit. Dibits are prerecorded on the servo surface during manufacture of the disk module. Do not confuse the servo surface with the other five disk module recording surfaces.

Dibits are the result of the manner in which flux reversals are recorded on the servo tracks. One type of track, known as the Even track, contains negative dibits. The other track, the Odd track, contains positive dibits. A positive dibit consists of a positive-going waveform immediately followed by a negative-going waveform. On the other hand, a negative dibit consists of a negative-going waveform followed immediately by a positive-going waveform.

The "TP-13" waveform in Figure 4-32 shows an example of the odd and even dibit waveforms resulting from an "on track" position of the servo head. Figure 4-34 shows the dibit waveforms with the positioner in motion across a track center.

There are 883 dibit tracks on the servo surface. At the outer edge of the surface is a band of 24 positive dibit tracks. This area is the Reverse End of Travel (EOT) or outer guard band. Then, there are 823 servo tracks alternately recorded with negative and positive dibits. Finally, toward the inner edge of the pack, there are 36 tracks containing only negative dibits. This is the Forward EOT or inner guard band.

When the read/write heads are located at the centerline of a data track, the track servo head is actually centered between two of the prerecorded servo tracks and is reading an edge of each. The detected signal is a mixture of the two adjacent dibit signals. The amplitude of each dibit component is proportional to the read coil overlap of the recorded servo tracks. With the head centered, the amplitudes of the two types of dibits are equal. As the head moves away from its centered position, the amplitude of one dibit component increases while the other decreases. This produces an error voltage used for fine positioning called the track servo signal.

Track Servo Signal

The track servo signal indicates the displacement of the servo head from the on-track position. When the head is centered between dibit tracks, this signal is at a null. It swings in the positive direction when the amplitude of the even (negative) dibits being sensed exceeds the amplitude of the odd (positive) dibits, and vice-versa. Amplitude is maximum when the head is centered over one dibit track, that is, the head is at its maximum distance from the centerline of the data track.

The servo signal is generated by the peak detectors that monitor their respective dibits. If the positive dibit amplitude exceeds the negative dibit amplitude, the output of the + dibits peak detector is greater than that of the - dibits peak detector. The outputs of these two detectors are applied to a summing amplifier whose output represents the distance between the two detector outputs. This output is the track servo signal. The signal is at its maximum negative value when the servo head is positioned over the outer guard band or over one of the odd dibit tracks. It is at its maximum positive value when the servo head is positioned over the inner guard band or over one of the even dibit tracks.

The track servo signal is applied to the servo circuit and to the cylinder detect circuit. In the servo circuit, it is used to generate the fine position analog signal that controls movement during the last onehalf track of a seek or during a Load sequence. The cylinder detect circuit generates cylinder pulses as the track servo signal approaches a null.

The track servo circuit remains active following completion of a seek. If the servo head drifts off of its centered position, the track servo signal will no longer be at null. The signal, functioning as the fine position analog signal within the servo circuit, will act as a position error signal to drive the positioner back into position.

Circuit gain control is achieved by applying the outputs from the peak detectors to a second summing amplifier. Its output is negative in proportion to signal strength: the stronger the signal, the less negative the agc voltage. This signal is applied to the agc amplifier to control the resistance of a FET within the amplifier. The FET is connected across the differential inputs to the amplifier. The less negative the agc, the less the resistance; therefore, more of the signal is shunted by the FET to reduce circuit gain.

End of Travel Detection

The reverse End of Travel circuit determines when the heads are positioned outside of the normal data cylinders. This function is used during Load and RTZ sequences and to indicate an error condition during a seek. Reverse EOT indicates that the heads are positioned over the outer guard band. If this condition occurs during regular reverse seeks, the microprocessor is informed and it initiates a sequence to return the actuator to cylinder 000. The AGC-ACTIVE/-L signal also provides the microprocessor with the information that the heads are positioned outside the normal cylinder area.

Cylinder Pulse Generation

As the servo head crosses the interface of the even/odd dibit tracks (Figure 4-33), the servo signal decreases toward null. Voltage comparator circuits which switch their output states slightly before and slightly after the null feed a Schmitt trigger circuit that generates a narrow pulse spanning the null at the track center.

This track center pulse generates the cylinder pulses which the microprocessor counts in keeping track of the actuator location.



4.3.5.4 Detailed Positioning Theory of Operation

This section will be divided into two parts: operation of the Servo-Fine PWA and operation of the Servo-Coarse PWA.

A Servo-Fine PWA Operation

The Servo-Fine PWA circuitry provides the following signals which are used in other places within the CMD:

- Various clocks generated by the phase locked loop circuitry.
- Servo position error signals
- End-of-travel information (AGC active/not active)
- Index pulse and sector sync and inhibit logic signals.
- Volume selection signals
- Head Alignment signals



For aid in understanding the following description of the Servo-Fine operation refer to Figures 4-32, 4-33 and 4-34 and schematic diagram Figure 5-7. Figure 4-1 also contains some helpful information, though of a more general nature. The general relationship of the Servo-Fine functions to those of the Servo-Coarse are shown in the block diagram of the Servo-Coarse analog circuits in Figures 4-32 and 4-36.

Input Circuitry

The dibit signals read from the servo heads are boosted in amplitude by the servo preamplifiers on the Servo Preamp PWA and then input to the Servo-Fine PWA. Analog switches controlled by the servo head select logic, select either the cartridge servo signal or the fixed disk module servo signal to be processed. The selected servo signal is fed to amplifier U35 and then to U25 which has an FET transistor across its differential input terminals. The negative AGC voltage is applied to the gate of the FET to control the resistance from source to drain. The less negative the AGC voltage the less the resistance is resulting in shunting more of the incoming signal from the inputs of U25. The stronger the signal at the input to U24 the less negative the AGC voltage. The output of U25 is fed to a differential amplifier/filter network (U17) to increase signal level, common mode rejection capability, and reject high frequency noise. The double emitter follower circuit U8 buffers the signal from U17 and then the differential dibit signal from U8 branches two ways at TP13 and TP14. One branch drives circuitry which creates the Servo Position Error signal (SPE, ISPE) and the other branch provides the reference signal for the Phase Locked Loop (PLL) circuits. The PLL operation will be described first.

Phase Locked Loop Circuits

The nominal frequency of the clock generated from the servo dibits is 806 kHz; however, the actual frequency is a function of the spindle motor speed. The phaselocked loop PLL in the clock circuit synchronizes itself to the actual dibit rate. This permits the clock to react to variations in spindle speed. Signals derived from this circuit, such as servo clock (SVO-CLK/-L) are a function of actual spindle speed rather than functions of an absolute time base, and therefore bit density is independent of disk speed.

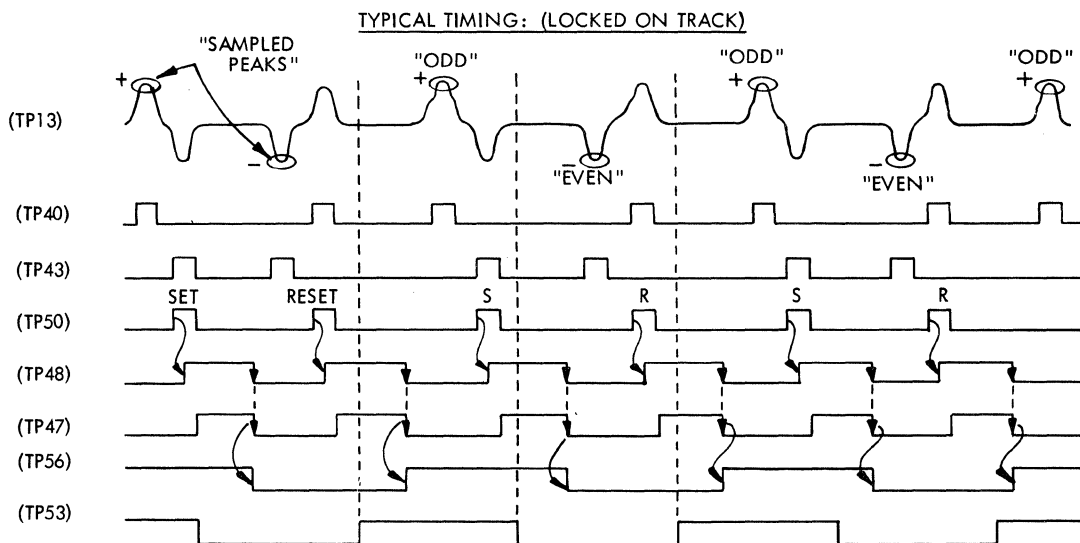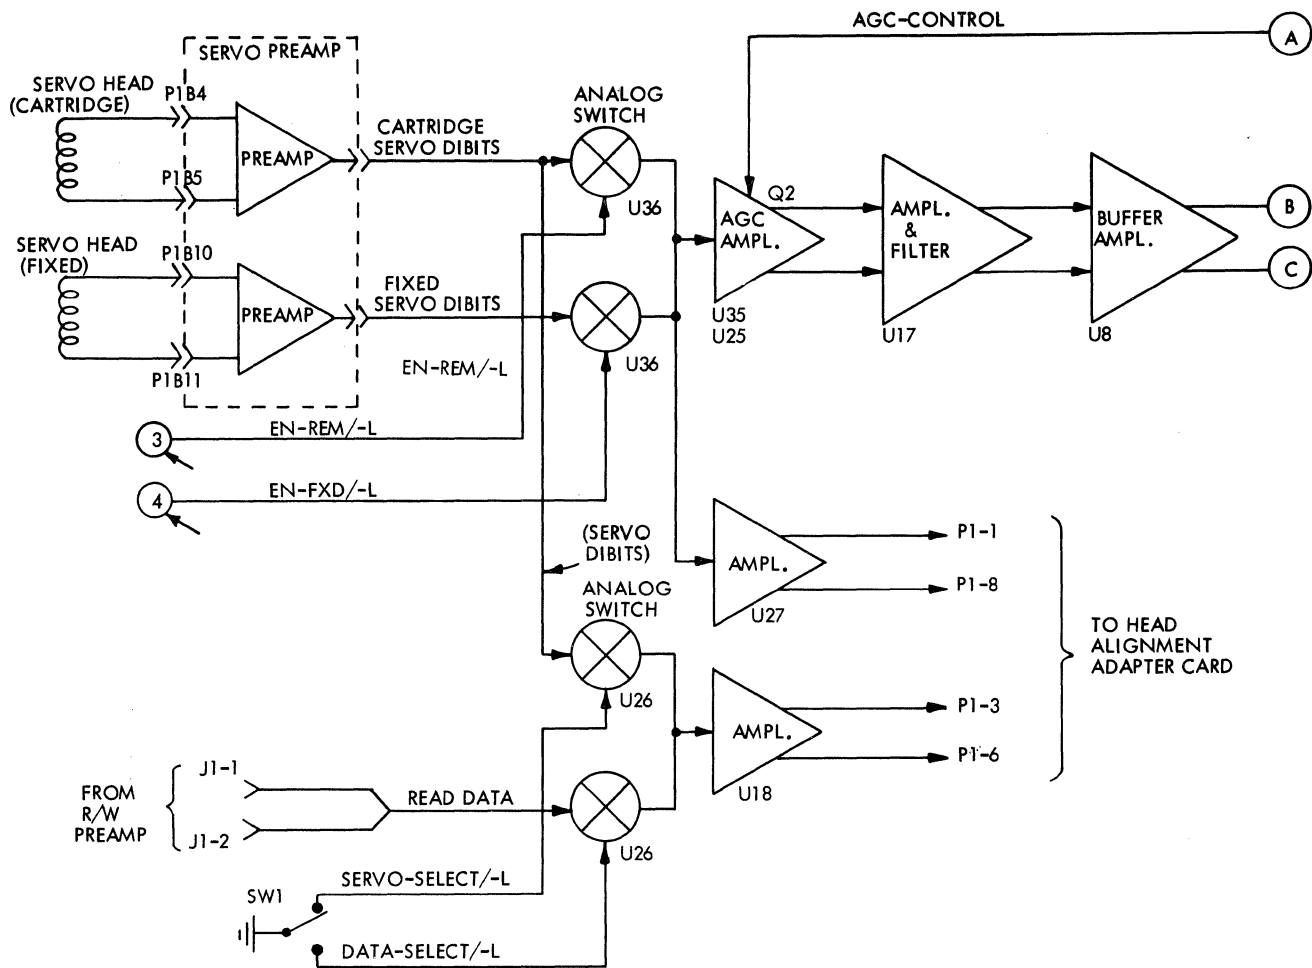

X246

Figure 4-32. Block Diagram of Servo Fine Circuitry (Sheet 1 of 2)

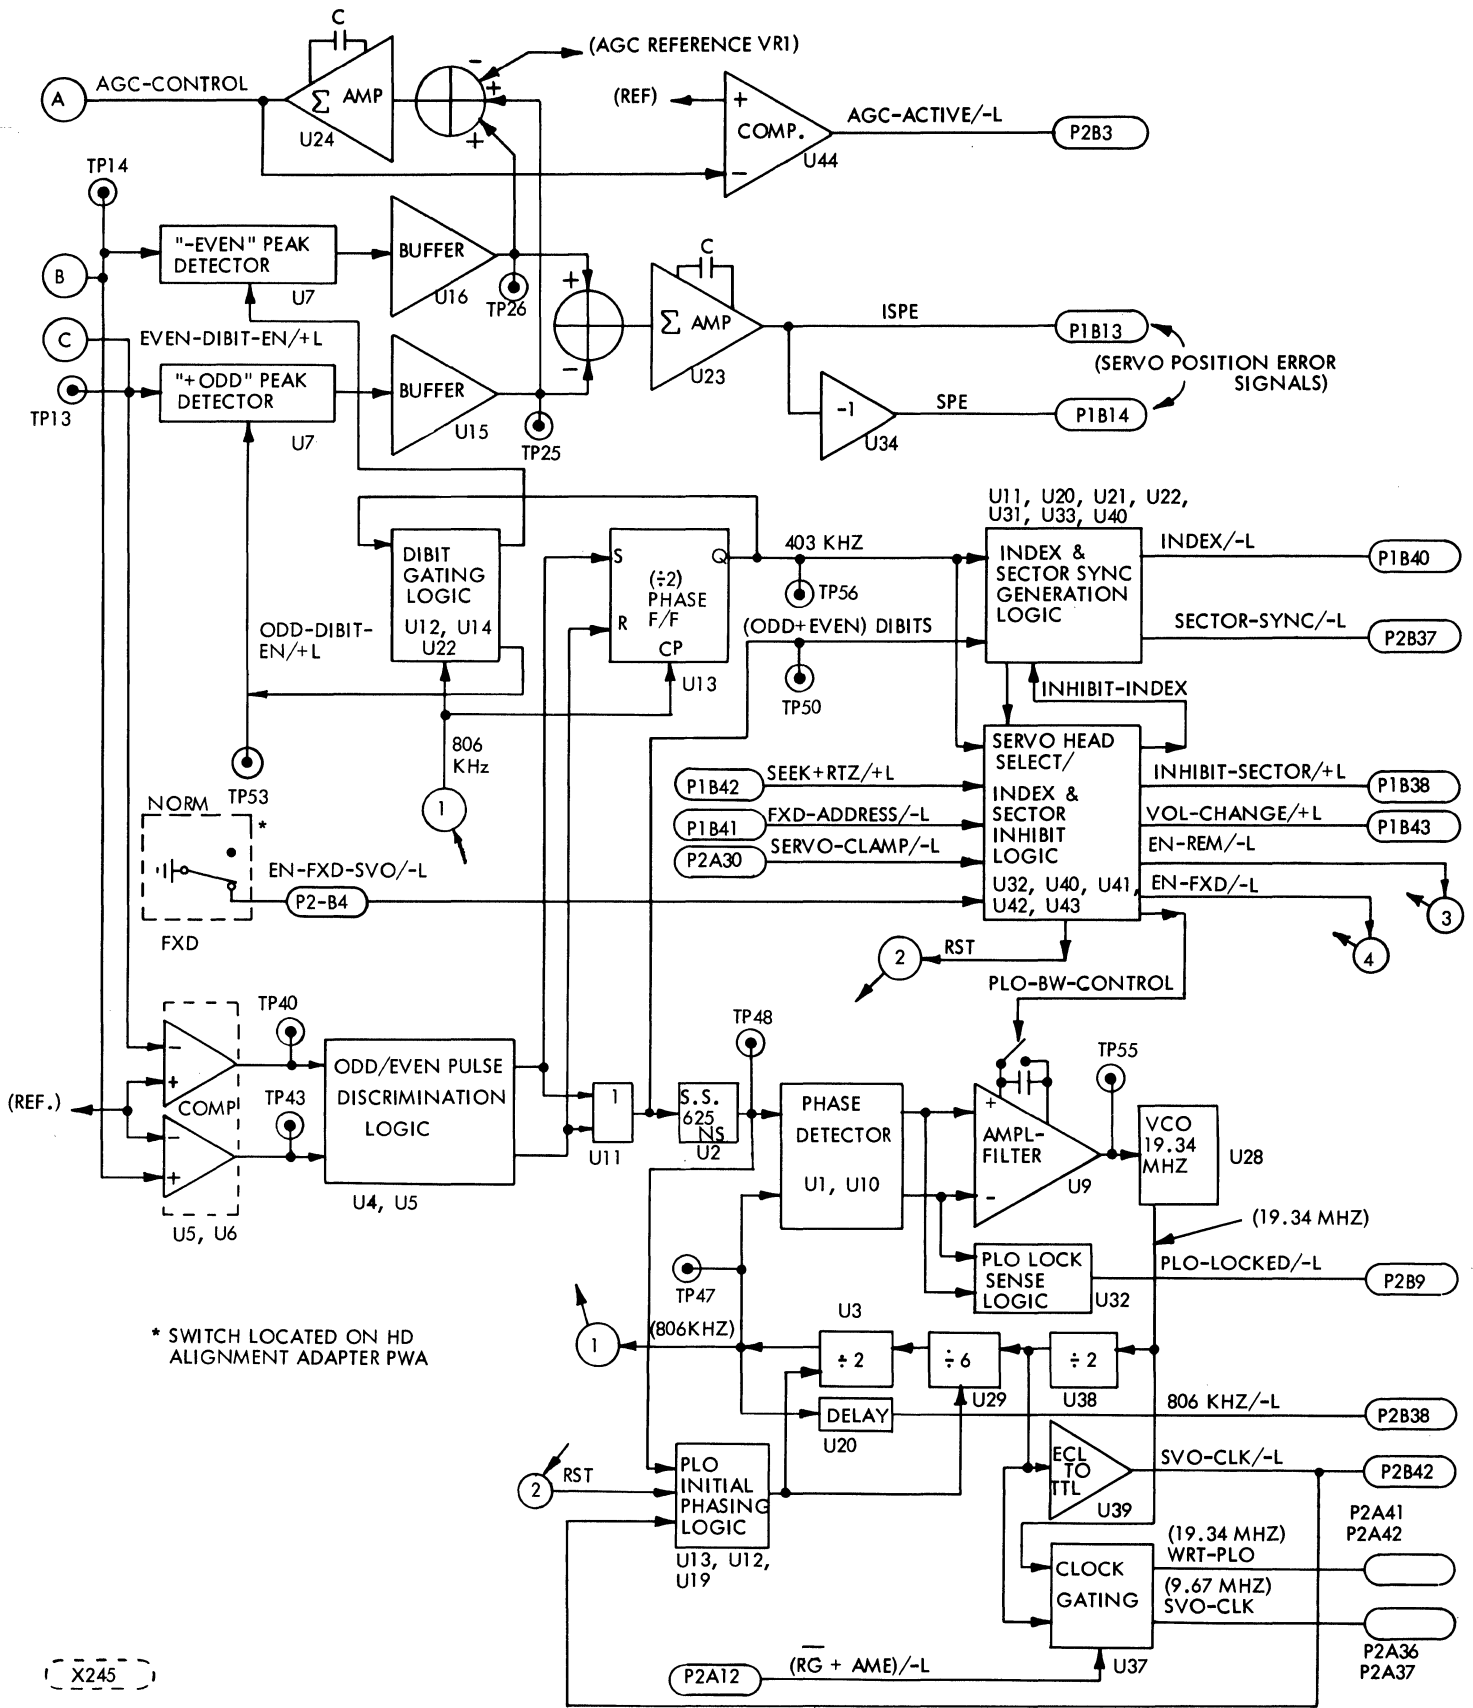


Figure 4-32. Block Diagram of Servo Fine Circuitry (Sheet 2 of 2)



A pair of level comparators (U6) using a reference threshold converts the dibit signals into aperiodic digital signals. Refer to the TP40 and TP43 waveforms in the timing diagram of Figure 4-32. Alternate pulse discrimination logic (U4, U5) changes the two aperiodic signals to a periodic signal ODD + EVEN/+L which can be seen at TP50. ODD + EVEN/+L is a pulse signal at 806 kHz if the servo is locked on track as shown in Figure 4-32. As the servo head moves towards an "odd dibit" or "even dibit" track, the corresponding pair of dibits increases in amplitude, resulting in a simultaneous decrease in the other pair of dibits. Figure 4-34 illustrates this. The signal at TP50 changes to 403 kHz as alternate dibit pairs fall below the comparator threshold. ODD + EVEN/+L drives the logic which creates the Index and Sector Sync signals and provides the PLL input to which the Phase Lock Oscillator (PLO) U28 must lock.

The Index and Sector Sync logic will be described in a section following this. Single Shot U2 stretches ODD + EVEN/+L to 625 ns and drives the Phase detector logic (U1, U10) and the PLO initial Phasing Logic (1/2 U12, 1/2 U13 and U19) with it. The 625 ns pulse can be seen on TP48. The phase difference between the 806 kHz which originated at the VCO (U28) and the signal at TP48 is detected by the logic of U1 and changed to a DC control voltage (TP55) by the current pump amplifier and filter made up of circuit elements U9, C64, C65, R83, R78 and R99. The control voltage controls the frequency of the voltage controlled oscillator (VCO) U28 by means of VVC1 which is a voltage variable capacitor. The nominal frequency of the VCO is 19.34 MHz. The VCO output is buffered in U37 and transmitted to the Read/Write PWA as the WRT-PLO signal (P2A40, P2A41) which is used as the write clock reference. Flip-flop U38 divides the VCO signal by two, converts it to TTL logic (U39) and goes over the interface to the controller as SVO-CLK/-L (P2B42). Counter U29 divides the U38 output by six and then one flip-flop in U3 divides the result by two again to produce the 806 kHz squarewave feedback signal (TP47) which is the VCO derived input to the phase detector mentioned above. Note that the PLL accepts both 403 kHz and 806 kHz inputs (TP48) and provides a phaselocked 806 kHz output (TP48).

Servo Position Error Signals

Flip-flop U22 delays the 403 kHz clock (TP56) and the resulting signal synchronously gates ODD-DIBIT-EN/+L (TP53) and EVEN-DIBIT-EN/+L in the peak detector U7. The peak detector circuits store the peak level of their respective "odd" or "even" dibit signals in capacitors C37 and C20. The peak values are discharged at a constant rate through resistors R18 and R22 to facilitate "new sample" storage and hence a tracking demodulated envelope signal as the servo head slews across the disk and passes alternately across even and odd dibit tracks. The peak detector outputs are buffered in unity gain operational amplifiers (U15 and U16) and fed to the differential operational amplifier U23 to produce the position error signal SPE and its inverse ISPE. The Servo-Coarse PWA uses the two error signals as position control signals in the servo loop and generates cylinder pulses from the SPE and the velocity signal.

AGC Control Signals

For AGC control the buffered peak detector outputs (TP25 and TP26) are summed and compared to a DC reference (VR1) in operational amplifier U24 whose output is the AGC CONTROL signal (TP9). AGC CONTROL changes the source-to-drain resistance of Q2 at the input of U25. Comparator U44 compares AGC CONTROL with a reference voltage and produces a logic level at 0 volts when the selected servo head reads servo dibits on the disk. This output of U44 is the AGC-ACTIVE/-L signal sent to the Servo-Coarse PWA (P2B03). The microprocessor uses AGC-ACTIVE/-L as an indication of end-of-travel.

Index Pulse and Sector Sync and Inhibit

The Index pulse is derived from an index pattern read from the servo tracks. The index pattern is a specific sequence of missing "odd dibit" and "even dibit" pairs encoded on both odd and even dibit tracks in such a way that the pattern is detected once per revolution of the disk. Even when the servo head slews across the tracks the logic detects the index pattern uninterrupted. The index pattern detection logic performs as follows. The 403 kHz clock (TP56) serves as a reference and retimes the ODD + EVEN/-L signal in flip-flop U22, thus establishing a "recovery window" for the index pattern. The 403 kHz clock then shifts the index data on U22 pin 5 through the shift register U21. When the binary code in the shift register is (starting with pin 12 and going to pin 3) 1010110, then the binary code in the "A" side of comparator U31 will equal the code on side "B". "B" is wired in as 00110 (MSB to LSB). A seven bit comparator is formed by using the "1" bits in the shift register which output on pins 10 and 12 to enable the comparator via NAND gate U20. The comparator output is clocked into flip-flop U33 to provide spike free Index and Sectors Sync signals (P1B40, P2B37). The Sector Sync signal is identical to the Index signal except that the former occurs 1.24 ns earlier than the latter. INDEX/-L, SECTOR-SYNC/-L and 806 kHz/-L are transmitted to the Servo-Coarse PWA where a programmable counter uses them to generate sector pulses.


If a Sector Sync or Index decode is in progress and a volume change is required, the volume change is delayed until the Sector Sync and Index are fully decoded. Any subsequent Sector Sync or Index decode is inhibited until the "new" volume servo head has been selected and the PLL is stabilized. Timing waveforms illustrating these conditions are shown in Figure 4-10.

Volume Selection

The fixed volume servo head is selected when the signal FXD-ADD/-L (P1B41) is at a logic low level and the SVO-CLAMP/-L (P2A30) signal is received from the Servo Coarse PWA. The head select level is stored in flip-flop U41 and compared to the level of FXD-ADD/-L in an exclusive OR circuit (U42). VOL-CHANGE/-L is active low when FXD-ADD/-L and SVO-CLAMP/-L are logic complements of each other (01 or 10). In addition to servo head selection, the SVO-CLAMP/-L signal triggers two single-shot circuits (U30), one of which conditions the PLL filter for a wide band mode of operation, and the other initializes PLL feedback counter U29 for a fast lock up.


Head Alignment Signals

Head alignment requires buffered read data and servo track signals and these are supplied by the amplifiers U18 and U27 respectively. Analog switches (U36) switch the servo signal input to U27 between the cartridge and fixed module signals. The switching control signals EN-REM/-L and EN-FXD/-L come from gate and inverter U32 and U43, but the gate inputs come from the volume selection logic described above and from a switch on the Head Alignment Adapter PWA. The input to the read amplifier U18 is switched at analog switch U26 between servo data from the cartridge disk and read/write preamp. The switching control is SW1 on the Servo-Fine PWA. Section 6, Maintenance, describes the use of the Head alignment signals described here.

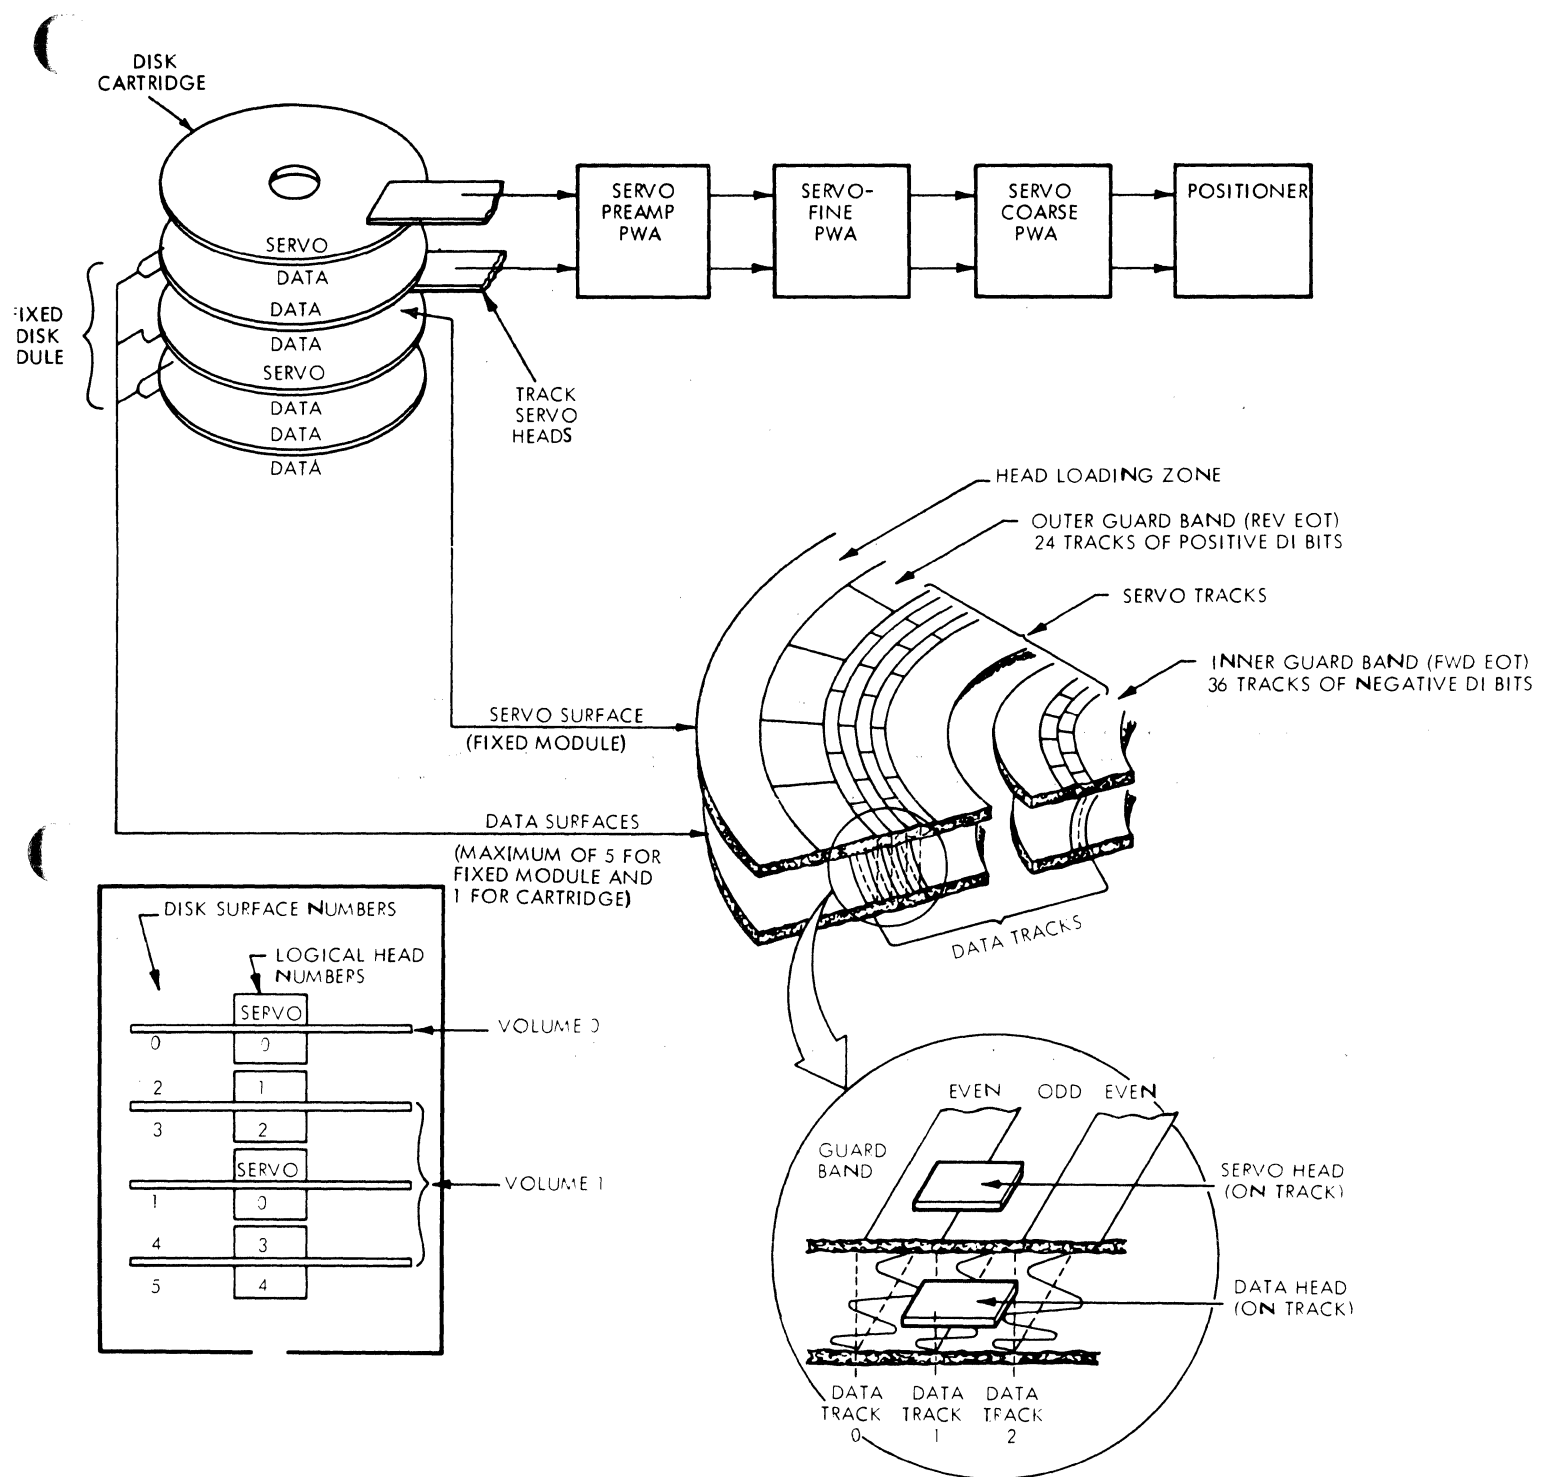

XX046a

Figure 4-33. Track and Servo Disk Layout

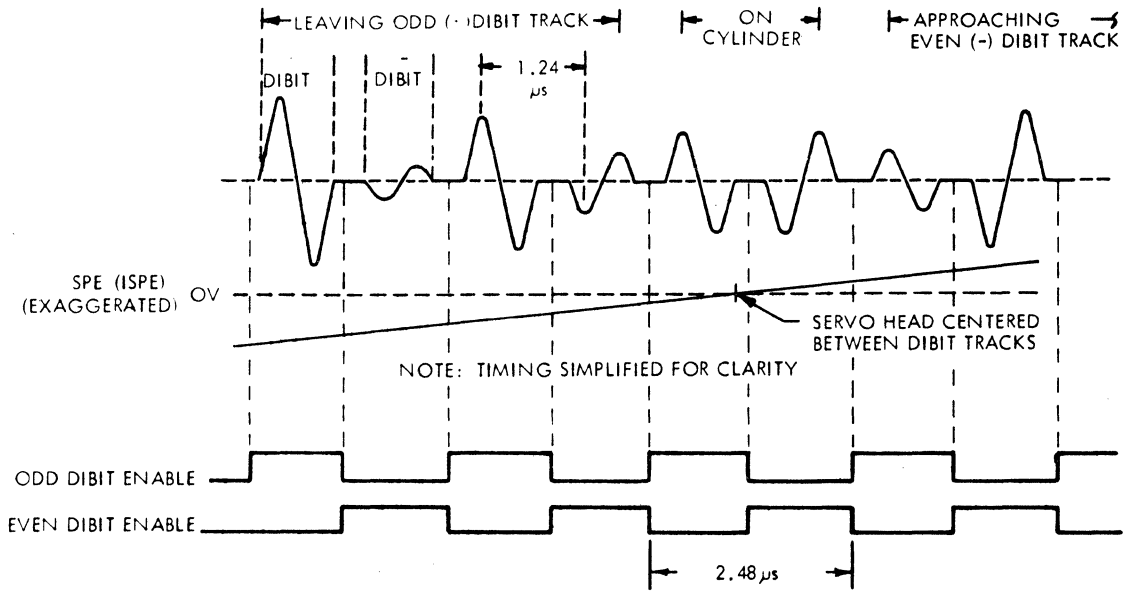

X369c

Figure 4-34. Servo System Waveforms - Positioner In Motion

B Servo-Coarse PWA Operation

The Servo-Coarse PWA provides the following circuit functional groups (refer to Figure 4-36):


- Position velocity and offset command generation
- Actuator drive circuitry
- Servo system velocity feedback circuitry
- Servo system acceleration feedback circuitry
- Actuator retract (unload heads) circuitry
- Compensation circuitry
- Track center detection circuitry
- Cylinder pulse generation circuitry
- End-of-travel detection circuitry
- Spin speed pulse generation circuitry

The details of the first item above were described in detail in Sections 4.3.3 and 4.3.4 "Microprocessor Functions," and will not be described here. Details of the other nine items are described in paragraphs which follow. Refer to Figures 4-35, 4-36 and 5-6 for circuit details.

Actuator Drive Circuitry

For purposes of this description the actuator drive circuitry is considered to consist of the Velocity and Position Offset Current Generator, the Summation Amplifier, the 3.9 kHz Notch Filter, the pre-driver OP Amp, the Driver Amp and the power Amp. All but the last named item are located on the Servo-Coarse PWA. The Power Amp is mounted on a PWA on the top of the actuator magnet assembly. In Figure 4-36 all circuitry on sheet 1 of the figure is on the Servo-Coarse PWA.

The Velocity Offset Current Generator is made up of the D/A converter U8, two op amps U19, analog switch IC U9 and two gate circuits U7 and U15 on the input lines to U9. The Velocity/Offset Generator provides the input to the Servo circuit that drives the actuator to move it to a new position or offset it slightly when on track. Sixteen different levels of velocity can be commanded from the microprocessor by proper activation of the COM-0/+L through COM-6/+L lines to the D/A converter and by choosing between two different resistances on the U19 amplifier output. The least significant bit of the D/A converter is not used to provide greater stability in the low end of the two velocity ranges. Scaling of the D/A output is accomplished at the factory by selecting the value of test select resistor R1 which provides a maximum output of 10.14 volts at TP-7. In operation precision resistor R39 is connected in parallel with R41 by analog switch U9-9, 10, 11 to provide the higher velocities of the 16 velocities that the Velocity Offset Generator commands. HI-COM/-L when active low closes the analog switch U9-10, 11 to allow a higher range of currents to be input to the summing amplifier U30. The velocity/offset current generator can be commanded (COM-0/+L thru COM-6/+L and HI-COM/-L) to inject current to offset the actuator a predetermined distance from the track center position where the servo head locates the nulled SPE signal. The direction of the offset is determined by FWD-SK-OFFSET +/-L (U15-13). A positive offset (U15-13, Low) places the heads closer to the spindle center.

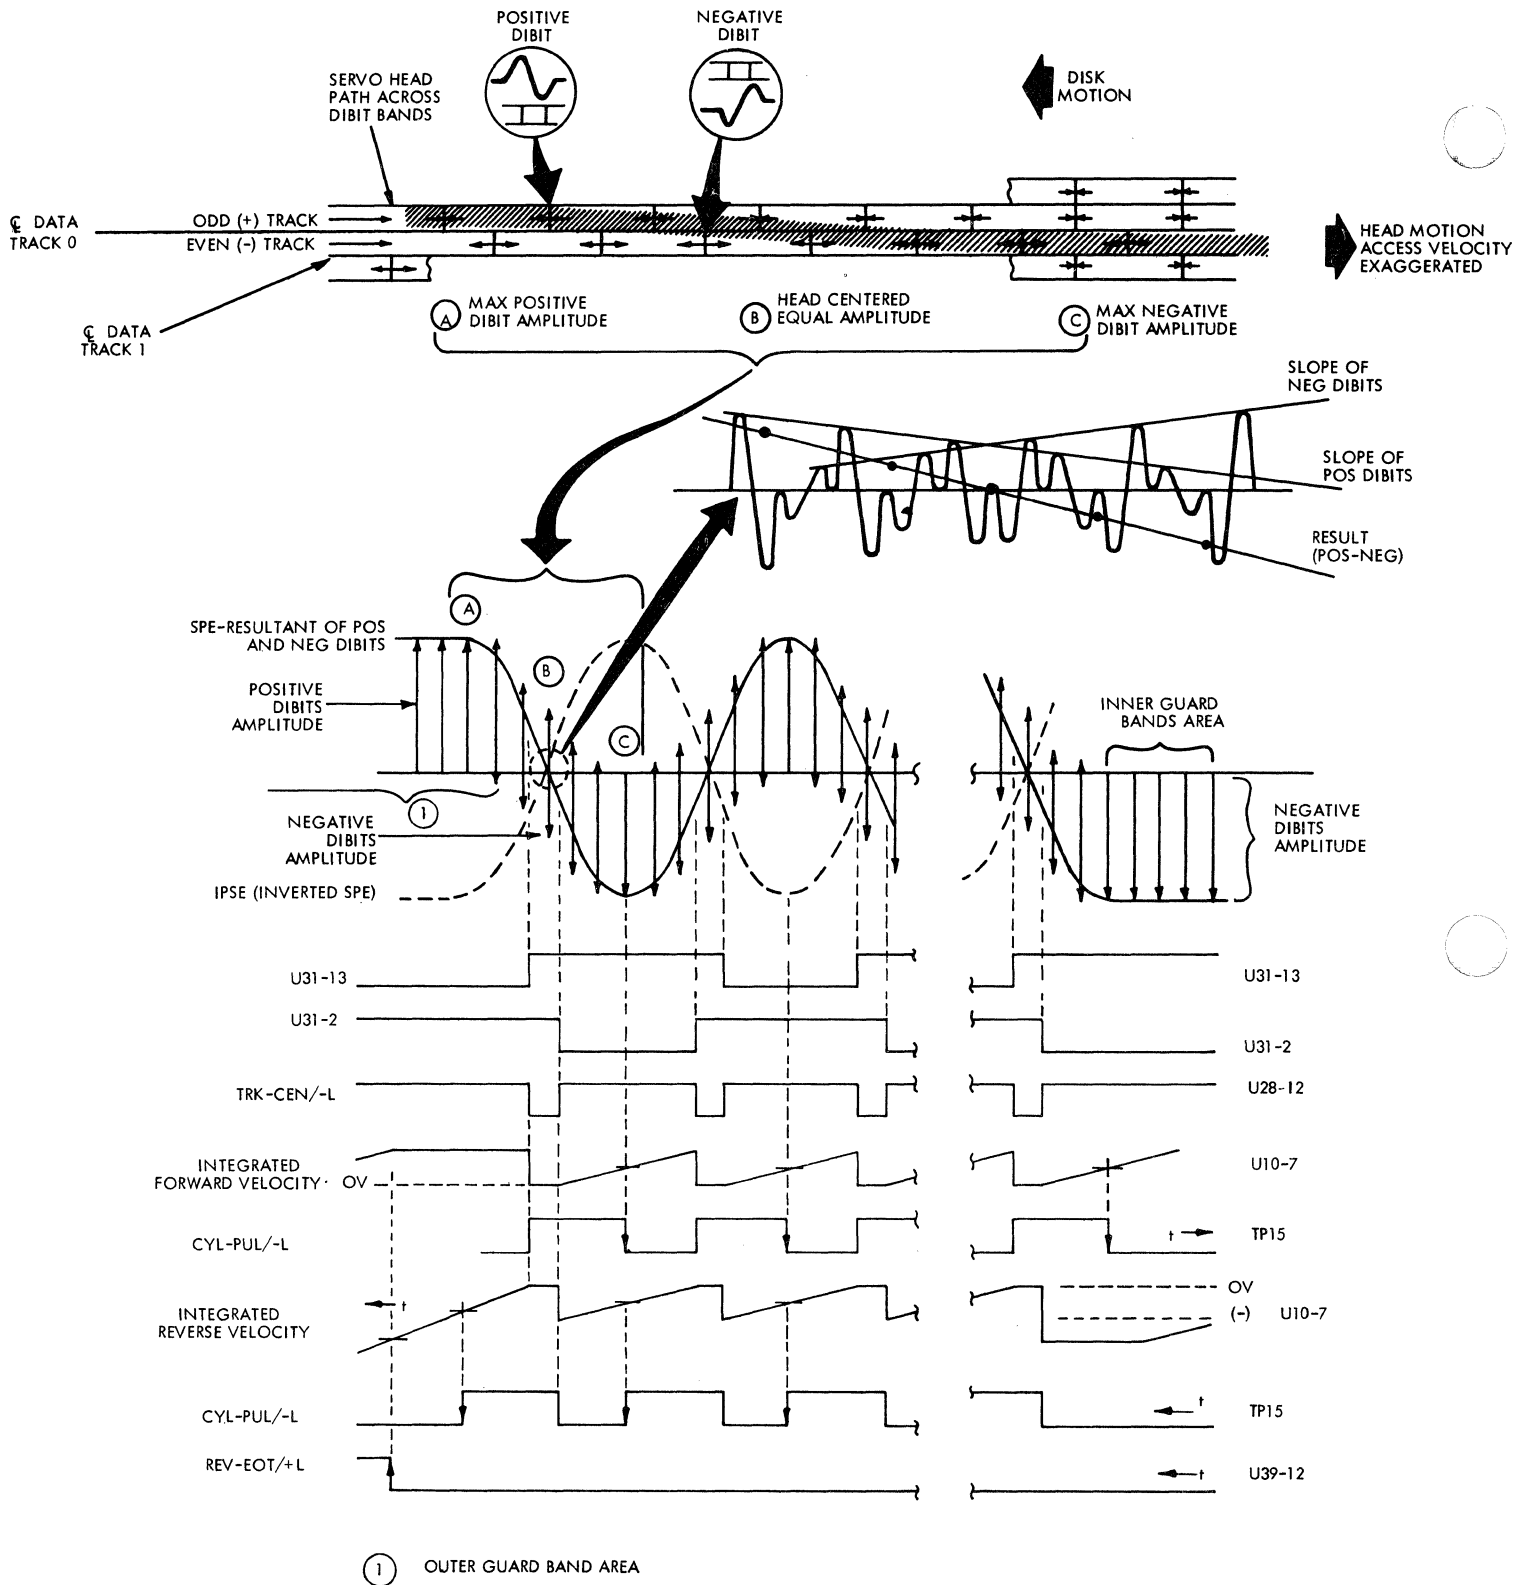

XX197a

Figure 4-35. Track Center and Cylinder Pulse Generation

The controller commands this capability in an attempt to recover data that is slightly off track. Analog switches U9-3 and U9-6, operated by FWD-SK-OFFSET+/-L, decide the input configuration of op amp U19-7: R32 either has ground on it or the output of op amp U19-1. The latter condition provides a positive drive to the summing amplifier U30. U19-7 is a unity gain amplifier which inverts or does not invert the drive signal, depending on whether analog switch U9-3 is open or closed. U9-14 attenuates the drive signal if the +5 volts is lost. Summing Amplifier U30 sums all of the signals which combine to create the signal which positions the actuator.

If the velocity feedback is lost, the additional position loop gain tends to make the servo system oscillatory.

Amplifier U10-14 supplies current to drive the two transistors Q1 and Q2 which drive the power amplifier on the Power Amp PWA. U10-14 sums the signal from a notch filter and the voice coil current feedback from differential amplifier U10-8. The power amplifier on the Power Amp PWA drives the voice coil actuator when connected to it through the contacts of a relay K2 on the Relay Control PWA. The signal SVO-RLY/-L when active low causes the relay driver amplifier on the Relay Control PWA to pull in the contacts of relay K2.

Servo System Velocity Feedback Circuitry

The velocity transducer described in paragraph 4.2.5.2 produces a voltage proportional to the velocity of the actuator. Tachometer Amplifier U11 amplifies the velocity signal with a gain that is controlled by the variable resistor R7. Paragraph 6.8.5.2 describes the procedure for adjusting the velocity gain and something of the theory of operation involved.

Amplifier U11 feeds back the velocity signal into the actuator drive circuitry at the summing node before amplifier U30. The velocity feedback subtracts from the commanded velocity drive signal and when the actuator velocity has reached the commanded velocity there is not enough actuator drive to cause an increase in velocity. A small amount of drive (called "steady-state error") remains to overcome system losses while the actuator moves at the commanded velocity. The velocity feedback acts to dampen possible overshoot when the Velocity Offset Current Generator makes changes in the commanded velocity, and also reduces the steady-state velocity lag error. A quicker and smoother response to velocity step changes results.

Servo System Acceleration feedback Circuitry

A large power resistor R1 (Figure 5-17) in series with the voice coil feeds back a voltage that is proportional to the current in the voice coil. This voltage is amplified by amplifier U10 and summed in with the actuator drive signal at a summing junction between the 3.9 kHz notch filter and another amplifier, also in U10. This voice coil current feedback is nearly proportional to the acceleration of the actuator and acts in the servo system to alter the apparent inertia of the system and thus improve transient response characteristics. It also decreases the dead band non-linearity of the power amplifier.

Actuator Retract (unload heads) circuitry

The Actuator retract circuitry operates in a way that provides a controlled retract current to the actuator voice coil. Proper control of the retracting of the heads prevents head-arm vibration that would cause head to disk contact when the head cam surfaces contact the head unload ramps during retract. Proper control is also needed to prevent the carriage from banging into the stops at the actuator magnet. Programmable op amp U41 controls the retract velocity of the carriage in the following manner. Resistor R98 (on U41 pin 8) programs the quiescent currents within the op amp U41 so that capacitors C69 and C70 can hold enough charge after power is lost to allow retraction to be completed at the proper rate. U41 operates as a velocity reference and compares the velocity signal directly from the Velocity Transducer with the reference voltage at U41-2 and thereby limits the drive current provided to transistor Q4. The amplifier chain Q4 and Q3, and Q1 on the Power Amp PWA will not drive the actuator beyond the proper velocity, but due to the small amount of current C69 and C70 must furnish, the retract velocity is uniform. The main retract power is supplied to Q1 by the energy stored in a large retract capacitor.

The signal HD-LOAD-SW/+L switches off the drive to Q4 when the carriage actuates the Heads Loaded switch. The large retract capacitor can then charge to a nominal 31 volts. Comparator U31 detects that the retract capacitor is charged and notifies the Microprocessor with signal UNLOD-VLT/+L. The microprocessor does not allow the heads to be loaded again until UNLOD-VLT/+L shows that the retract capacitor is adequately recharged. A low voltage Zener diode VR1 on the Relay Control PWA will deactivate K2 if the +5V logic voltage drops. This will cause an emergency retract before the logic voltage drops completely.

Compensation Circuitry

The compensation feedback network around U10, Q1 and Q2 (C8, R6) is essentially a rolloff filter, to control the gain and bandwidth of the current loop and to reduce the deadband non-linearity of Q1 and Q2.

The U30 feedback network (C36, R43, R124) controls the gain and rolls off the velocity loop response a limited amount to aid in attenuating the loop gain at the mechanical resonant frequencies in the carriage and velocity transducer.

Following U30 is an active notch filter, centered at 3.9 kHz. This includes the circuitry from U30-6 to TP6. The notch filter provides additional attenuation of signals in the vicinity of the notch center frequency which otherwise would be greatly accentuated due to the mechanical resonances of the carriage and velocity transducer.

The 60 Hz Runout Compensation circuit consisting of U19, U28 and U29 essentially produces an increase in gain of 5:1 for the SPE and ISPE signals (switched by U40-6, 14) in the band around 60 Hz. The increase in gain takes effect after the last 1/2 track of a seek operation after track center is first made active. This allows the servo system to remain on track when using a servo signal modulated by an eccentric track caused by mechanical imperfections in disk and spindle. On a machine having a disk rotation of 3600 r/min* eccentricity in the track will pass under the heads 60 times a second, thus causing an amplitude variation in the servo signal that is centered around 60 Hz.

*SI units, means Revolutions per Minute.

The signal FN-TRK-CEN/+L operates the analog switch U29-6, 7 and U29-14, 15 thereby adding or removing the 60 Hz Runout Compensation circuit in series with the SPE/ISPE signal. When FN-TRK-CEN/+L is high the 60 Hz Runout Compensation is connected in the circuit.

Track Center Detection Circuitry

To generate a pulse at the center of each servo track, two comparators (U31) and a schmidt trigger (U28) detect the SPE zero crossings and form a pulse which straddles the zero crossings. The signal produced is TRK-CEN/-L. Each TRK-CEN/-L pulse specifies that the heads are positioned within prescribed offset limits. TRK-CEN/-L assists in generating the data cylinder pulses and goes to the microprocessor on command through PPI #2. To generate TRK-CEN/-L, comparator U31-13 is driven Low (0V) during most of the positive half of SPE and comparator U31-2 is driven Low (0V) during most of the negative half of SPE. The outputs of these two comparators form a "wired OR" gate which produces a narrow positive pulse during the short interval when neither of the two comparators are driven Low. These short intervals occur straddle of the zero crossing points of SPE which represent the center of each servo track. The relationship between SPE and TRK-CEN/-L is shown in Figure 4-35. The Schmitt trigger circuit U28 squares up the pulses and inverts them, thus creating the TRK-CEN/-L signal. The relationship between SPE and TRK-CEN/-L is shown in Figure 4-35.

Cylinder Pulse Generation Circuitry

The track center signal TRK-CEN/-L resets integrator U10 by closing analog switch U40-10, 11 and shorts VEL to ground using switch U40-2, 3. The integrator U10 integrates the VEL signal (TP3) which represents the head and carriage velocity. Because the integrator is reset by the track center signal, integrated output U10-7 is proportional to the distance traveled by the heads after the track center signal goes false. Comparators U32-13 and U32-2 compare the integrator output level (U10-7) with reference voltages (one for positive going VEL and one for negative going VEL) and switch to low logic output when the heads are nearly midway between adjacent servo track centers (TRK-CEN/-L). The two comparators form a "wire OR" gate which produces the CYL-PUL/-L or Cylinder Pulse signal (TP-15). CYL-PUL/-L remains low from data track center until TRK-CEN/-L resets the integrator U10-7. Figure 4-35 shows the timing relationships of Track Center, integrated velocity, and Cylinder Pulse signals during a forward and reverse head motion seek. For a reverse head motion seek the integrated velocity signal U10-7 is a negative going voltage. It should be noted that regardless of the velocity of the carriage, or whether positive going or negative going, the integrator will integrate to the threshold voltage of the comparators at a point representing the data track center.




End-of-Travel Detection Circuitry

There is no special circuit in the CMD for Forward End-of-Travel as that is taken care of by the microprocessor. There is, however, a circuit for Reverse End-of-Travel and it is used during loading of the heads and return to zero cylinder. The Reverse End-of-Travel signal REV-EOT/+L goes active high (true) after reverse motion of the heads into the outer guard band. This occurs because velocity integrator U10-7 continues integrating beyond the normal voltage level where it would be reset by the TRK-CEN/-L signal, since no track center pulses occur in the guard band regions. Eventually the output of the integrator reaches the negative threshold voltage that will cause the comparator U32-1 to switch from low to active high. The switching of REV-EOT/+L to active high occurs when the selected servo head is approximately 2.4 mils (0.061mm) from track zero into the guard band. The microprocessor commands the carriage to move back inward toward track zero and the integrator then integrates positively (it was not reset in the guard band). When the selected servo head reaches servo track zero TRK-CEN/-L resets the integrator as shown in Figure 4-35.

Spin Speed Pulse Generation Circuitry

The Spin Speed Pulse Generation circuitry consists of an optical sensor which senses the presence of 16 slots in a disk on the bottom of the disk drive spindle, a comparator and a pulse shrinking circuit. The optical sensor consists of a light emitting diode and a light sensing transistor which senses the light from the diode as the light passes through one of the 16 slots in the slotted disk. Comparator U31-1 squares up the edges of the pulse from the light sensing transistor and sends the pulse (TP16) on to the pulse shrinking circuit made up of U28, U39, U44 and U45 plus the delay filter R110 and C67. This pulse shrinking circuit produces a 1 usecond negative going pulse at U45-3 at the point in time when the trailing positive going edge of the 120 usecond pulse occurs. See Section 6.8.4 for specifications on this pulse. The 1 us pulse is made available for use by the microprocessor through the port U36.

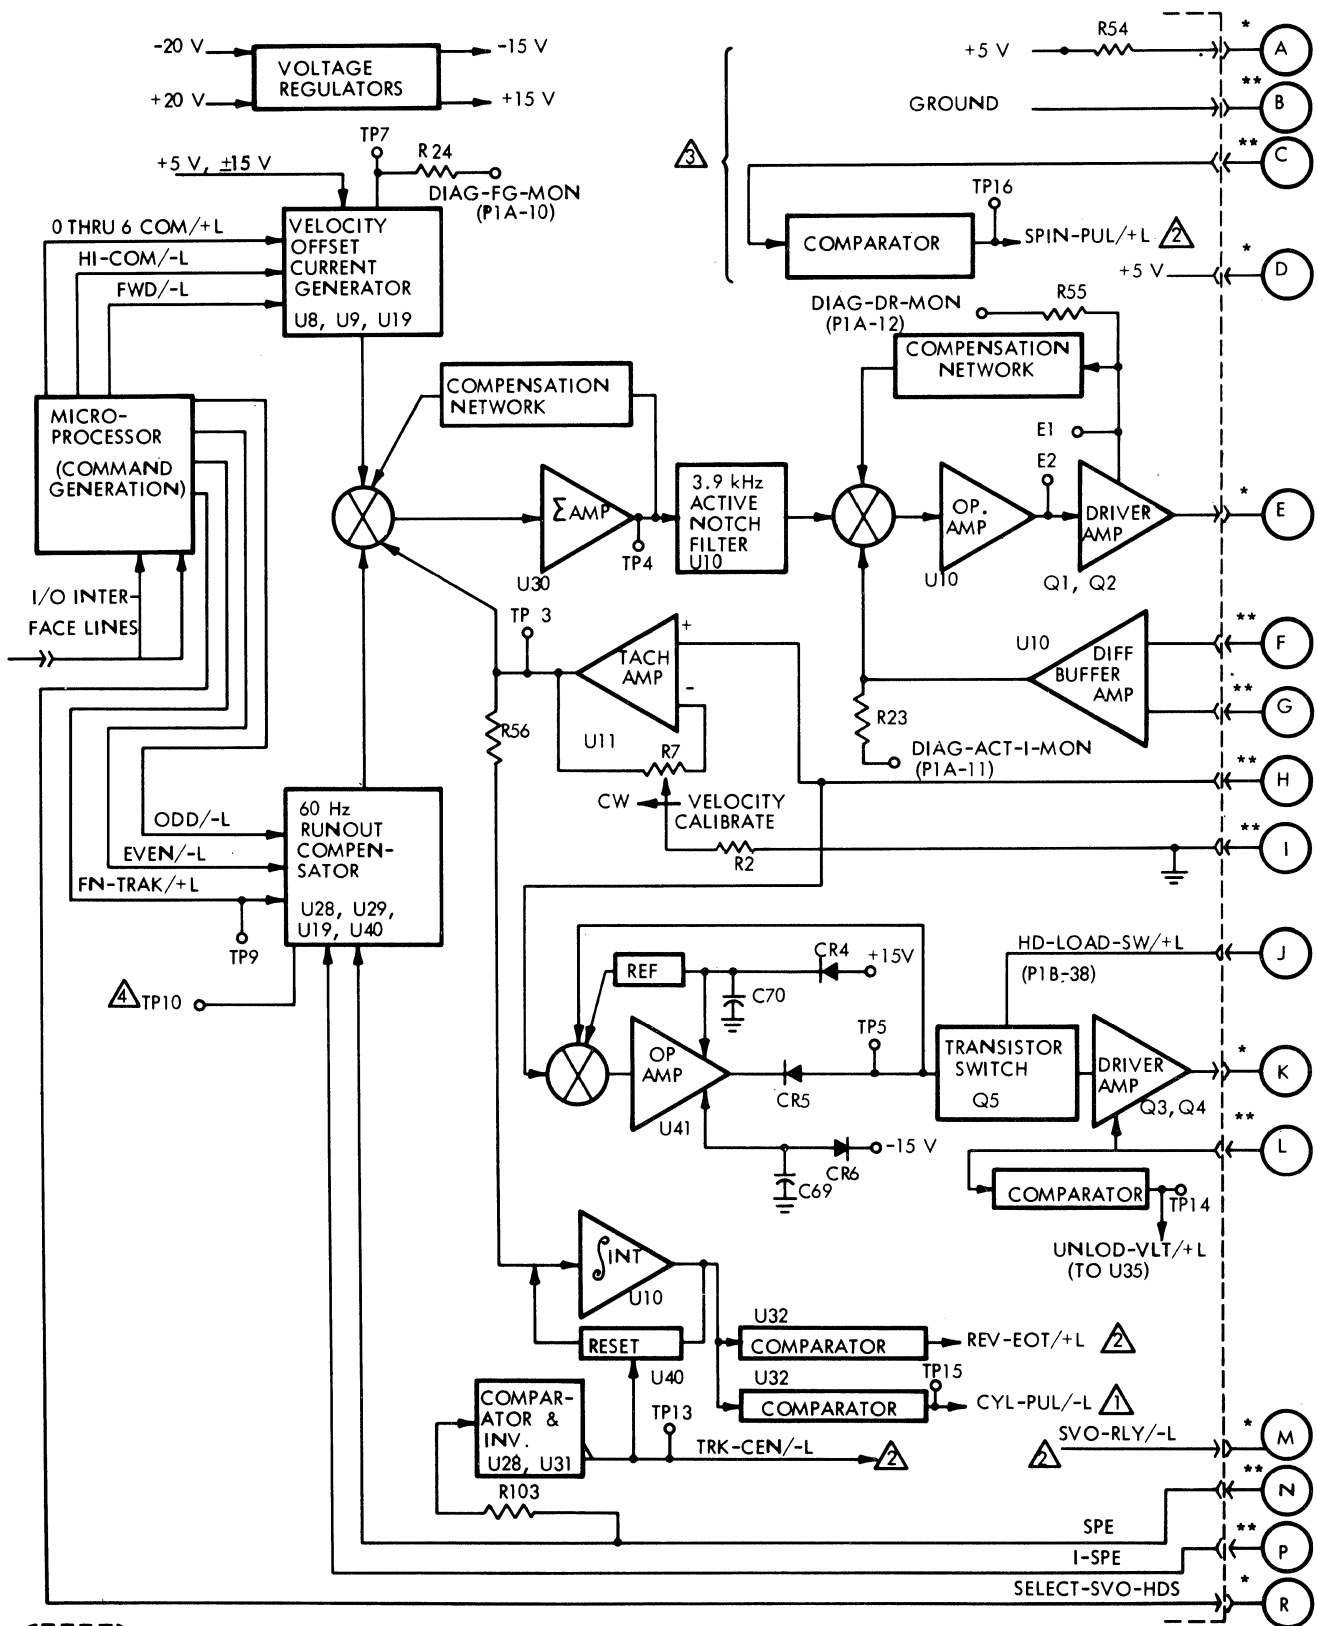

X322a

* Notes on Sheet Three

Figure 4-36. Block Diagram of Analog portions of Servo System (Sheet 1 of 3)

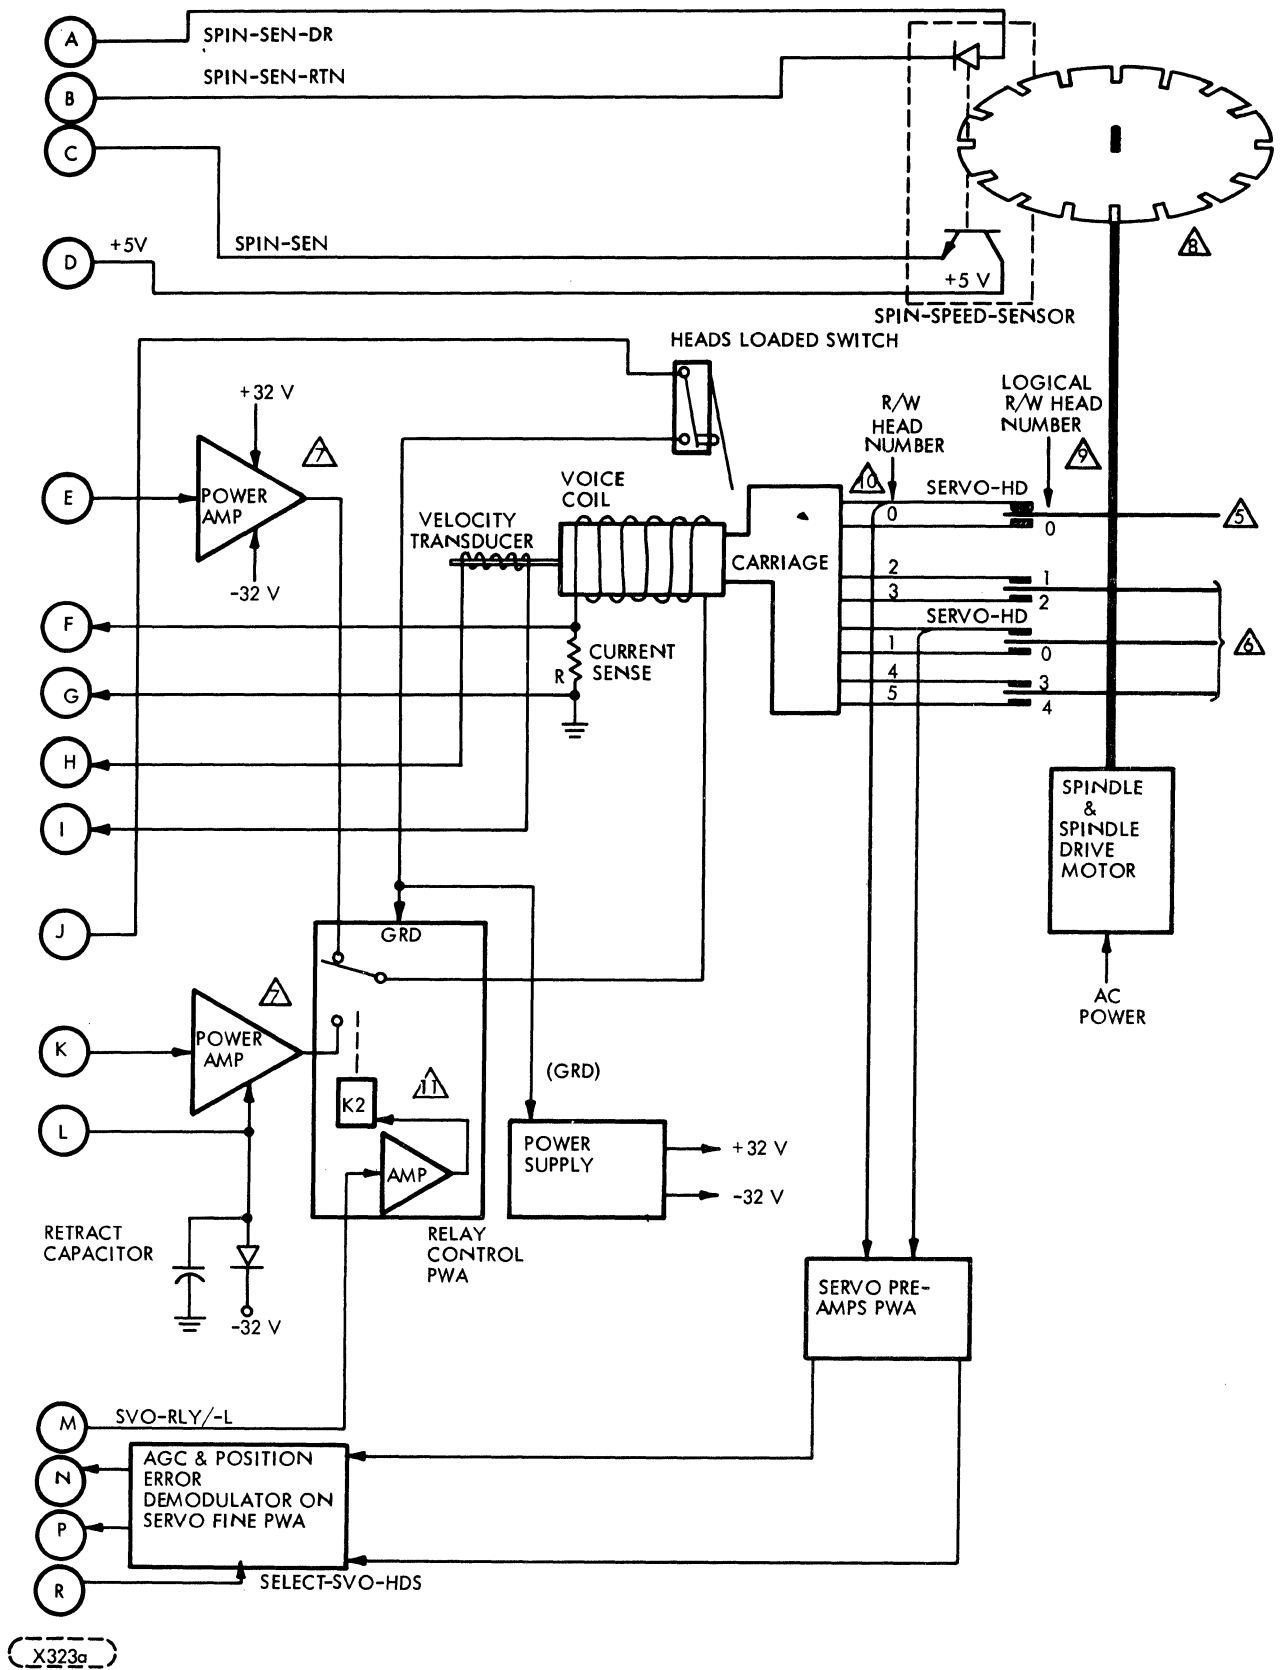


Figure 4-36. Block Diagram of Analog Portions of Servo System (Sheet 2 of 3)



NOTES:

*Outputs to circuitry external to Servo-Course PWA

**Feedback signals from circuits external to Servo-Course PWA

- 1 To cylinder pulse shrinker (U28, U37, U15), then to M. P. Programmable Interval Timer U2 (8253).
- 2 To M. P. via PPI U36.
- 3 Spin Speed Pulse Circuitry.
- 4 Switched SPE/I-SPE.
- 5 Removable cartridge disk (volume 0).
- 6 Fixed pack disks (volume 1).
- 7 Amplifiers mounted on top of voice coil magnet.
- 8 Though shown above disks here, the slotted wheel is actually on the bottom of the spindle.
- 9 Logical head number as addressed by the controller.
- 10 Use this number when selecting heads on factory tester.
- 11 Relay shown in energized position.

Figure 4-36. Block Diagram of Analog Portions of Servo System (Sheet 3 of 3)

4.3.6 READ-WRITE FUNCTIONS

4.3.6.1 General

When the drive is on cylinder, has a head selected, and has oriented to the proper position on the data track, it is ready to perform a read or write operation. The controller initiates a read or write operation by sending to the drive the appropriate TAG and BUS OUT BIT combinations (refer to Interface description for details).

During a read operation, the drive recovers data from the disk and transfers it to the controller. During a write operation, the drive receives data from the controller and records it on the disk.

4.3.6.2 Write Operations

The Controller initiates Write Operation by transmitting appropriate TAG and BUS OUT bits along with NRZ Write data and the Write Clock. The write Data is received from the Controller via the Data lines in the "B" Cable. The Read/Write Control timing is shown in Figure 4-37. The drive first processes the Write data through the NRZ to MFM encoder/compensator. The Write Compensation is applied to minimize effects of bit crowding and frequency variations during readback. The compensated data is then processed by the Write driver circuits and then written on the disk. Figure 4-38 is a block diagram of the Write Encoder/Compensator.

Principles of MFM Recording



In order to define the binary dibits stored on the pack, the frequency of the flux reversals must be carefully controlled. Several recording methods are available; each has its advantages and disadvantages. This Unit uses Modified Frequency Modulation (MFM) technique.

The length of time required to define one bit of information is the cell. Each cell is nominally 103 ns in width. The data transfer rate is therefore, nominally 9.67 Mbits/sec.

MFM defines a "1" by writing a flux transition at mid cell time, and a "0" by writing a flux transition at the end of cell time except when the cell is followed by a "1".

The advantages and disadvantages of MFM recording are as follows:

- Fewer flux reversals are needed to represent a given binary number because there are no compulsory flux reversals at the cell boundaries, achieving higher recording densities of data without increasing the number of flux reversals per inch.
- Signal-to-noise ratio, amplitude resolution, read chain operation, and operation of the heads are improved by the lower recording frequency achieved because of fewer flux reversals required for a given binary number.
- Pulse polarity has no relation to the value of a bit without defining the cell time along with cell polarity. This requires additional read/write logic and high quality recording media to be accomplished.

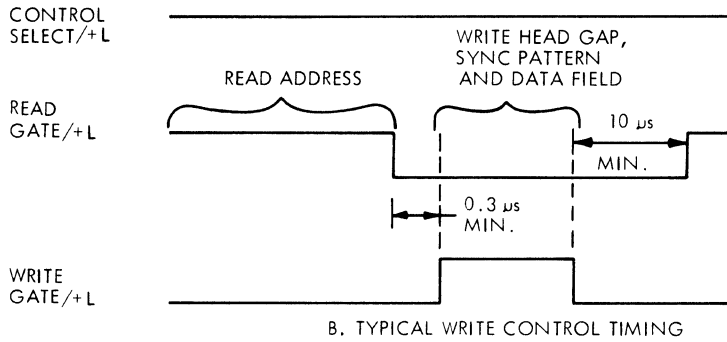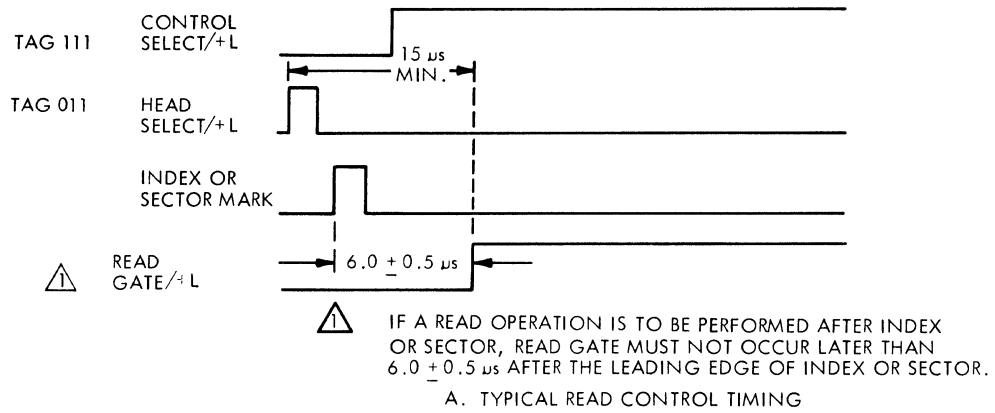

X391a

Figure 4-37. Read/Write Control Timing

NRZ to MFM Encoder/Write Compensation

The following functional description is written with reference to Block Diagram Figure 4-38, Timing Diagram of Figure 4-39 and the logic schematic of the PWA (Figure 5-8, Sheet 5).

Figure 4-38 depicts a Retime Flip Flop logic (U44, U35) where the received NRZ data is clocked with the accompanying Write Clock in order to reestablish the timing reference. The NRZ data is then clocked into two shift registers (U22, U36) using both polarities of a 9.67 MHz "phased clock". (See Figure 4-38). In order to encode the NRZ into MFM, it is necessary to use both 9.67 MHz and 19.34 MHz frequencies with a known phase reference between the two clocks and the NRZ data. The blocks "WRT GATE Sync" (U34) and "PHASE F/F" (1/2 U33) perform the write gate synchronization and establish the phase relationship by producing a "new" 9.67 MHz-clock ϕA , ϕB which are used to clock the registers. A specific serial output of the shift register is used along with the ϕA clock and the 19.34 MHz clock in the Block labeled "NRZ-MFM ENCODER" (1/2 U45, 1/2 U33) to produce the MFM output. The Write Compensation circuitry is comprised of the block labeled "PATTERN DECODE LOGIC" (U25, U26, U37), the delay line (U46) and the multiplexing gate U38). The write compensation is based on detection of frequency increase and decrease through an established algorithm described below:


The pattern decode logic analyses the NRZ data and determines if its frequency is constant, increasing or decreasing. This is necessary because if the frequency is increasing or decreasing, problems can occur during subsequent read operations. These problems are eliminated by compensating the data before writing it on the disk.

The data frequency is constant whenever all ones or all zeros are being recorded because all pulses are separated by one cell (103 ns). However, a 011 pattern represents a frequency increase since there is a delay of about 1.5 cell between the 01 and only one cell between the 11. On the other hand a 10 pattern represents a frequency decrease since a pulse is not written at all in the second cell. A 001 pattern is also a frequency decrease since there is a one cell interval between the first two bits and 1.5 cell between the last two.

The previous examples examined only two or three bits without regard to the preceding or subsequent data pattern. The actual combinations are somewhat more complex. The drive logic examines and defines the following patterns:

<u>PATTERN</u>	<u>FREQUENCY CHANGE</u>
011	Increasing
1000	Increasing
10	Decreasing
001	Decreasing

Any data pattern will have considerable overlapping of the data pattern frequency changes. Consider the overlap of these eight bits:

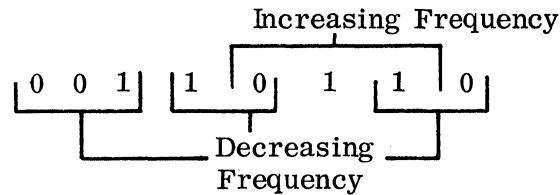

The outputs from the pattern decode logic enable either the Early, Late or Nominal gate (depending on the input frequency) to provide compensated Write data as follows:



- If frequency is constant, there will be no peak shift. In this case the data is defined as nominal and is delayed 6 ns.
- If frequency is decreasing, the apparent readback peak would occur later than nominal. To compensate for this, the data is not delayed and is therefore 6 ns earlier than the nominal data.
- If frequency is increasing, the apparent readback peak would occur earlier than nominal. Therefore, this data is delayed 12 ns which is 6 ns later than nominal.

After being write compensated the data is transmitted to the write driver circuits.

An address Mark enable command interrupts the flow of data and produces approximately 3 bytes of erased mark on the disk producing a unique mark which is detected during read of a "soft sector" format (refer to interface format).

Write Drive Circuit

The compensated write data is sent to the write driver circuit located on the R/W Preamp PWA. As depicted by block diagram of Figure 4-40 and circuit schematic (Figure 5-9), the MFM compensated data is converted to flux reversals representation in $\div 2$ F/F (1/2 U12) and the converted to write current (U14, Q3) which is in turn driven through the selected Read/Write coil to accomplish the write operation. The write current control is comprised of a programmable DC Current Source (U8, U13, U14, U15) whose operation is further described below.

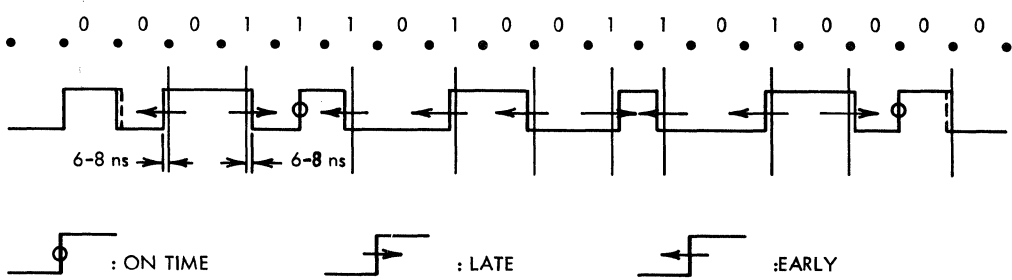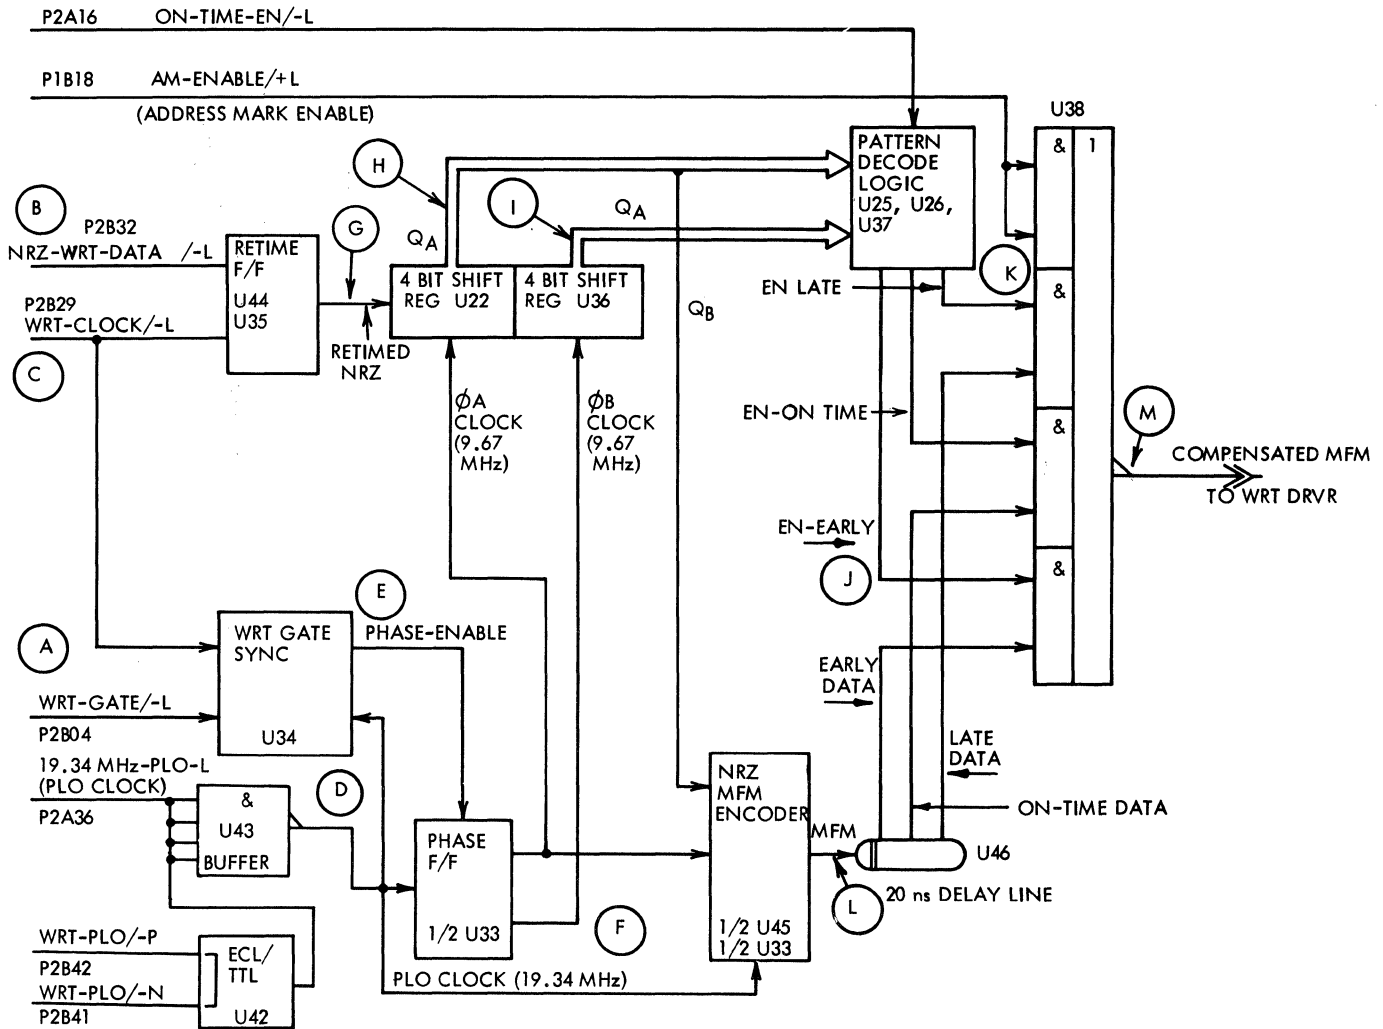

XX178a

Figure 4-38. MFM Encoder/Write Compensator

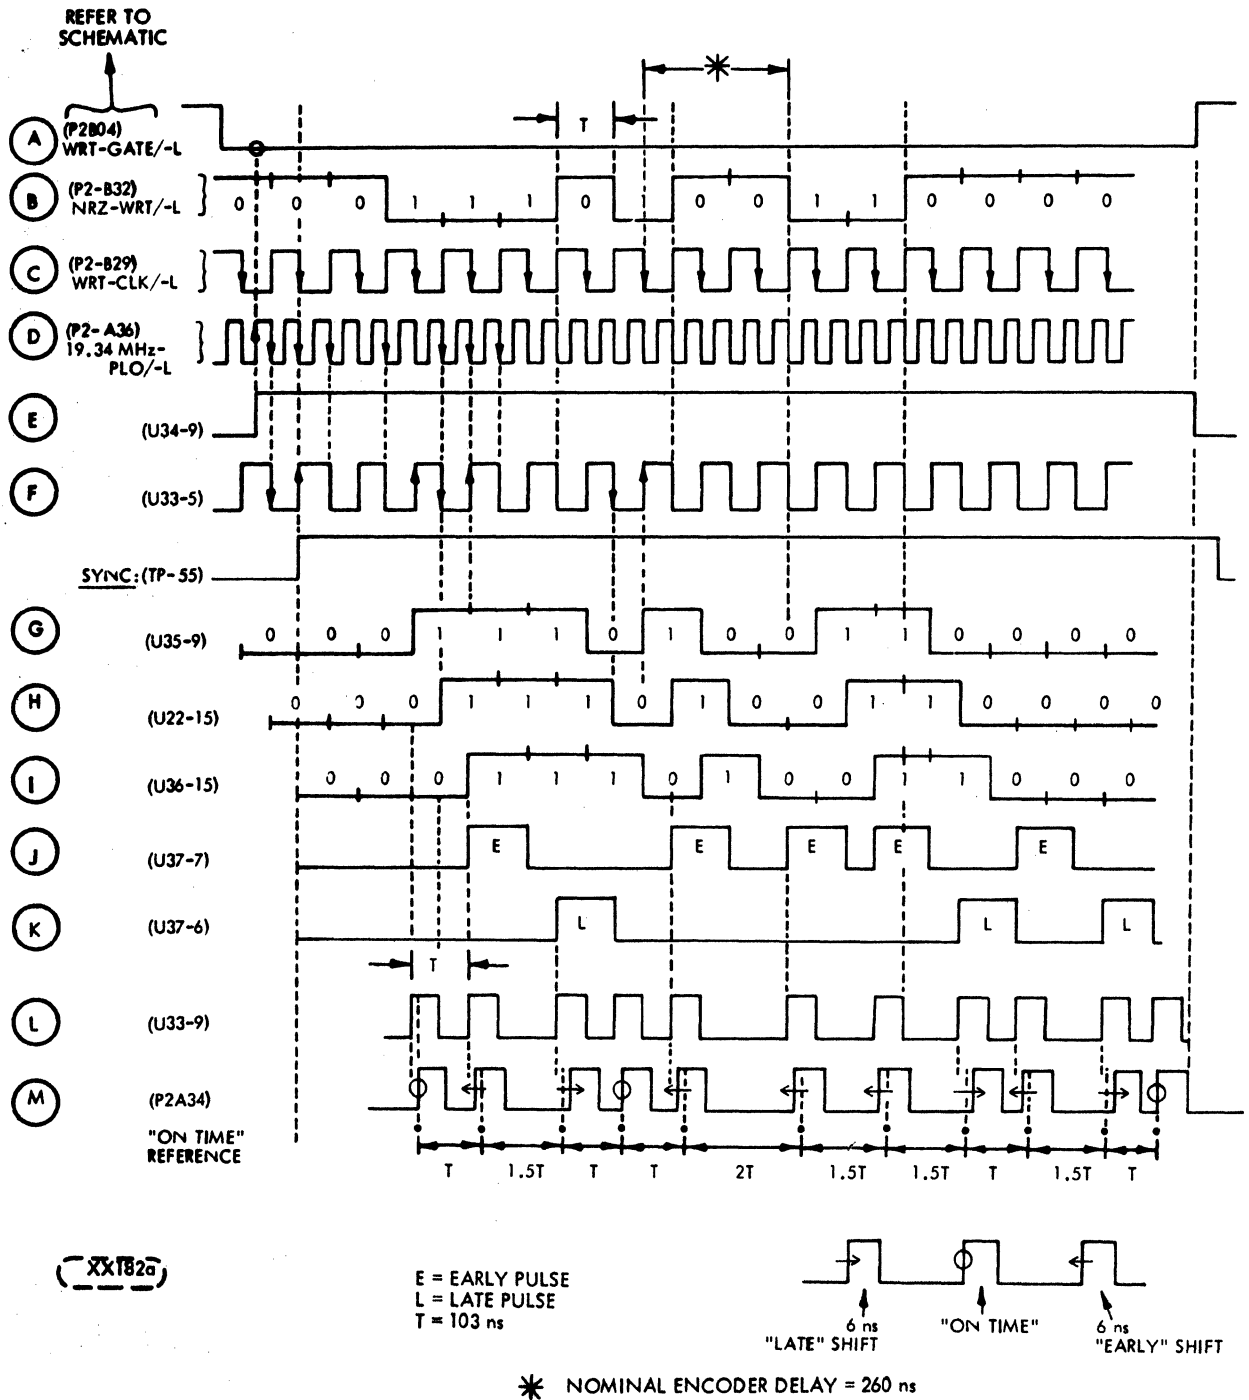


Figure 4-39. NRZ to MFM Encoder Timing Diagram

Write Current Control

The magnitude of the write current sent to the heads is controlled as a function of cylinder address. This is referred to as write current zoning. There are seven write current zones (A through G). Write current is maximum at the outer cylinders, and is reduced as each zone boundary is crossed. The cylinders in each write current zone are defined in Table 4-4.

Table 4-4. Write Current Zones


<u>ZONE</u>	<u>CYLINDERS</u>
A	000 - 127
B	128 - 255
C	256 - 383
D	384 - 511
E	512 - 639
F	640 - 767
G	768 - 822

Write Data Protection

As part of data security system, the drive inhibits the write driver circuits whenever there is a danger of writing faulty data on the disk. The Write driver is inhibited by the Write-INHIBIT signal which becomes active under any of the following conditions.

- Write protect switch (es) on the control panel is (are) set.
- A not up to speed condition exists
- A Seek error is detected
- Multiple commands (Read · Write) are decoded
- Voltage fault condition is detected
- Head Alignment is being performed

In addition, the write driver circuitry is designed in such a manner that the loss of power will not cause inadvertant write operation to occur while the heads are retracting.

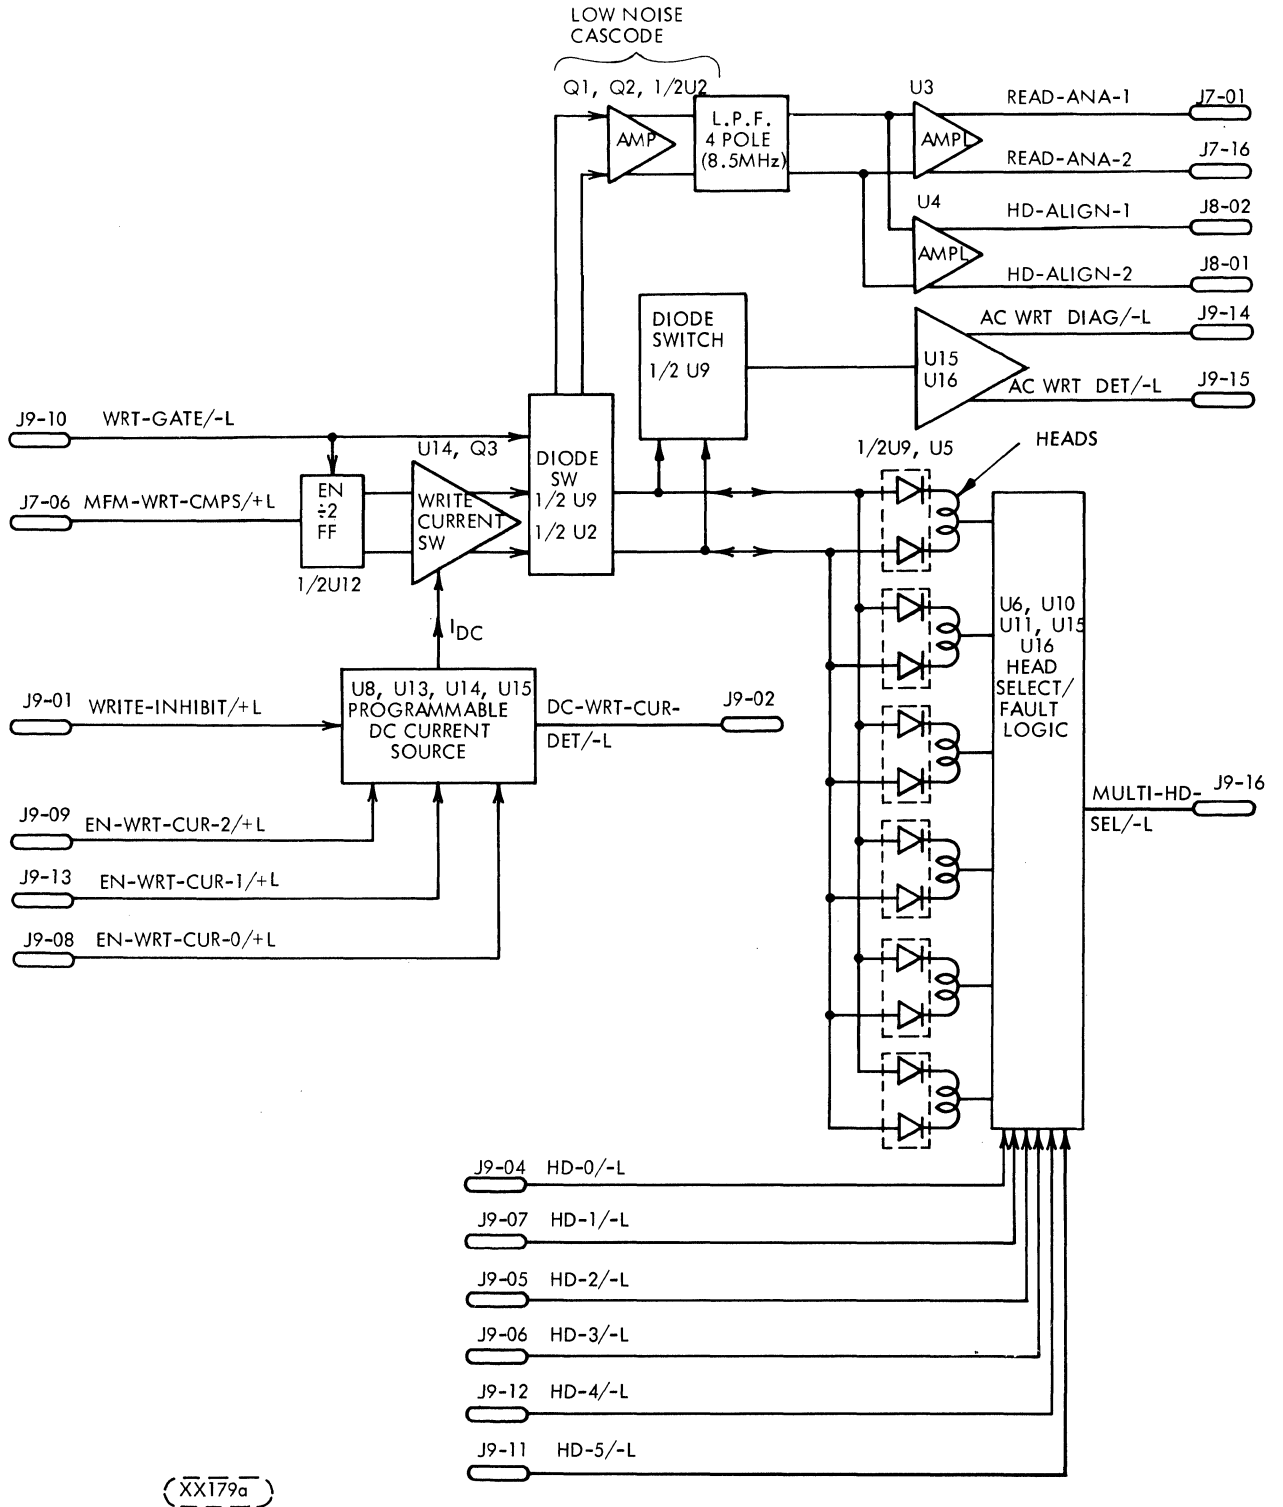

(XX179a)

Figure 4-40. Read/Write Preamp - Block Diagram

4.3.6.3 Read Operation

The Controller initiates Read Operation by transmitting appropriate TAG and BUS OUT bits to the drive. Upon decoding a Read Command, and depending on whether there is an Address Mark enable commanded or not the drive performs data recovery and transmits data over the interface in one of two sequences.

The description of read operation is divided into two sections of analog and digital partitions and their respective timing diagrams.

Read Operation (Analog Section)

The following description is made with reference to Block Diagram of Figures 4-40 and 4-41, timing Diagram of Figure 4-42, and Circuit Schematics of Read/Write Preamp Figure 5-9 and Read/Write Figure 5-8.

The read preamp circuit of Figure 4-40 is enabled as soon as the Write enable is turned off, providing the small differential signal derived from the selected read/write head. This signal directed thru the diode switch (U9, 1/2 U2) is preamplified (Q1, Q2, 1/2 U2) and filtered and further amplified and buffered (U3, U4). One set of these outputs are transmitted to the analog read circuits and a similar set of differential outputs is used for head alignment.

The analog signal input to the Read/Write board is Gain Controlled using variable resistance Fet (Q2) and then amplified (U53) and differentiated in order to convert signal peaks to zero crossings. The differentiated signal is again amplified (U41) and filtered to reduce high frequency noise and fed to two parallel paths of zero crossing circuits. Path one (U32, 1/2 U21, 1/2 U11, U9, U10, U20) is referred to as the "high resolution path" since the signal is detected with no further attenuation of frequency response. The high resolution path also provides inputs to the full wave rectifier (1/2 U11) whose output is used for Automatic Gain Control (AGC), and also to a Comparator Circuit (U18, U29) which senses absence of flux reversals for an eventual detection of Address Mark.

Path two (U40, U31) referred to as the "low resolution" path employs a Low pass filter with a relatively low cutoff frequency to reject high frequency components of the differentiated signal. The Delay lines (U9, 10) employed in the high resolution path insure proper timing between the two channels. As depicted in the timing diagram of Figure 4-42 the high and low resolutions channel, are approximately one Quarter cell time (25 ns) delayed. This is necessary, in order to use the low resolution channel as a qualifying enable (U19) and to eliminate possibility of extraneous zero crossings of the high resolution channel being detected during low frequency data patterns.

The qualified output which is in the form of digital pulses of one pulse per flux reversal is fed to a pulse shaper (U30, U8) prior to being decoded to NRZ.

Read Operation (Digital Section)

Refer to Block Diagram Figure 4-43, Timing Diagram Figures 4-44 and 4-45 and Sector Format diagrams in Figures 4-46 and 4-47.

The Digital section of the Read Circuits is Comprised of the phase locked loop (PLL), the MFM to NRZ decoder, and the Address Mark detection logic as depicted in Figure 4-43. The PLL employs a phase/frequency detector (U4) during lock up time in an all 0's field, and after lock is acquired, a phase detector (1/2 U14, 1/2 U16) is switched in to provide phase error information between the reference input data and the voltage controlled oscillator (VCO). The phase error information is converted to current (Q1, U1, U2, U13), filtered, and then fed to the input of VCO (U12) as a variable voltage to control its frequency and phase. The VCO nominal frequency of 38.7 MHz is divided by 4 (1/2 U14, 1/2 U16) and fed back complete the loop. The feedback input to the phase detector, however, is at 19.34 MHz, since it is operational during data field, and the frequency content of data requires this higher frequency for phase coherent information.

A 9.67 MHz reference clock (SVO-CLOCK) is fed to the PLL to keep it locked to the disk speed at all times except when in Read Mode and no address mark enable exists. This insures that upon switching from SVO-CLOCKS to MFM data pulse, as an input, the PLL must make only phase correction leading to improved response.


The timing Diagram of Figure 4-44 depicts an arbitrary pattern shown while PLL is at "lock" for the purpose of illustration. The MFM to NRZ decoder employs 1/2 of the phase detector (1/2 U14) and the NRZ DATA F/F (1/2 U27) to accomplish the decoding process. The NRZ data and the 9.67 MHz clock (Read Clock) are then translated to TTL levels (1/2 U47) and sent to the interface drivers located on CNTL/MUX PWA.

Prior to data transmission to the interface the Data Enable signal must become true after PLL has been given sufficient time to lock and the MFM to NRZ decoding process has begun. Timing diagram of Figure 4-45 depicts two conditions leading to the start of PLL lock up time of 9 us max.

In the event that an Address Mark Enable (AME) command accompanies a Read Command from the controller, the drive must detect the address Mark through the address mark detection logic (U39, U48, U49, U50, U51, U52) (schematic Figure 5-8), and an "Address Mark Found" signal subsequently activated for a period of 9 us max during which the PLL locks and data transmission begins. In the event that only a Read command is detected by the drive, the PLL lock time of 9 us begins immediately upon detection of leading edge of Read Command and continues for a period of 9 us max. Data transmission will similarly begin before this time is exhausted, as shown by the Data Enable signal of timing diagram Figure 4-45.

Figure 4-41. Read/Write - Block Diagram - P. 1/2 (Analog)

*Refer to Figure 4-43

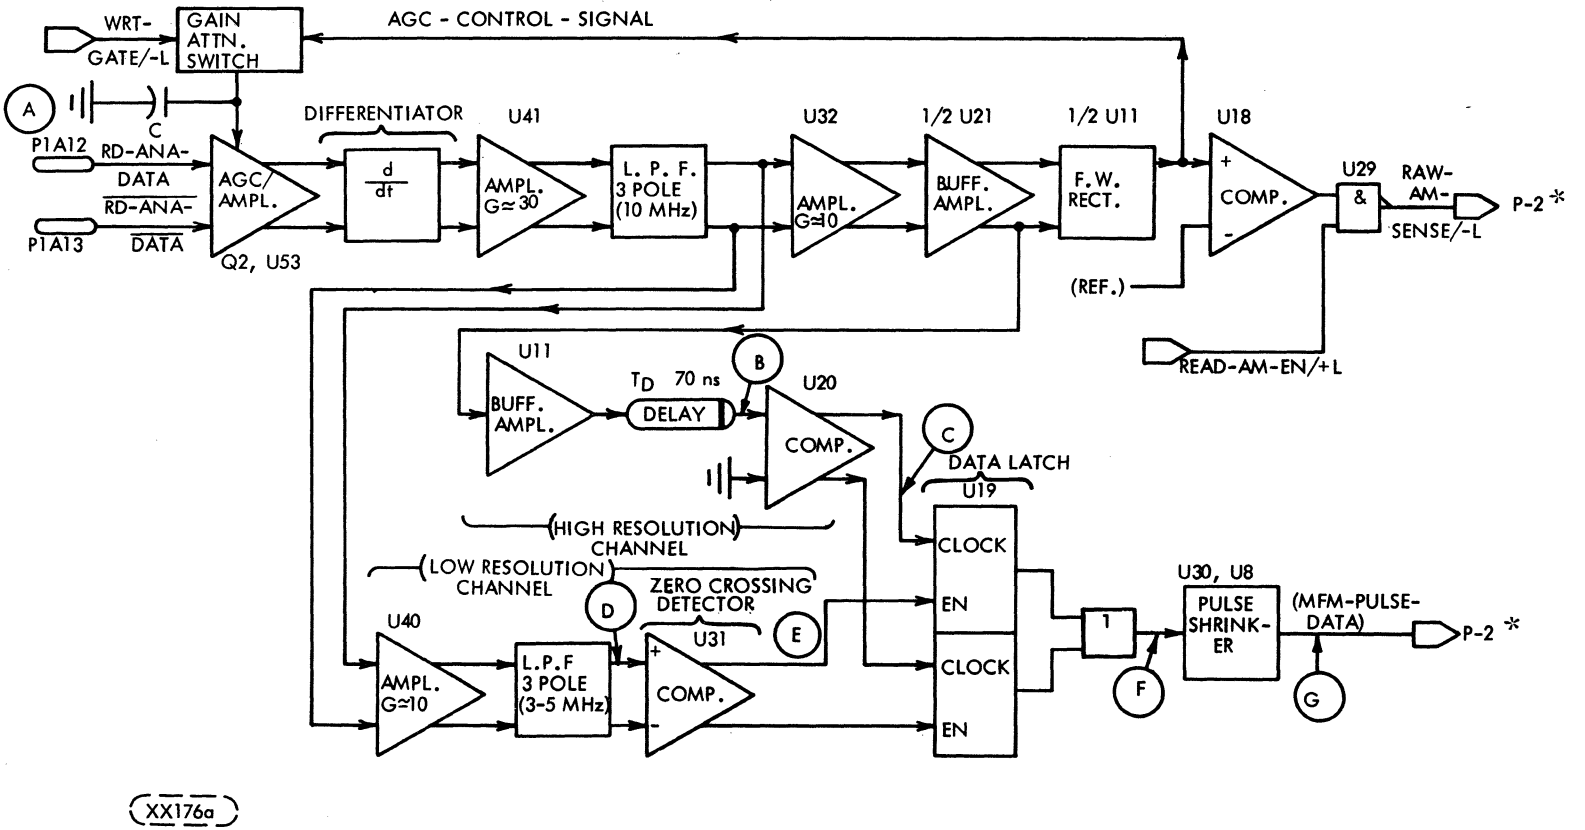


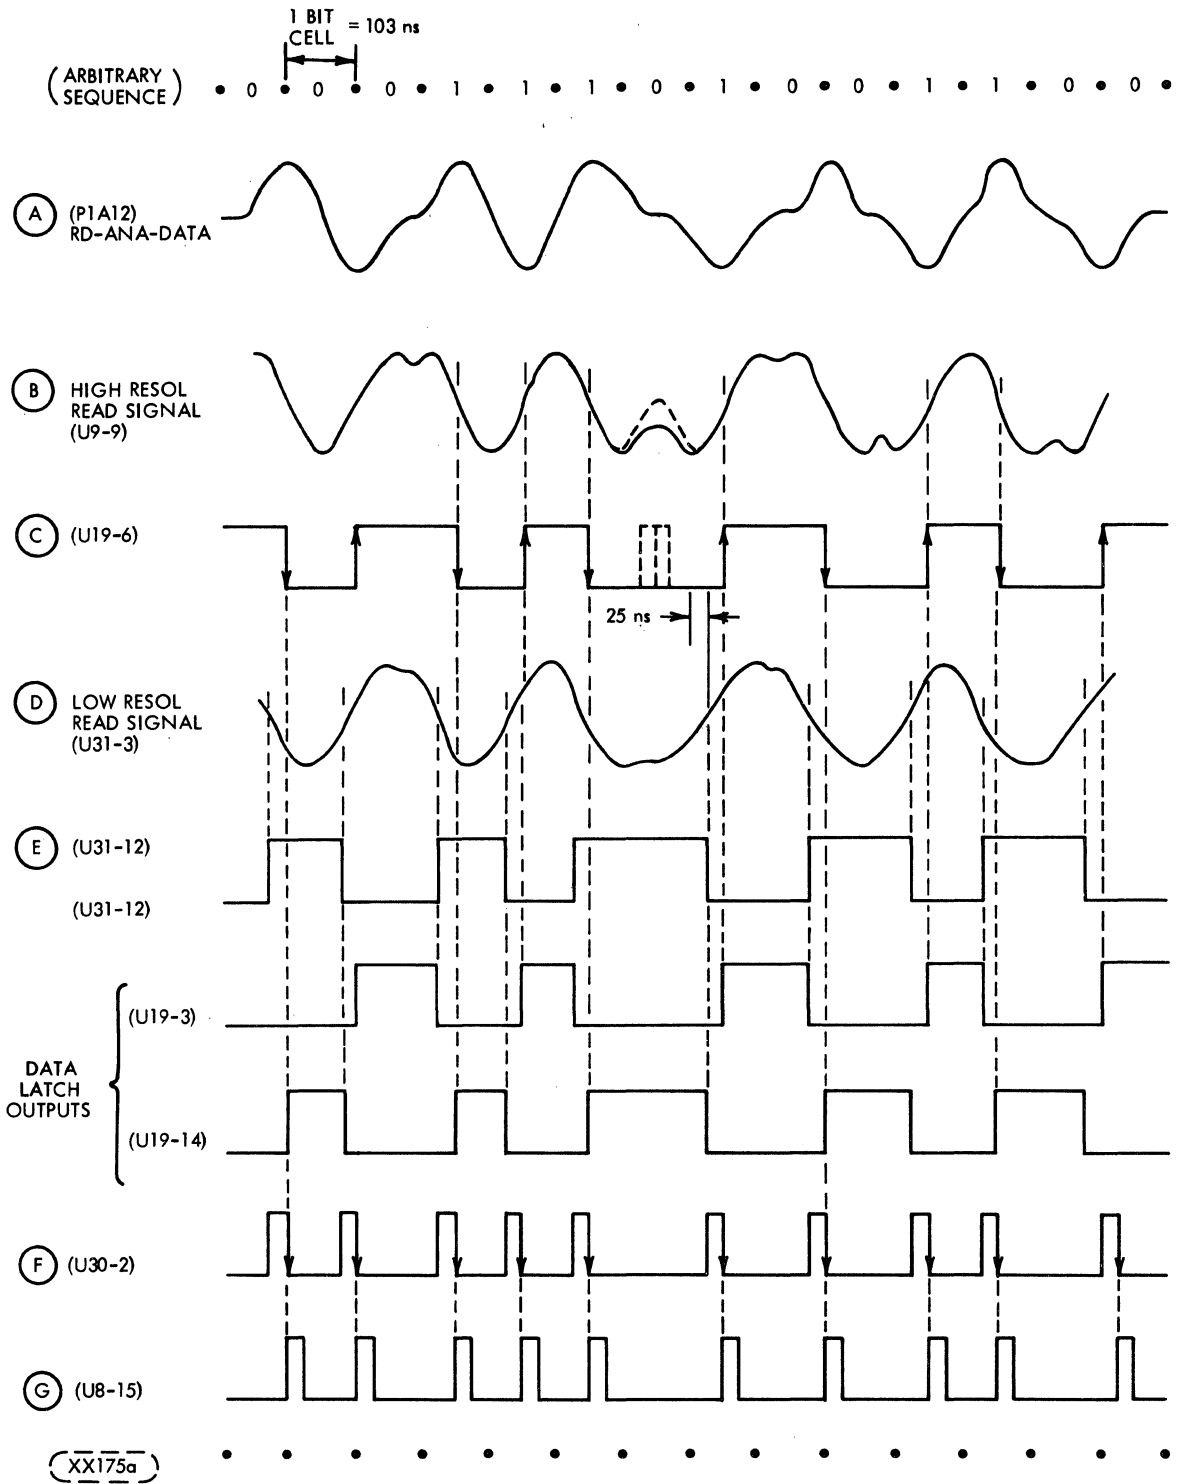


Figure 4-42. Read Analog/Data Latch Timing Diagram

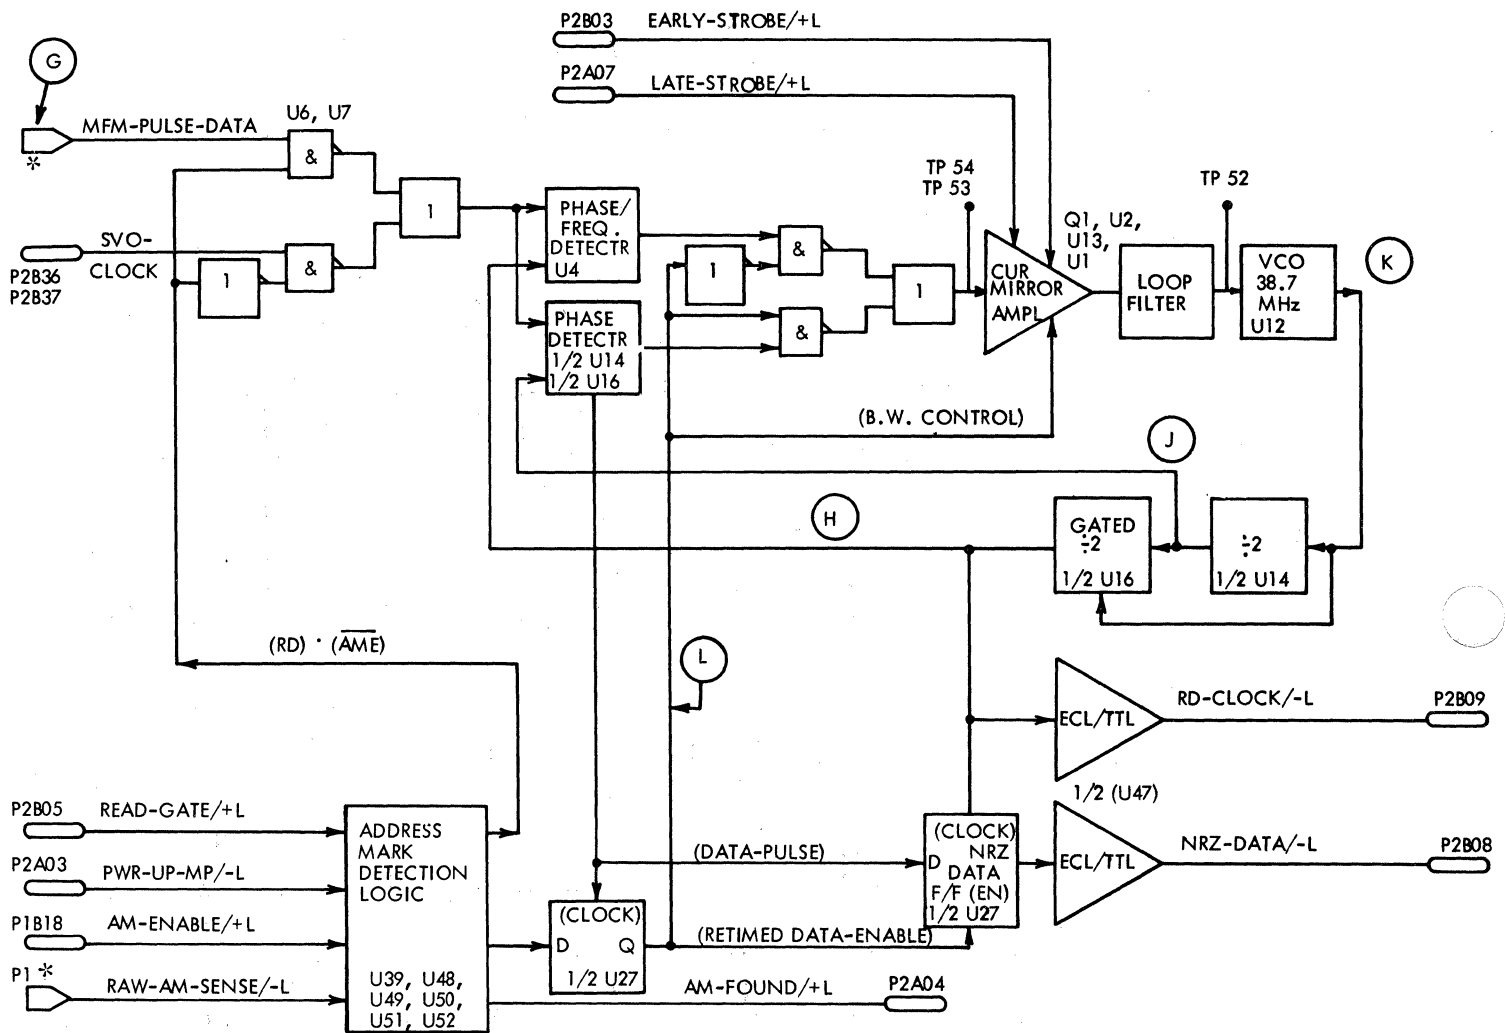

*Refer to Figure 4-41.

XX 180a

Figure 4-43. Read/Write - Block Diagram - P. 2/2 (Digital)

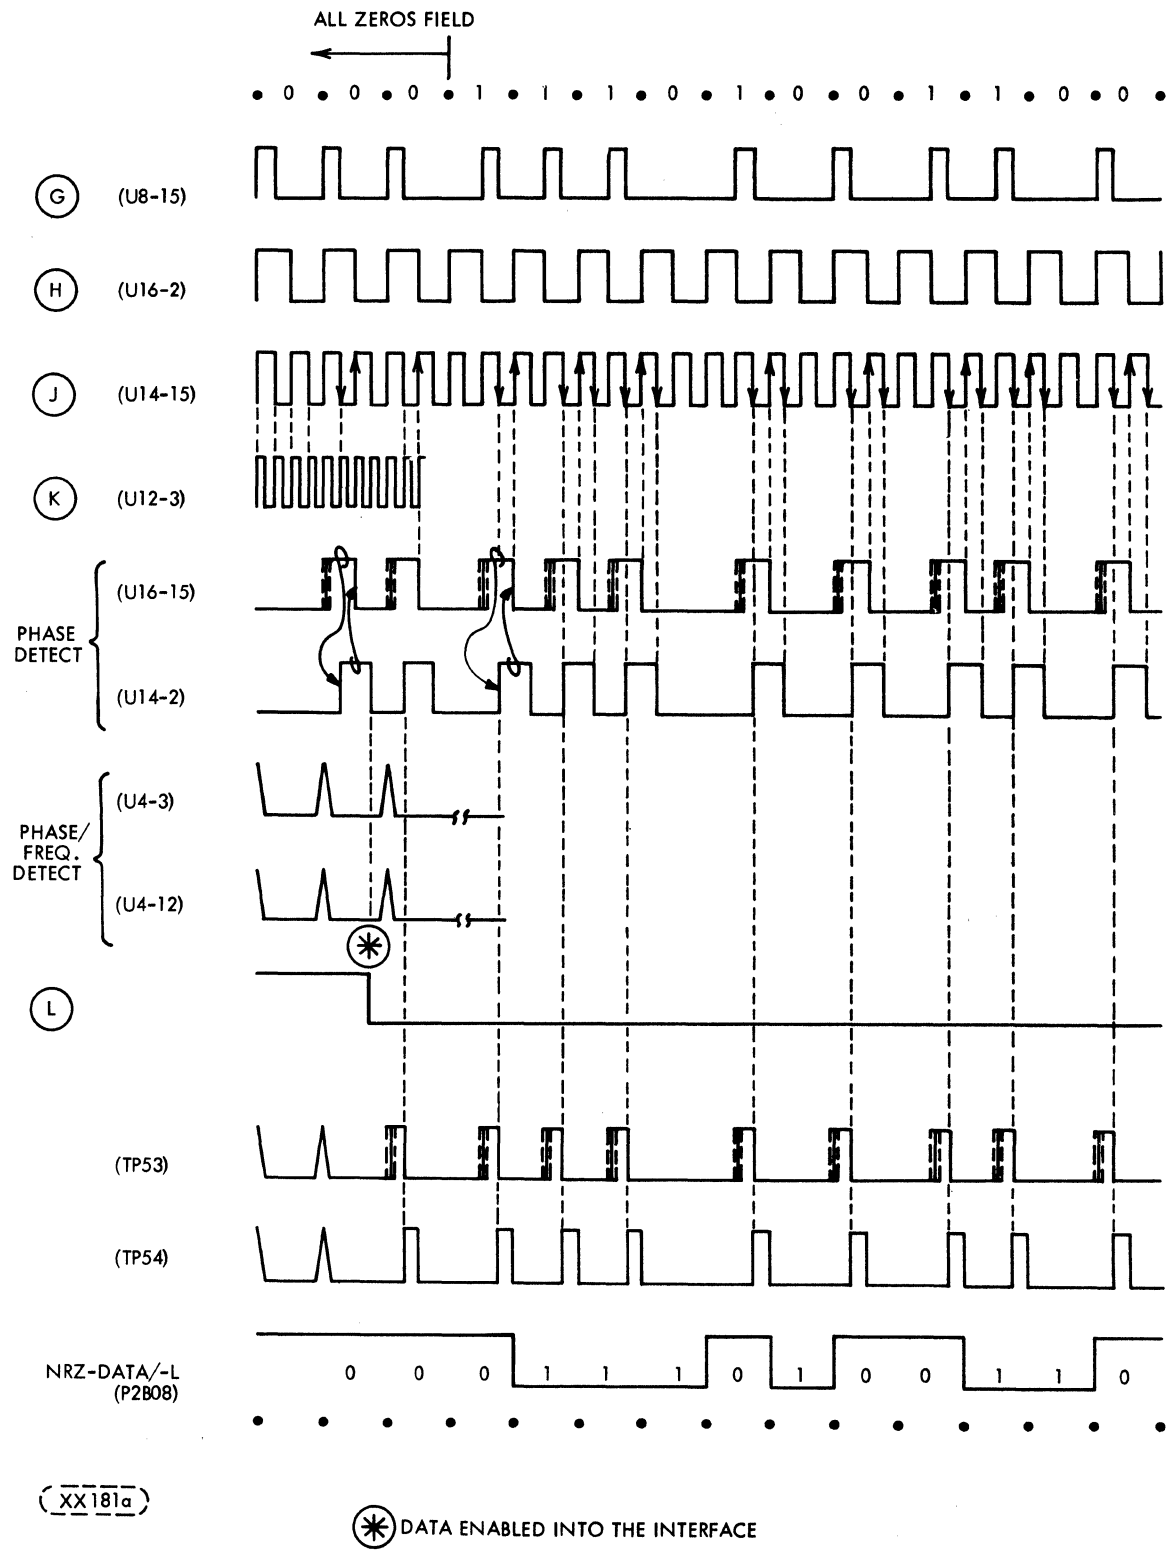


Figure 4-44. Read Digital Timing - PLL Locked


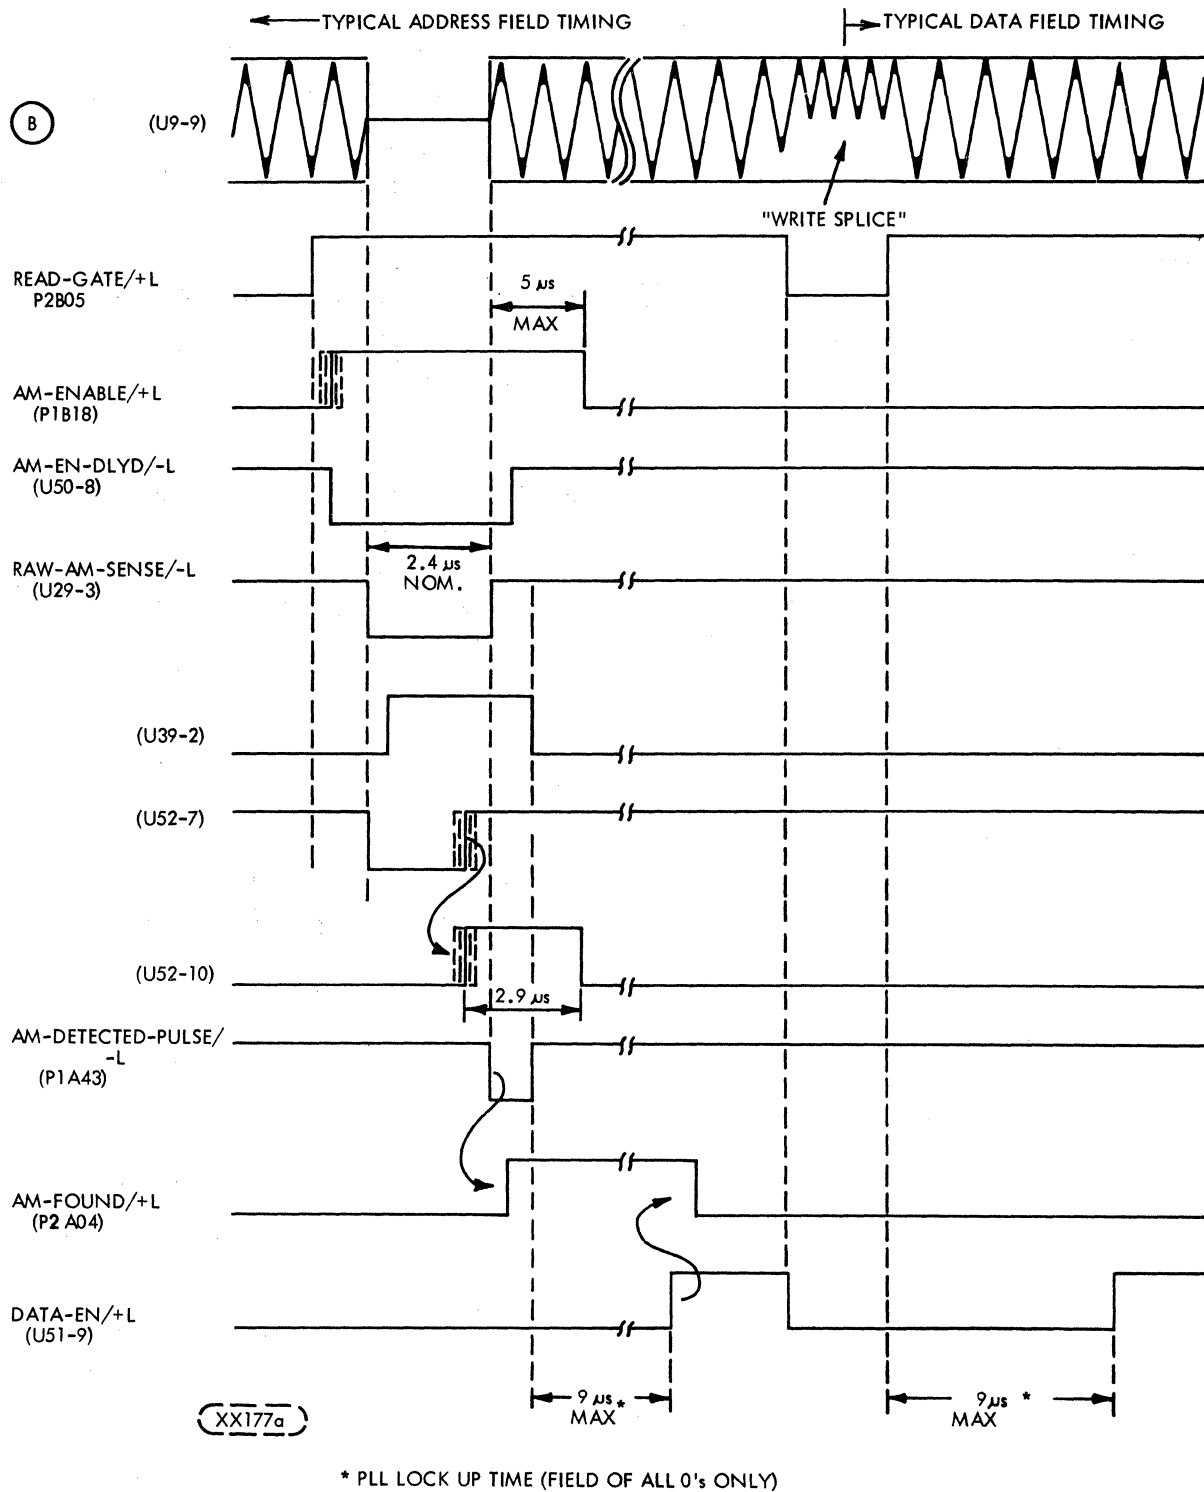


Figure 4-45. Address Detection and Data Enable Timing Diagram

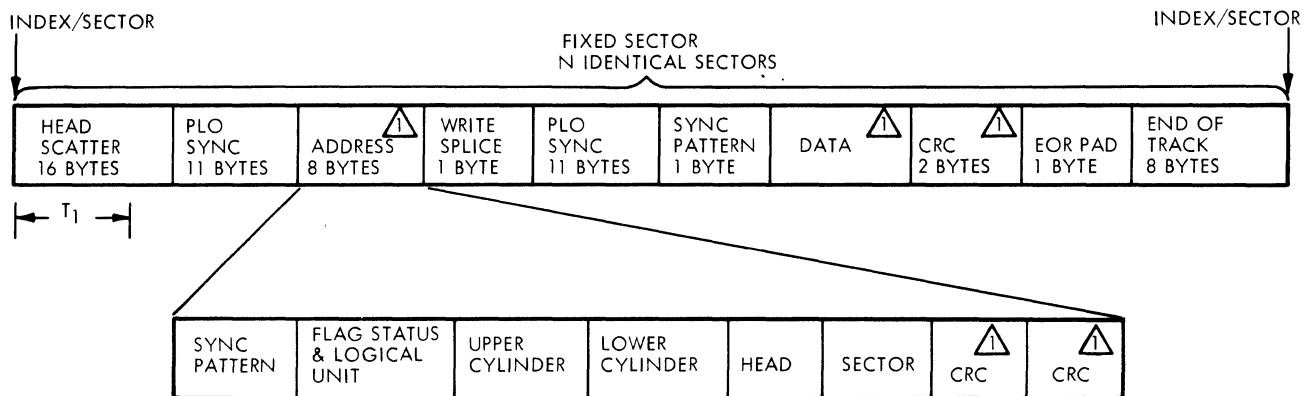

T_1 = TIME BETWEEN LEADING EDGE OF INDEX/SECTOR AND READ GATE IS 8 BYTES. A SPLICE POINT MAY EXIST WITHIN THIS AREA.

EXAMPLE NO. 1: WHAT IS DATA FIELD LENGTH USING 64 SECTORS?

$$\text{DATA FIELD} = \frac{\text{TOTAL BYTES/TRACK}}{\text{NUMBER OF SECTORS/TRACK}} - (\text{SYNC FIELDS, TOLERANCE GAPS, AND ADDRESS})$$

$$\text{DATA FIELD} = \frac{20\,160}{64} - 59 = 256 \frac{\text{BYTES}}{\text{SECTOR}}$$


$$\text{DATA} = 256 \text{ BYTES/SECTOR}$$

$$\% \text{ EFFICIENCY} = \frac{256 \times 64}{20\,160} \times 100 = 81\%$$

⚠ THESE AREAS ARE EXAMPLES ONLY AND MAY BE STRUCTURED TO SUIT INDIVIDUAL CUSTOMER REQUIREMENTS.

X388b

Figure 4-46. Fixed Sector Format

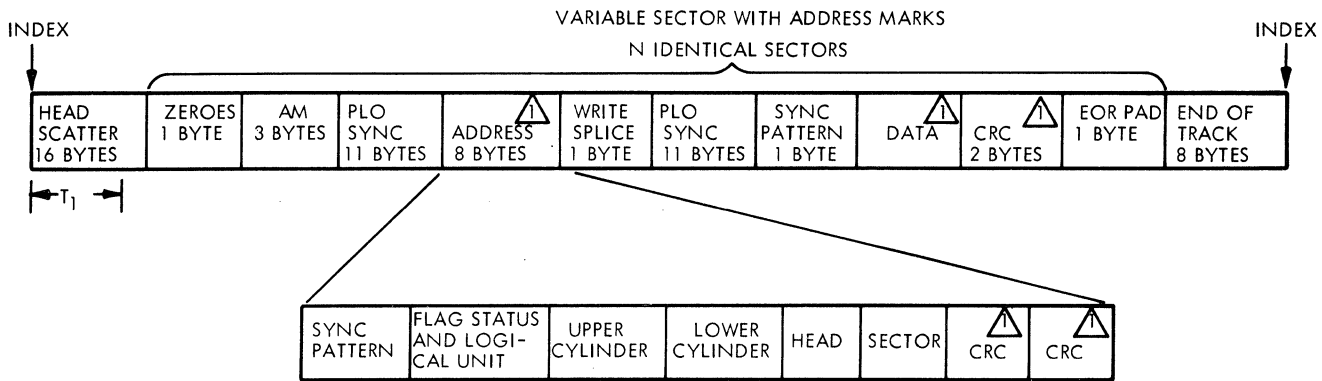

T₁ = TIME BETWEEN LEADING EDGE OF INDEX AND READ GATE IS 8 BYTES.
 A SPLICE POINT MAY EXIST WITHIN THIS AREA.

EXAMPLE NO. 1: WHAT IS DATA FIELD LENGTH USING 64 SECTORS?

$$\text{DATA FIELD} = \frac{\text{TOTAL BYTES/TRACK} - \text{MECHANICAL TOLERANCES}}{\text{NUMBER OF SECTORS/TRACK}} - (\text{SYNC FIELDS AND ADDRESS})$$

$$\text{DATA FIELD} = \frac{\frac{20\ 160}{\text{TRACK}} \text{ BYTES} - \frac{24}{\text{TRACK}} \text{ BYTES}}{64 \text{ SECTORS}} - \frac{39}{\text{SECTOR}} = \frac{275}{\text{SECTOR}}$$

$$\% \text{ EFFICIENCY} = \frac{275 \times 64}{20\ 160} \times 100 = 87\%$$

EXAMPLE NO. 2: WHAT IS NUMBER OF SECTORS USING 256 DATA BYTES?

$$N \text{ SECTORS} = \frac{20\ 160 - 24}{256 + 39} = 68 \text{ SECTORS}$$

$$\% \text{ EFFICIENCY} = \frac{256 \times 68}{20\ 160} \times 100 = 86\%$$

⚠ THESE AREAS ARE EXAMPLES ONLY AND MAY BE STRUCTURED TO SUIT INDIVIDUAL CUSTOMER REQUIREMENTS.

X393a

Figure 4-47. Variable Sector Format

5.1 INTRODUCTION

This section contains the intracabling diagram, a key to the logic diagram symbology, a table of integrated circuits used, printed board documentation, and subassembly schematics.

A device specification is located in front of this manual which defines the correct switch settings for the option switches located on the servo coarse circuit board.

5.2 INTRACABLING DIAGRAM



The intracabling diagram is shown in Figure 5-1. Sheet 1 shows the overall cabling between the mother board, printed circuit boards, and base pan electronics. Sheet 2 shows the location on the back panel of the connectors that are used to interface signals external to the electronics module.

5.3 CIRCUIT BOARD DIAGRAMS

The CMD printed circuit boards and associated diagrams are listed in Table 5.3-1. The power supply printed circuit boards are listed in paragraph 5.4.


<u>CKT BD IDENT</u>	<u>SLOT LOC</u>	<u>FIGURE</u>	<u>TITLE</u>
77616850	EM1	5-4	I/O STD-1CKT BD
77618950	EM1	5-4	I/O STD-1 CKT BD
77622351	EM2	5-5	CNTL/MUX CKT BD
77616650	EM2	5-5	CNTL/MUX CKT BD
77616690	EM2	5-5	CNTL/MUX CKT BD
77616700	EM2	5-5	CNTL/MUX CKT BD
77616731	EM2	5-5	CNTL/MUX CKT BD
75885602	EM3	5-6	SERVO COARSE CKT BD
77616722	EM3	5-6	SERVO COARSE CKT BD
77622400	EM3	5-6	SERVO COARSE CKT BD
77622440	EM3	5-6	SERVO COARSE CKT BD
75886300	EM6	5-7	SERVO FINE CKT BD
75886350	EM7	5-8	READ/WRITE CKT BD
75885752		5-9	READ/WRITE PREAMP CKT BD
75885800		5-10	SERVO PREAMP CKT BD
75885950		5-11	POWER AMPLIFIER CKT BD
77616710		5-12	OPERATOR CONTROL CKT BD
75895150		5-12	OPERATOR CONTROL CKT BD
75899901		5-12	OPERATOR CONTROL CKT BD
77622300		5-12	OPERATOR CONTROL CKT BD
75898850		5-13	RELAY CONTROL CKT BD (50/60 Hz) LO-V
75899120		5-13	RELAY CONTROL CKT BD (50 Hz) HI-V
75899130		5-13	RELAY CONTROL CKT BD (60 Hz) LO-V
75886100		5-14	TERMINATOR CKT BD
75895250		5-15	COMPONENT BD (32V FILTER) CKT BD
75886000	EM4	5-16	HEAD ALIGNMENT EXTENDER CKT BD
75832500		5-20	MOTHER BOARD (POWER SUPPLY)
75832900	PWR SPL	5-21	REGULATOR BOARD AXHV
75895039		(REF ONLY)	ELECTRONICS MODULE - PWA 5-1)

Table 5.3-1. CMD Circuit Boards

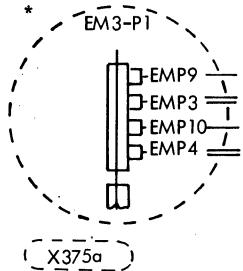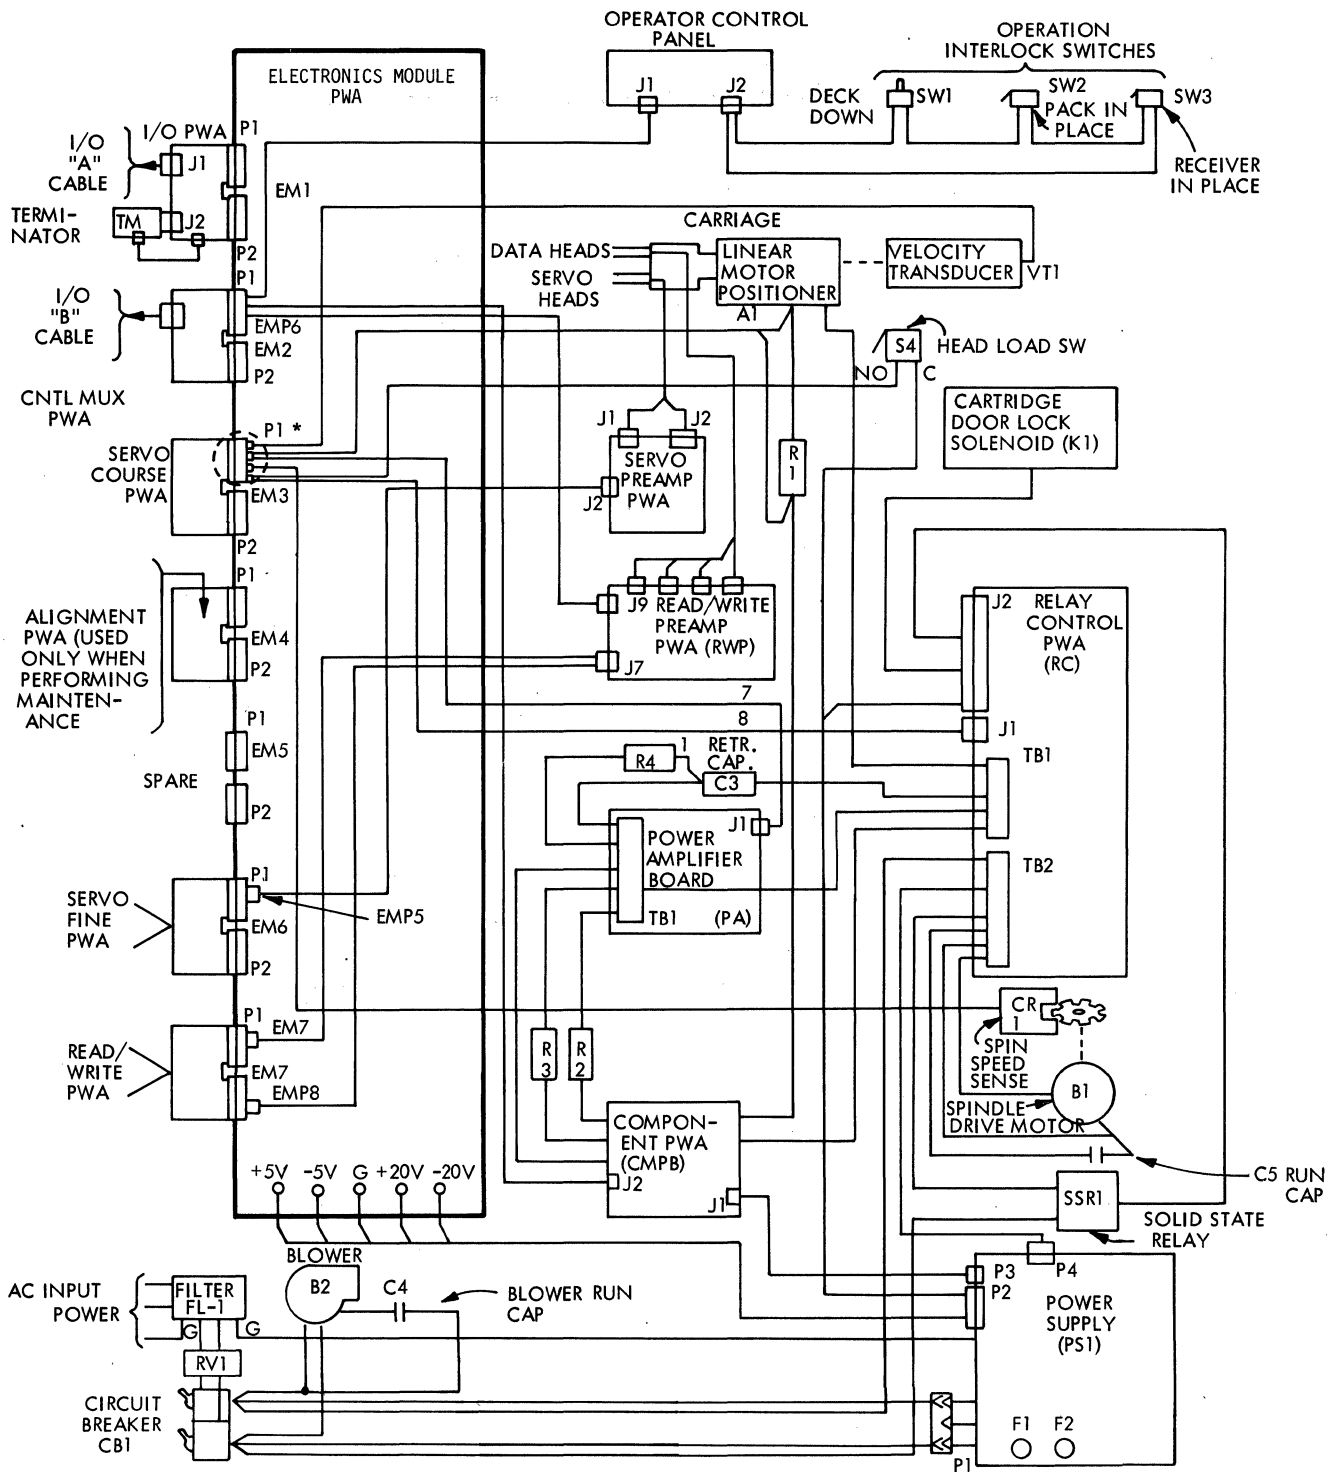

NOTE: SEE FIGURE 5-17 FOR DETAILED SCHEMATIC OF MOST OF THE CIRCUITS SHOWN HERE.

Figure 5-1. Intracabling Diagram (Sheet 1 of 2)

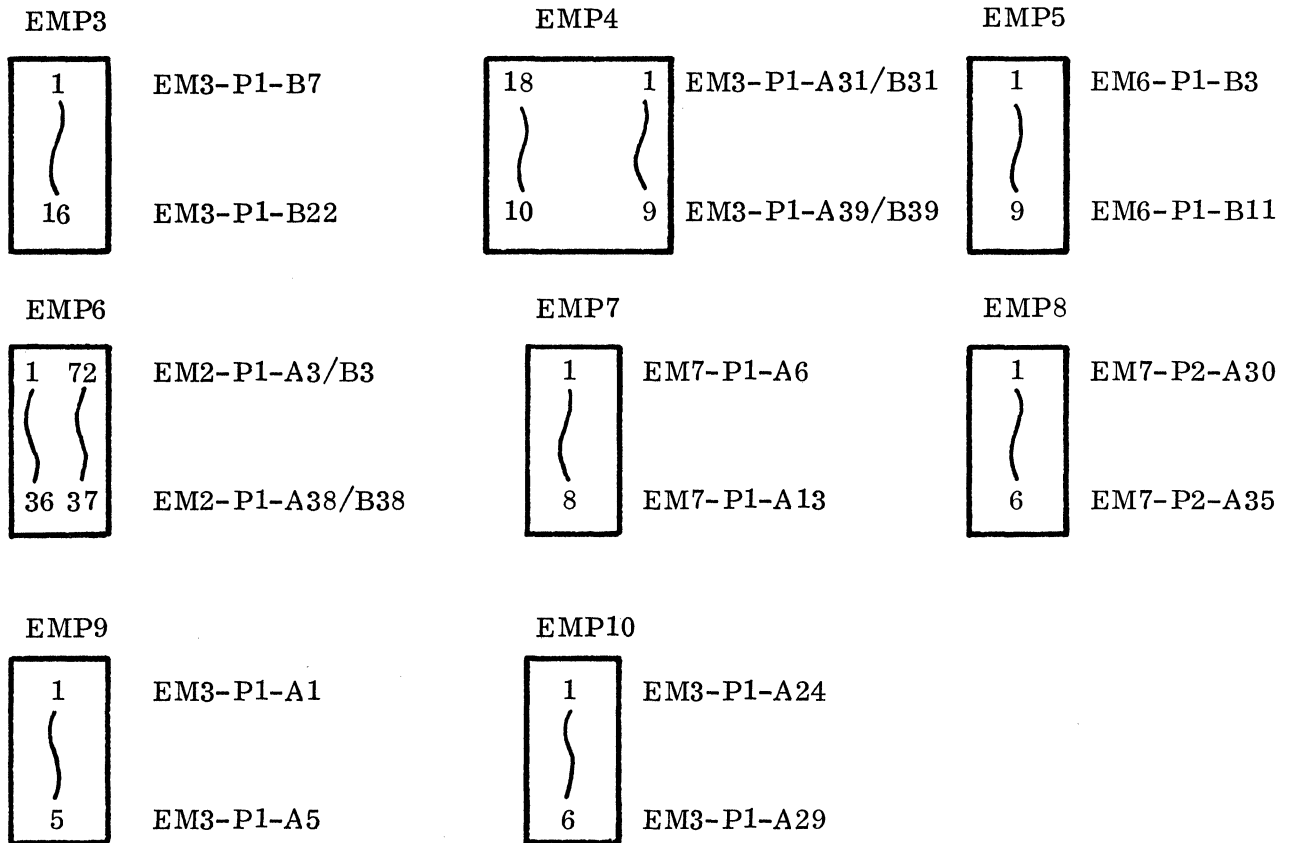



NOTE: Sleeving is used on back panel pins adjacent to connectors as a guide for locating correct pins if connectors are removed.

Figure 5-1. Location of Connectors on Back Panel (Sheet 2 of 2)

5.3.1 POINT-TO-POINT LOGIC INTERCONNECTIONS BETWEEN CIRCUIT BOARDS

An interconnection sheet is provided with each set of documentation for the circuit boards and base pan electronics. This sheet contains interconnection data to allow the user to trace each signal to its source or destination. A Typical entry for a signal is shown in Figure 5-2a. It should be noted that the total documentation set for each PWA consists of a certain number of "sheets," and to differentiate, the schematic subset for each PWA consists of a certain number of "pages."

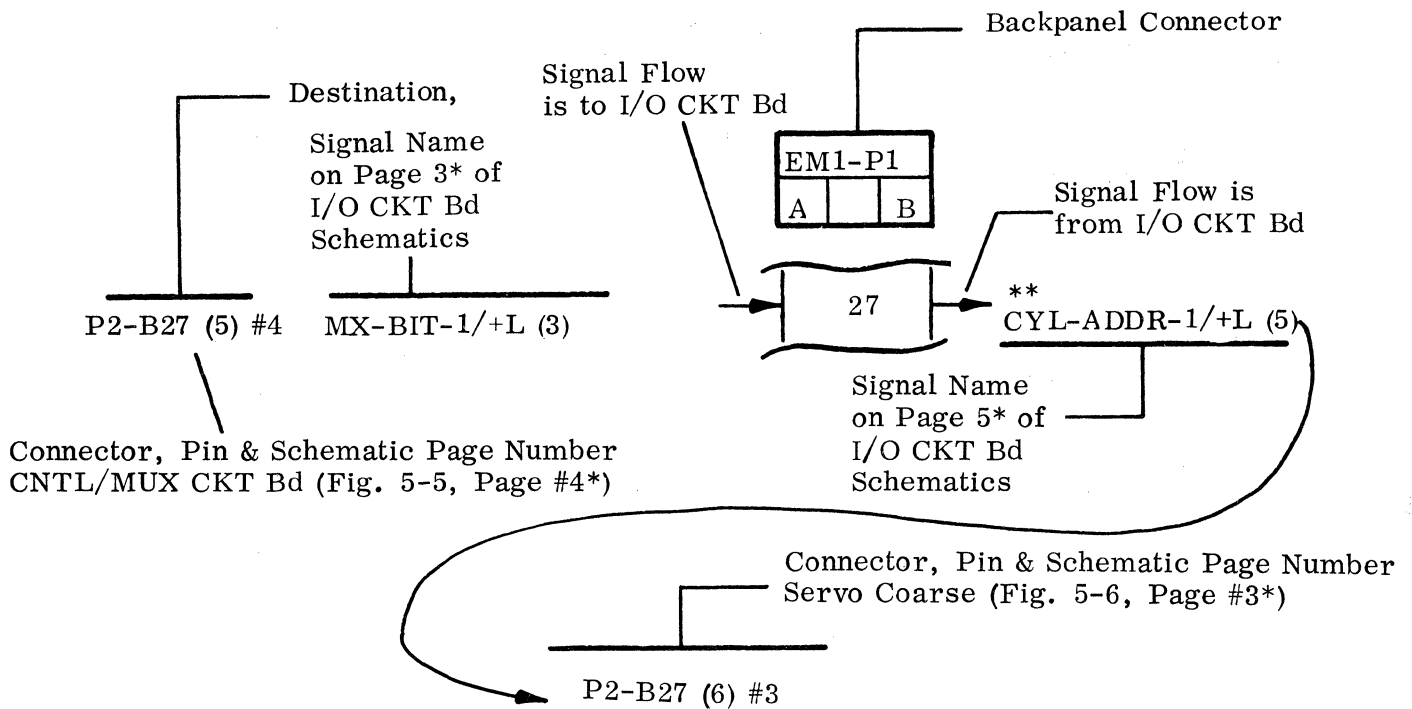

*The schematic page number of each schematic page is shown in a bubble  in the upper right hand corner of each schematic page.


**A line with no arrow head indicates that the pin is merely a tie point for a signal which is not used on the PWA for which the interconnection sheet applies.

Figure 5-2a. Typical Interconnection Sheet Entry

5.3.2 SCHEMATIC DIAGRAM INTERCONNECTION SYMBOLOGY

Multiple sheet (SET of pages) circuit board schematics are sequentially numbered (1, 2, 3 etc) in the upper right-hand corner of each schematic sheet. Symbology for Sheet to sheet connections and board to board connections are as follows:

- Sheet to Sheet ON PAGE example:




1 = Signal "from" sheet 1 of SET

D = ON sheet reference (from sht 1 of set)

HDA = Signal name (from sht 1 of set, location $\text{\textcircled{D}}$)

- Sheet to Sheet OFF PAGE example:




2 = Signal "to" sheet 2 of SET

D = OFF sheet reference (to sheet 2 of set)

HDA = Signal name (to sheet 2 of set, location $\text{\textcircled{D}}$)


- Board to Board ON PAGE example:



A27 = Pin Location of Board connector (Ref Figure 5-2a)

MX-BIT-1/+L = Signal name (Ref Figure 5-2a)

- Board to Board OFF PAGE example:



B27 = Pin location of board connector (Ref Figure 5-2a)

CYL-ADDR-1/+L = Signal name (Ref Figure 5-2a)

For sheet-to-sheet signal tracing within a board schematic, the schematic sheet numbers referenced are located (circled) in the upper right-hand or (left-hand) corner of the schematic sheet.

5.4 MAJOR ELECTRICAL DIAGRAMS

AC Power & DC Power Distribution, Interlock Switches
and Speed Sensor CKT Diagram

Figure

5-17

5.5 POWER SUPPLY DIAGRAMS

Power Supply Wiring Diagram (60 Hz)
Power Supply Wiring Diagram (50 Hz)
Mother Board (75832500) Diagram
Regulator Board (75832900)

Figure

5-18

5-19

5-20

5-21

5.6 LOGIC DIAGRAM SYMBOLOGY

5.6.1 GENERAL INFORMATION

Logic symbols are drawn with inputs on the left and outputs on the right whenever space and layout permit.

Power supply connections, discrete timing components, etc, may be shown connected to the top or bottom of the symbol. Unused pins and unused elements need not be shown. Figure 5-2b illustrates functionally equivalent symbols.

5.6.2 GENERAL SIGNAL ANNOTATION

S = Set input to bistable device

R = Reset (Clear) input to bistable device

G = Gate input has no direct action on circuit, but must be present before inputs (and/or outputs) are able to function. If more than one gate is used a numeric suffix is added (G1, G2, etc.)

D = Identifies a signal which requires the presence of another signal to perform its function.


C = Strobe pulse. Usually used to gate "D" inputs into a bistable device.

T = Toggle input. Bistable device changes state each time "T" assumes its specified state.

J = J output conditioned by leading edge of dynamic toggle (G).

K = K output conditioned by leading edge of dynamic toggle (G).

243S = Example CDC element identifies

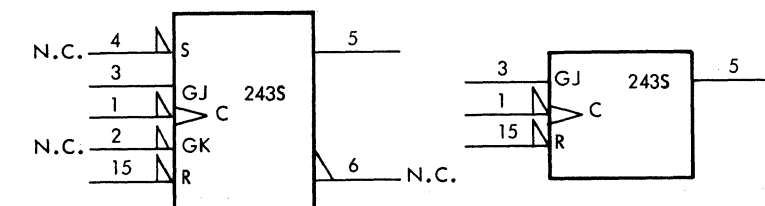

BOTH SYMBOLS REPRESENT A BI-STABLE JK F/F
CIRCUIT WITH SOME OF THE PINS UNUSED.
(N.C. INDICATES "NOT CONNECTED")


(X370b)

Figure 5-2b. Functionally Equivalent Symbols

5.6.3 SYMBOLOGY

Logic Symbols are as described in Table 5-1.

Table 5-1. Logic Symbology

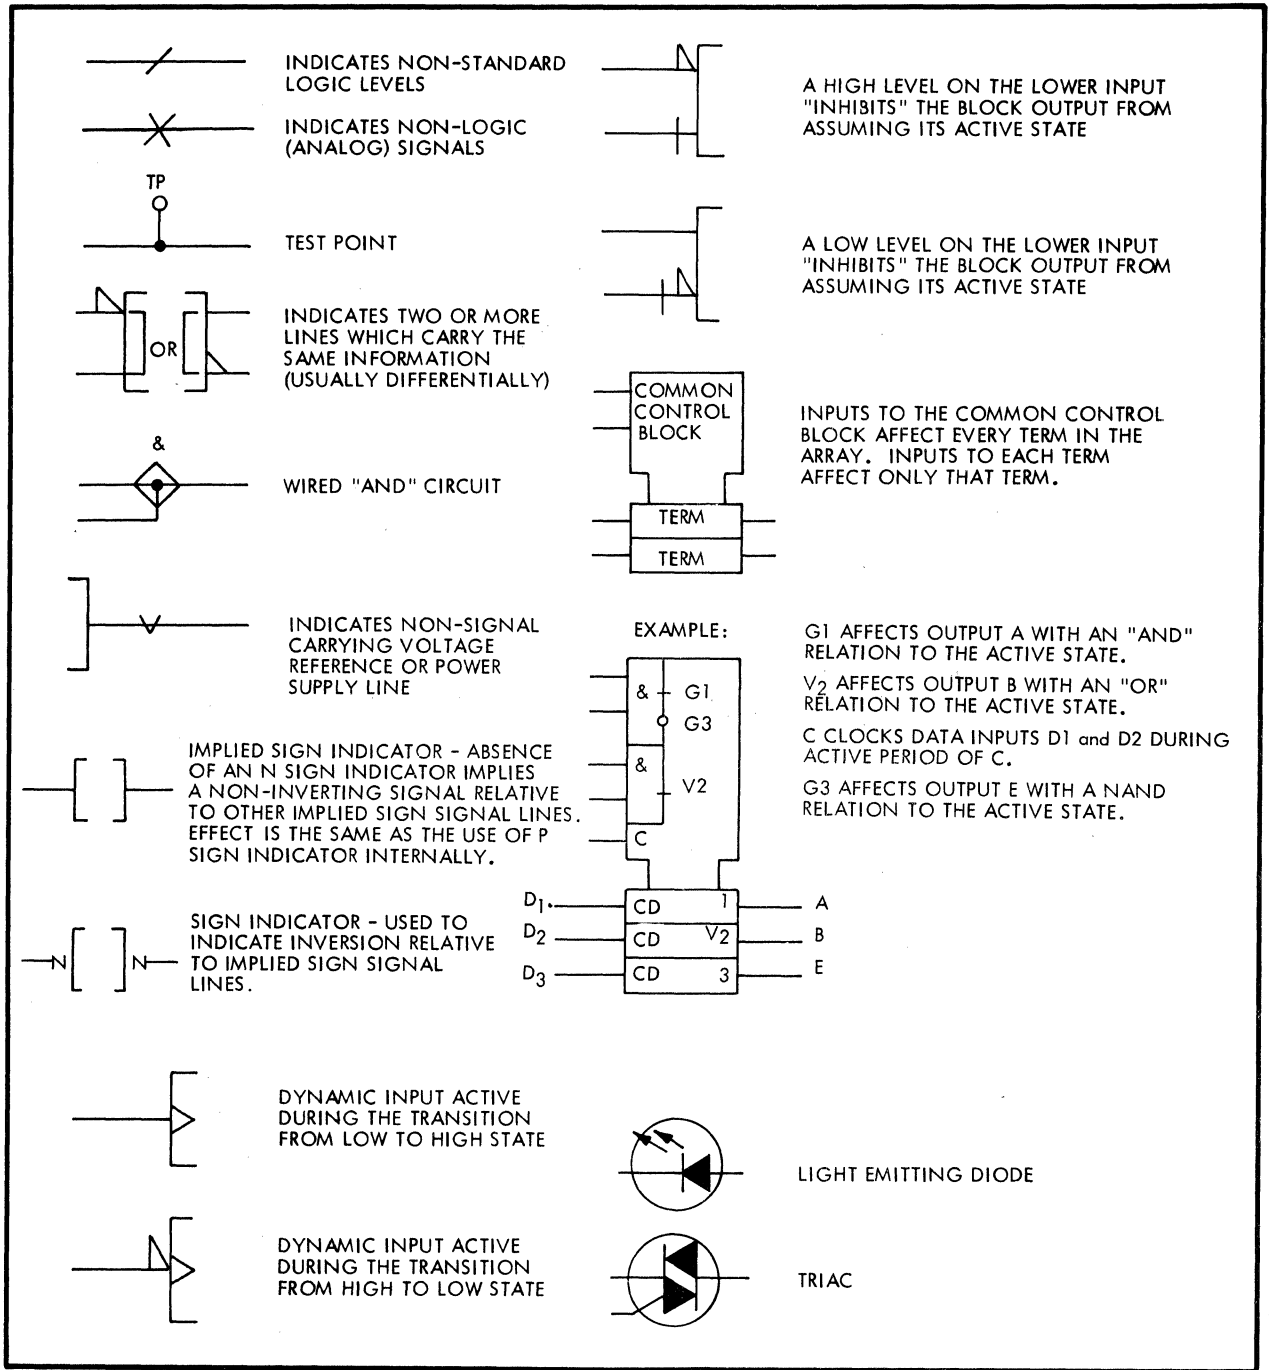





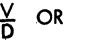
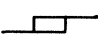
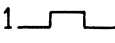








(X370a)

5.6.4 FUNCTION SYMBOLOGY

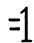Function symbols are as described in Table 5-2.

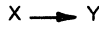Table 5-2. Function Symbols

CONTROL GATE INPUT - AFFECTS INPUTS OR OUTPUTS WITH "AND" RELATION TO ACTIVE STATE	
	OSCILLATOR
	AMPLIFIER
	"AND" GATE
	"OR" GATE
	"EXCLUSIVE OR"
	FUNCTION GENERATOR
	LEVEL CONVERSION
	SCHMITT TRIGGER
	SINGLE SHOT
	SUMMING CIRCUIT
	THRESHOLD (ANALOG OUTPUT) OR COMPARATOR (BINARY OUTPUT) PRODUCES A CHANGE IN THE OUTPUT SIGNAL WHEN INPUT EXCEEDS A PREDETERMINED LEVEL "m".
D	DATA INPUT
C	CONTROL or CLOCK INPUT
G	CONTROL GATE INPUT - AFFECTS INPUTS OR OUTPUTS WITH "AND" RELATION TO ACTIVE STATE.
V	CONTROL GATE INPUT - AFFECTS INPUTS OR OUTPUTS WITH AN "OR" RELATION TO THE ACTIVE STATE.
	DECODER
	DIGITAL TO ANALOG CONVERTER
mVR	VOLTAGE REGULATOR OUTPUT VALUE "m"
MUX	MULTIPLEXER
SR	SHIFT REGISTER
CNTR	COUNTER
ALU	ARITHMETIC LOGIC UNIT
RCVR	RECEIVER
(M)	ANNOTATION RESTRICTING THE NUMBER OF COINCIDENT INPUTS OR OUTPUTS GROUPED BELOW IT ACCORDING TO M. EXAMPLE: (≤ 1) MEANS ONLY ONE OR LESS COINCIDENT INPUT OR OUTPUT BELOW ALLOWED.
	WIRED "OR" OR WIRED "AND", OR OPEN COLLECTOR OR EMITTER CIRCUIT CAPABLE OF BEING USED AS WIRED "OR" OR "AND", SUCH AS ON BUS DRIVER CIRCUITS.
	NEGATING INDICATOR

(X368a)

5.6.5 CIRCUIT TYPES AND WAVEFORMS

Figure 5-3a illustrates a typical integrated circuit. Figures 5-3b through 5-3s illustrates some of the more complicated circuits utilized in the logic.

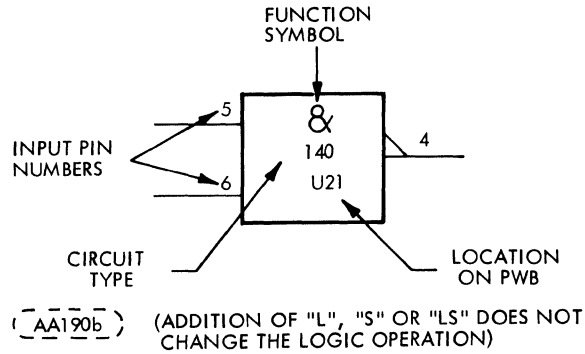


Figure 5-3a. Typical Integrated Circuit

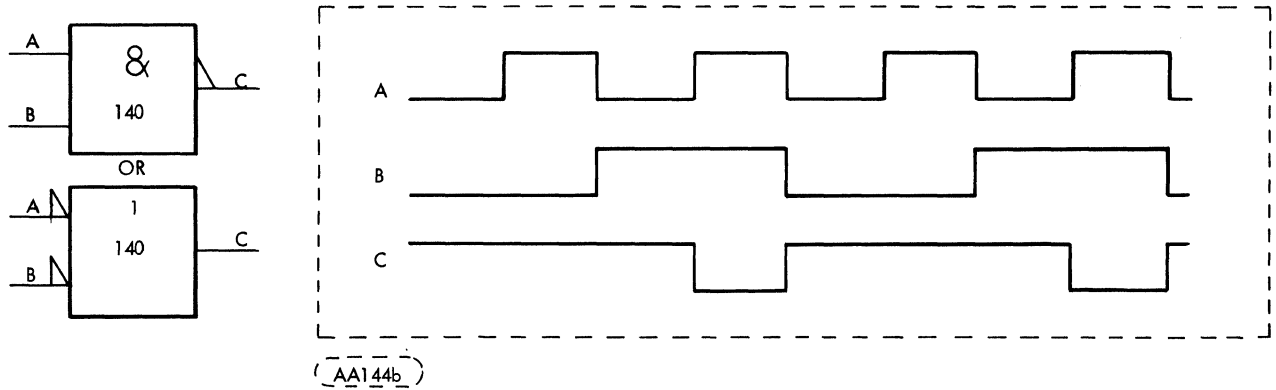


Figure 5-3b. Positive NAND Negative NOR

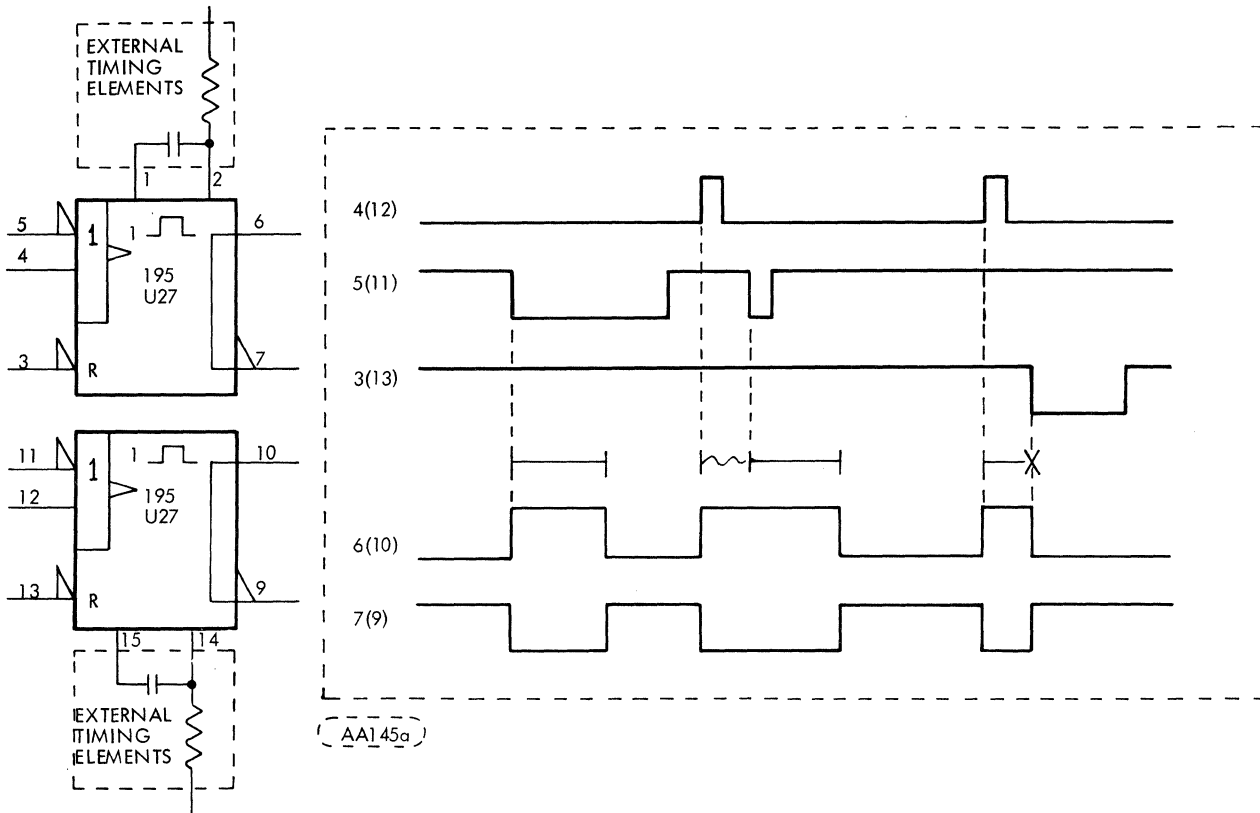


Figure 5-3c. Retriggerable, Resettable, Monostable Multivibrator (One Spot)



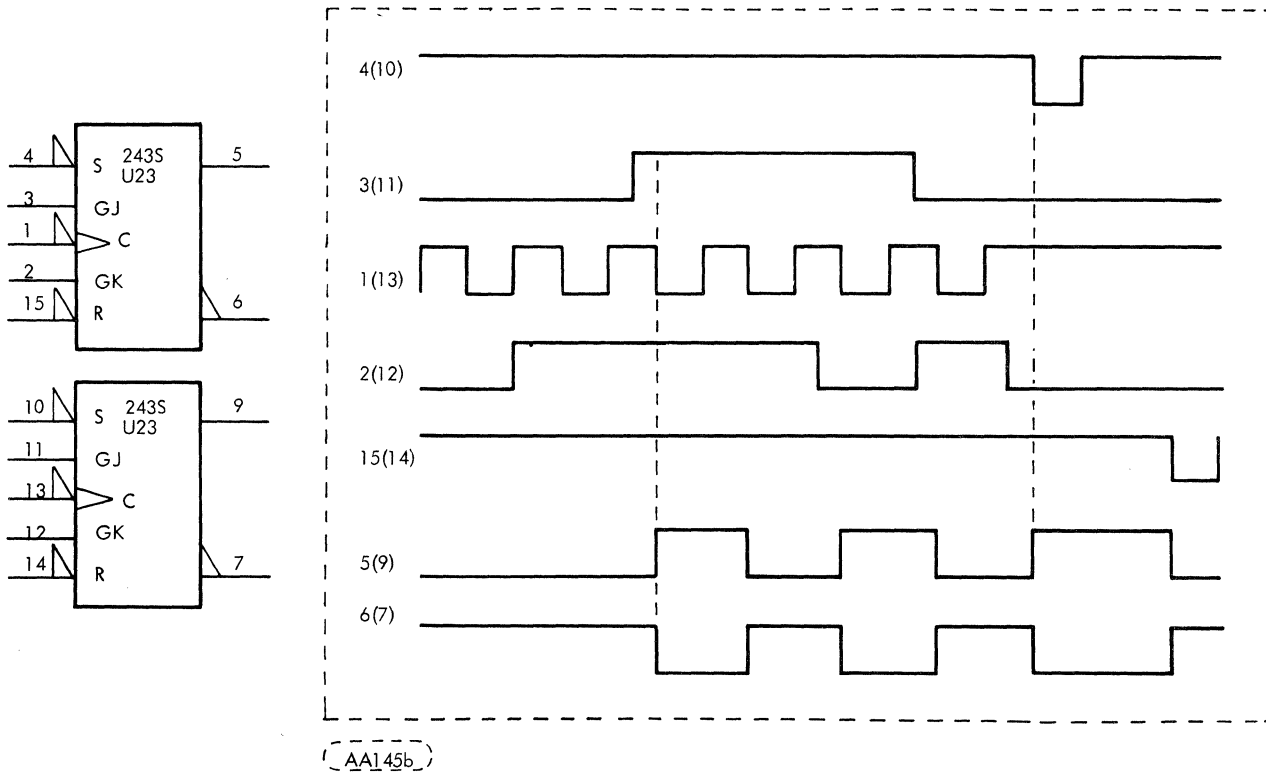


Figure 5-3d. "JK" Negative Edge Triggered Type F/F

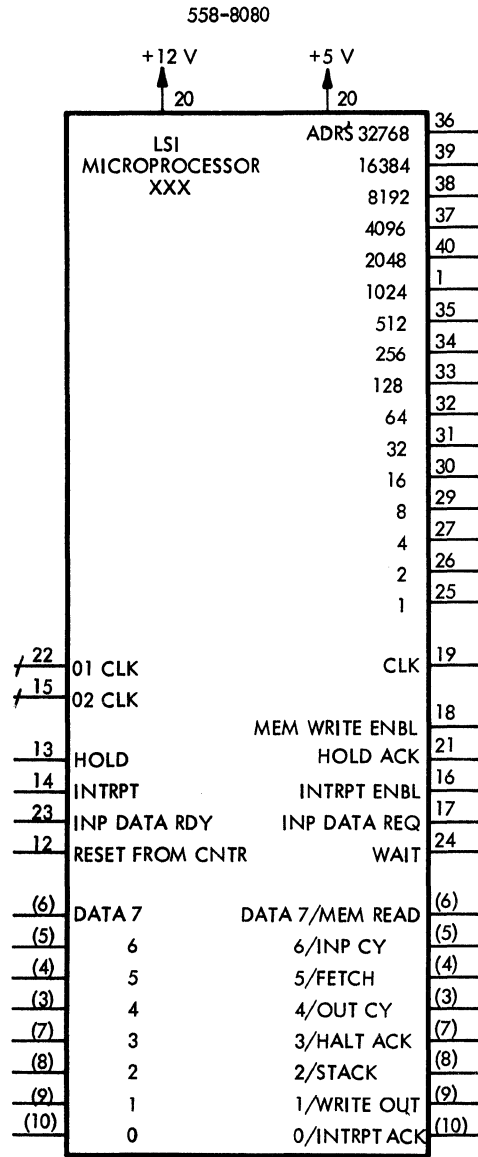

(X368b)


Figure 5-3e. 8080A Microprocessor (Sheet 1 of 2)

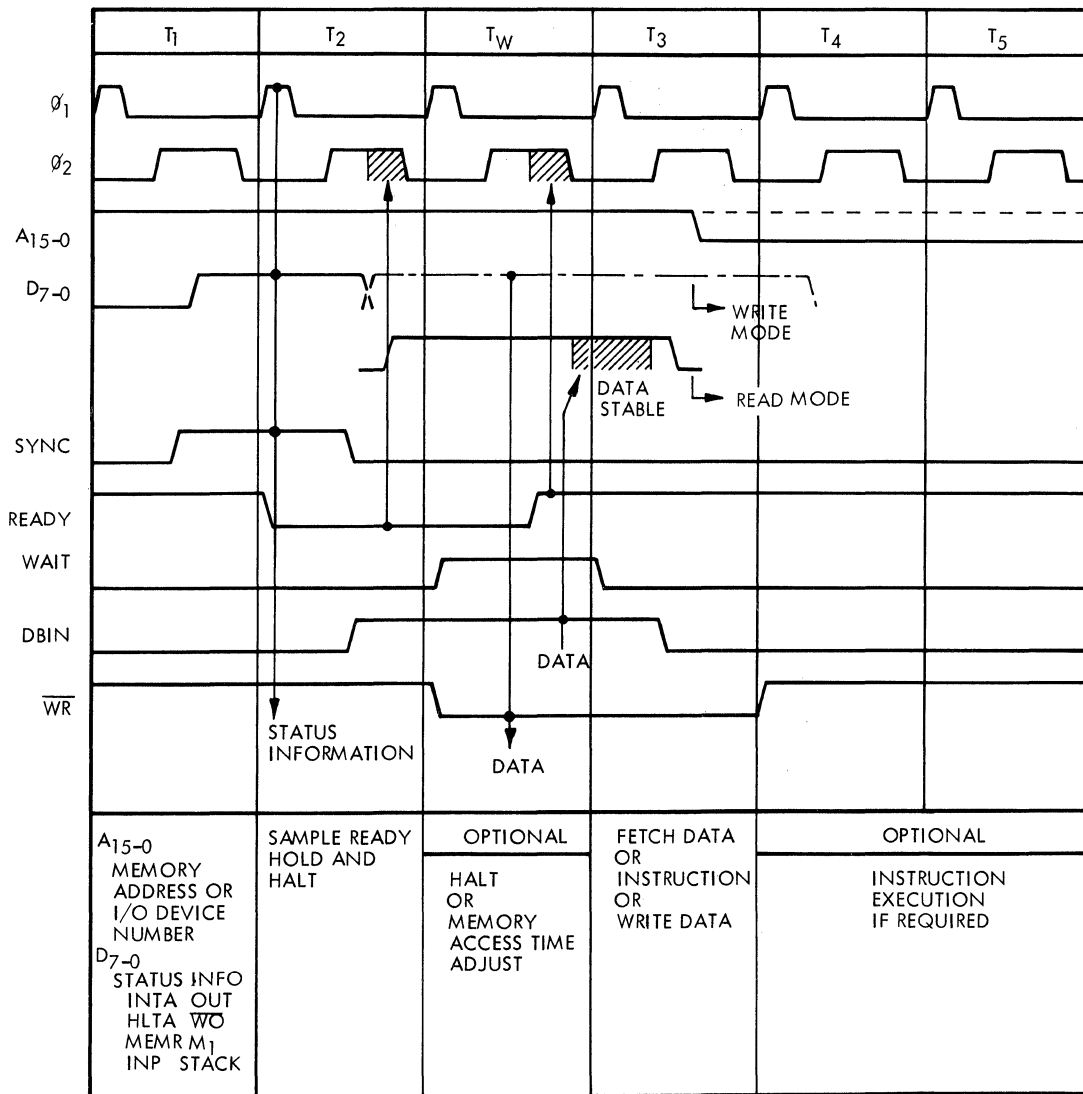

BASIC 8080 INSTRUCTION CYCLE

X368c

Figure 5-3e. 8080A Microprocessor (Sheet 2 of 2)

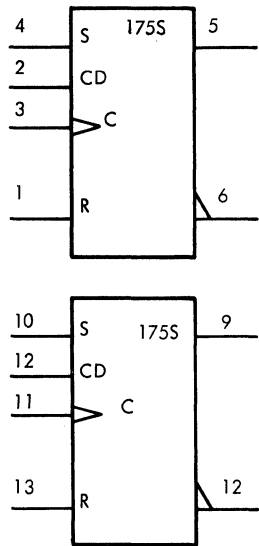

BB1636





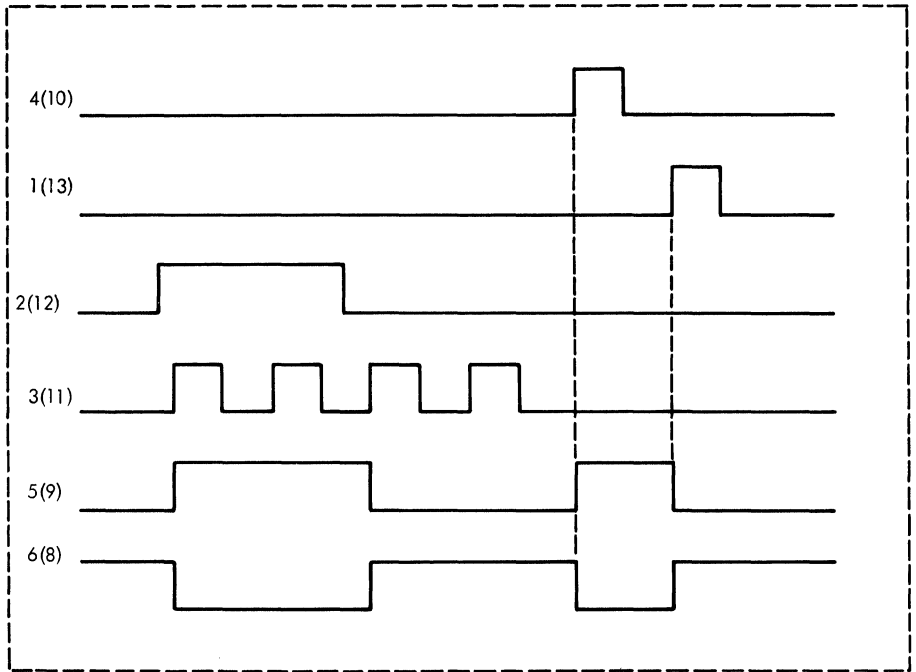


Figure 5-3f. "D" Type F/F

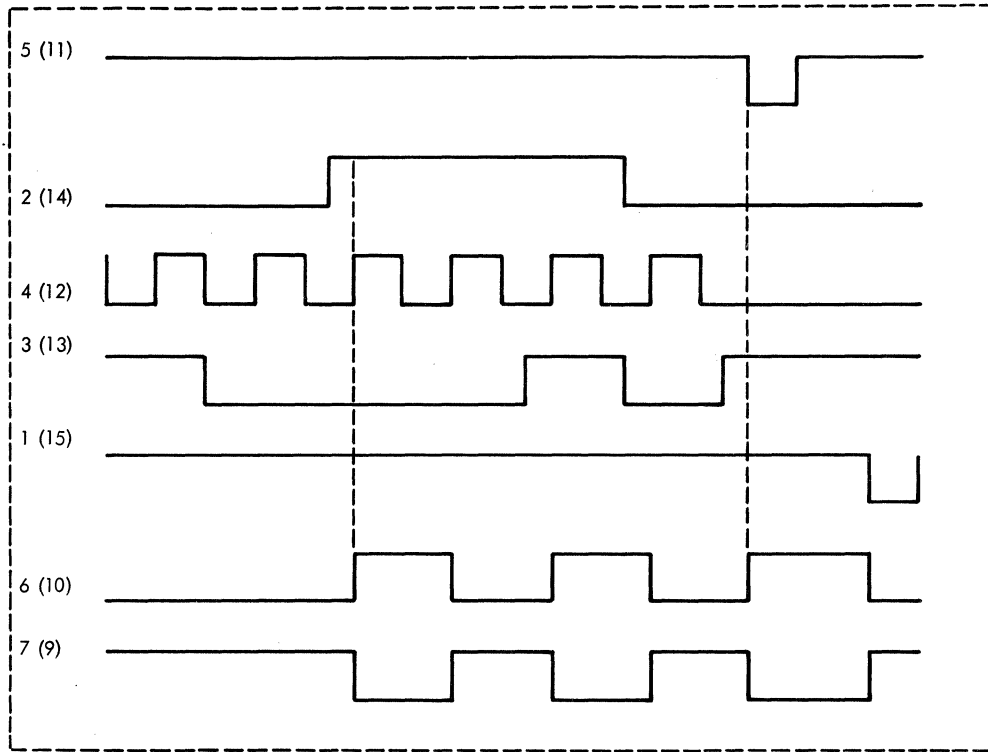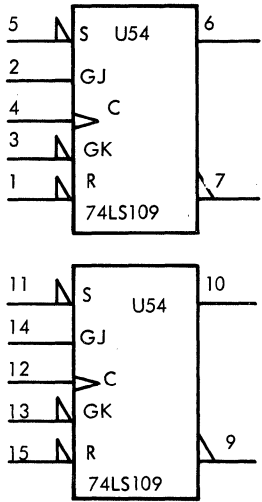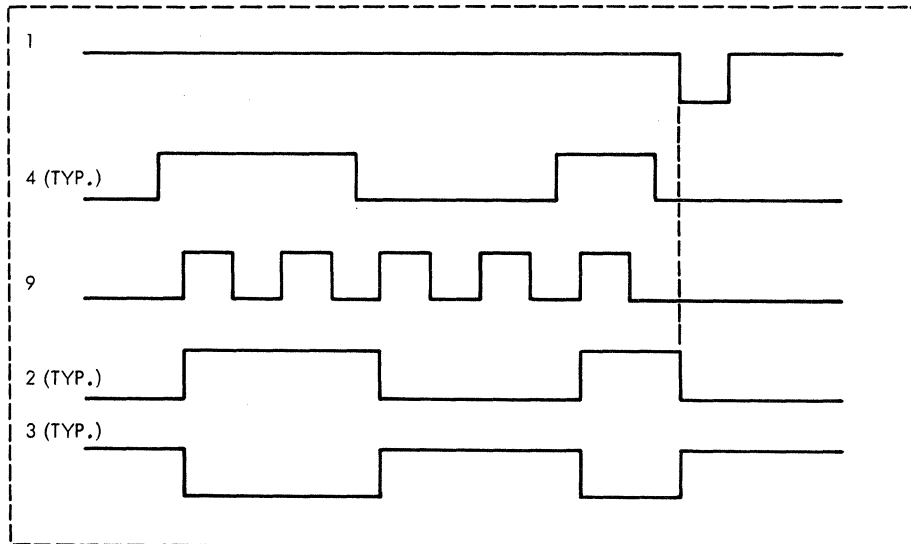


BB164a

Figure 5-3g. "JK" Positive Edge Triggered Type F/F

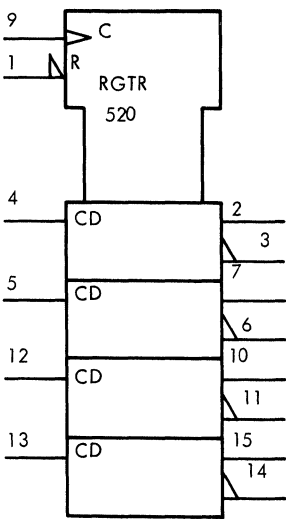

BB164b



Figure 5-3h. QUAL TTL "D" Type F/F

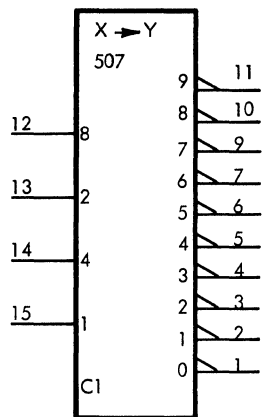

INPUTS				OUTPUT COUNT (ONE LOW AT A TIME)										
8	4	2	1	9	8	7	6	5	4	3	2	1	0	
12	13	14	15	11	10	9	7	6	5	4	3	2	1	0 ← PIN
L	L	L	L	H	H	H	H	H	H	H	H	H	H	L
L	L	L	H	H	H	H	H	H	H	H	H	H	L	H
L	L	H	L	H	H	H	H	H	H	H	L	H	H	H
L	L	H	H	H	H	H	H	H	H	L	H	H	H	H
L	H	L	L	H	H	H	H	L	H	H	H	H	H	H
L	H	L	H	H	H	H	L	H	H	H	H	H	H	H
L	H	H	L	H	H	L	H	H	H	H	H	H	H	H
L	H	H	H	H	H	L	H	H	H	H	H	H	H	H
H	L	L	L	H	L	H	H	H	H	H	H	H	H	H
H	L	L	H	L	H	H	H	H	H	H	H	H	H	H

AA196a

Figure 5-3i. BCD - Decimal Decoder

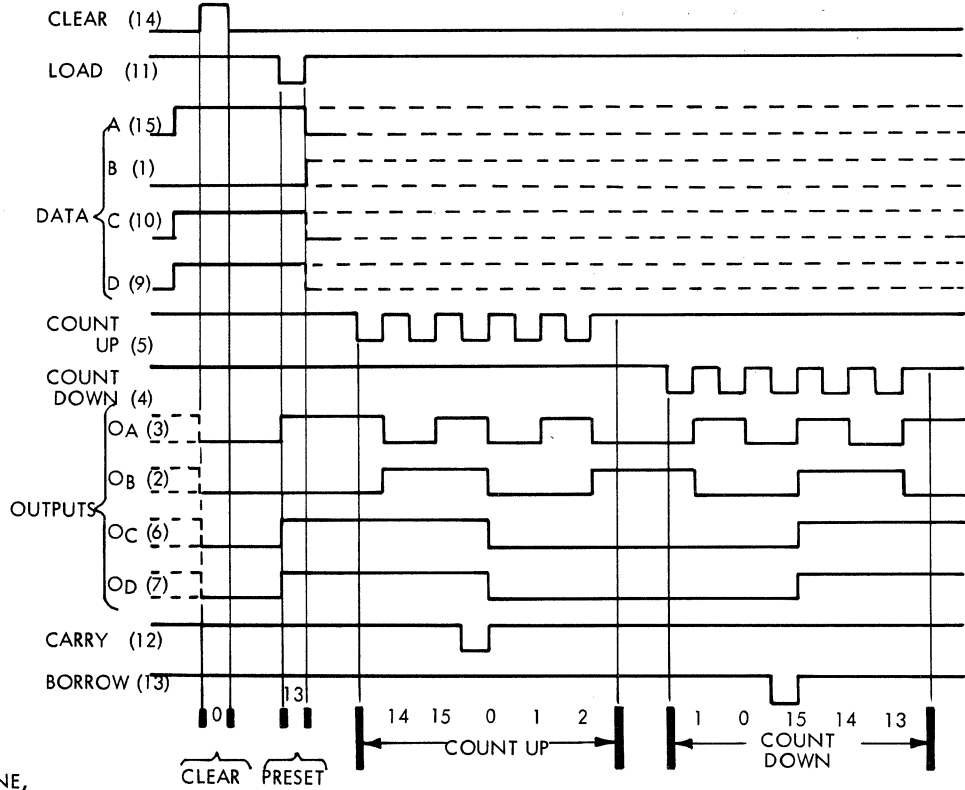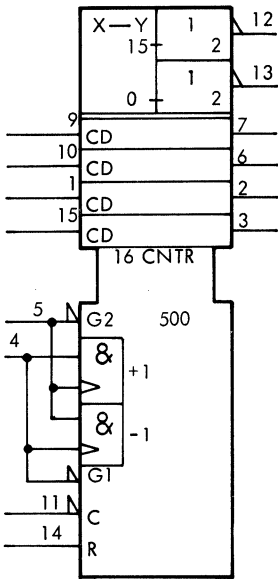

SEQUENCE:

- (1) CLEAR OUTPUTS TO ZERO.
- (2) LOAD (PRESET) TO BINARY THIRTEEN.
- (3) COUNT UP TO FOURTEEN, FIFTEEN, CARRY, ZERO, ONE, AND TWO.
- (4) COUNT DOWN TO ONE, ZERO, BORROW, FIFTEEN, FOURTEEN, AND THIRTEEN.

NOTES:


- (A) CLEAR OVERRIDES LOAD, DATA, AND COUNT INPUTS.
- (B) WHEN COUNTING UP, COUNT-DOWN INPUT MUST BE HIGH: WHEN COUNTING DOWN, COUNT-UP INPUT MUST BE HIGH.

Figure 5-3j. 500 Up/Down Counter

TYPICAL CLEAR, PRESET, COUNT, AND INHIBIT SEQUENCES

ILLUSTRATED BELOW IS THE FOLLOWING SEQUENCE:

1. CLEAR OUTPUTS TO ZERO.
2. PRESET TO BINARY TWELVE.
3. COUNT TO THIRTEEN, FOURTEEN, FIFTEEN, ZERO, ONE, AND TWO.

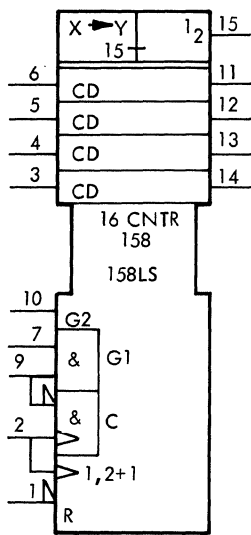

(X366a)

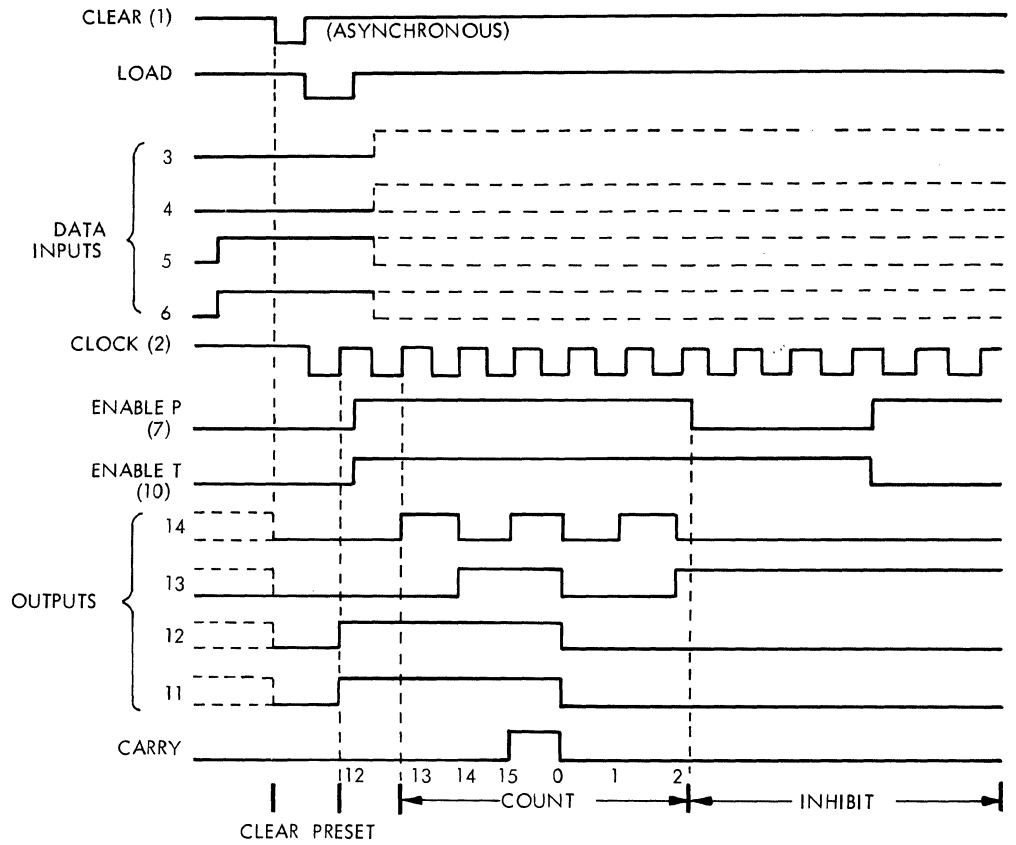


Figure 5-3k. 4-Bit Binary Counter

TYPICAL CLEAR, SHIFT, AND CLEAR SEQUENCES

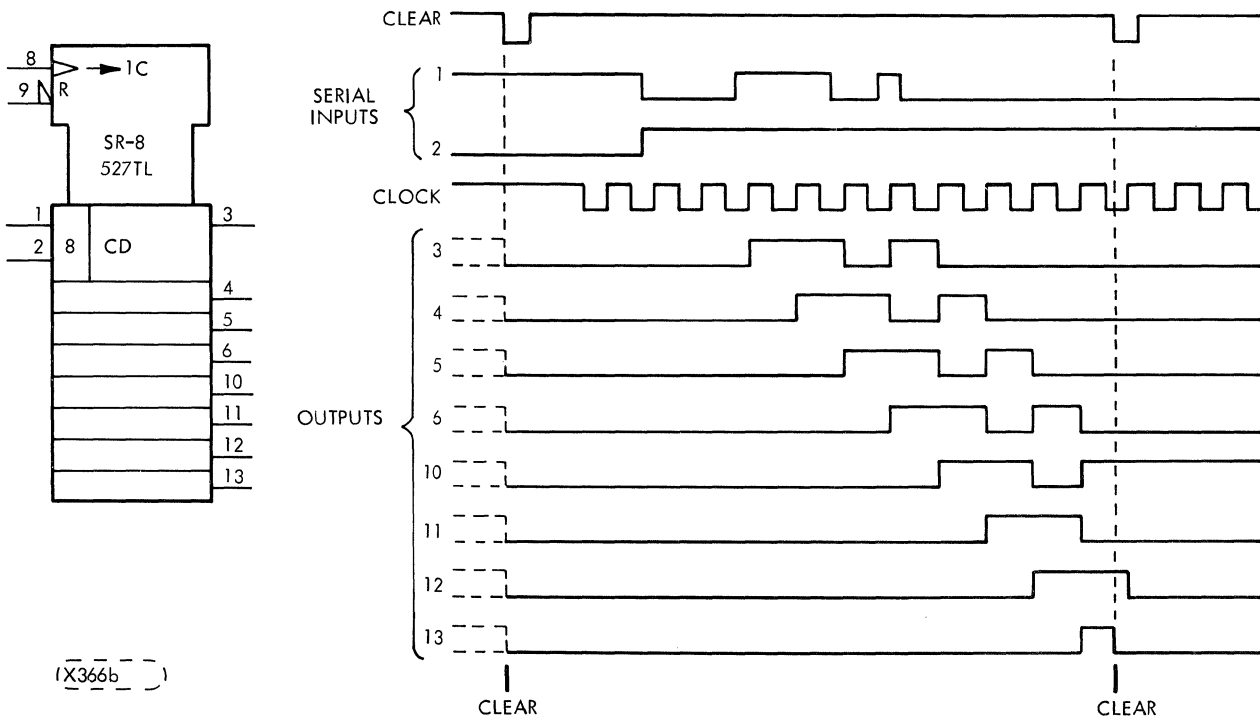


Figure 5-31. Serial In-Parallel Out 8-Bit Register

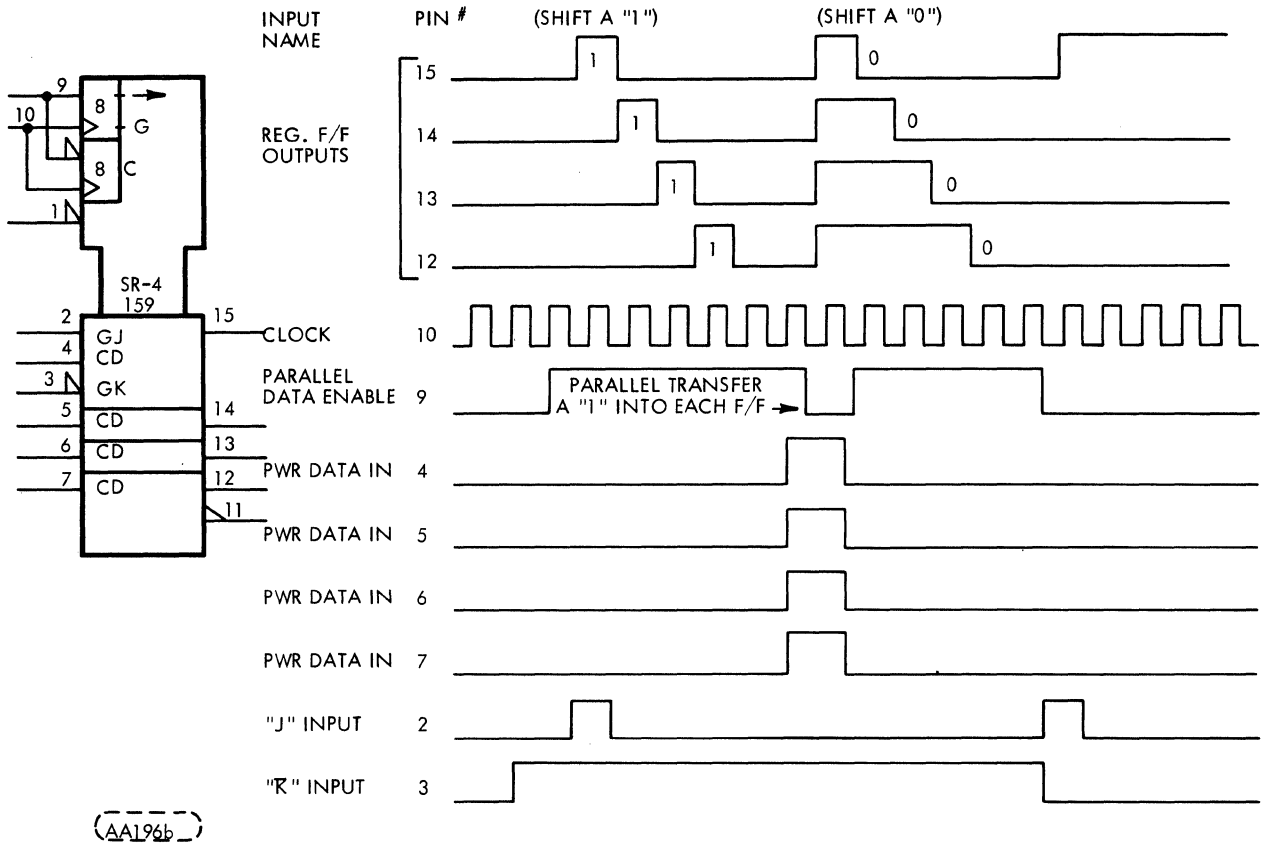


Figure 5-3m. Four FLIP-FLOP Shift Register


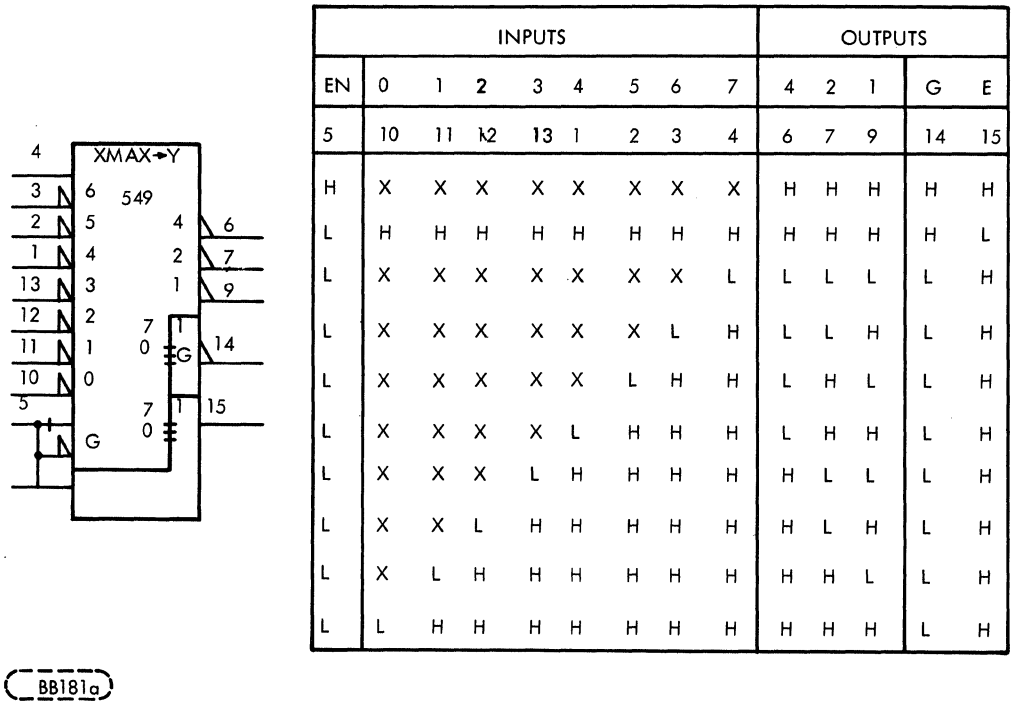



Figure 5-3n. 1 Out of 4 Decoder

Schematic Symbol:

8228 Block Diagram

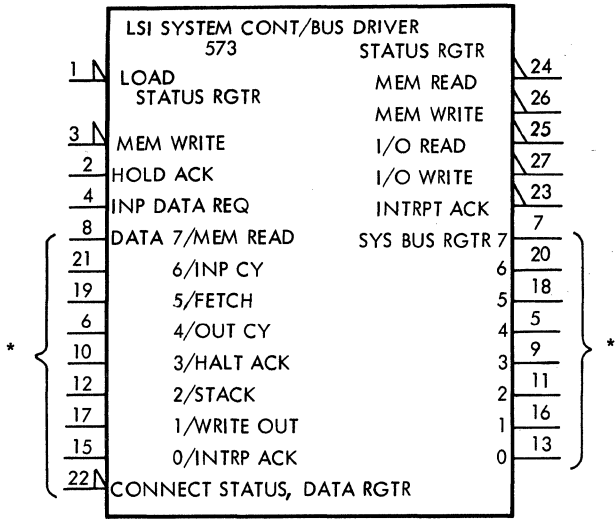

* BI-DIRECTIONAL DATA LINES

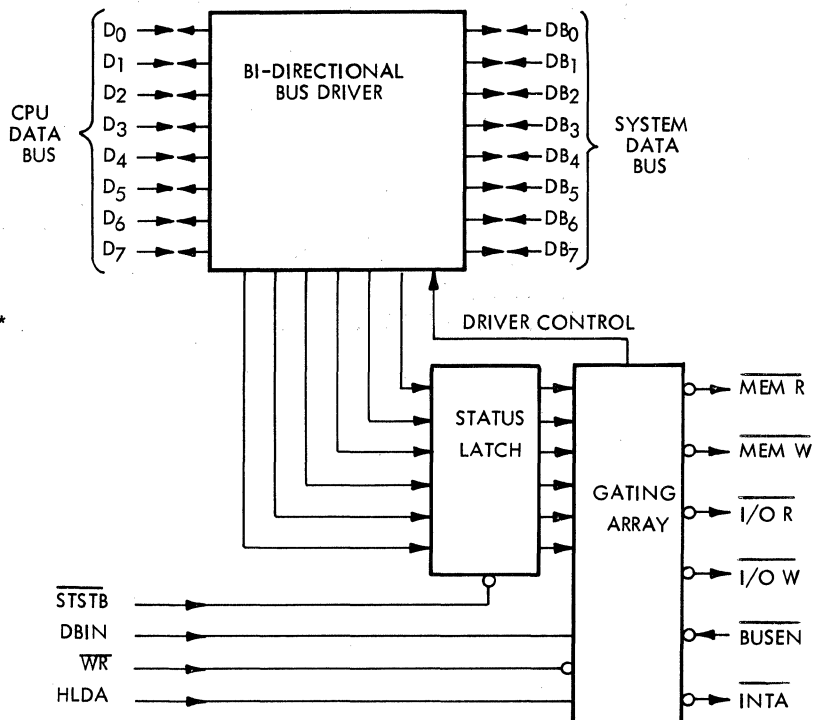

Pin Names


D7-D0	DATA BUS (8080 SIDE)
DB7-DB0	DATA BUS (SYSTEM SIDE)
I/O R	I/O READ
I/O W	I/O WRITE
MEMR	MEMORY READ
MEMW	MEMORY WRITE
DBIN	DBIN (FROM 8080)

INTA	INTERRUPT ACKNOWLEDGE
HLDA	HLDA (FROM 8080)
WR	WR (FROM 8080)
BUSEN	BUS ENABLE INPUT
STSTB	STATUS STROBE (FROM 8224)
VCC	+5 V
GND	0 VOLTS

(X372a)

Figure 5-3o. System Controller/ Bus Driver for Microprocessor System
(Sheet 1 of 2)

Typical Timing

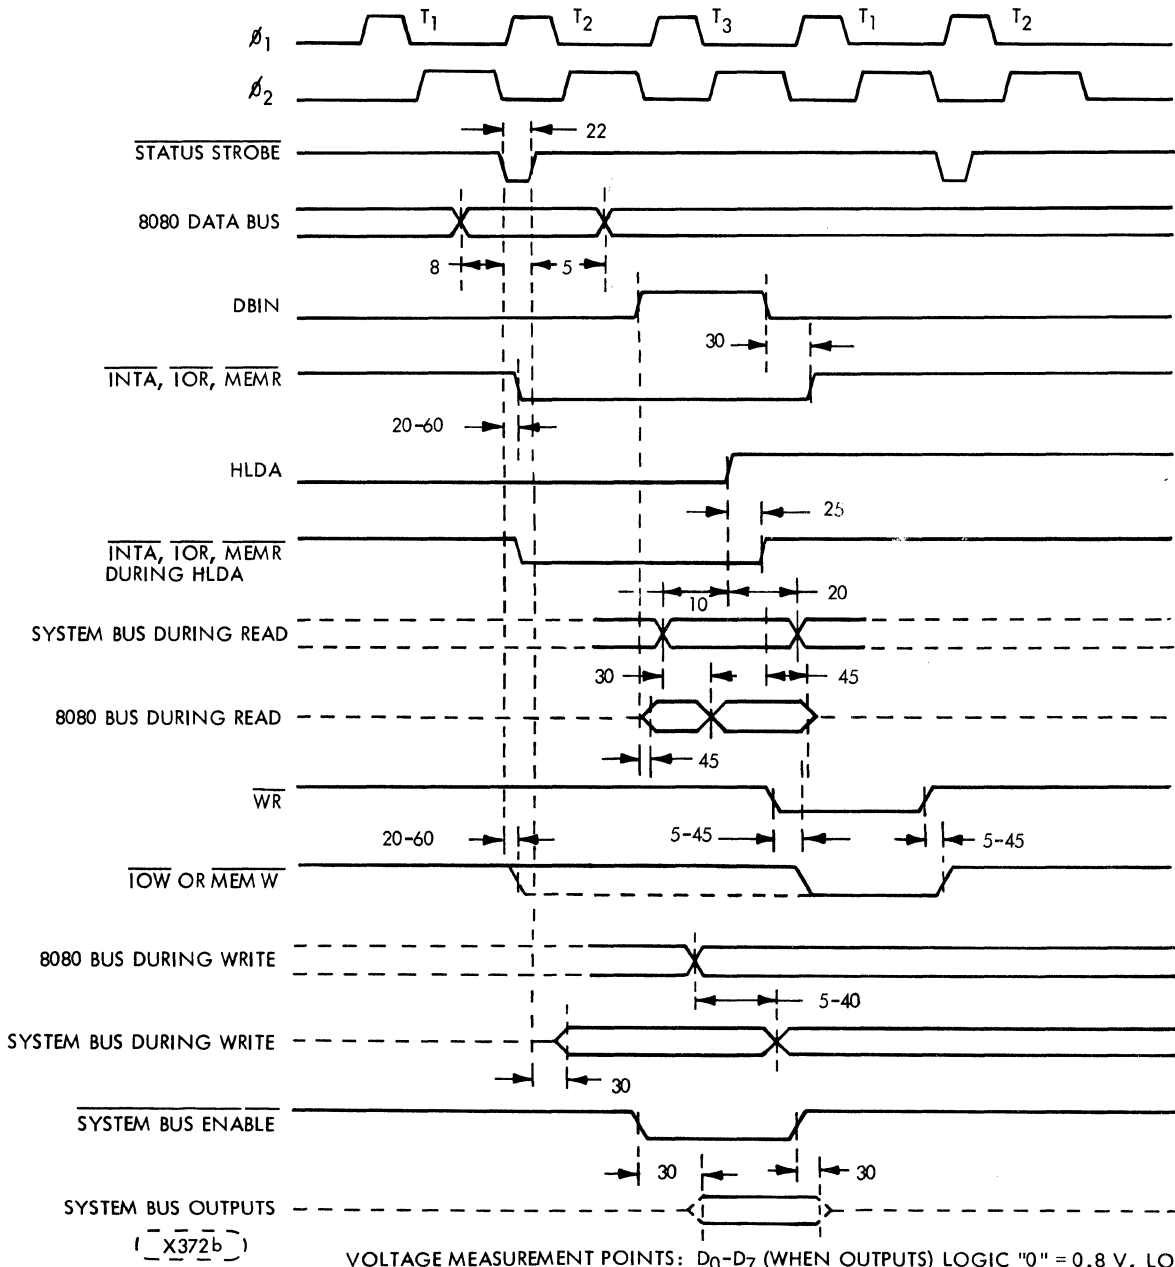

VOLTAGE MEASUREMENT POINTS: D₀-D₇ (WHEN OUTPUTS) LOGIC "0" = 0.8 V, LOGIC "1" = 3.0 V.
 ALL OTHER SIGNALS MEASURED AT 1.5 V.

Figure 5-3o. System Controller/Bus Driver for Microprocessor System
 (Sheet 2 of 2)



System Controller and Bus Driver Functional Description

The 8228 System Controller and Bus Driver generates all signals required to directly interface the 8080A microprocessor, RAM, ROM and I/O components.

The eight bit bi-directional bus drivers used provide high system TTL fan-out. They also provide isolation of the 8080A data bus from memory and I/O.

At the beginning of each machine cycle the 8080A CPU issues "status" information (see time "T2" on the timing diagram) on its data bus that indicates the type of activity that will occur during the cycle. The 8228 stores this information in the Status Latch (see block diagram) when the \overline{STSTB} signal from the clock chip goes "low". The output of the Status Latch is connected to the Gating Array and is part of the Control Signal generation. The Gating Array generates control signals ($\overline{MEM R}$, $\overline{MEM W}$, $\overline{I/O R}$, $\overline{I/O W}$ and \overline{INTA}) by gating the outputs of the Status Latch with signals from the 8080A CPU (DBIN, \overline{WR} , and HLDA).

The "read" control signals ($\overline{MEM R}$, $\overline{I/O R}$ and \overline{INTA}) are derived from the logical combination of the appropriate Status bit (or bits) and the DBIN input from the 8080A CPU.


The "write" control signals from the 8228 ($\overline{MEM W}$, $\overline{I/O W}$) are derived from the logical combination of the appropriate Status Bit (or bits) and the \overline{WR} input from the 8080A CPU.

All signals are "active low" and directly interface to the microprocessor RAM, ROM and I/O components.

The \overline{INTA} control signal is used to gate the interrupt instruction in the interrupt port onto the data bus.

The \overline{BUSEN} (Bus Enable) input to the Gating Array is an asynchronous input that forces the data bus output buffers and control signal buffers into their high-impedance state if it is a "one". If \overline{BUSEN} is a "zero" normal operation of the data buffer and control signals take place.

SCHMATIC SYMBOL

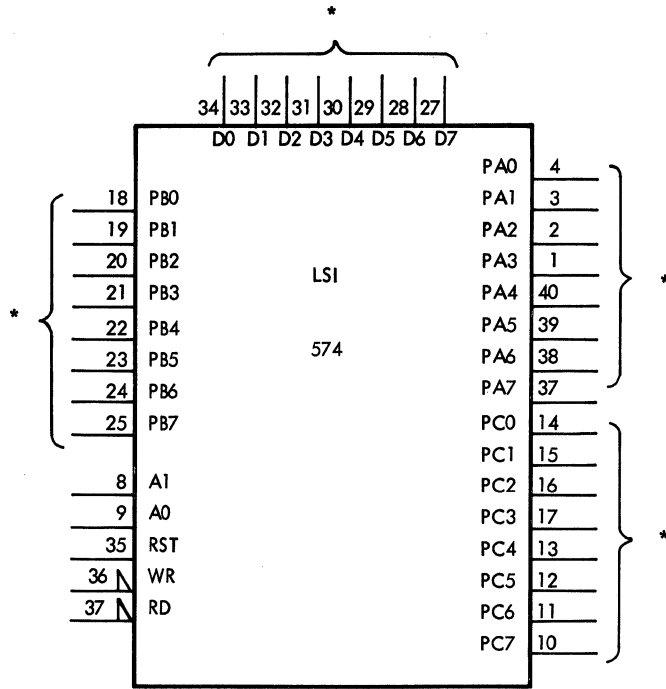


* BI-DIRECTIONAL LINES

(X367a)

Figure 5-3p. 8255 Programmable Peripheral Interface (PPI) for Microprocessor
(Sheet 1 of 3)

Block Diagram

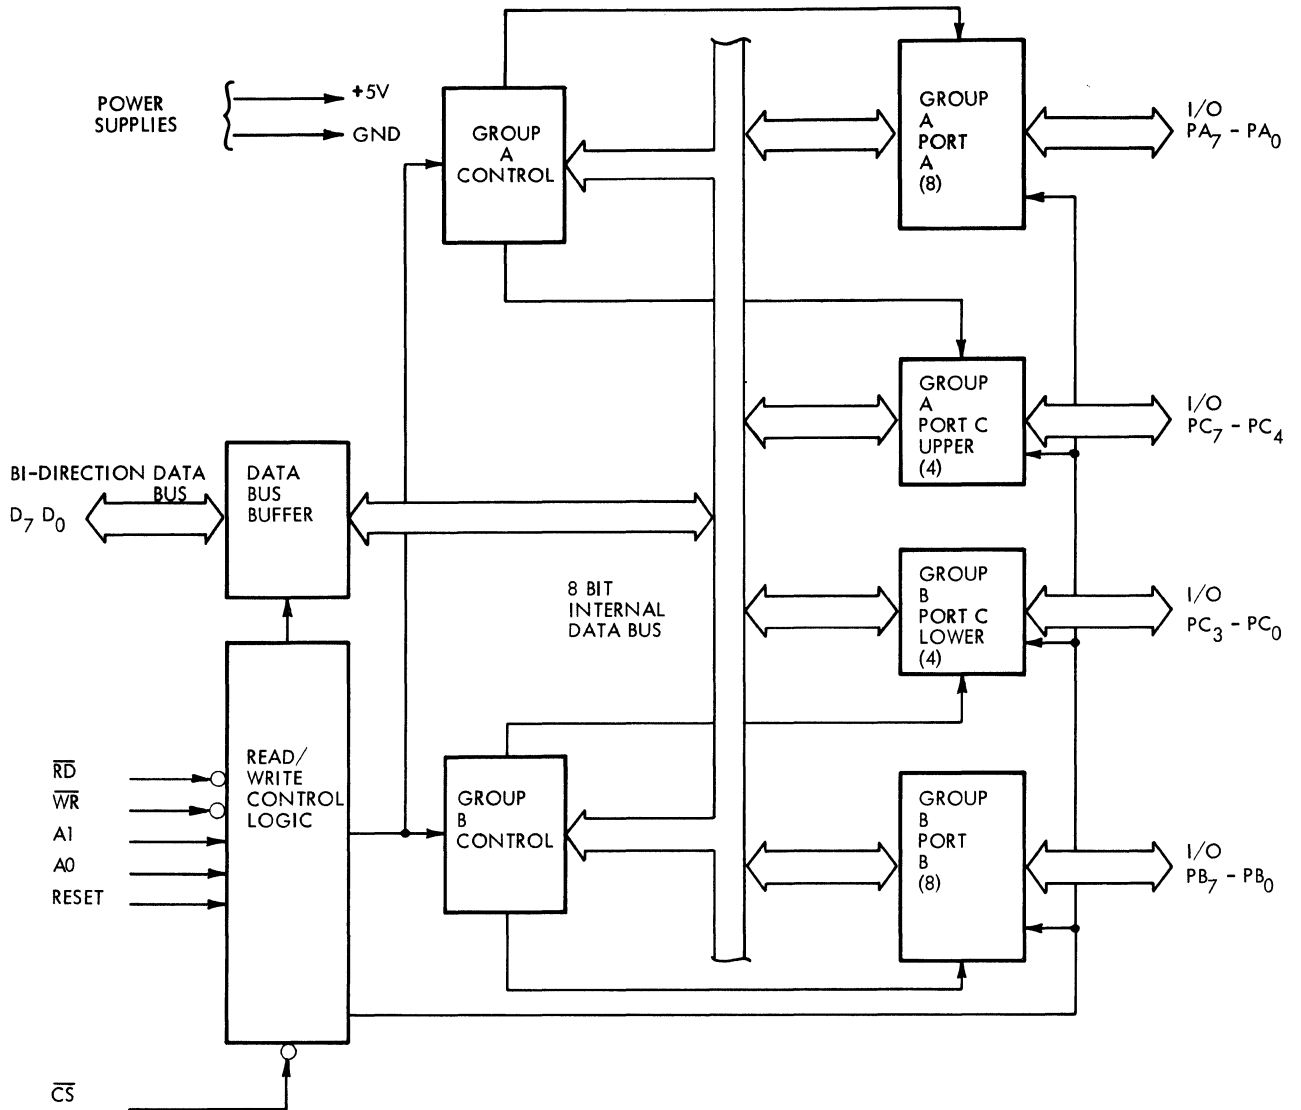


8255 BASIC OPERATION

A1	A0	RD	WR	CS	INPUT OPERATION (READ)
0	0	0	1	0	PORT A → DATA BUS
0	1	0	1	0	PORT B → DATA BUS
1	0	0	1	0	PORT C → DATA BUS
					OUTPUT OPERATION (WRITE)
0	0	1	0	0	DATA BUS → PORT A
0	1	1	0	0	DATA BUS → PORT B
1	0	1	0	0	DATA BUS → PORT C
1	1	1	0	0	DATA BUS → CONTROL
					DISABLE FUNCTION
X	X	X	X	1	DATA BUS → 3-STATE
1	1	0	1	0	ILLEGAL CONDITION

(AA288a)

Figure 5-3p. 8255 Programmable Peripheral Interface (PPI) for Microprocessor
(Sheet 2 of 3)

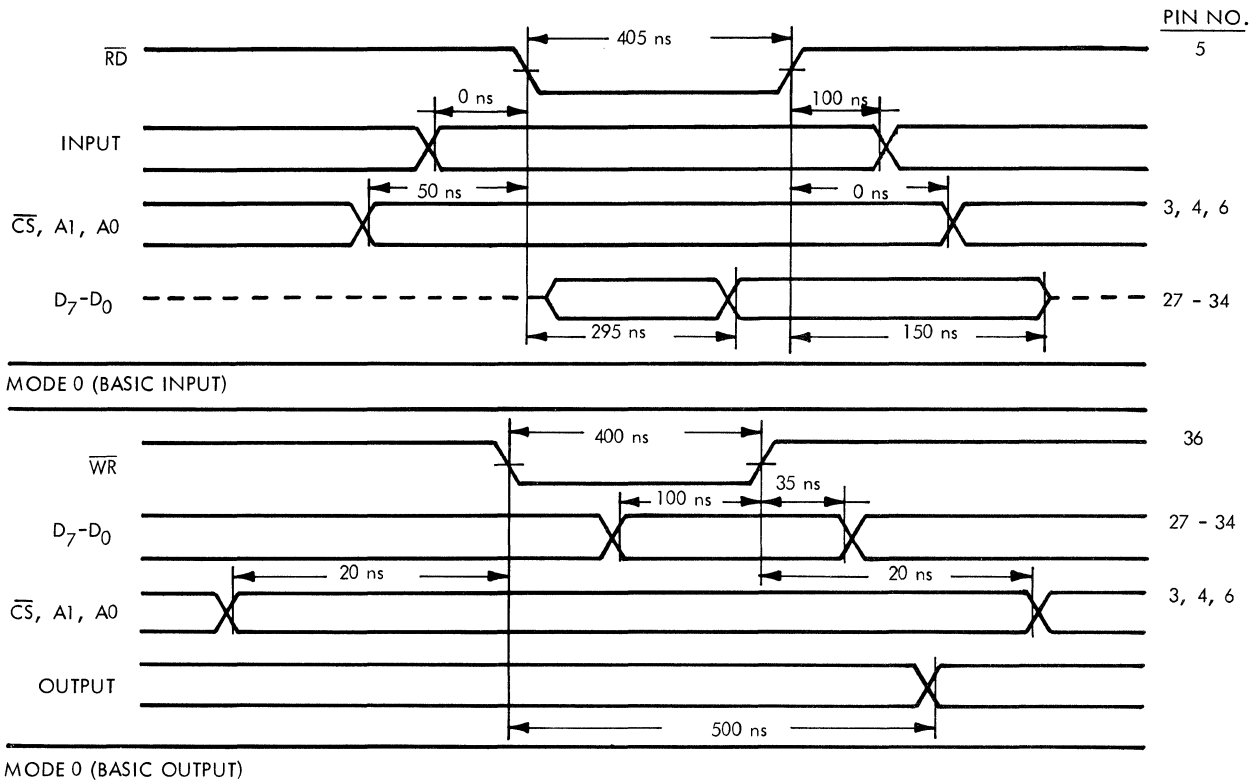

XX044a

Figure 5-3p. 8255 Programmable Peripheral Interface (PPI) for Microprocessor
(Sheet 3 of 3)

8255A Programmable Peripheral Interface Functional Description

General

The 8255A is a Programmable Peripheral Interface (PPI) device designed for use in 8080A Microcomputer systems. Its function is that of a general purpose I/O component to interface peripheral devices to the 8080A system bus. The functional configuration of the 8255 is programmed by the 8080A software (or firmware) so that normally no external logic is necessary to interface peripheral devices or structures.

Functional descriptions of the logic subsections are given in the following paragraphs. See block diagram (figure 5-3p) of the 8255A.

- Data Bus Buffer

This 3-state, bi-directional, eight bit buffer is used to interface the 8255 to the 8080A system data bus. Data is transmitted or received by the buffer upon execution of Input or Output instructions by the 8080A CPU. Control Words and Status information are also transferred through the Data Bus buffer.

- Read/Write and Control Logic

The Read/Write Control Logic in the 8255A manages all of the internal and external transfers of both Data and Control or Status words. It accepts inputs from the 8080A CPU Address and Control busses and in turn, issues commands to both of the Control Groups in the 8255A.

- I/O Ports A, B and C

The 8255A contains three 8-bit ports (A, B, and C). All can be configured in a wide variety of functional characteristics by the 8080A software (or firmware) but each has its own special features or "personality" to further enhance the power and flexibility of the 8255A.

Port A: One 8-bit data output latch/buffer and one 8-bit data input latch.

Port B: One 8-bit data input/output latch/buffer and one 8-bit data input buffer.


Port C: One 8-bit data output latch/buffer and one 8-bit data input buffer (no latch for input). This port can be divided into two 4-bit ports under the mode control. Each 4-bit port contains a 4-bit latch and it can be used for the control signal outputs and status signal inputs in conjunction with Ports A and B.

- Group A and Group B Controls

The 8080A software/firmware programs the functional configuration of each port. It does so by executing a single Output instruction during which the data bus D0--D7 contains the control code required to accomplish the setting up of the desired modes of operation of the 8255A unit. The coding on the memory address lines during the execution of the Output instruction take part in setting up the modes also, in that they define which PPI and which port the coded byte on the data bus lines is intended for. (See table 4-1).

"Group A Controls" control Port A and part of Port C and "Group B Controls" control Port B and the other part of Port C. Setting up of the various modes of operation involves setting the basic mode (0, 1 or 2), establishing for each port whether it will function as an input or output port, and setting or resetting individual bits in port C. The CMD only uses the 8255A in Mode 0 which simply provides input and output operations for each port. No "handshaking" is required, data is simply written to or read from a specified port. Mode 1 provides strobed input/output (port C provides the control lines for "handshaking" and Mode 2 provides a bi-directional bus (with Port C on the "handshakes" again). All operations involving the 8255 take place during 8080A instruction execution time. Therefore, the timing of all inputs/outputs/control signals to/from the 8255A are tied strictly to the timing of the 8080A I/O timing. This is shown in the timing diagrams in Figures 5-3p, 4-15 and 4-16.

TIMING DIAGRAM

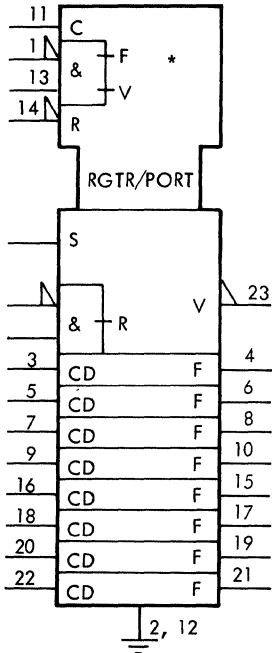

* ELEMENT NUMBER NOT ASSIGNED (8212)

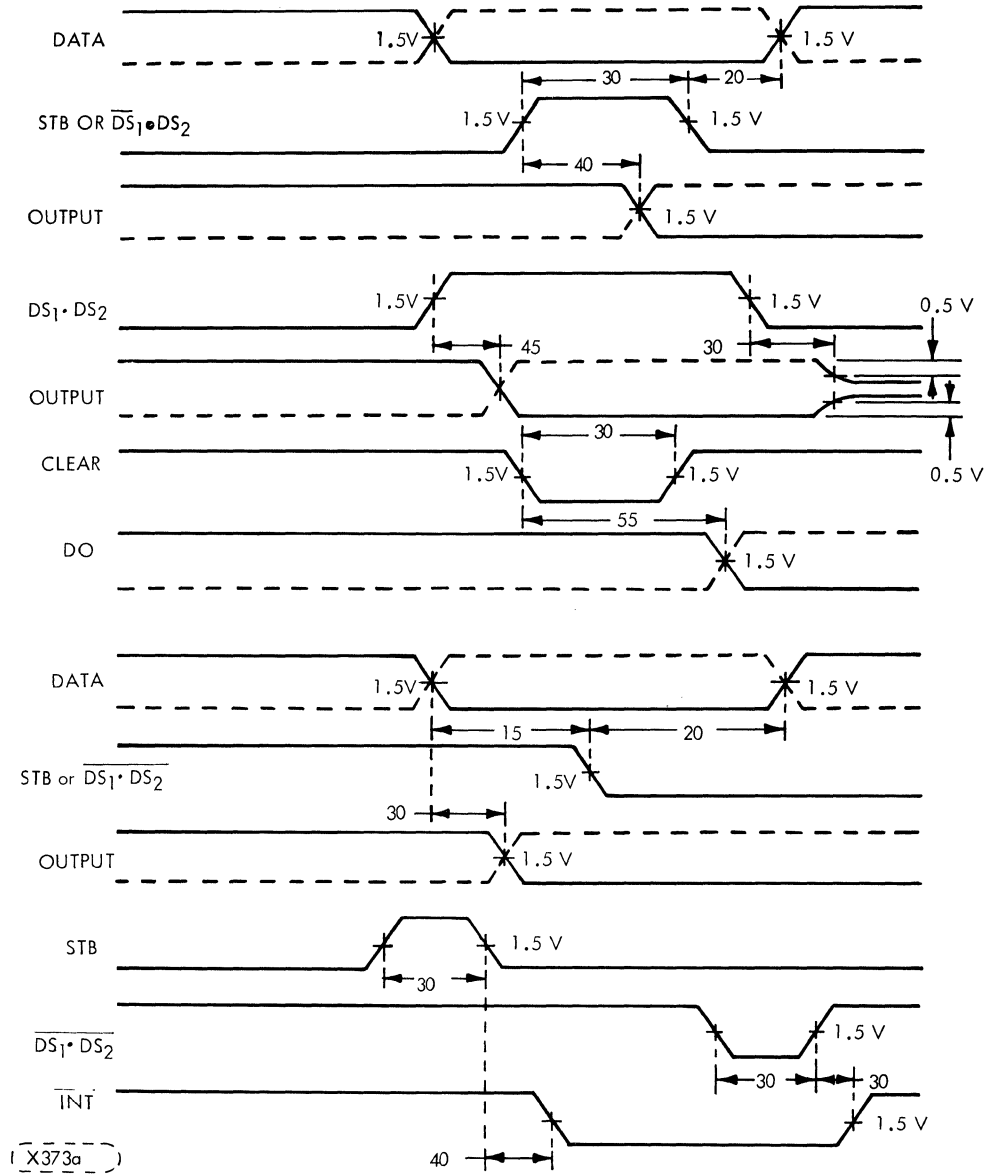


Figure 5-3q. I/O Port 8-Bit Parallel (8212)

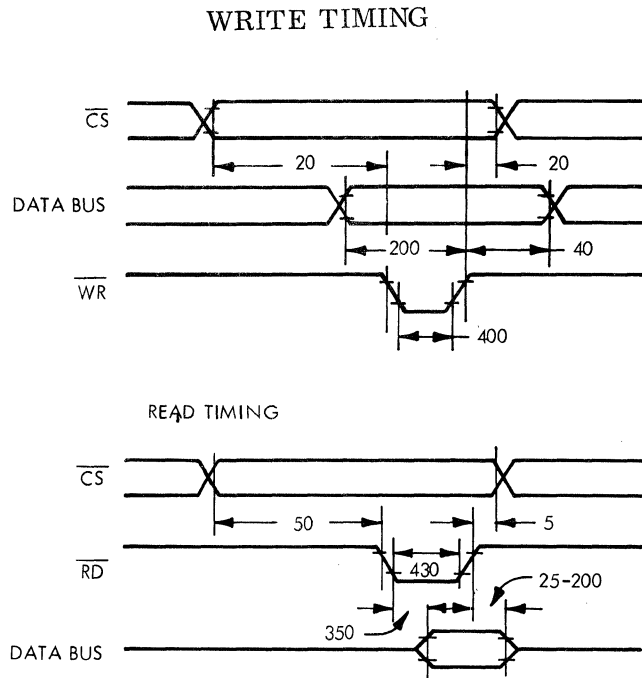
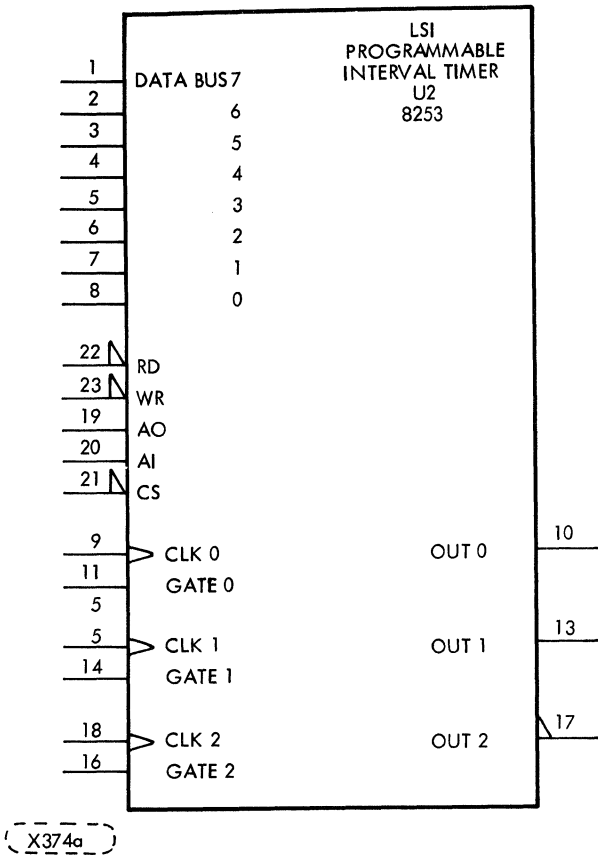


Figure 5-3r. 8253 LSI Programmable Interval Timer for 8080 System
(Sheet 1 of 2)

CONTROL LINE TRUTH TABLE

\overline{CS}	\overline{RD}	\overline{WR}	A ₁	A ₀	
0	1	0	0	0	LOAD COUNTER NO. 0
0	1	0	0	1	LOAD COUNTER NO. 1
0	1	0	1	0	LOAD COUNTER NO. 2
0	1	0	1	1	WRITE MODE WORD
0	0	1	0	0	READ COUNTER NO. 0
0	0	1	0	1	READ COUNTER NO. 1
0	0	1	1	0	READ COUNTER NO. 2
0	0	1	1	1	NO-OPERATION 3-STATE
1	X	X	X	X	DISABLE 3-STATE
0	1	1	X	X	NO-OPERATION 3-STATE

CONTROL WORD FORMAT

D ₇	D ₆	D ₅	D ₄	D ₃	D ₂	D ₁	D ₀
SC1	SC0	RL1	RL0	M2	M1	M0	0

DEFINITION OF CONTROL FIELDS

SC-SELECT COUNTER

SC1	SC0	
0	0	SELECT COUNTER 0
0	1	SELECT COUNTER 1
1	0	SELECT COUNTER 2
1	1	ILLEGAL


RL-READ/LOAD

RL1	RL0	
0	0	COUNTER LATCHING OPERATION (SEE READ/WRITE PROCEDURE SECTION)
1	0	READ/LOAD MOST SIGNIFICANT BYTE ONLY
0	1	READ/LOAD LEAST SIGNIFICANT BYTE ONLY
1	1	READ/LOAD LEAST SIGNIFICANT BYTE FIRST, THEN MOST SIGNIFICANT BYTE.


X374b

TYPICAL TIMING FOR MODES USED

MODE 0: INTERRUPT ON TERMINAL COUNT

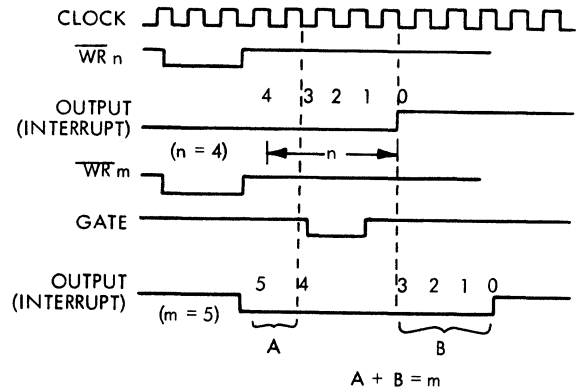

MODE 2: RATE GENERATOR

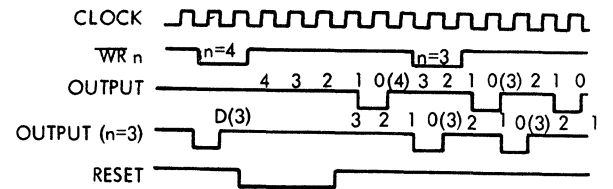

M-MODE

M2	M1	M0	
0	0	0	MODE 0
0	0	1	MODE 1 *
X	1	0	MODE 2
X	1	1	MODE 3 *
1	0	0	MODE 4 *
1	0	1	MODE 5 *

* NOT USED

Figure 5-3r. 8253 LSI Programmable Interval Timer for 8080 System (Sheet 2 of 2)


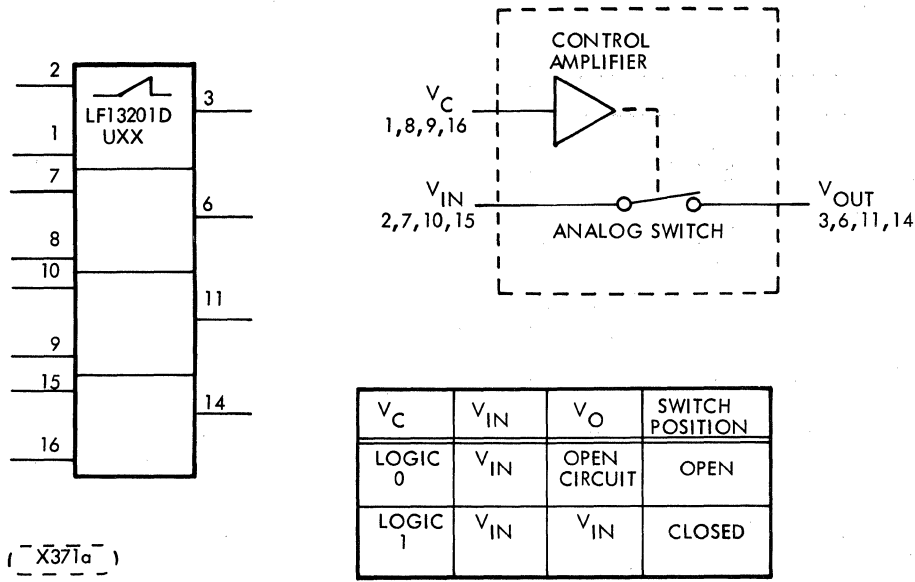


Figure 5-3s. Analog Switch


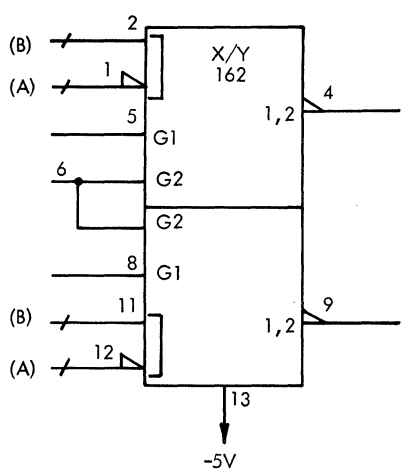


DIFFERENTIAL INPUTS	STROBES		OUTPUT
	G1	G2	
$V_{ID} \geq 25 \text{ MV}$	L OR H	L OR H	H
$-25 \text{ MV} < V_{ID} < 25 \text{ MV}$	L OR H	L	H
	L	L OR H	H
$V_{ID} \leq -25 \text{ MV}$	H	H	INDETERMINATE
	L OR H	L	H
	L	L OR H	H
	H	H	L

(XX033a)


THE DIFFERENTIAL INPUT VOLTAGE POLARITIES SHOWN MEASURED AT PIN A WITH RESPECT TO PIN B. A MINUS POLARITY INDICATES THAT PIN A IS MORE NEGATIVE THAN PIN B.

Figure 5-3t. Line Receiver, DRL/TTL Dual Differential

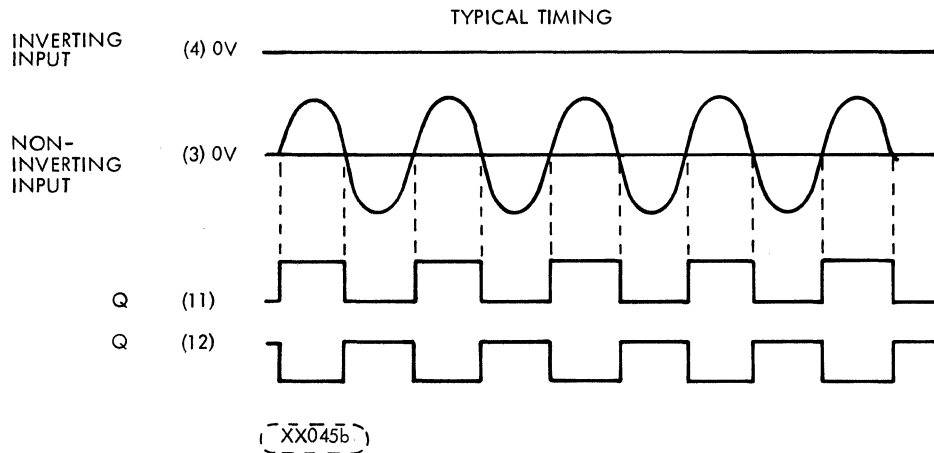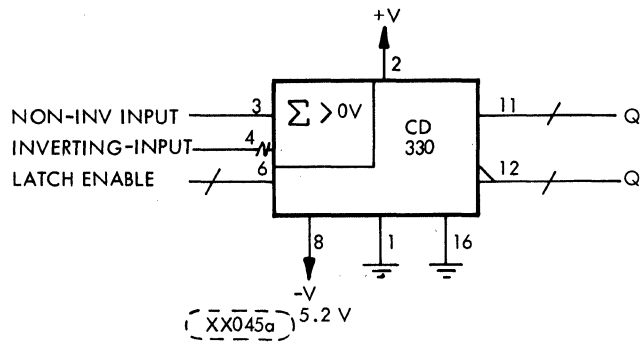

THE 330 CIRCUIT IS A DIFFERENTIAL VOLTAGE COMPARATOR. THE CIRCUIT HAS DIFFERENTIAL ANALOG INPUTS AND COMPLEMENTARY LOGIC OUTPUTS COMPATIBLE WITH ECL. A LATCH FUNCTION ALLOWS THE COMPARATOR TO BE USED IN A SAMPLE-HOLD MODE. IF THE LATCH ENABLE INPUT IS HIGH, THE COMPARATOR FUNCTIONS NORMALLY. WHEN THE LATCH ENABLE GOES LOW, THE COMPARATOR OUTPUTS ARE LOCKED IN THEIR EXISTING LOGICAL STATES.

Figure 5-3u. Differential Voltage Comparator

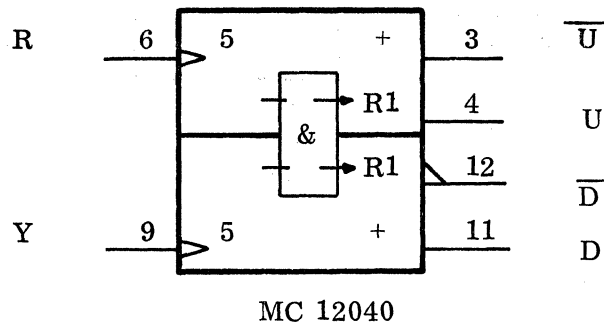

TYPICAL TIMING (NOT ALL INCLUSIVE)


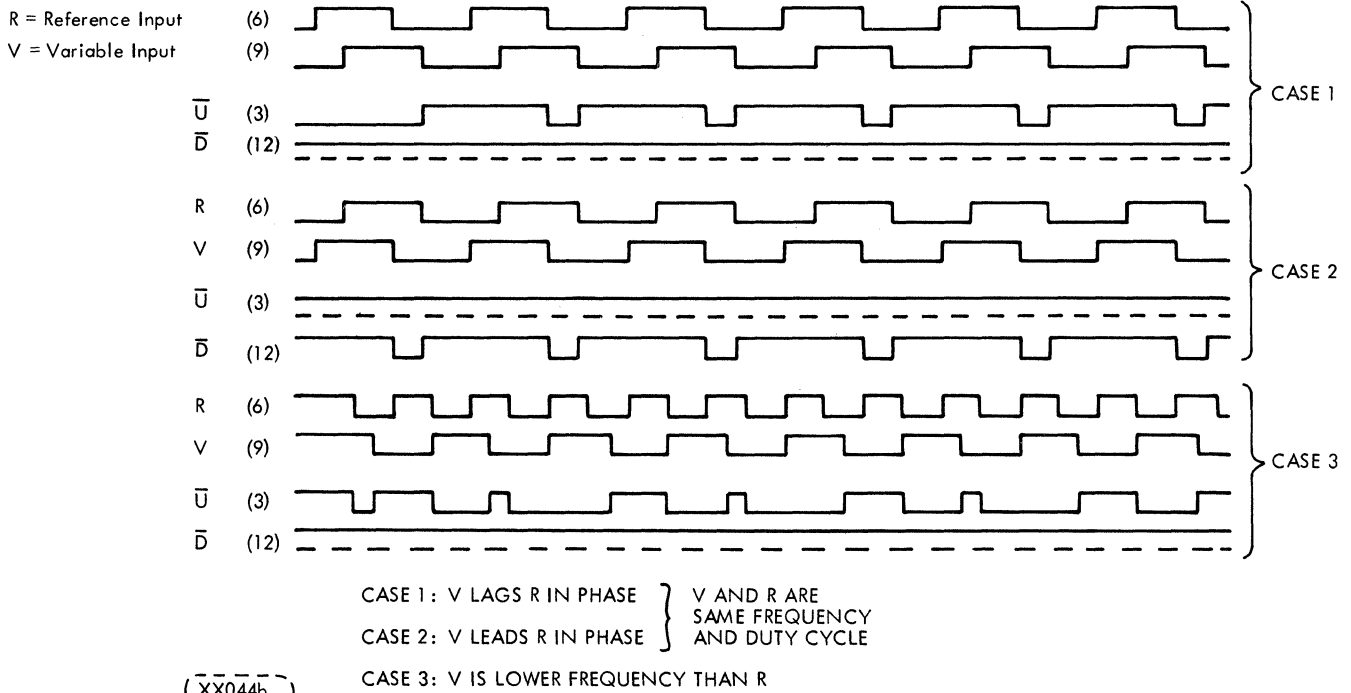



Figure 5-3v. Phase-Frequency Detector

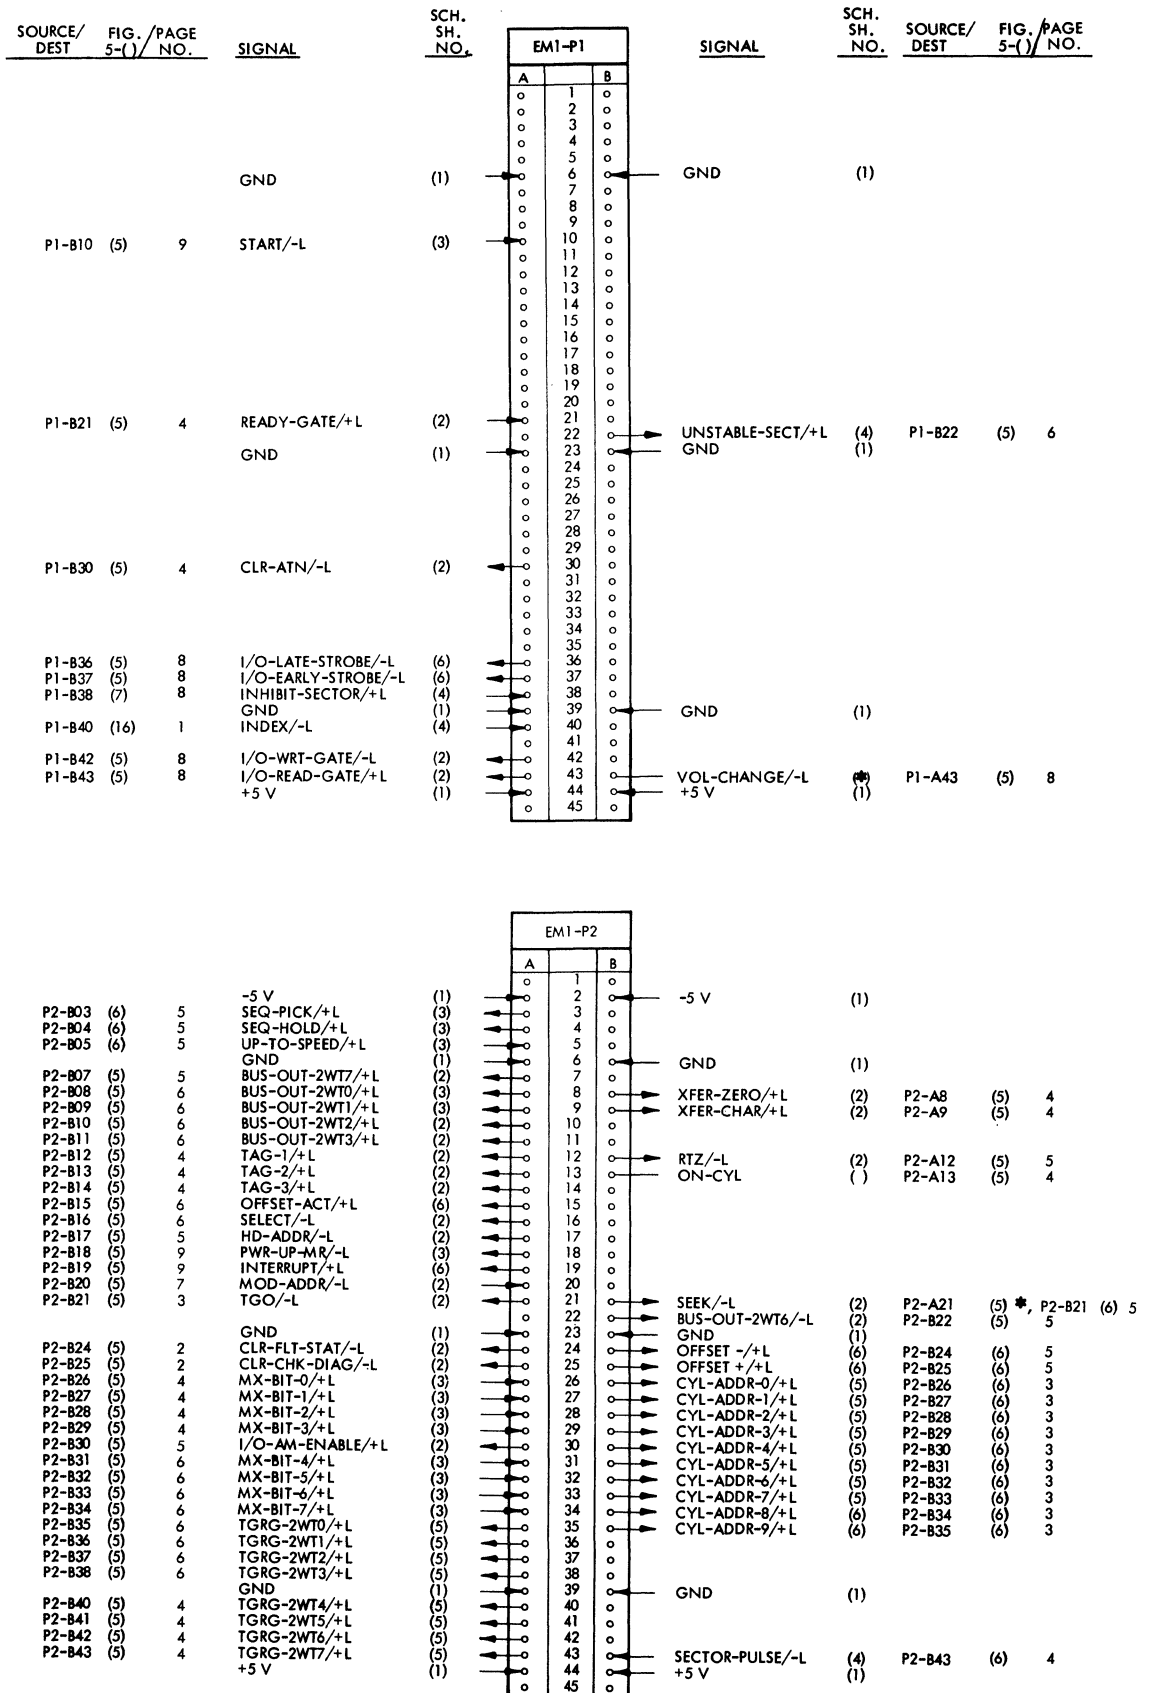



XX233a

* WIRED TO BUT NOT USED ON PWA

Figure 5-4. I/O STD-1 Circuit Board (Sheet 1 of 9)

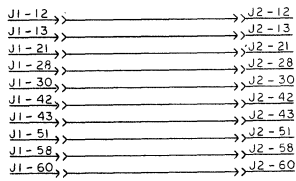

SPARE INTERCONNECTS

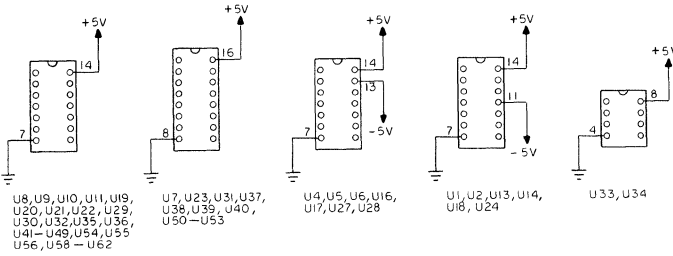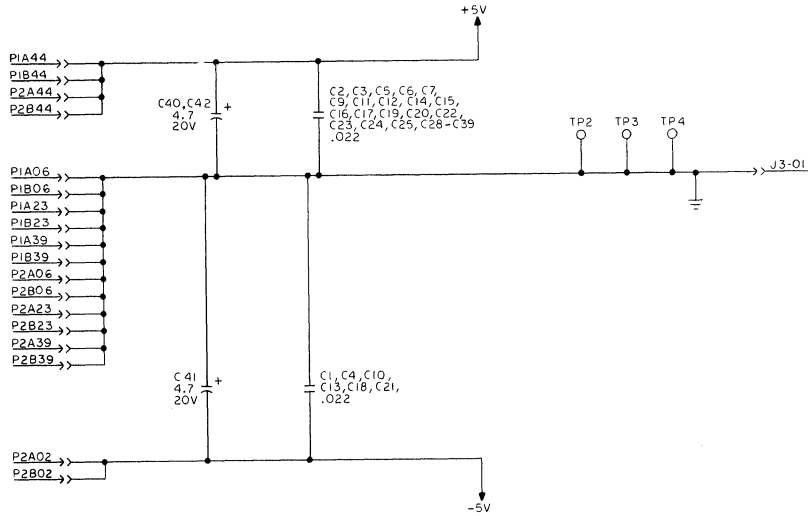


UNUSED LOGIC ELEMENTS			
ELEMENT	VENDOR NO.	LOCATION	OUTPUT PIN
224LS	74LS27	U9	6,8
218LS	74LS32	U10	11
203LS	74LS05	U11	4,8,10,12
201LS	74LS08	U19	11
148LS	74LS02	U22	10,13
146LS	74LS04	U45	4
146LS	74LS04	U47	2,4,6
201LS	74LS08	U56	8
213LS	74LS11	U60	8
140LS	74LS00	U61	8
943LS	74LS14	U62	4,10
141LS	74LS10	U32	8


NOTES: UNLESS OTHERWISE SPECIFIED
 1. RESISTOR VALUES ARE IN OHMS, 1/4 W, ±5%
 2. CAPACITANCE VALUES ARE IN MICROFARADS

Figure 5-4 I/O STD-1 (Sheet 2 of 9)

Figure 5-4 I/O STD-1 (Sheet 3 of 9)

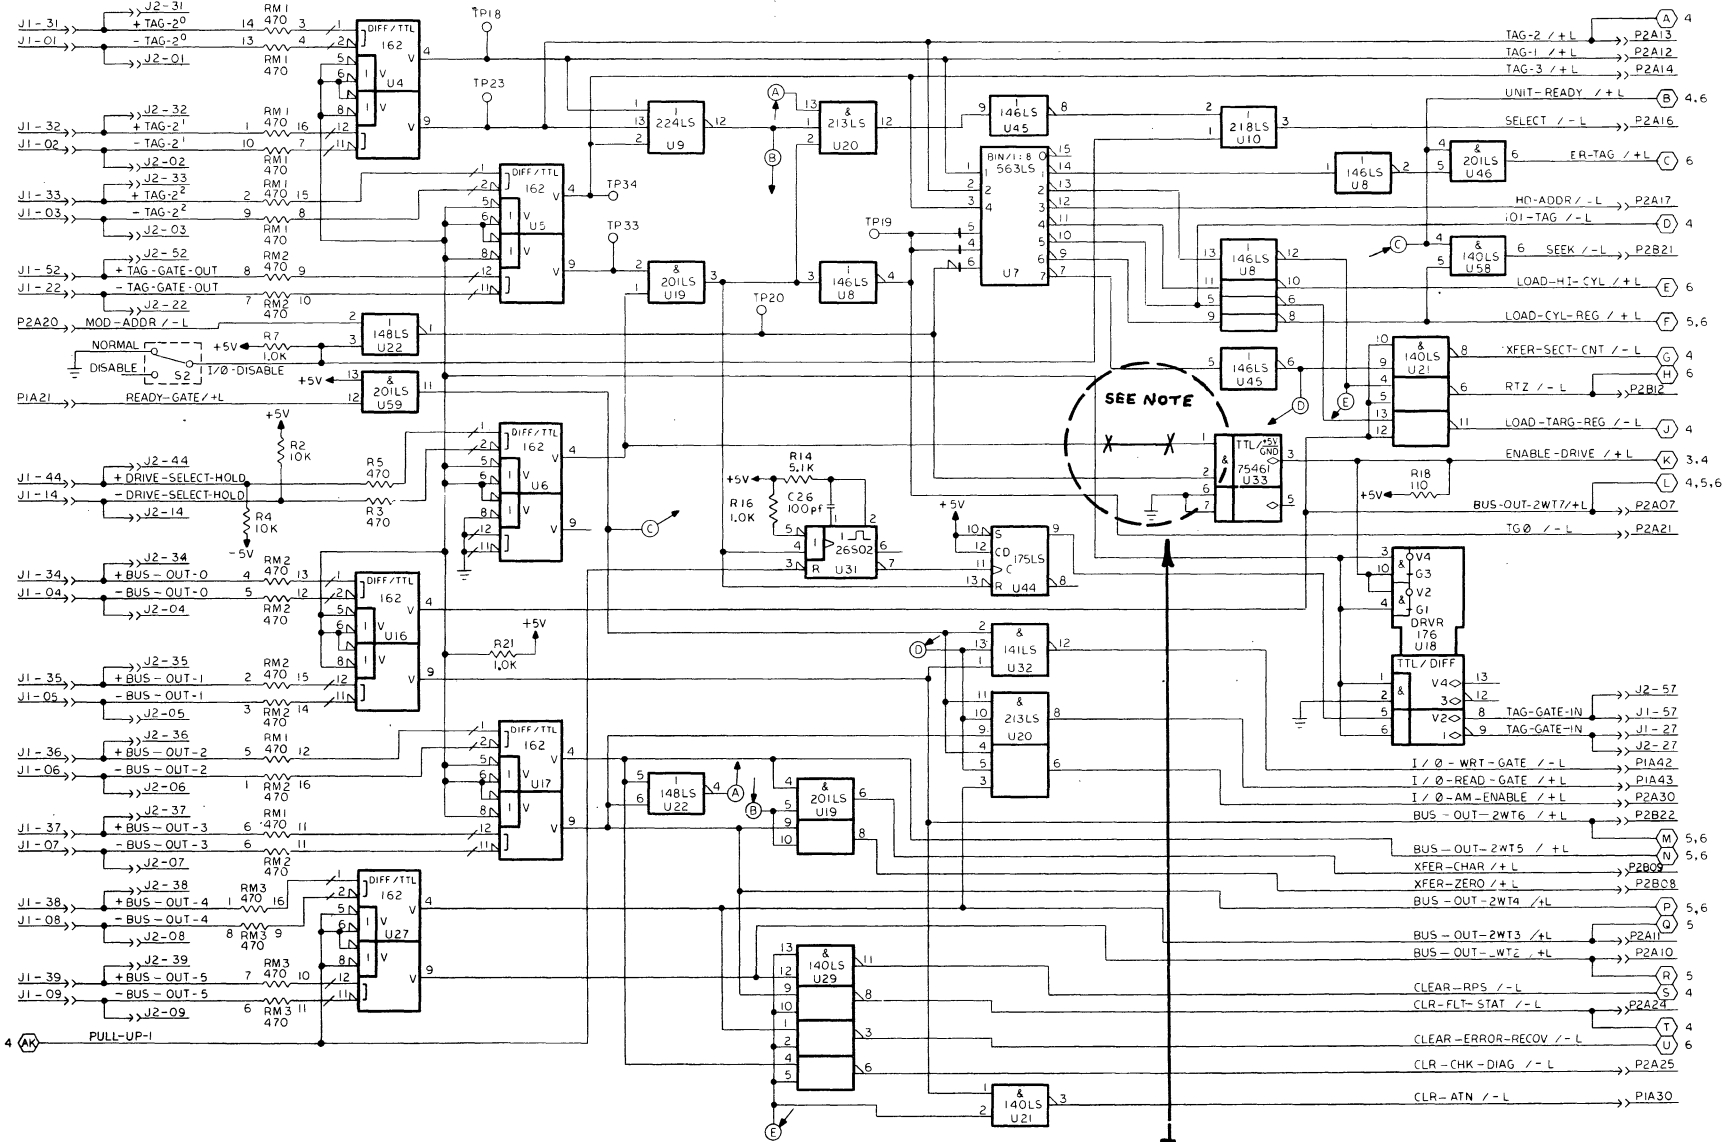

NOTE: For PWA 77618950 the Circuit Below Applies to the Area in the Dotted Circle.

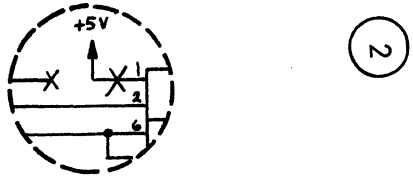

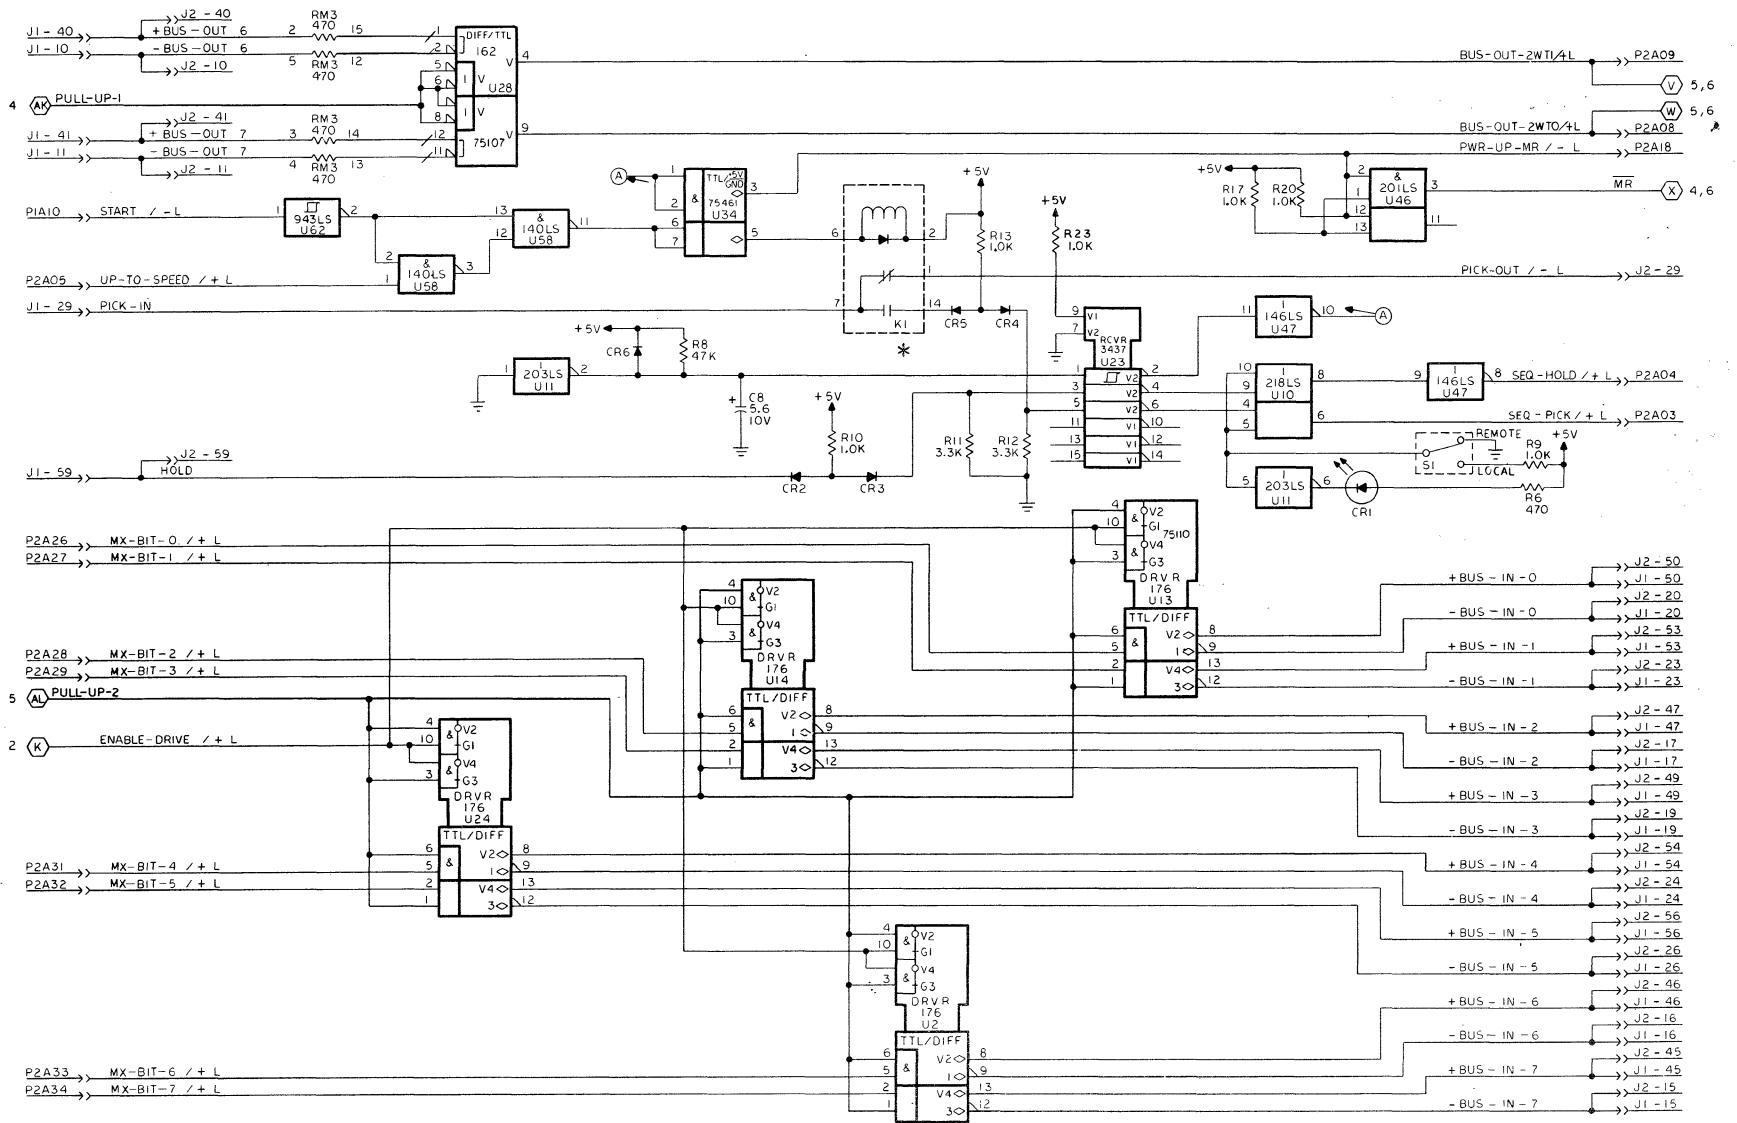


Figure 5-4. I/O STD-1 (Sheet 4 of 9)

NOTE: *Relay shown in de-energized position.



Figure 5-4. I/O STD-1 (Sheet 5 of 9)

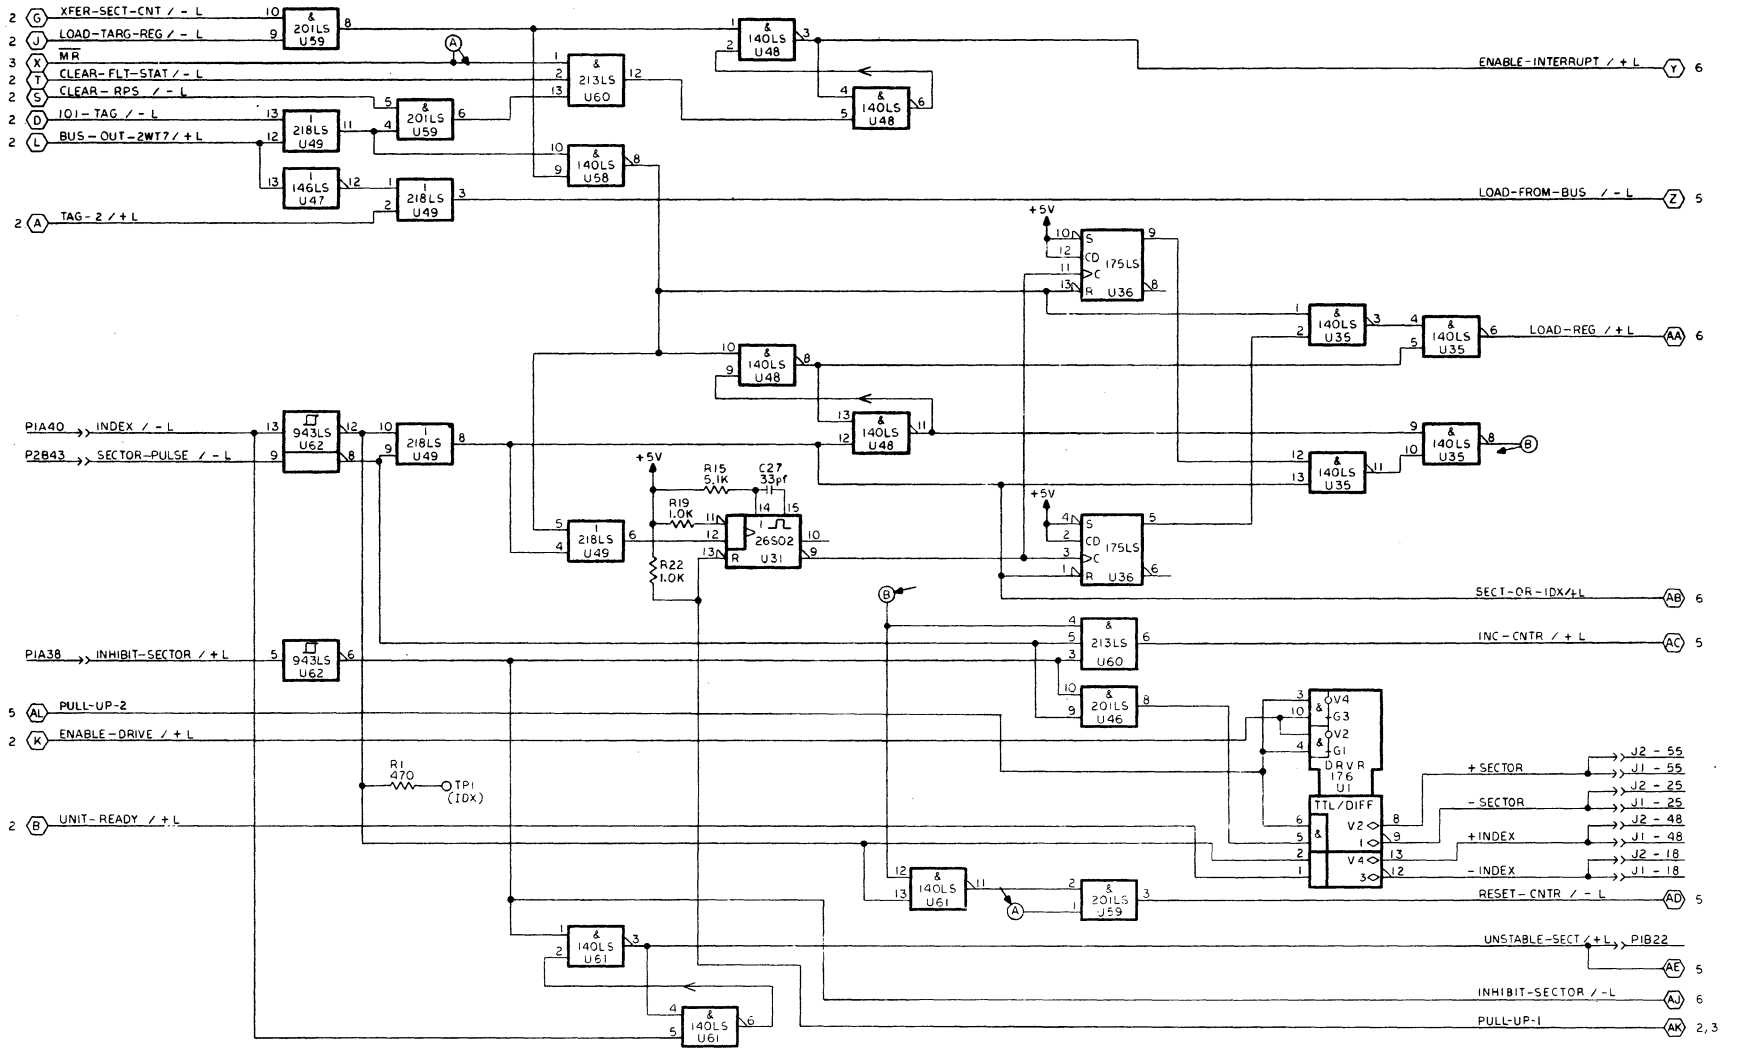


Figure 5-4. I/O STD-1 (Sheet 6 of 9)



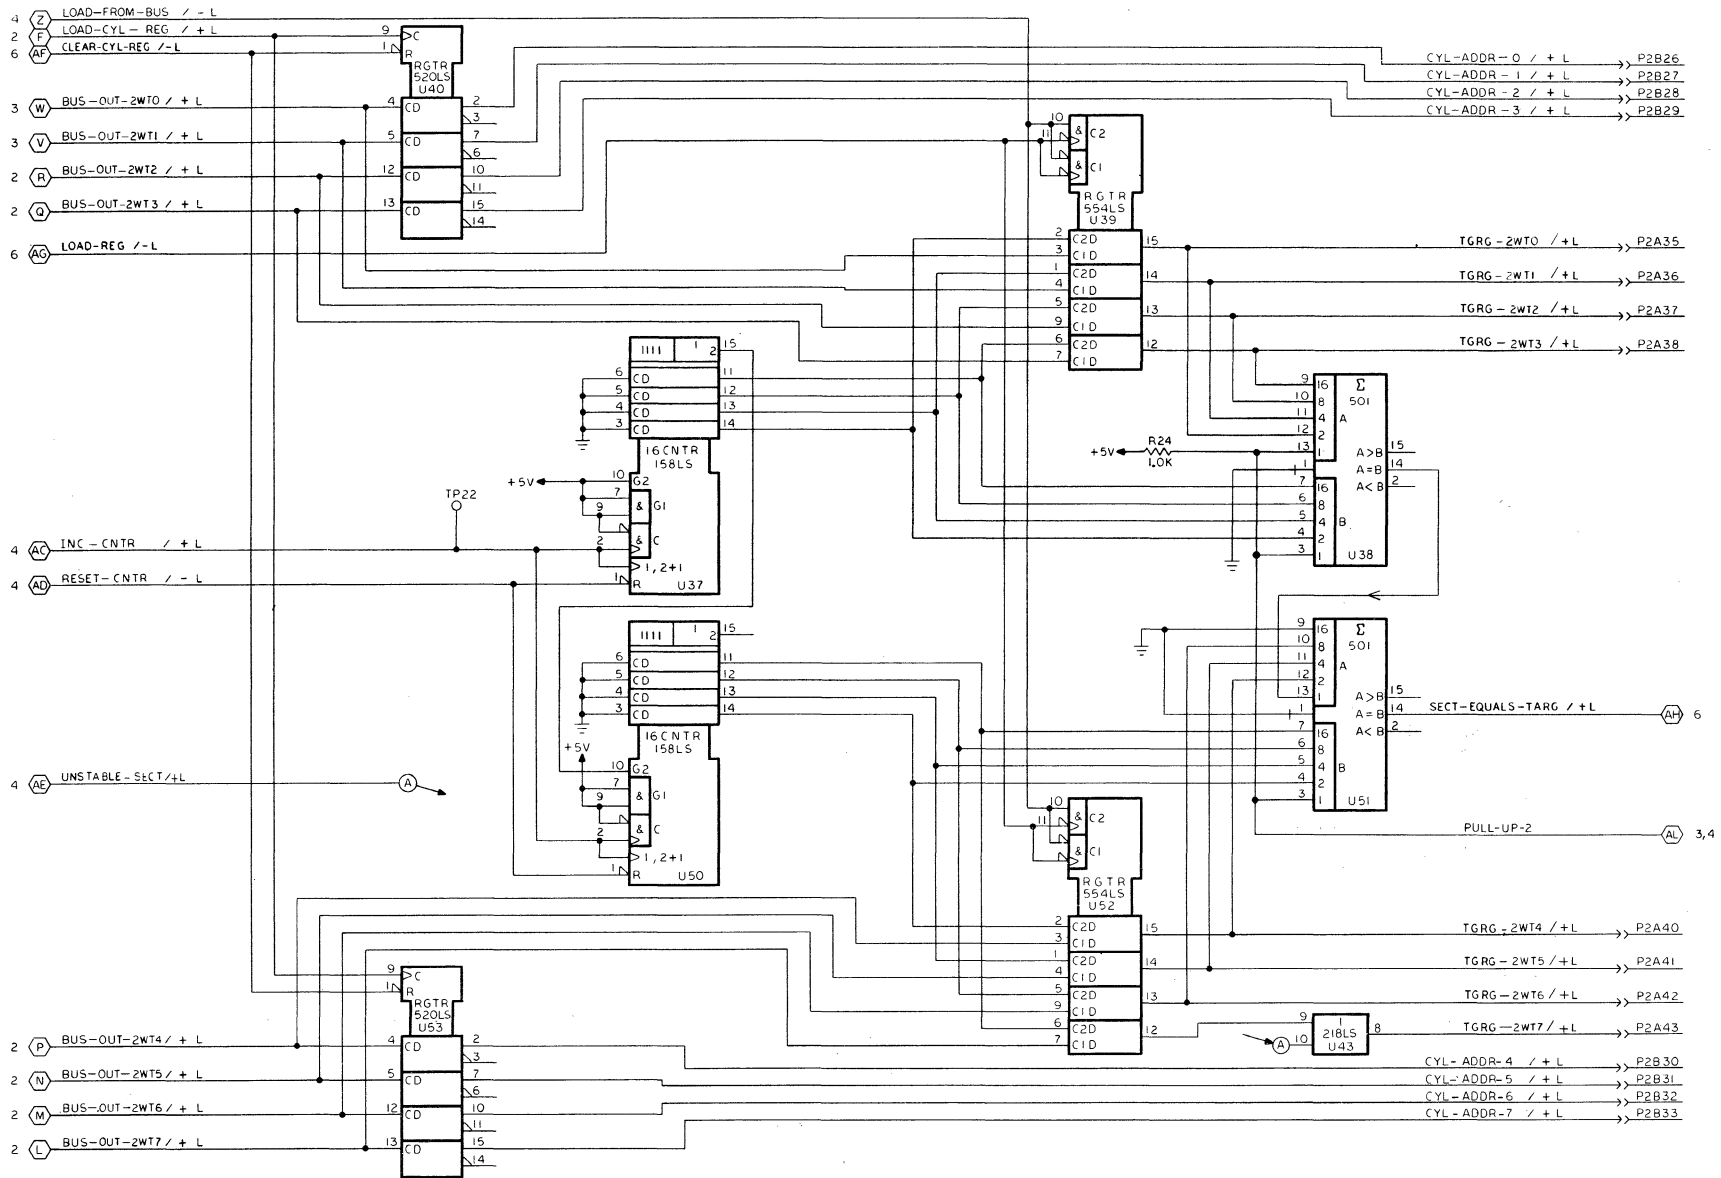


Figure 5-4. I/O STD-1 (Sheet 7 of 9)

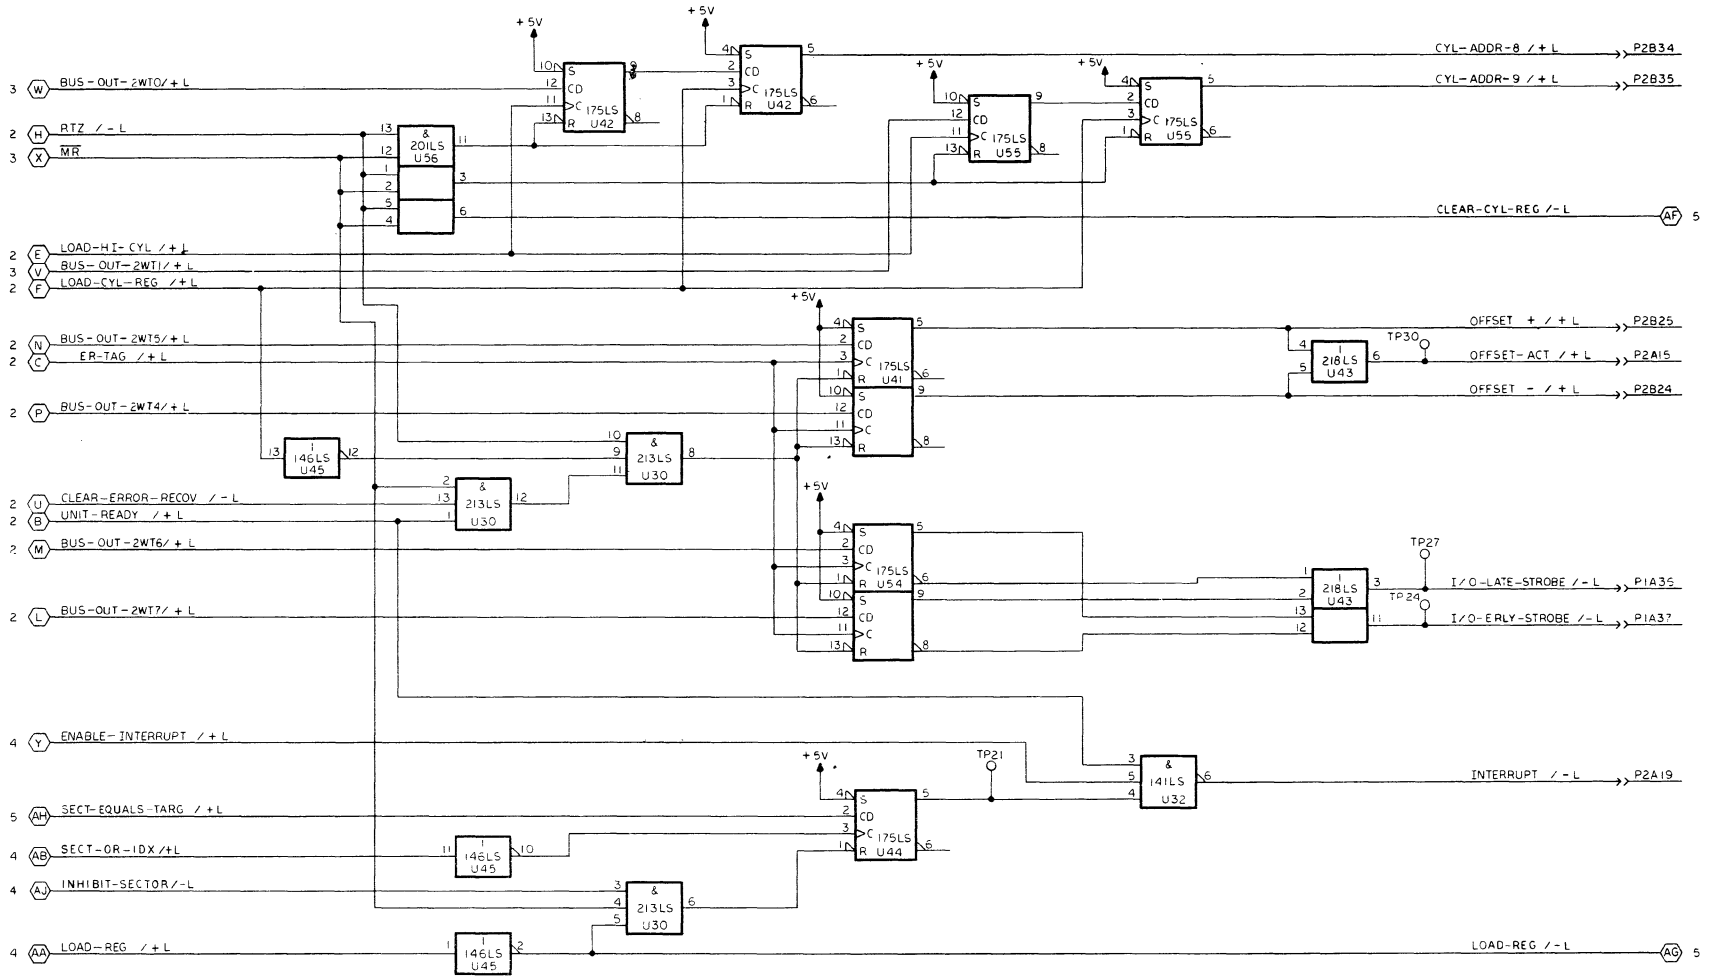

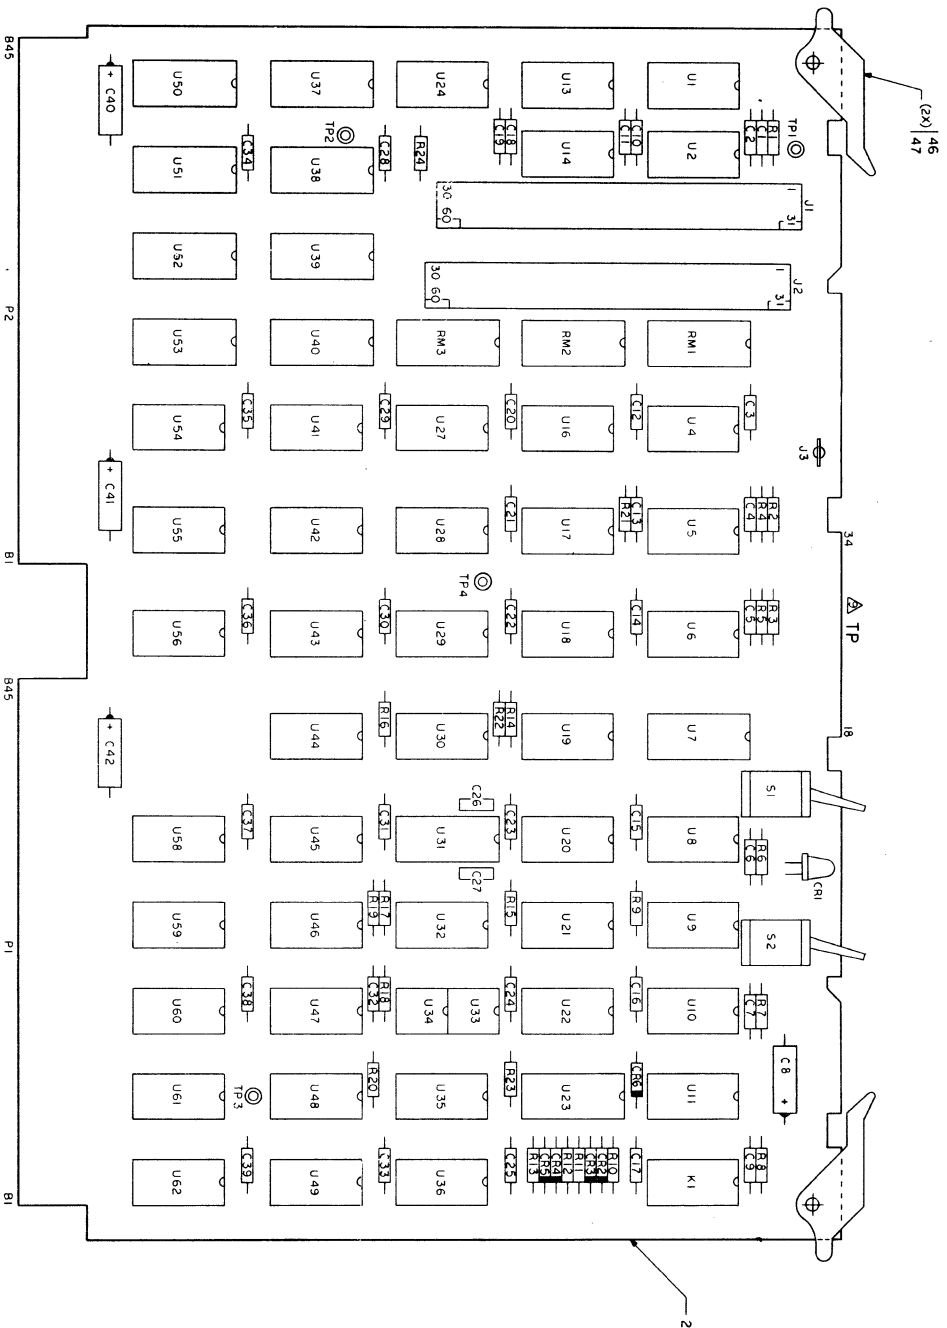

RES	PL ITEM
R1	34
R2	38
R3	34
R4	38
R5	34
R6	34
R7	35
R8	39
R9	35
R10	35
R11	36
R12	36
R13	35
R14	37
R15	37
R16	35
R17	35
R18	33
R19	35
R20	35
R21	35
R22	35
R23	35
R24	35

SW	PL ITEM
S1	26
S2	26

TERM	PL ITEM
TP1	45
TP2	45
TP3	45
TP4	45

RES PACK	PL ITEM
RM1	44
RM2	44
RM3	44

IC	PL ITEM
U43	15
U44	16
U45	9
U46	11
U47	9
U48	7
U49	15
U50	18
U51	23
U52	20
U53	19
U54	16
U55	16
U56	11
U57	—
U58	7
U59	11
U60	13
U61	7
U62	42

CONN	PL ITEM
J1	25
J2	25
J3	41

RELY	PL ITEM
K1	27

DIO	PL ITEM
CR1	43
CR2	40
CR3	40
CR4	40
CR5	40
CR6	40



IC	PL ITEM
U1	6
U2	6
U3	—
U4	5
U5	5
U6	5
U7	17
U8	9
U9	14
U10	15
U11	10
U12	—
U13	6
U14	6
U15	—
U16	5
U17	5
U18	6
U19	11
U20	13
U21	7
U22	8
U23	22
U24	6
U25	—
U26	—
U27	5
U28	5
U29	7
U30	13
U31	21
U32	12
U33	24
U34	24
U35	7
U36	16
U37	18
U38	23
U39	20
U40	19
U41	16
U42	16

CAP	PL ITEM
C1	31
C2	—
C3	—
C4	—
C5	—
C6	—
C7	31
C8	28
C9	31
C10	—
C11	—
C12	—
C13	—
C14	—
C15	—
C16	—
C17	—
C18	—
C19	—
C20	—
C21	—
C22	—
C23	—
C24	—
C25	31
C26	30
C27	29
C28	31
C29	—
C30	—
C31	—
C32	—
C33	—
C34	—
C35	—
C36	—
C37	—
C38	—
C39	31
C40	32
C41	32
C42	32

Figure 5-4. I/O STD-1 (Sheet 8 of 9)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	77616850	PWA I/O Std-1	
	77618950	PWA I/O Std-1	
2	77616870	PWB, I/O Std-1	
5	50252900-1	IC 75107	
6	50252800-3	IC 75110	
7	15144900-6	IC 74LS00	
8	15145000-4	IC 74LS02	
9	15145100-2	IC 74LS04	
10	15145300-8	IC 74LS05	
11	15145400-6	IC 74LS08	
12	15145600-1	IC 74LS10	
13	15145700-9	IC 74LS11	
14	15146000-3	IC 74LS27	
15	15146200-9	IC 74LS32	
16	15146300-7	IC 74LS74	
17	15147400-4	IC 74LS138	
18	15146800-6	IC 74LS161	
19	15146900-4	IC 74LS175	
20	15164405-1	IC 74LS298	
21	15164400-2	IC 26S02	
22	15156700-5	IC 3437	
23	51783500-5	IC 9324	
24	15161600-0	IC 75461	
25	77834360-8	Conn Header Assy	
26	41347800-9	Switch Toggle	
27	95558701-9	Relay	
28	17706709-7	Cap 10V 10% 5.6 uF	
29	94227214-7	Cap 500V 10% 33pF	
30	94227226-1	Cap 300V 2% 100	
31	94361416-4	Cap 50V +80-20% 0.022uf	
32	24504380-7	Cap 20V 20% 4.7uF	
33	24500040-1	Res 1/4W 5% 110	
34	24500055-9	Res 1/4W 5% 470	
35	24500063-3	Res 1/4W 5% 1K	
36	24500075-7	Res 1/4W 5% 3.3K	
37	24500080-7	Res 1/4W 5% 5.1K	
38	24500087-2	Res 1/4W 5% 10K	
39	17705904-5	Res 1/4W 5% 47K	
40	51706300-4	Diode IN4454	
41	95588300-4	Terminal Quick Conn	
42	15148500-0	IC 74LS14	
43	77612000-8	Lamp (LED)	
44	62012929-6	Res Pack 5% 470 (8)	
45	92498021-2	Terminal Swaged	
46	82311900-3	Inject/Eject-Card	
47	93533118-1	Pin, Rolled	



Figure 5-4. I/O STD-1 Circuit Board (Sheet 9 of 9)

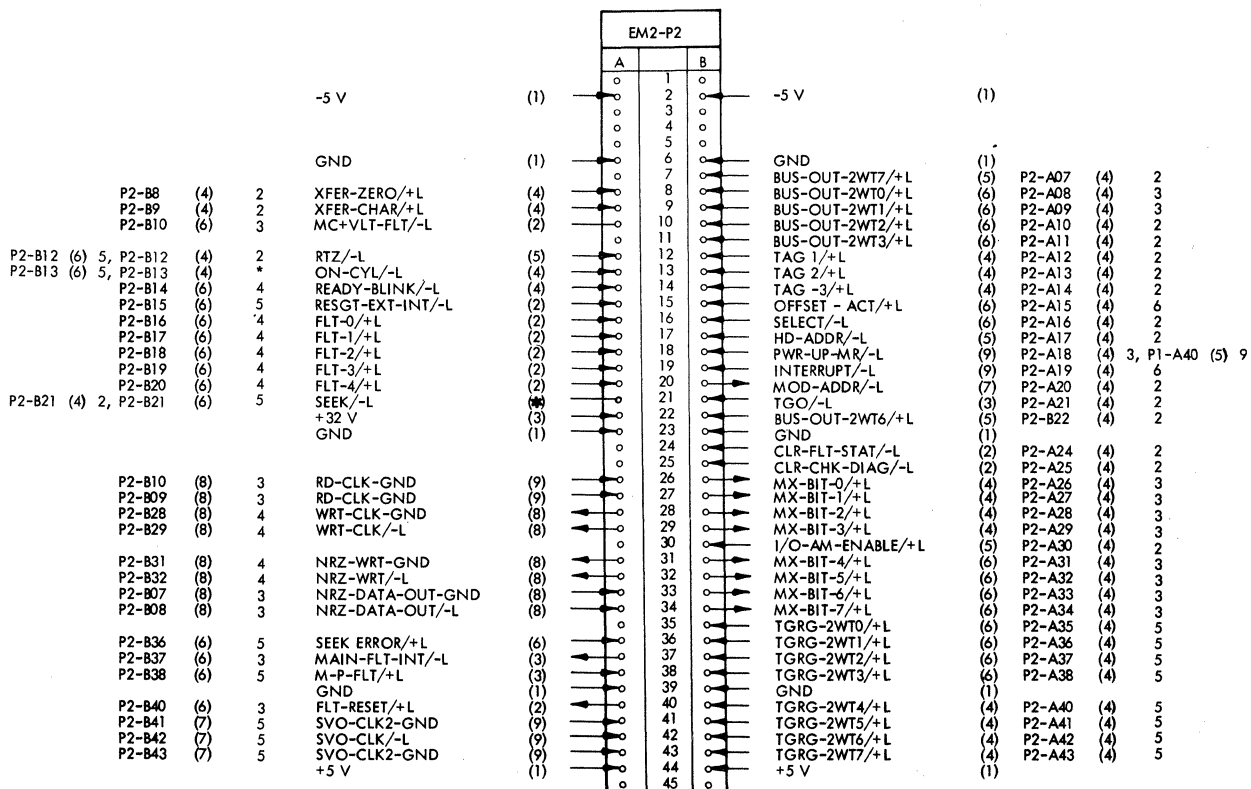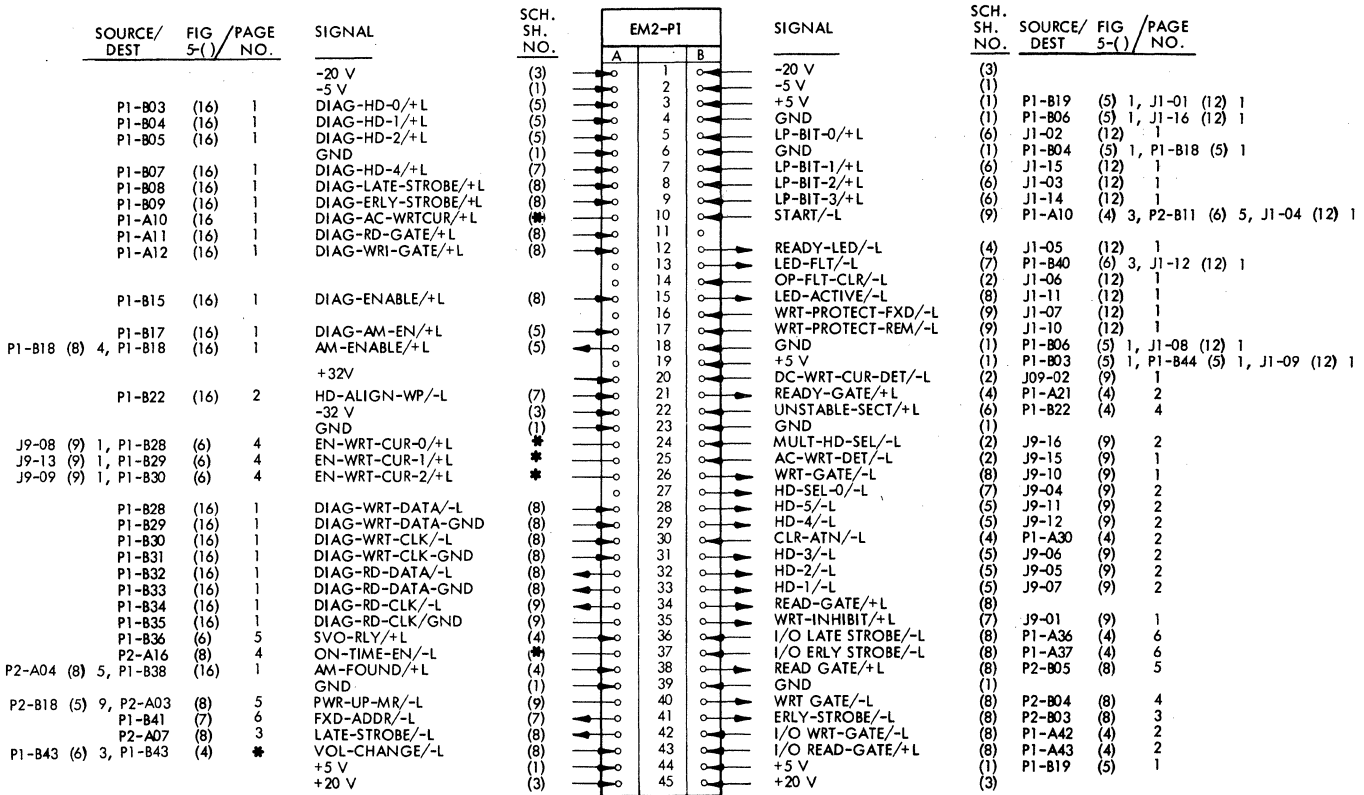

*WIRED TO, BUT NOT USED ON PWA

XX234a

Figure 5-5. CNTL/MUX Circuit Board (Sheet 1 of 13)

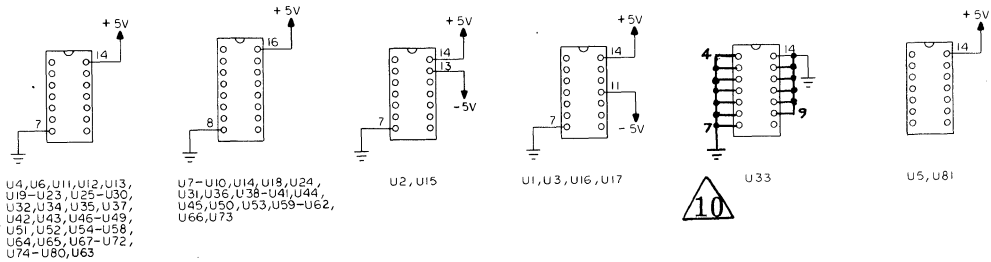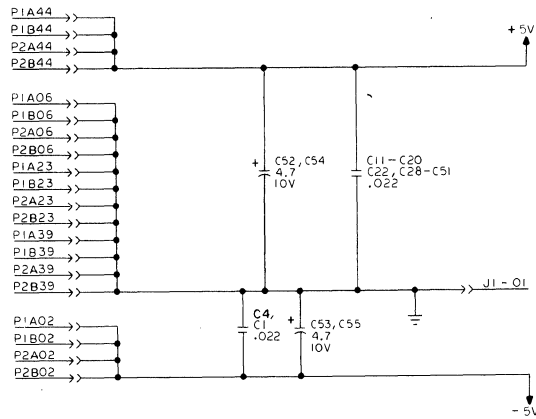

UNUSED LOGIC ELEMENTS			
ELEMENT	VENDOR NO.	LOCATION	OUTPUT PIN
146LS	74LS04	U12	4, 6, 10
146LS	74LS04	U20	12
146LS	74LS04	U23	2
146LS	74LS04	U47	12
146LS	74LS04	U80	4, 8, 12
203LS	74LS05	U4	6, 8
203LS	74LS05	U6	4
141LS	74LS10	U29	8
141LS	74LS10	U52	12, 6
943LS	74LS14	U35	4
943LS	74LS14	U67	6
943LS	74LS14	U72	10
224LS	74LS27	U19	8
224LS	74LS27	U56	6, 8
224LS	74LS27	U68	6
224LS	74LS27	U11	6, 8
218LS	74LS32	U55	6
148LS	74LS02	U70	1, 4
---	MC3437	U14	2
---	MC3437	U31	4, 6
---	82Ω RES PK	U33	8
---	470Ω RES PK	U5	7, 9, 10
---	1.0K RES PK	U81	4, 5, 9, 10



TABLE A


ASSEMBLY NO.	JUMPER CONFIGURATION			
	△ W1	△ W2	△ W3	△
77616650	X	-	X	X
77616690	-	-	X	X
77616700	X	X	-	X
77616731	-	X	-	X
77622351	-	-	X	-

NOTES: UNLESS OTHERWISE SPECIFIED

- RESISTOR VALUES ARE IN OHMS, 1/4W, ±5%
- CAPACITANCE VALUES ARE IN MICROFARADS
- SEE TABLE A FOR JUMPER CONFIGURATION
- W1 = CHECK DIAGNOSTIC TO DROP READY
- W2 = MASTER RESET TO SET ATTENTION FLOP
- W3 = MASTER RESET TO RESET ATTENTION FLOP
- "X" IN THIS COLUMN MEANS THE ORIGINAL ETCH RUN CONNECTION TO GROUND IS STILL INTACT (U38-1, U59-1).
 "-" IN THIS COLUMN MEANS ETCH TO GROUND IS CUT AND JUMPERS WIRE WRITE PROTECT STATUS SIGNALS INTO MULTIPLEX CIRCUITS THAT DRIVE "BUS-IN" I/O LINES.
- APPLIES ONLY TO ASM 77622351
- DOES NOT APPLY TO ASM 77622351
- U33-1 THRU -7, AND -9 THRU -13 GROUNDED ON ASM. 77616731 ONLY.

Figure 5-5. CNTL/MUX STD-1 (Sheet 2 of 13)

Figure 5-5. CNTL/MUX STD-1 (Sheet 4 of 13)

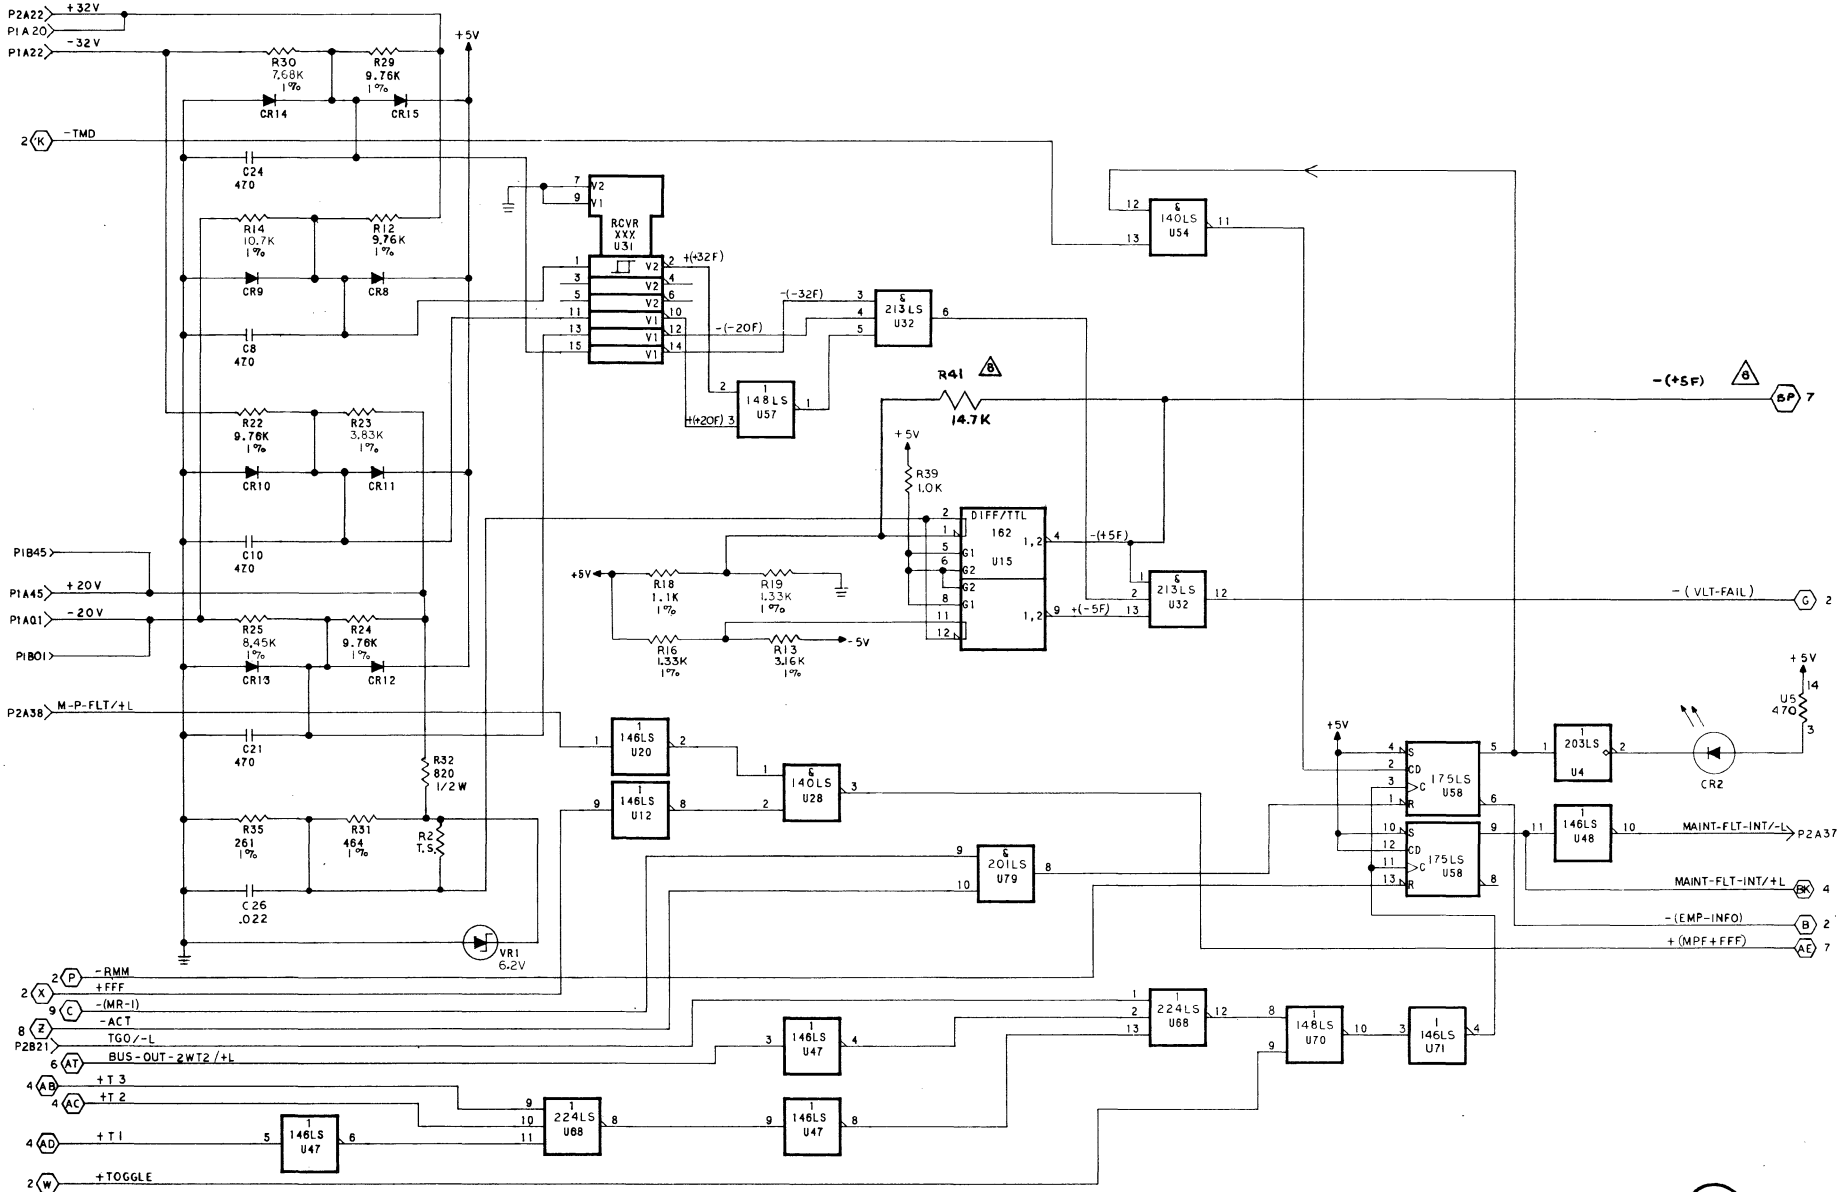

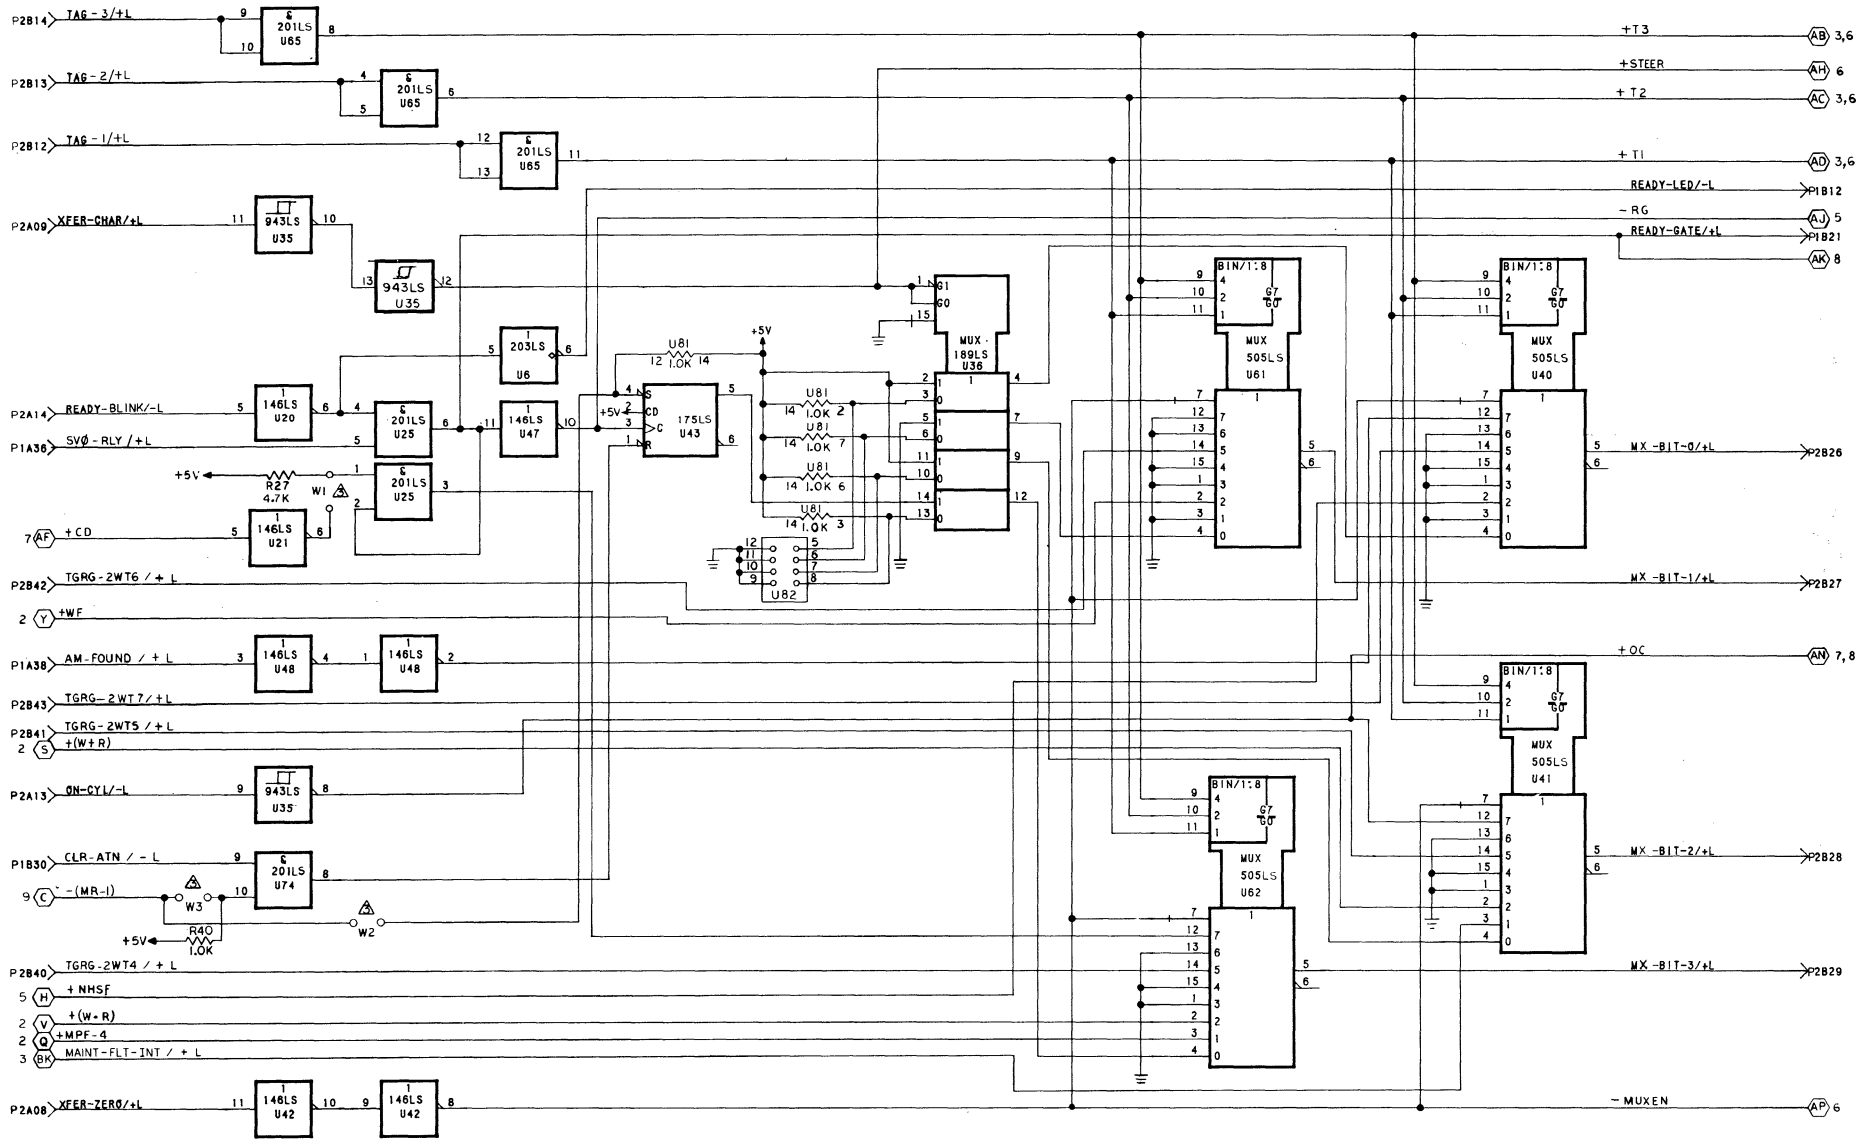


Figure 5-5. CNTL/MUX STD-1 (Sheet 6 of 13)

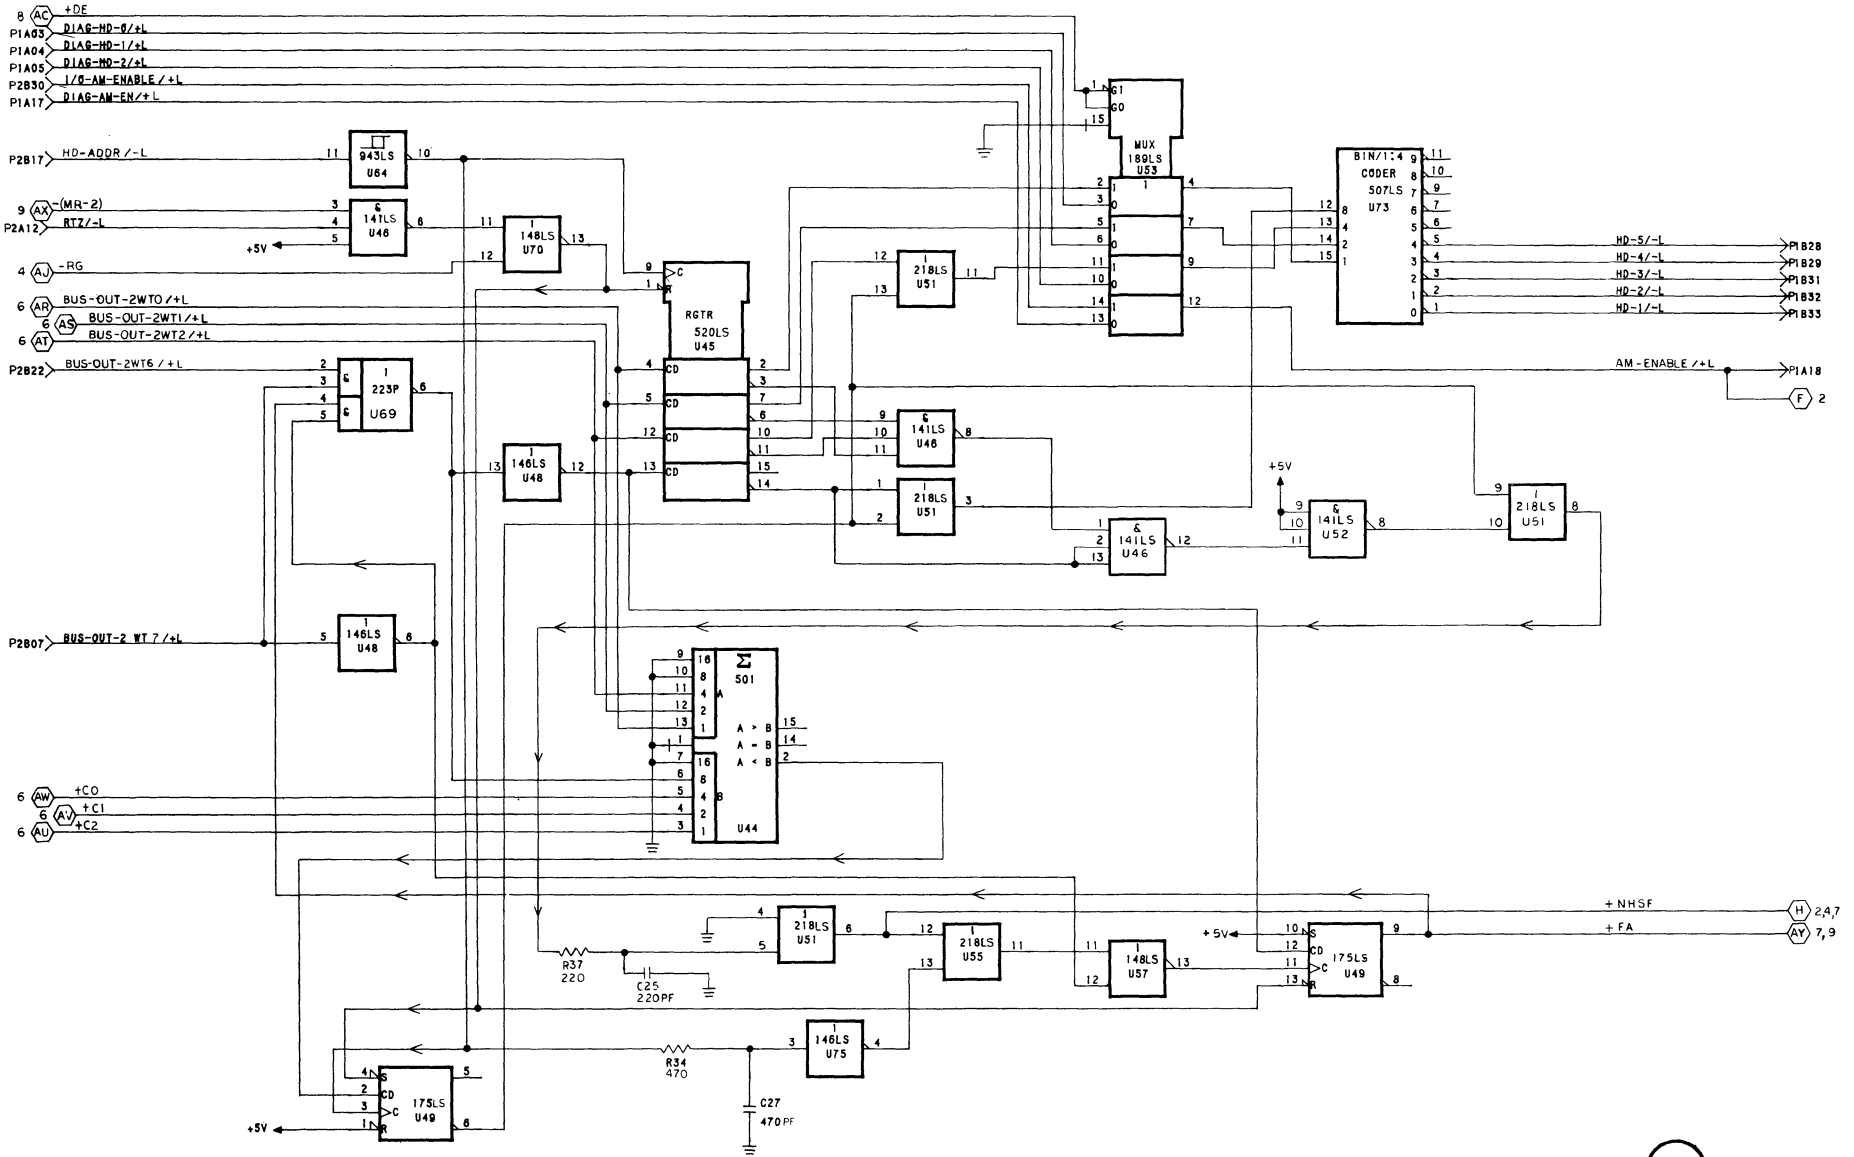


Figure 5-5. CNTL/MUX STD - 1 (Sheet 7 of 13)

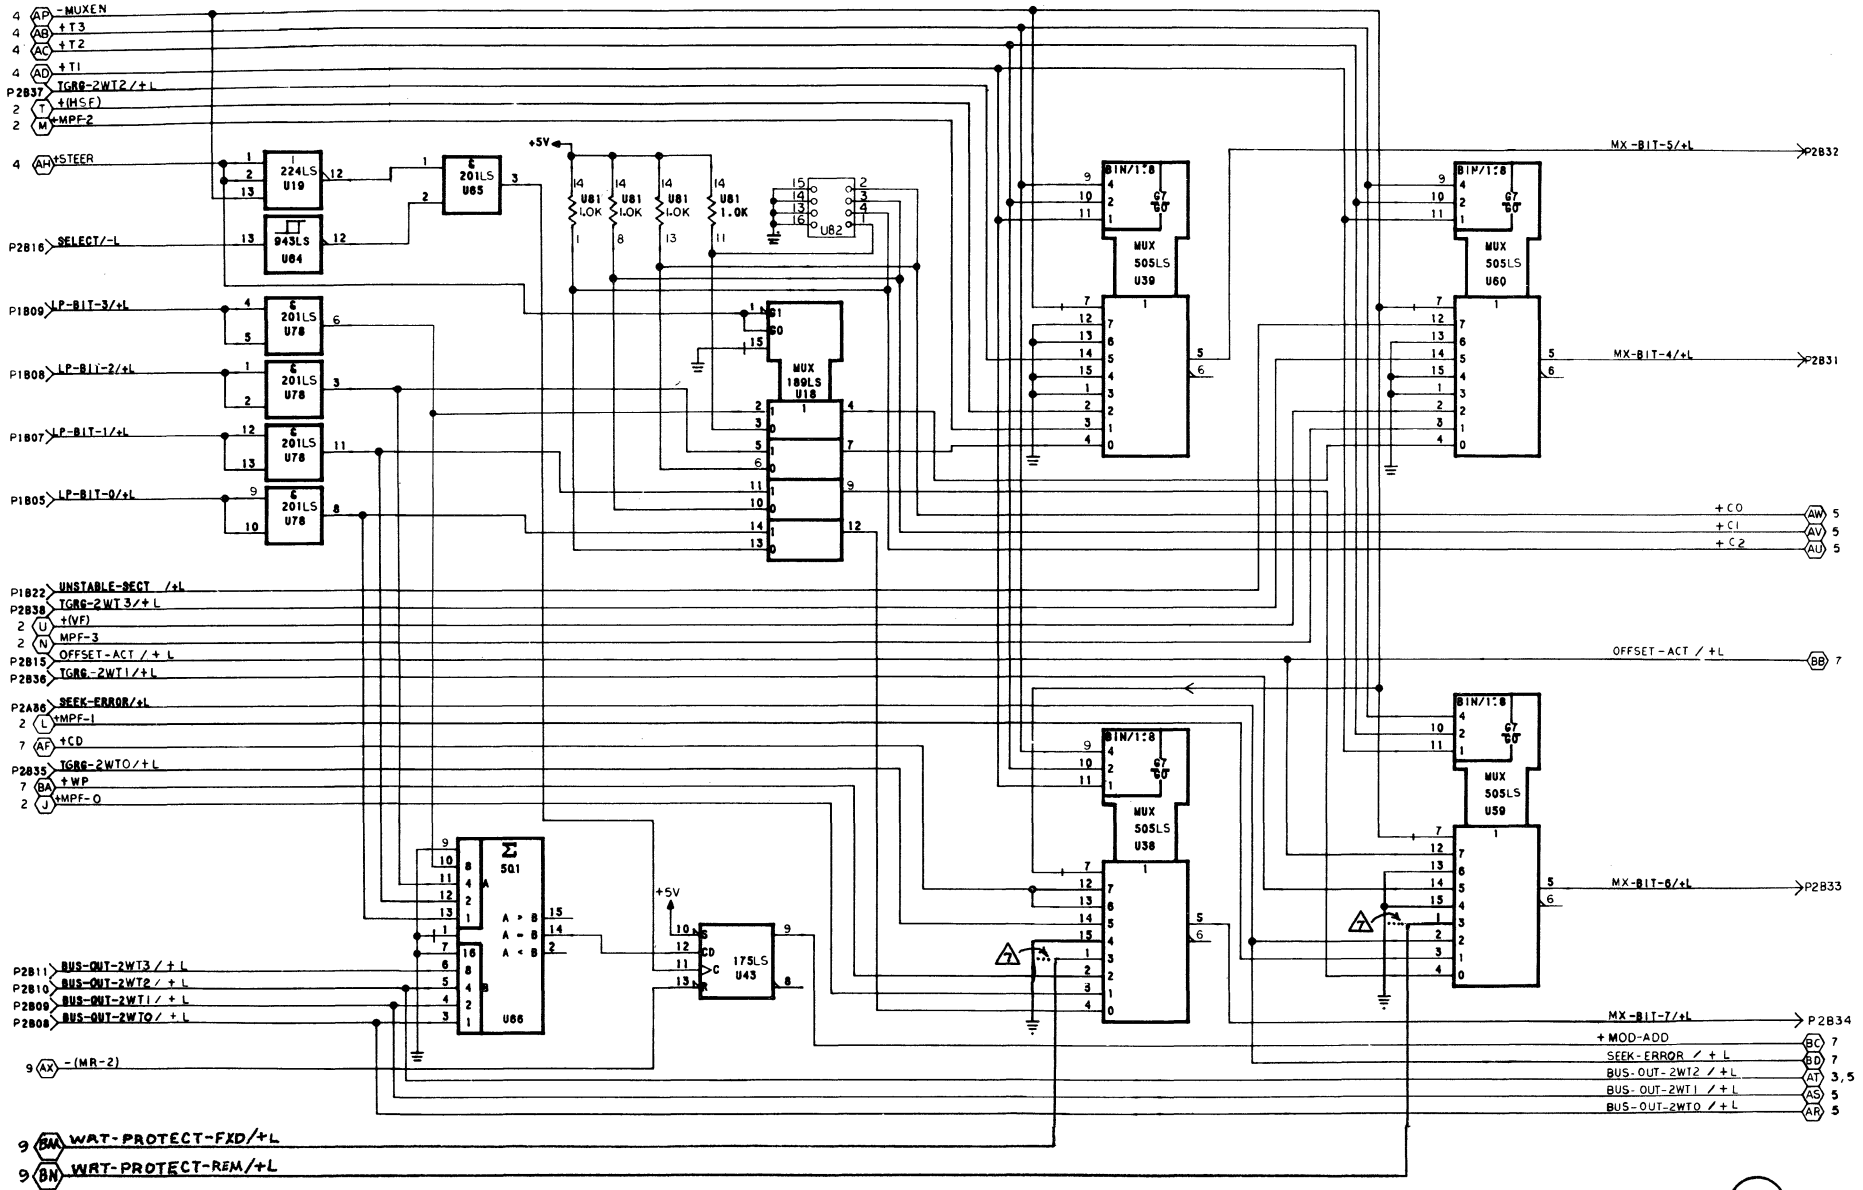


Figure 5-5. CNTL/MUX STD-1 (Sheet 8 of 13)


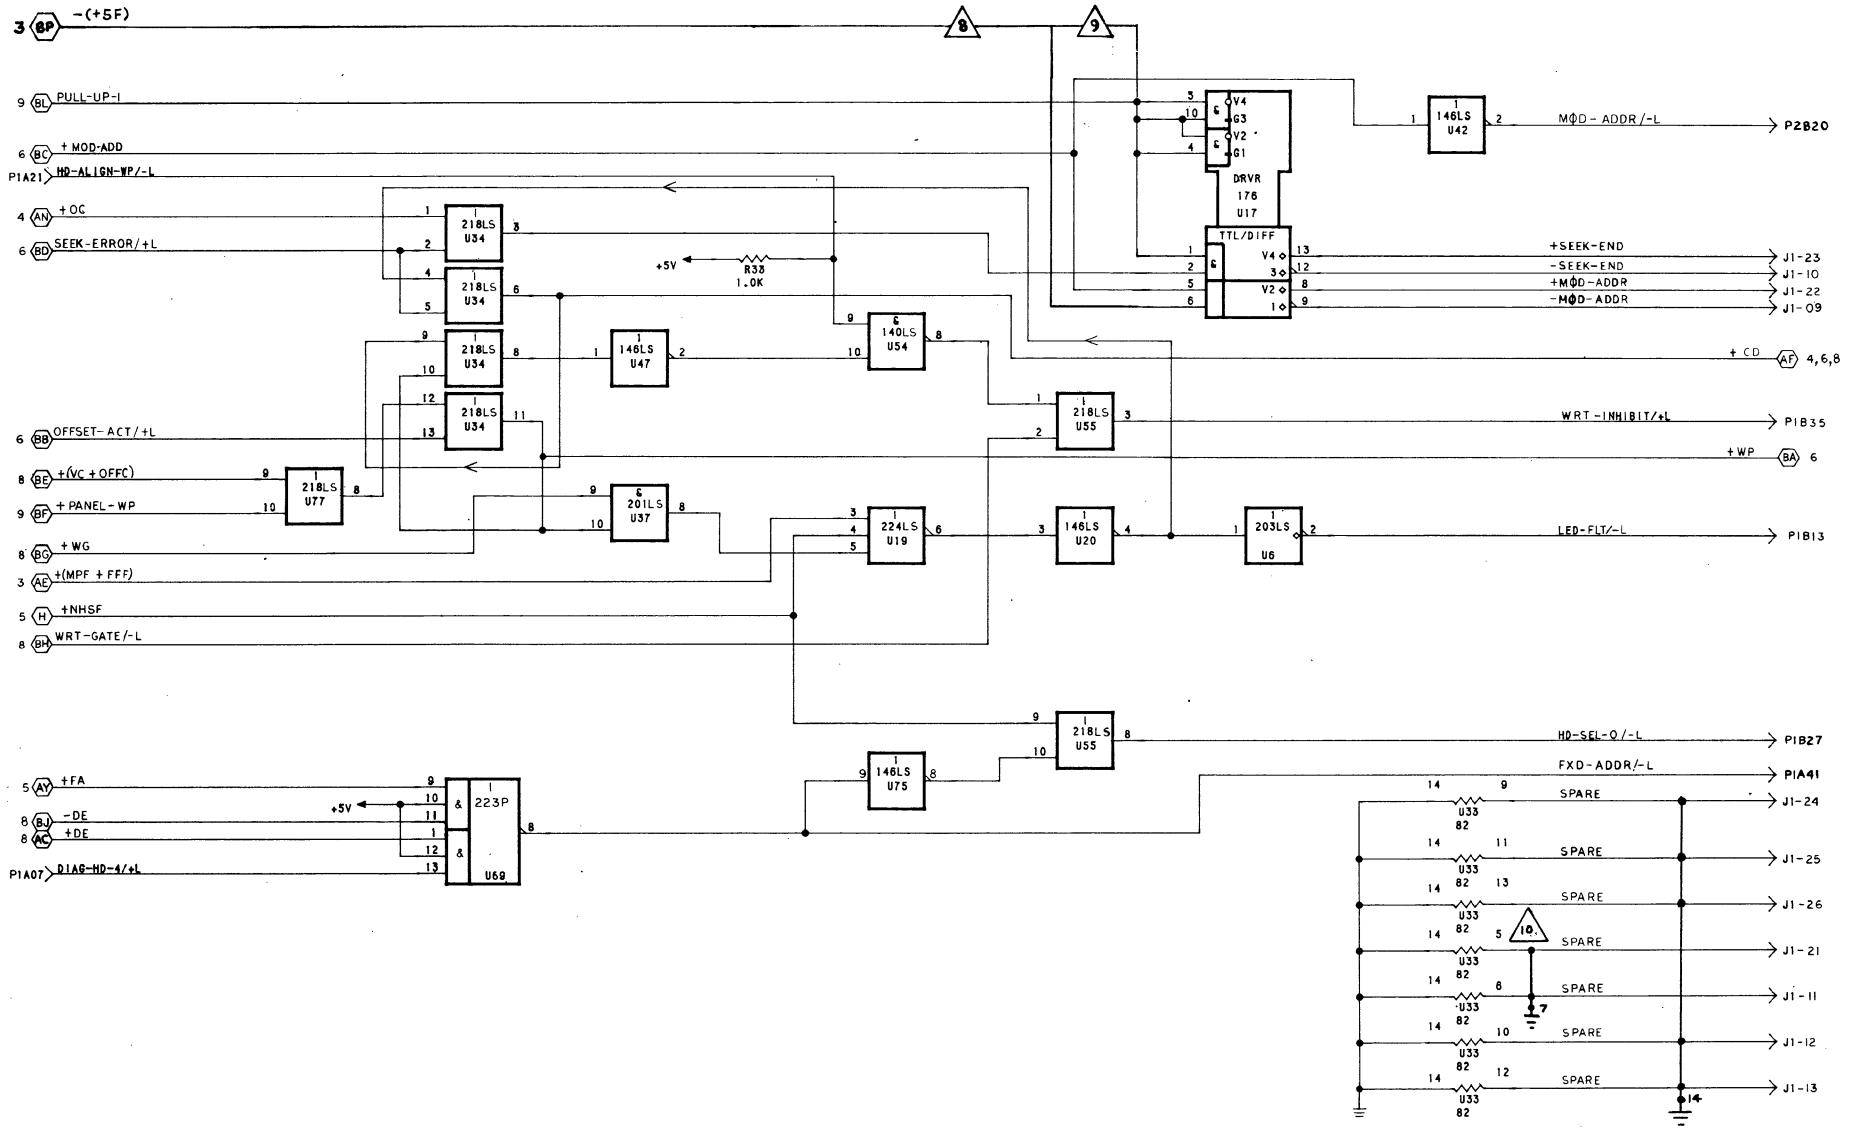


Figure 5-5. CNTL/MUX STD-1 (Sheet 10 of 13)

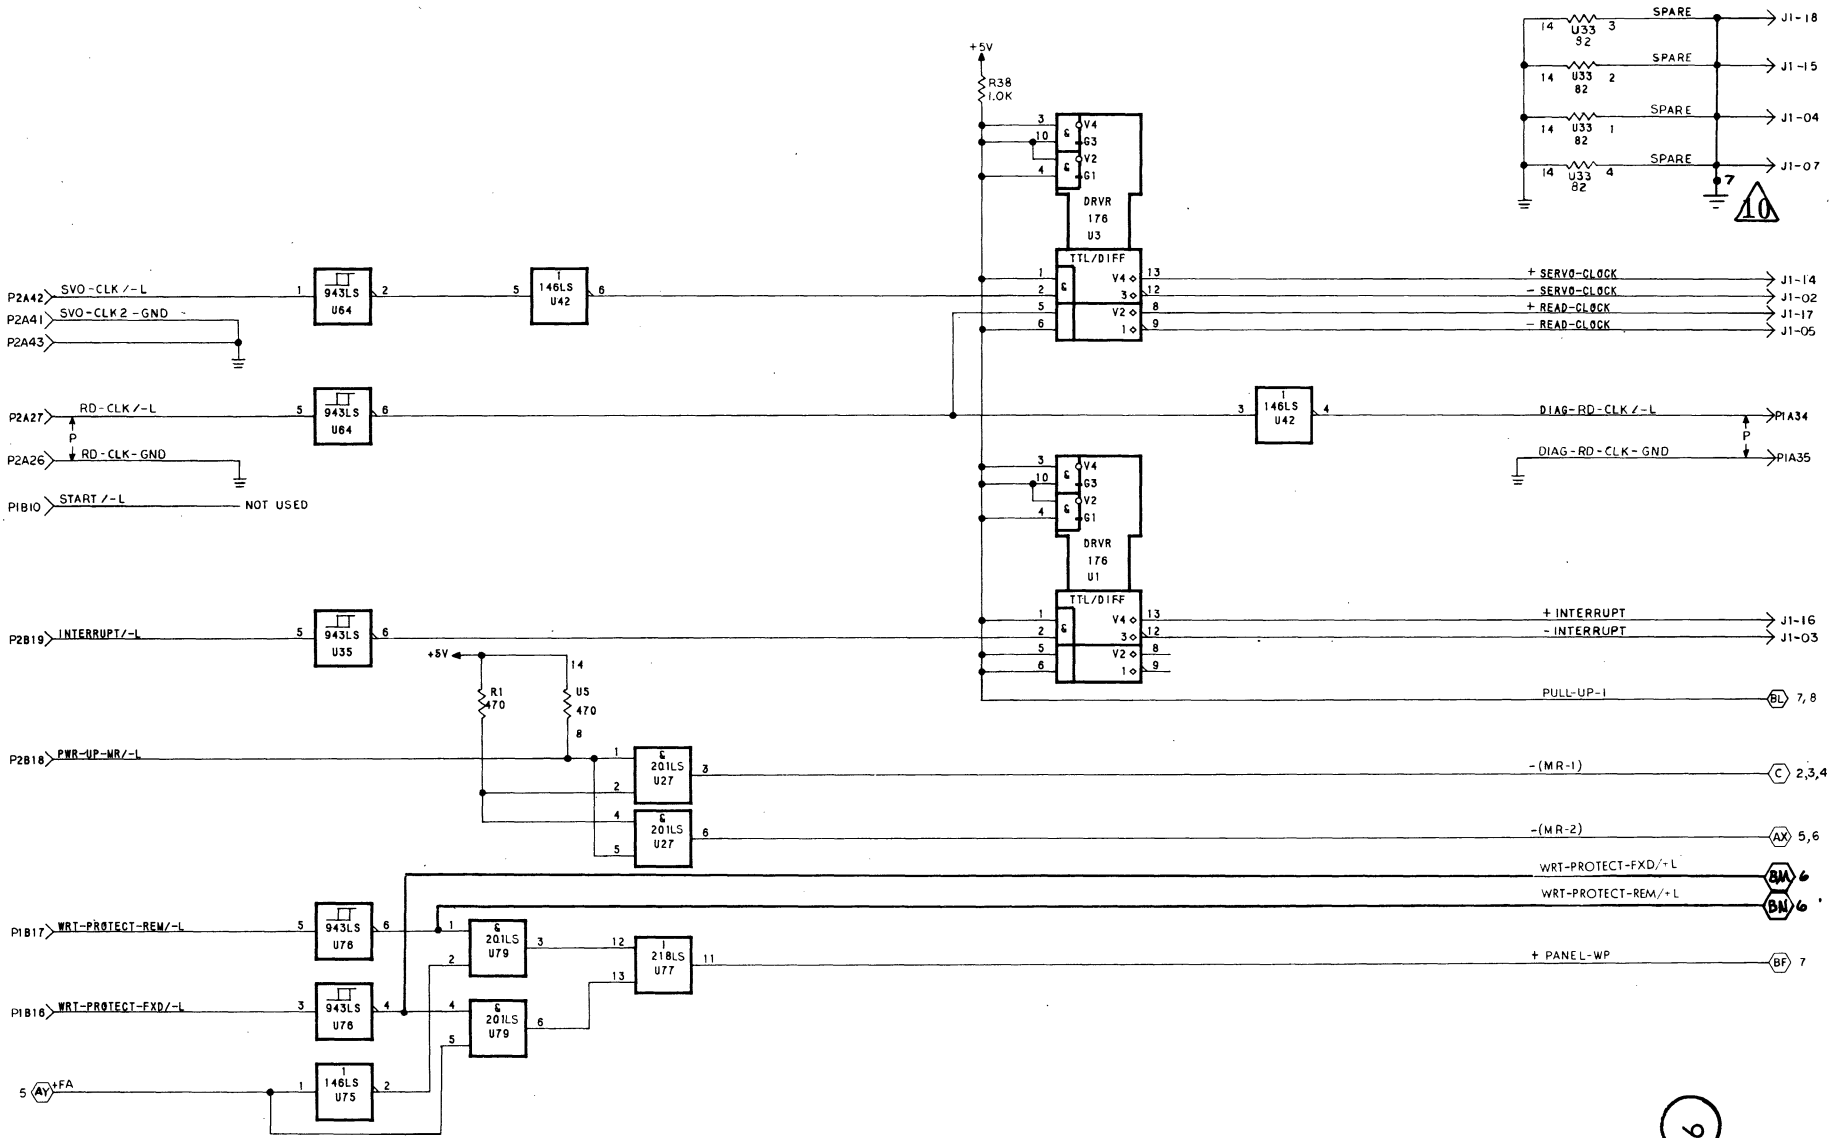


Figure 5-5. CNTL/MUX STD-1 (Sheet 11 of 13)

RES	PL ITEM
R 1	37
R 2	42
R 3	48
R 4	48
R 5	—
R 6	49
R 7	37
R 8	37
R 9	49
R 10	—
R 11	49
R 12	38
R 13	44
R 14	39
R 15	47
R 16	46
R 17	36
R 18	45
R 19	46
R 20	48
R 21	37
R 22	38
R 23	40
R 24	38
R 25	68
R 26	48
R 27	64
R 28	37
R 29	38
R 30	41
R 31	33
R 32	24
R 33	49
R 34	37
R 35	35
R 36	36
R 37	70
R 38	49
R 39	49
R 40	49
R 41	72

CAP	PL ITEM
C 1	54
C 2	71
C 3	—
C 4	54
C 5	53
C 6	50
C 7	51
C 8	52
C 9	54
C 10	52
C 11	54
C 12	54
C 13	54
C 14	54
C 15	54
C 16	54
C 17	54
C 18	54
C 19	54
C 20	54
C 21	52
C 22	54
C 23	—
C 24	52
C 25	67
C 26	54
C 27	52
C 28	54
C 29	54
C 30	54
C 31	54
C 32	54
C 33	54
C 34	54
C 35	54
C 36	54
C 37	54
C 38	54
C 39	54
C 40	54
C 41	54
C 42	54
C 43	54
C 44	54
C 45	54
C 46	54
C 47	54
C 48	54
C 49	54
C 50	54
C 51	54
C 52	69
C 53	69
C 54	69
C 55	69

IC	PL ITEM
U 1	7
U 2	6
U 3	7
U 4	15
U 5	31
U 6	15
U 7	27
U 8	27
U 9	29
U 10	29
U 11	21
U 12	14
U 13	22
U 14	10
U 15	6
U 16	7
U 17	7
U 18	27
U 19	21
U 20	14
U 21	14
U 22	21
U 23	14
U 24	29
U 25	16
U 26	20
U 27	16
U 28	12
U 29	17
U 30	15
U 31	10
U 32	18
U 33	32
U 34	22
U 35	19
U 36	27
U 37	16
U 38	26
U 39	26
U 40	26
U 41	26
U 42	14
U 43	25
U 44	8
U 45	28
U 46	17
U 47	14
U 48	14
U 49	25
U 50	27
U 51	22

IC	PL ITEM
U 52	17
U 53	27
U 54	12
U 55	22
U 56	21
U 57	13
U 58	25
U 59	26
U 60	26
U 61	26
U 62	26
U 63	30
U 64	19
U 65	16
U 66	8
U 67	19
U 68	21
U 69	24
U 70	13
U 71	14
U 72	19
U 73	23
U 74	16
U 75	14
U 76	19
U 77	22
U 78	16
U 79	16
U 80	14
U 81	9
U 82	11,65

DIODE	PL ITEM
CR 1	57
CR 2	57
CR 3	57
CR 4	57
CR 5	57
CR 6	57
CR 7	57
CR 8	56
CR 9	56
CR 10	56
CR 11	56
CR 12	56
CR 13	56
CR 14	56
CR 15	56

SW	PL ITEM
SI	59

VOLT REG	PL ITEM
VRI	55


CONN	PL ITEM
J1	61

JMPR	PL ITEM
W1	58
W2	58
W3	58

TABLE A

ASSEMBLY NO.	△ W1	△ W2	△ W3	△	△
77616650	X	-	-	X	X
77616690	X	-	-	X	X
77616700	X	-	-	X	X
77616731	X	X	-	X	X
77622351	-	-	-	X	-

- NOTES:
- △ SEE TABLE A FOR JUMPER CONFIGURATION. "X" MEANS JUMPER IS INSTALLED.
 - △ 7 PROVIDES WRITE PROTECT STATUS ON BUS- IN I/O LINES ON PWA P/N 77622350 WHEN U38-1 AND U59-1 ARE NOT GROUNDED.
 - △ 8 APPLIES ONLY TO ASM 77622351
 - △ 9 DOES NOT APPLY TO ASM 77622351
 - △ 10 U33-1 THRU -7, AND -9 THRU -13 GROUNDED ON ASM. 77616731 ONLY.


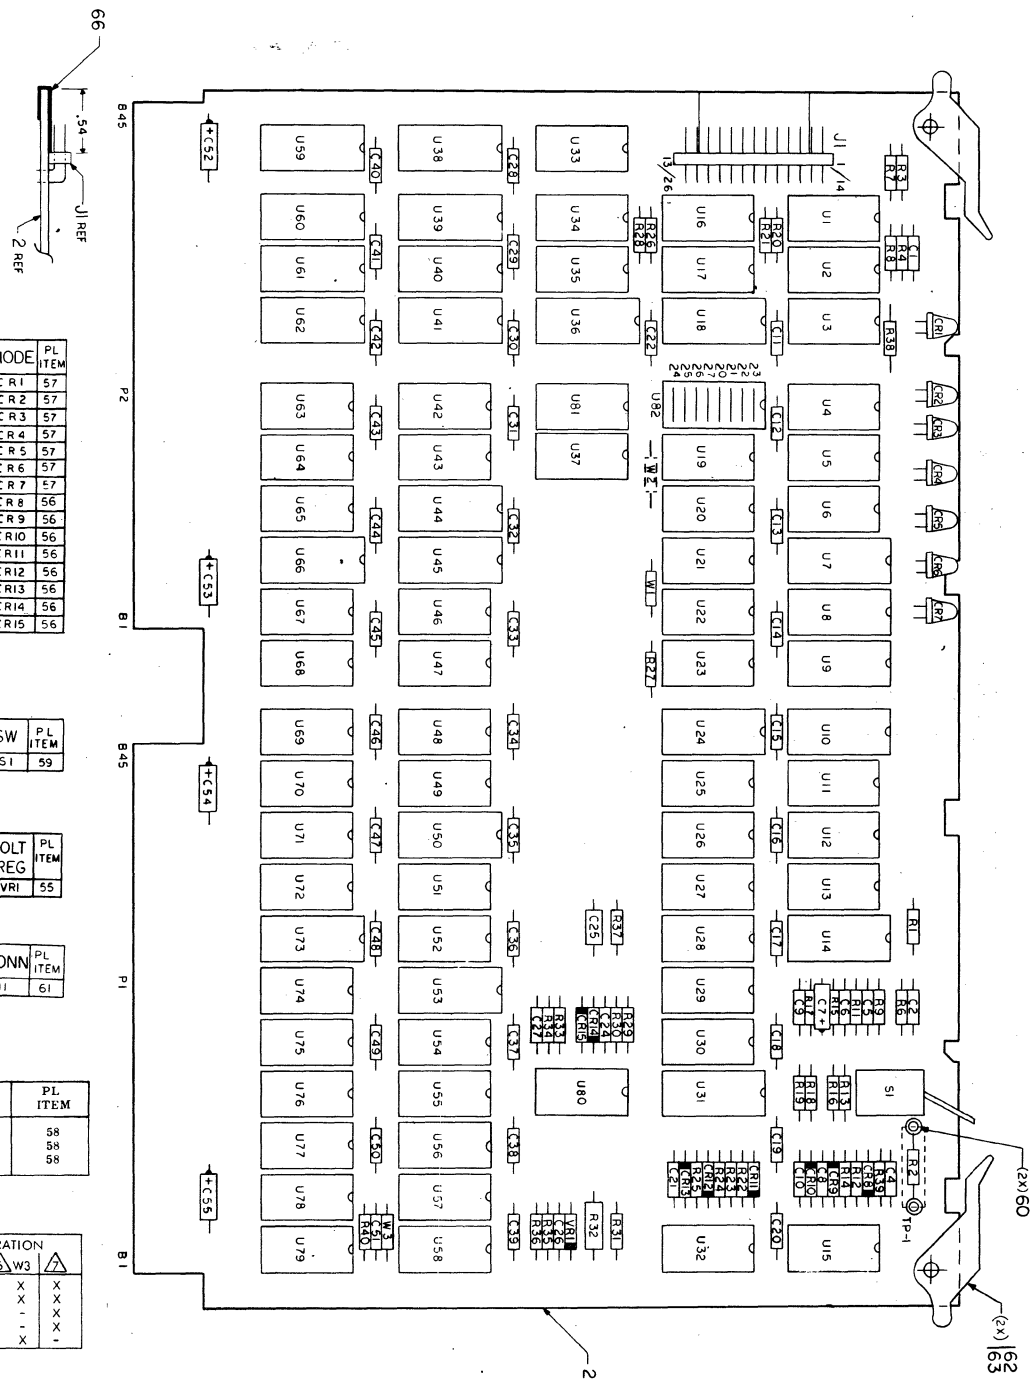


Item No.	Drawing No.	Description	Remarks
	77616650	PWA CNTL/MUX STD-1	
	77616690	PWA CNTL/MUX STD-1	
	77616700	PWA CNTL/MUX STD-1	
	77616731	PWA CNTL/MUX STD-1	
	77622351	PWA CNTL/MUX STD-1	
2	77616670	PWB CNTL/MUX STD-1	
6	50252900-1	IC 74107	
7	50252800-3	IC 75110	
8	51783500-5	IC 9324	
9	75009901-2	Res Pac 2% 1.0K (13)	
10	15156700-5	IC 3437	
11	77832290-9	Socket, 16 Pin	
12	15144900-6	IC 74LS00	
13	15145000-4	IC 74LS02	
14	15145100-2	IC 74LS04	
15	15145300-8	IC 74LS05	
16	15145400-6	IC 74LS08	
17	15145600-1	IC 74LS10	
18	15145700-9	IC 74LS11	
19	15148500-0	IC 74LS14	
20	15145900-5	IC 74LS20	
21	15146000-3	IC 74LS27	
22	15146200-9	IC 74LS32	
23	15147600-9	IC 74LS42	
24	15124700-4	IC 74LS51	
25	15146300-7	IC 74LS74	
26	15163304-7	IC 74LS151	
27	15146700-8	IC 74LS157	
28	15146900-4	IC 74LS175	
29	15148300-5	IC 74LS279	
30	15164421-8	IC 74S51	
31	75009900-4	Res Pac 2% 470 (13)	
32	75009908-7	Res Pac 2% 82 (13)	
33	94360264-9	Res 1/4W 1% 464	
34	24500161-5	Res 1/2W 5% 820	
35	94360240-9	Res 1/4W 1% 261	
36	24500087-2	Res 1/4W 5% 10K	
37	24500055-9	Res 1/4W 5% 470	
38	94360395-1	Res 1/4W 1% 9.76K	
39	94360403-3	Res 1/4W 1% 10.7K	
40	94360356-3	Res 1/4W 1% 3.83K	
41	94360385-2	Res 1/4W 1% 7.68K	
42	94357500-1	Resistor Test Select	
44	94360348-0	Res 1/4W 1% 3.16K	
45	94360304-3	Res 1/4W 1% 1.10K	
46	94360312-6	Res 1/4W 1% 1.33K	
47	17705904-5	Res 1/4W 5% 47K	
48	24500037-7	Res 1/4W 5% 82	
49	24500063-3	Res 1/4W 5% 1K	
50	75808529-4	Cap 100V 10% 2200	

Figure 5-5. CNTL/MUX Circuit Board (Sheet 12 of 13)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
51	17706701-4	Cap 10V 10% 1.2 uF	
52	94240400-5	Cap 50V 10% 470	
43	94240401-3	Cap 50V 10% 1000	
54	94361416-4	Cap 50V 80-20% 0.022 uF	
55	50240108-6	Volt Reg 6.2V IN5234	
56	51706300-4	Diode IN4454	
57	77612000-8	Lamp (LED)	
58	94358500-0	Jumper Wire, Molded	
59	41347801-7	Switch Toggle PC Board	
60	92498021-2	Terminal Swaged	
61	77612196-4	Right Angle Header	
62	82311900-3	Inject/Eject-Card	
63	93533118-1	Pin, Rolled	
64	24500079-9	Res 1/4W 5% 4.7K	
65	77612224-4	Shunt, Dip	
66	95105900-5	Tape, Poly Film, Insul	
67	75808517-9	Cap 100V 10% 220	
68	94360389-4	Res 1/4W 1% 8.45K	
69	24504346-8	Cap 10V 20% 4.7 uF	
70	24500047-6	Res 1/4W 5% 220	
71	75808532-8	Cap 100V 10% 3900	
72	94360416-5	Res 14.7 K 1% 1/4W	

Figure 5-5. CNTL/MUX Circuit Board (Sheet 13 of 13)

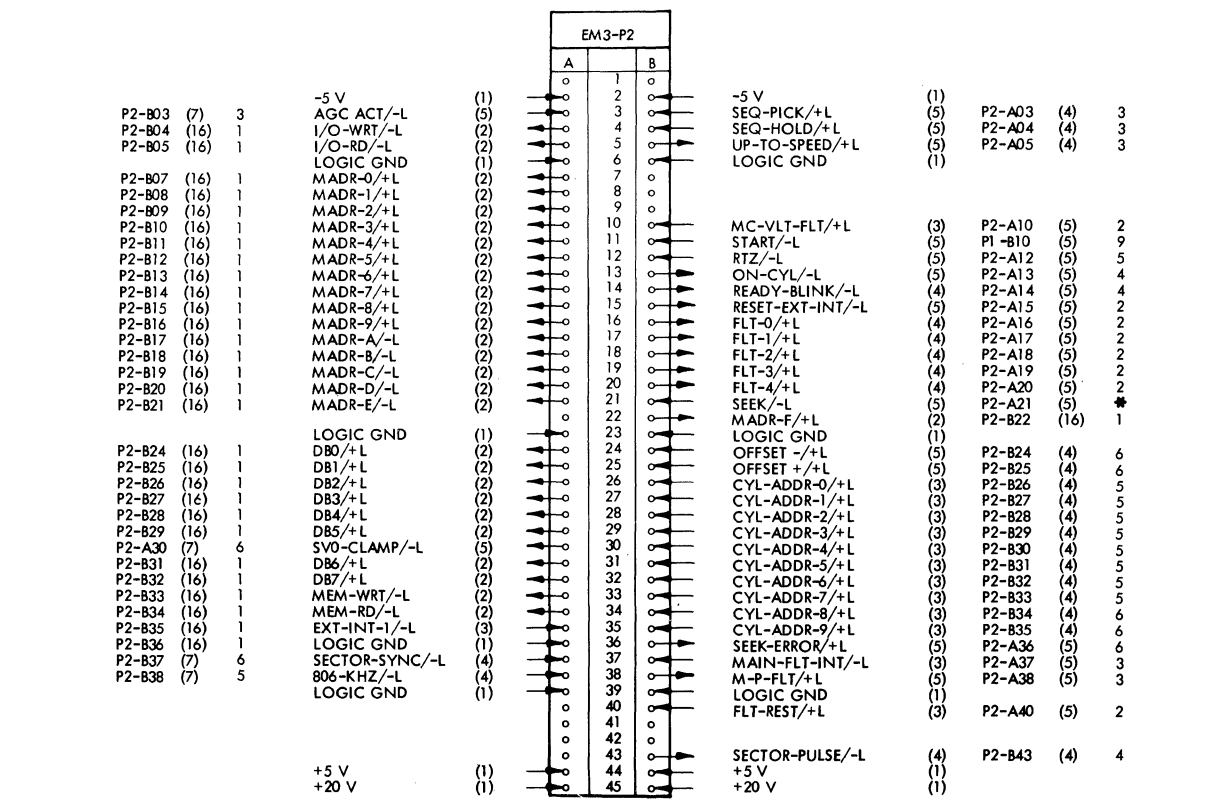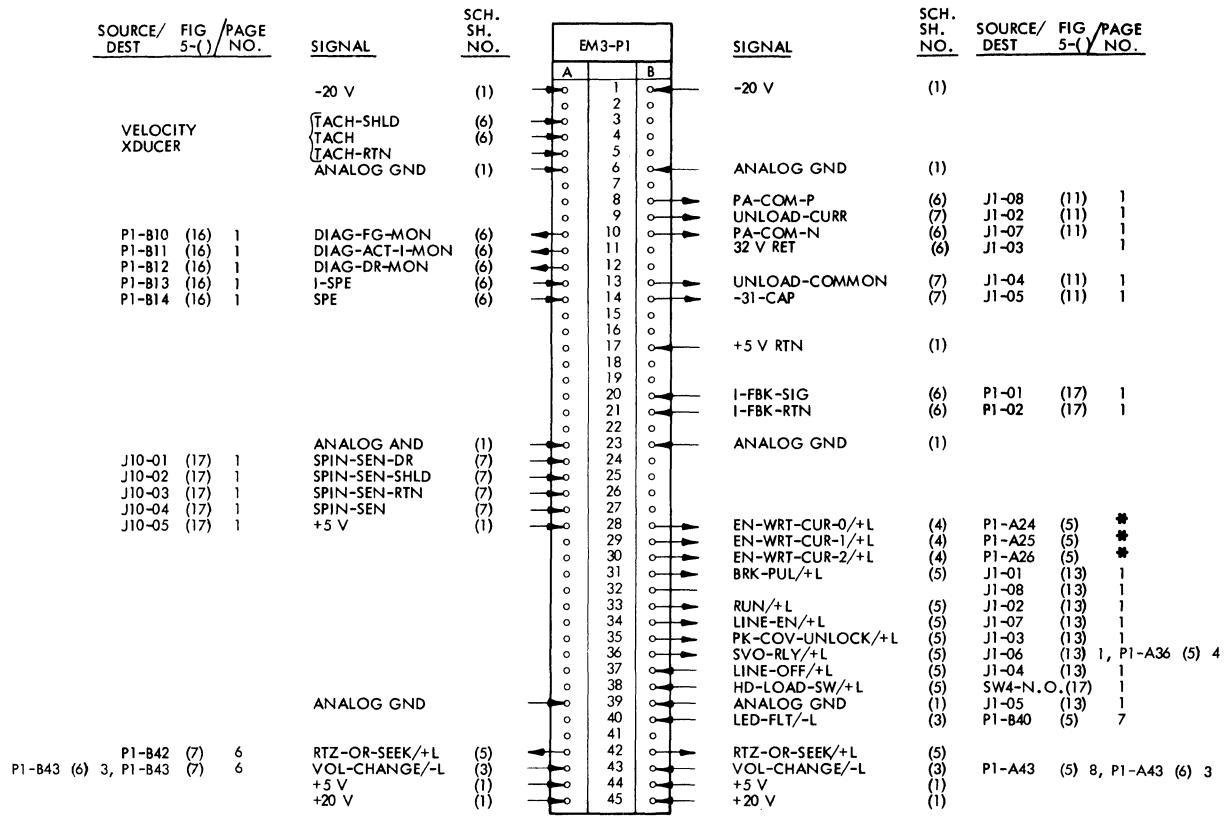


XX235a

* WIRED TO, BUT NOT USED ON PWA

Figure 5-6. Servo Coarse Circuit Board (Sheet 1 of 13)

1

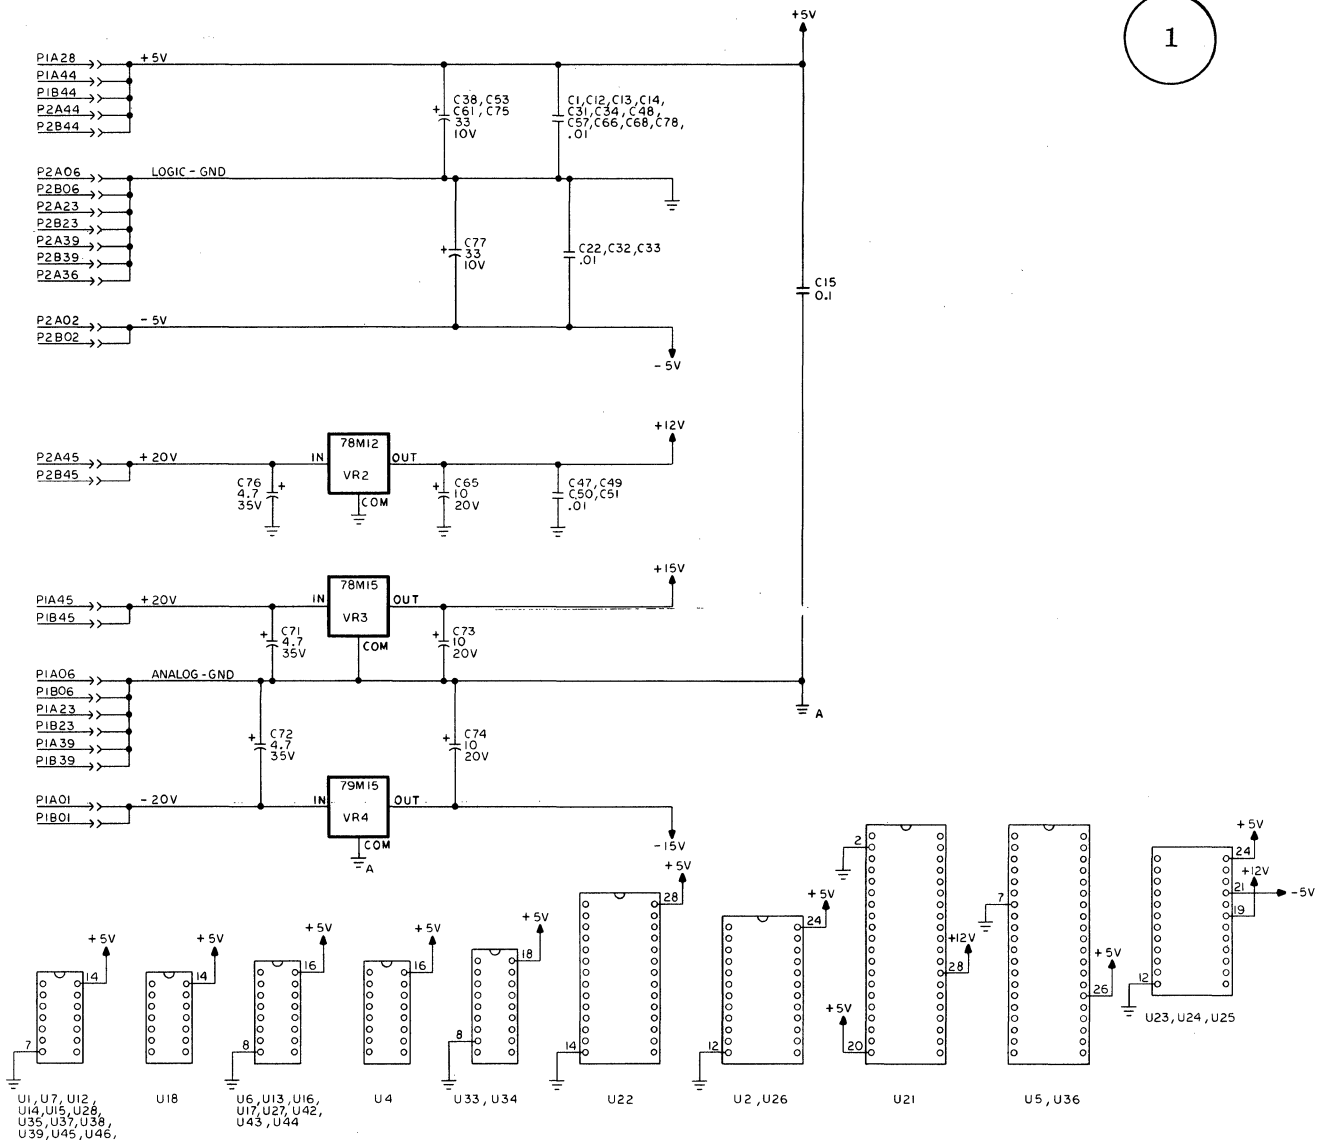

UNUSED LOGIC ELEMENTS			
ELEMENT	VENDOR NO.	LOCATION	OUTPUT PIN
175LS	74LS74	U1	8 OR 9
202LS	74LS03	U12	11
201LS	74LS08	U37	6
146	7404	U46	4

ASSEMBLY	JUMPER CONFIGURATION					
	W1	W2	W3	W4	W5	W6
75885600-9	-	x	-	x	x	x
77616/20-7	x	-	-	x	x	x
7762290p	-	x	-	x	x	x
77622990	x	-	-	x	x	x

- NOTES: UNLESS OTHERWISE SPECIFIED
1. RESISTORS VALUES ARE IN OHMS, 1/4W, ±5%
 2. CAPACITANCE VALUES ARE IN MICROFARADS
 3. SWITCHES 1 THRU 7 ARE THE NUMBER OF SECTORS PER REV. SELECTION. SWITCH 8 IS VELOCITY MEASUREMENT MODE
 - △ 4. SEE TABLE A FOR JUMPER CONFIGURATION
 - △ 5. W1 JUMPER CAUSES ON CYLINDER TO BECOME FALSE FOR APPROXIMATELY 1.2 MSEC. WHEN OFFSET IS CHANGED OR TERMINATED
 - △ 6. W2 JUMPER KEEPS ON CYLINDER TRUE, WHEN OFFSET IS CHANGED OR TERMINATED

Figure 5-6. Servo Coarse Circuit Board (Sheet 2 of 13)

Figure 5-6. Servo Course Circuit Board (Sheet 3 of 13)

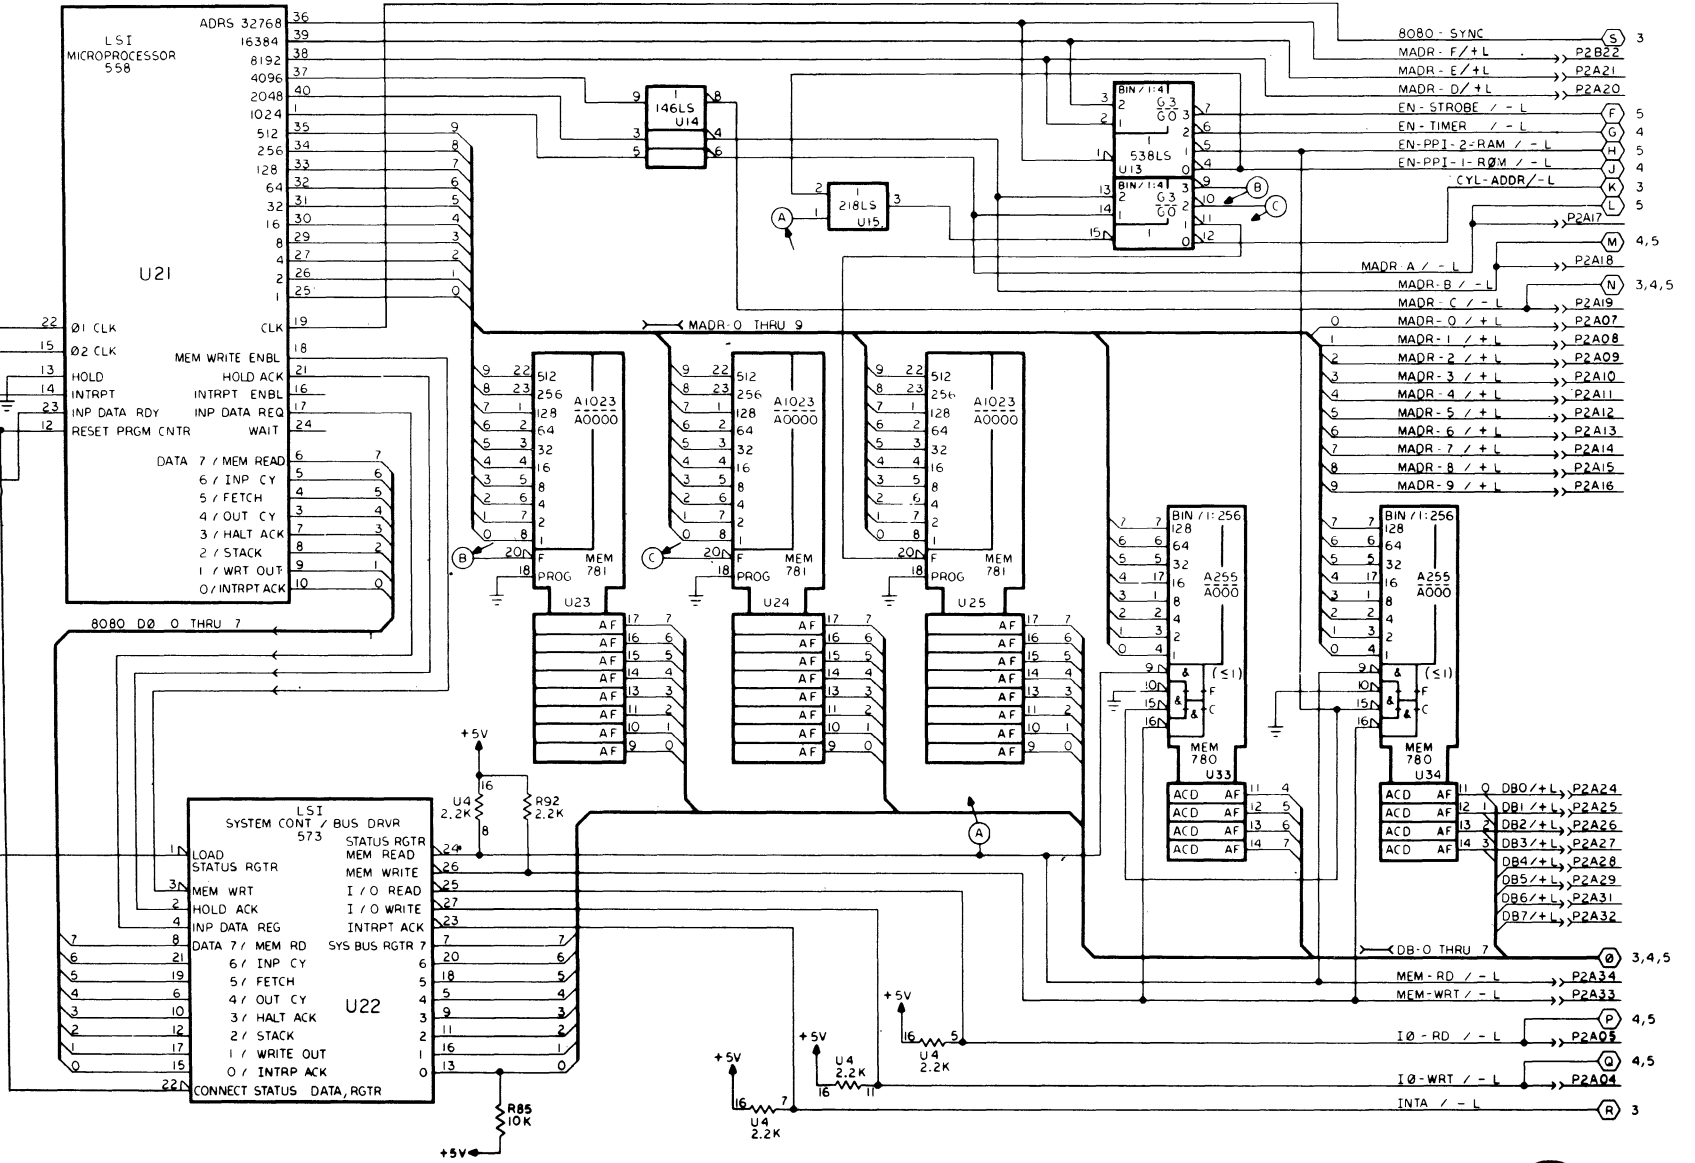


Figure 5-6. Servo Course Circuit Board (Sheet 4 of 13)


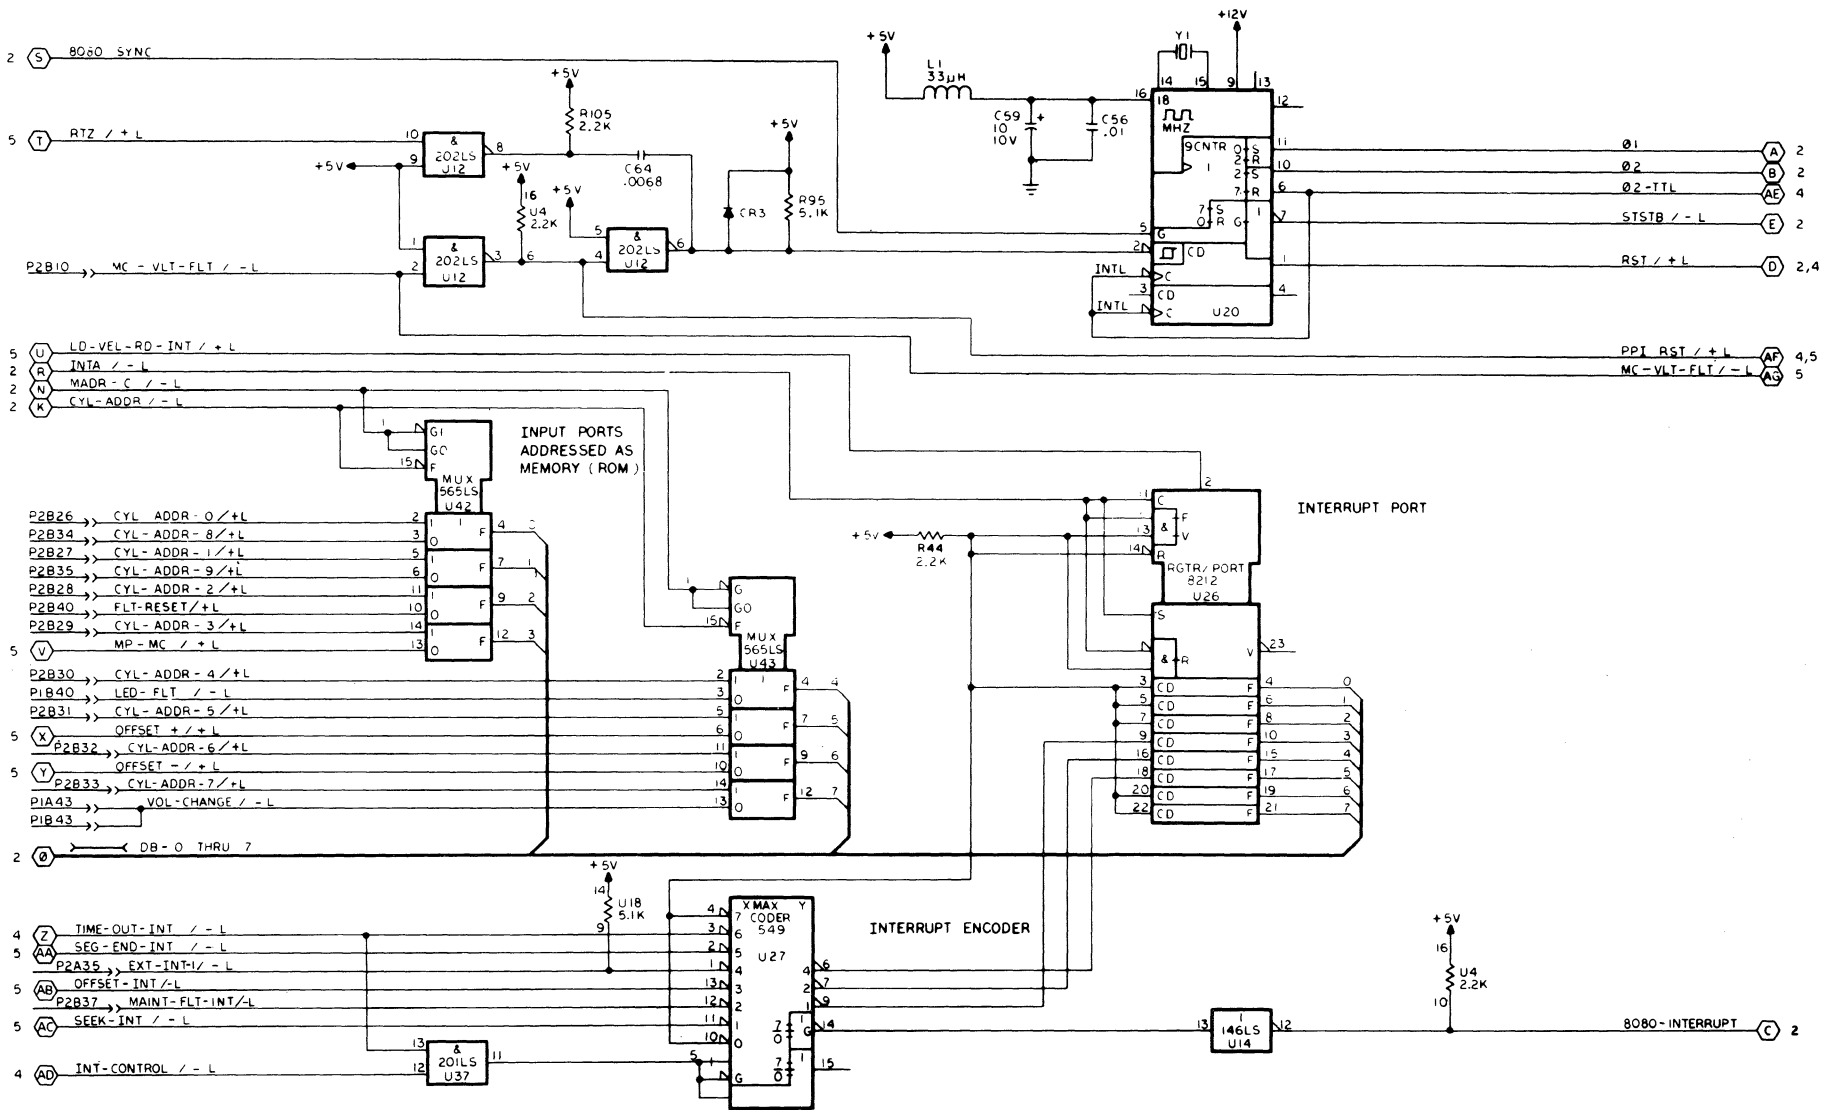


Figure 5-6. Servo Coarse Circuit Board (Sheet 6 of 13)

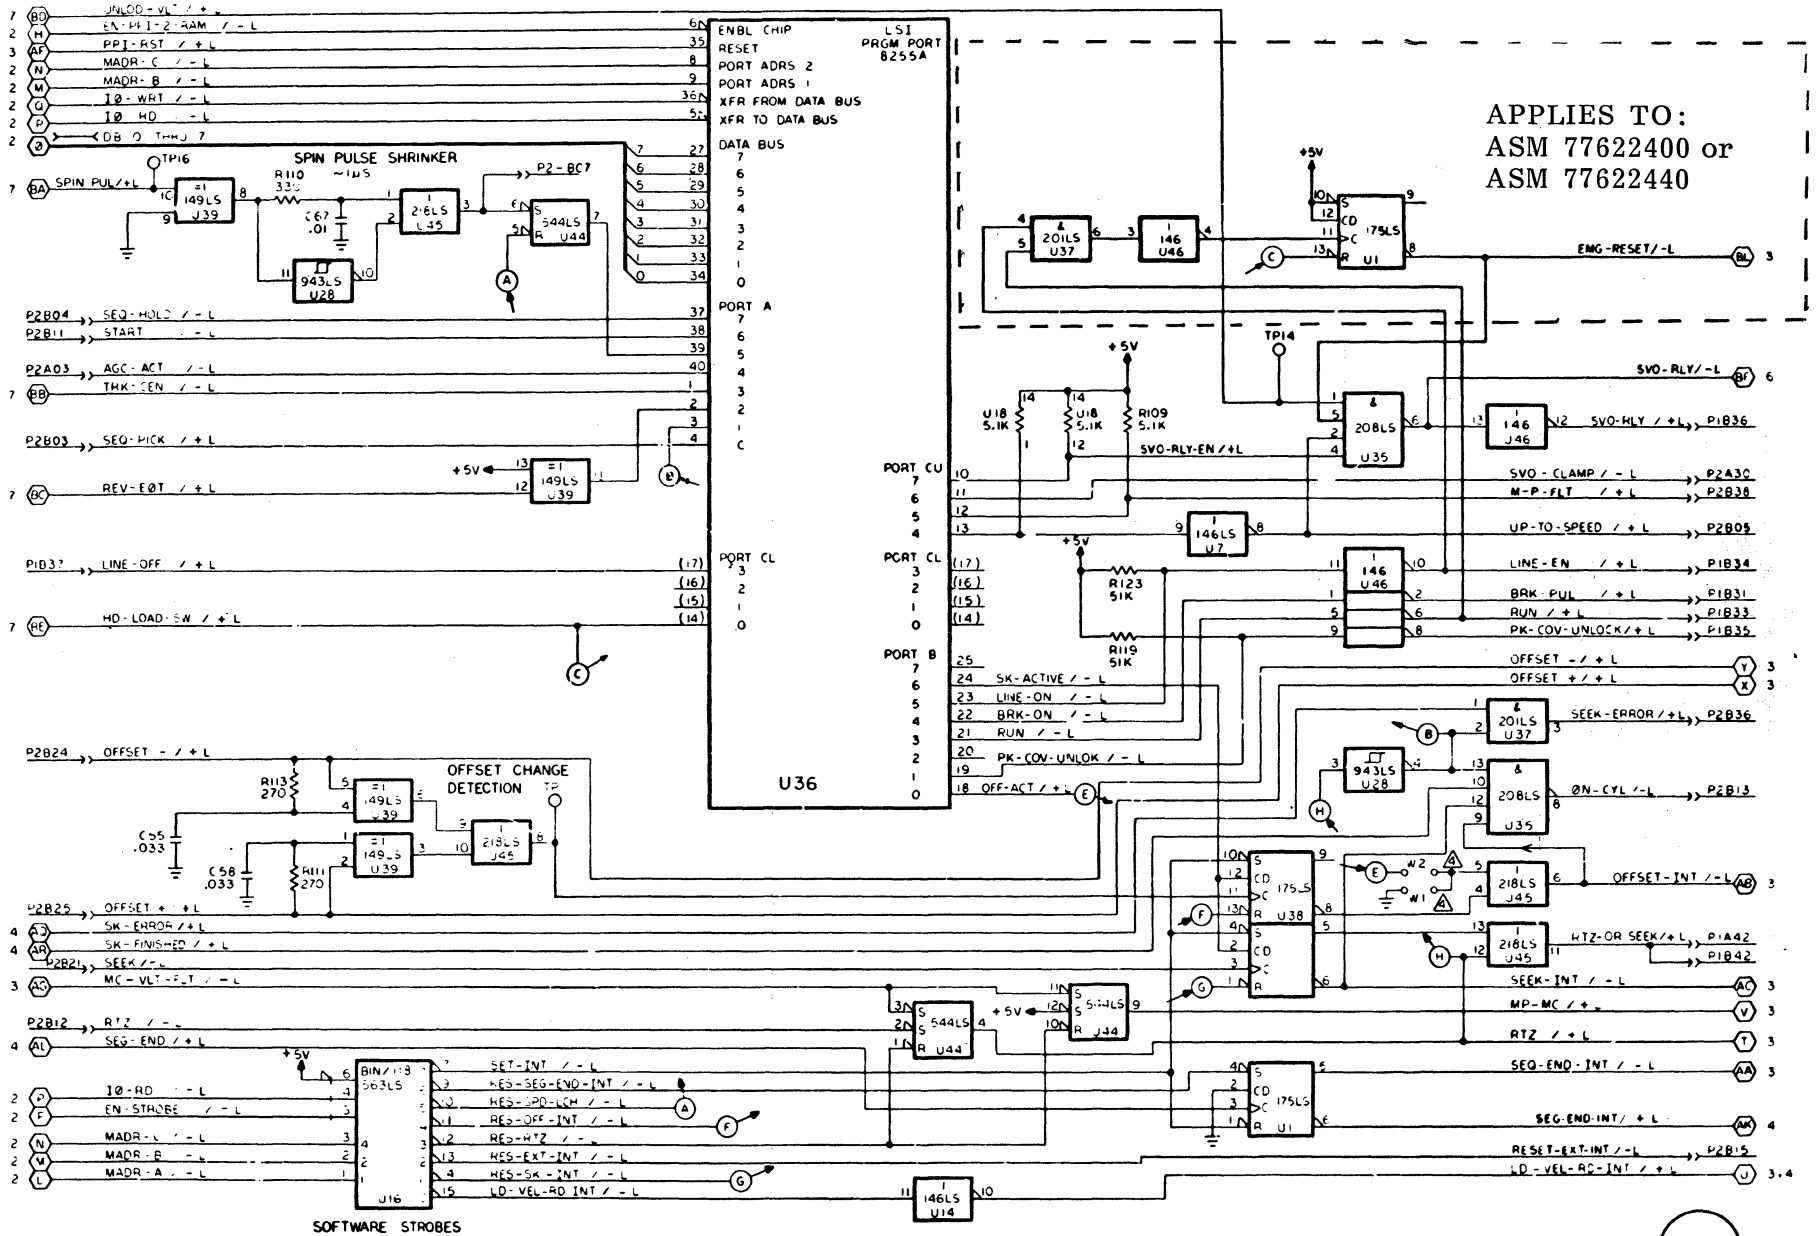

APPLIES TO:
 ASM 77622400 or
 ASM 77622440

CT

Figure 5-6. Servo Coarse Circuit Board (Sheet 7 of 13)



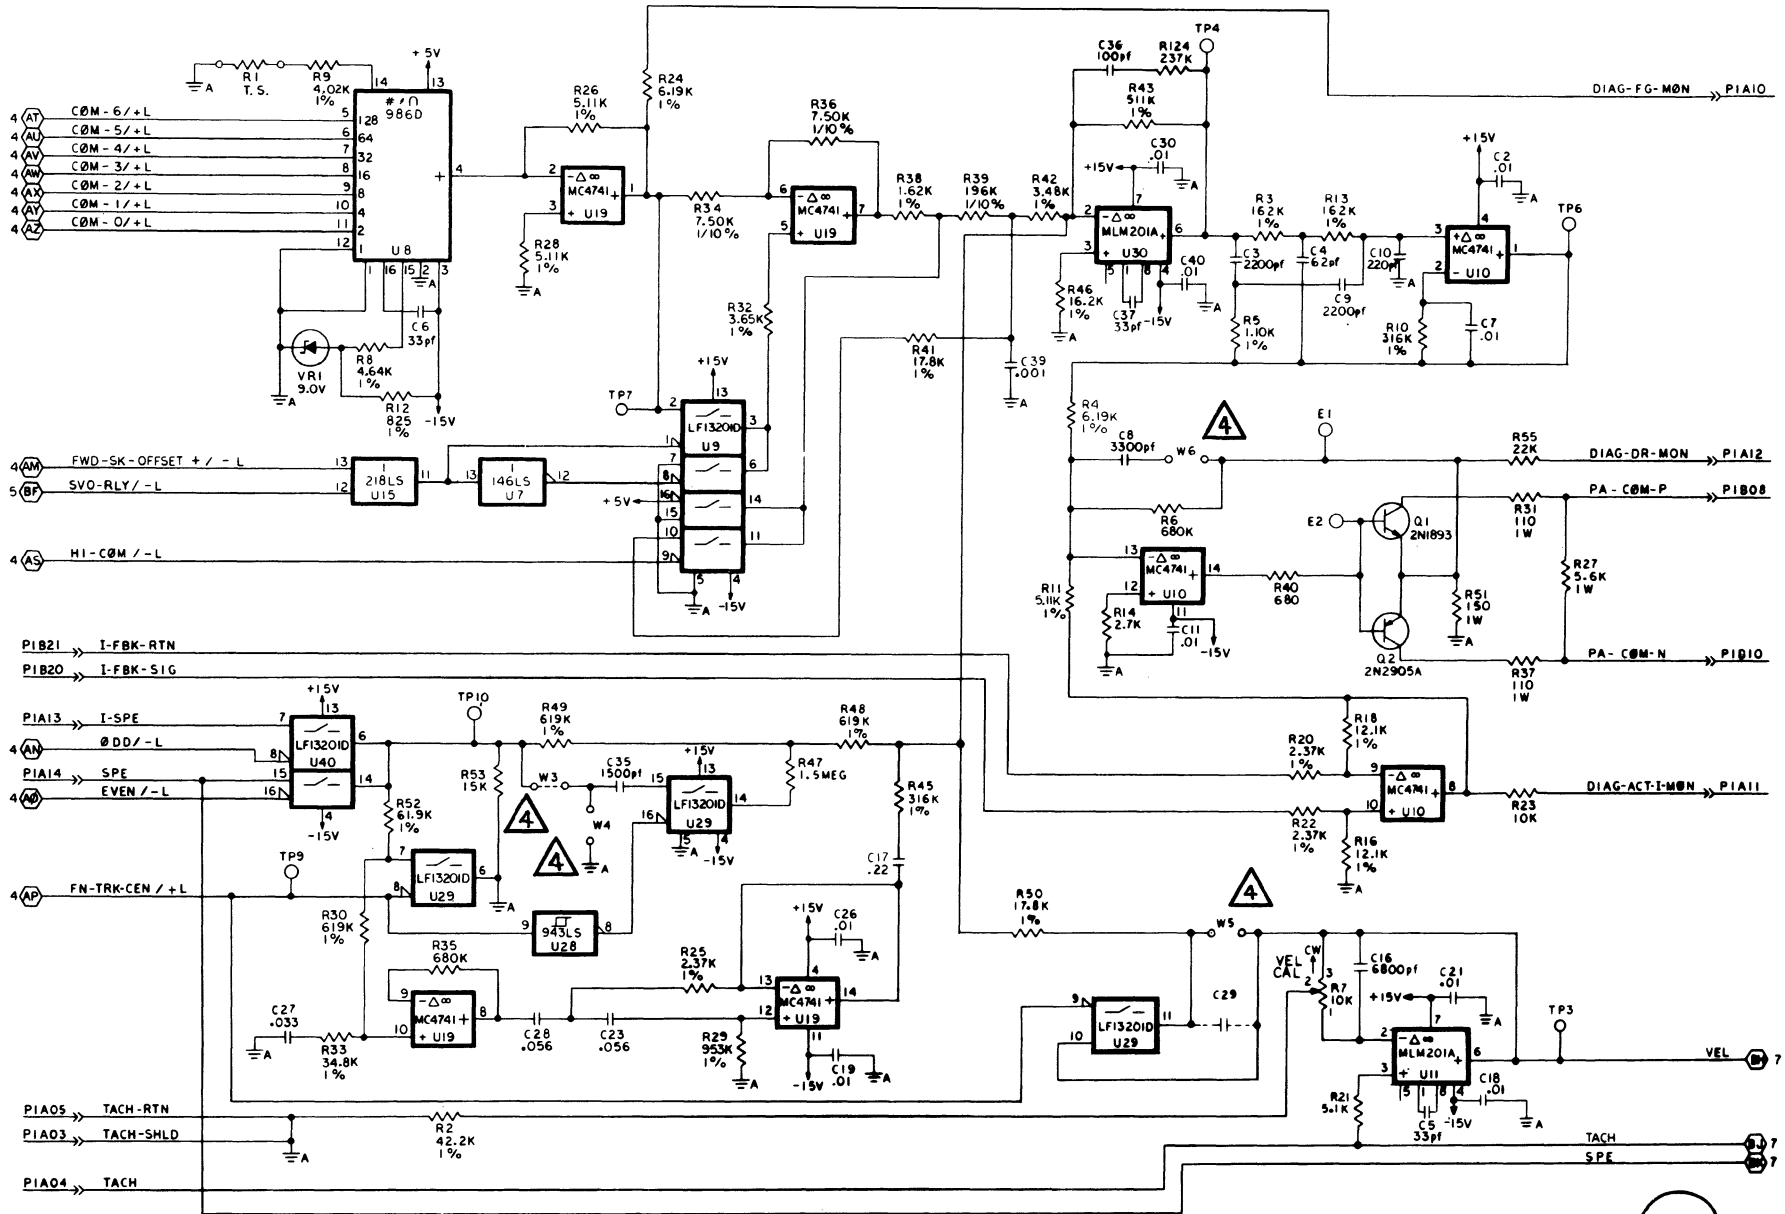


Figure 5-6. Servo Course Circuit Board (Sheet 8 of 13)

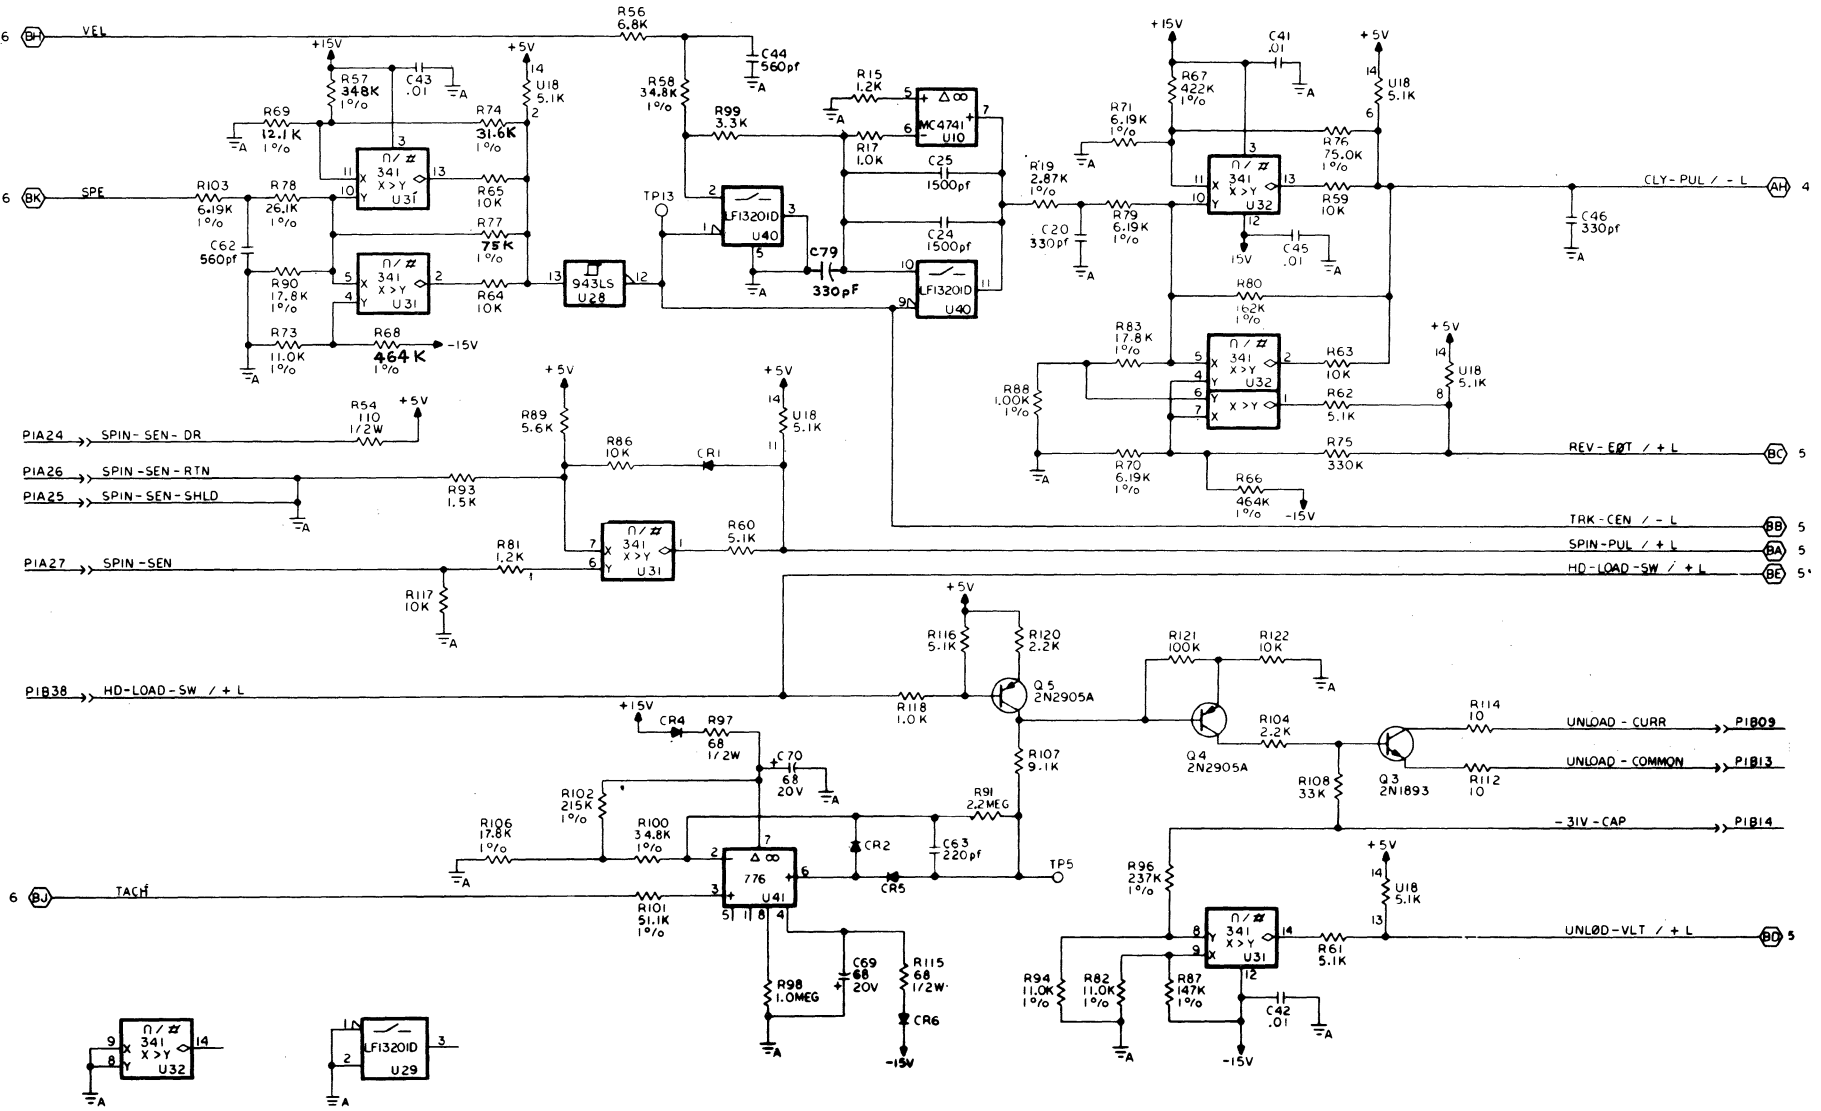

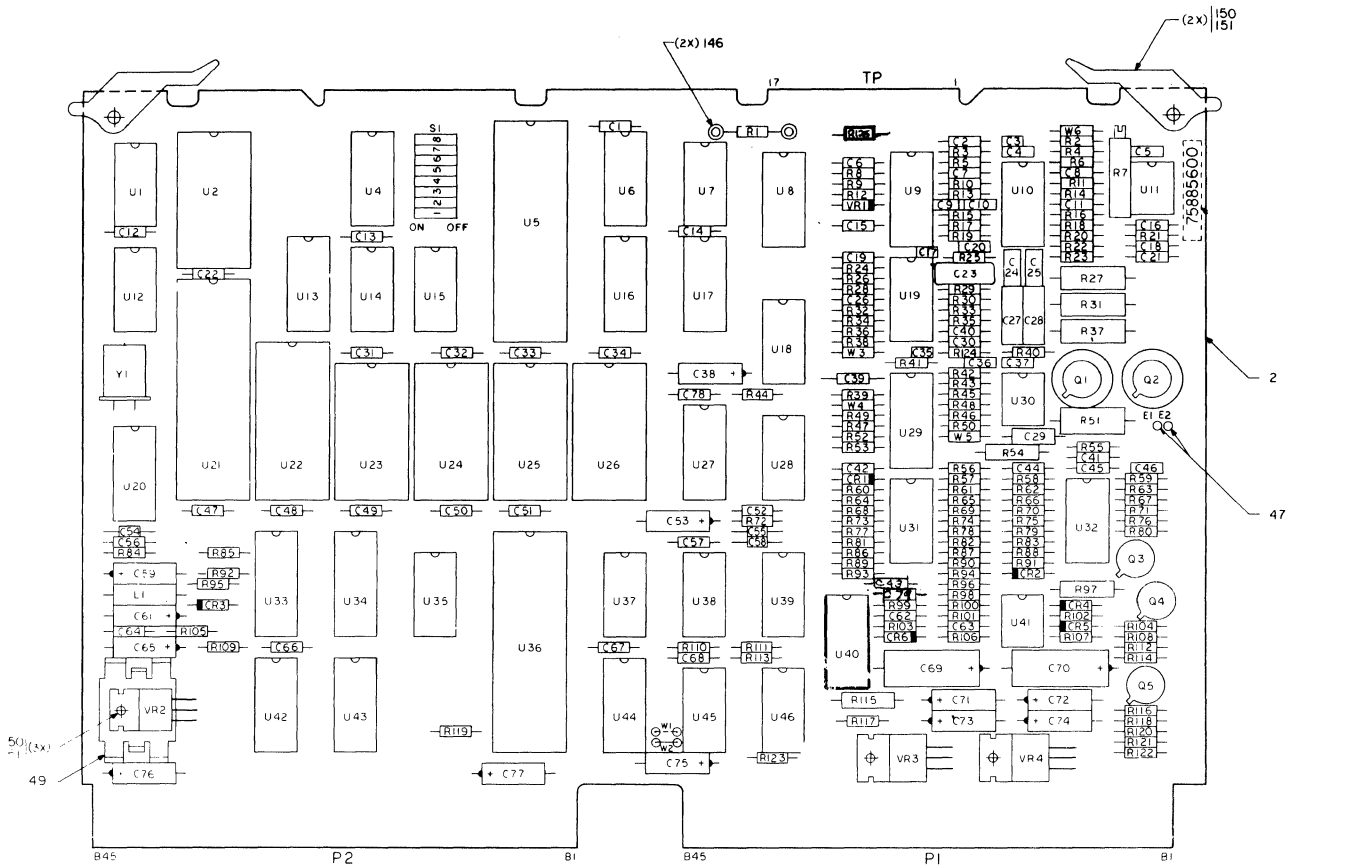

RES	PL ITEM
R1	102
R2	105
R3	135
R4	104
R5	86
R6	130
R7	105
R8	90
R9	89
R10	154
R11	91
R12	84
R13	155
R14	97
R15	122
R16	96
R17	121
R18	9E
R19	87
R20	147
R21	127
R22	147
R23	131
R24	104
R25	47
R26	91
R27	106
R28	51
R29	11
R30	14
R31	37
R32	26
R33	43
R34	51
R35	159
R36	9
R37	83
R38	137
R39	110
R40	130
R41	100
R42	82
R43	99
R44	24
R45	54
R46	98
R47	140
R48	114
R49	14
R50	100
R51	109
R52	107

RES	PL ITEM
R53	132
R54	142
R55	133
R56	129
R57	160
R58	103
R59	131
R60	27
R61	127
R62	127
R63	131
R64	131
R65	131
R66	113
R67	74
R68	113
R69	96
R70	104
R71	104
R72	120
R73	94
R74	161
R75	79
R76	85
R77	155
R78	101
R79	104
R80	22
R81	94
R82	100
R83	124
R84	3
R85	131
R86	131
R87	55
R88	92
R89	128
R90	100
R91	135
R92	124
R93	123
R94	94
R95	127
R96	12
R97	143
R98	141
R99	25
R100	103
R101	106
R102	93
R103	104
R104	124

RES	PL ITEM
R105	124
R106	100
R107	126
R108	134
R109	127
R110	120
R111	119
R112	116
R113	119
R114	116
R115	143
R116	127
R117	131
R118	121
R119	136
R120	124
R121	136
R122	131
R123	136
R124	112

XTAL	PL ITEM
Y1	52

REG	PL ITEM
VR1	42
VR2	39
VR3	40
VR4	41

TSTR	PL ITEM
Q1	44, 48, 46
Q2	45, 48, 46
Q3	44, 48
Q4	45, 48
Q5	45, 48

IC	PL ITEM
U1	19
U2	12
U3	—
U4	27
U5	17
U6	17
U7	16
U8	33
U9	32
U10	29
U11	30
U12	111
U13	26
U14	15
U15	18
U16	15
U17	7
U18	28
U19	29
U20	6, 38
U21	5, 37
U22	7
U23	156, 35
U24	157, 35
U25	158, 35
U26	10
U27	24
U28	25
U29	32
U30	30
U31	31
U32	31
U33	9
U34	9
U35	22
U36	11
U37	23
U38	19
U39	21
U40	32
U41	148
U42	13
U43	13
U44	20
U45	18
U46	14

SW	PL ITEM
S1	34

CAP	PL ITEM
C1	80
C2	80
C3	70
C4	60
C5	59
C6	72
C7	80
C8	78
C9	70
C10	61
C11	80
C12	80
C13	80
C14	80
C15	73
C16	75
C17	63
C18	80
C19	80
C20	64
C21	80
C22	80
C23	68
C24	65
C25	65
C26	80
C27	67
C28	68
C29	—
C30	80
C31	—
C32	—
C33	—
C34	80
C35	66
C36	117
C37	59
C38	58
C39	77
C40	80
C41	80
C42	80
C43	80
C44	62
C45	80
C46	64
C47	80
C48	—
C49	—
C50	—
C51	80
C52	75

CAP	PL ITEM
C53	80
C54	80
C55	80
C56	76
C57	80
C58	76
C59	57
C60	—
C61	58
C62	62
C63	118
C64	75
C65	54
C66	80
C67	80
C68	80
C69	56
C70	56
C71	55
C72	55
C73	54
C74	54
C75	58
C76	55
C77	58
C78	80
C79	64

IND	PL ITEM
LI	53

JMPR	PL ITEM
W1	—
W2	152
W3	—
W4	153
W5	153
W6	153

DIO	PL ITEM
CR1	43
CR2	—
CR3	—
CR4	—
CR5	—
CR6	43

Figure 5-6. Servo Coarse Circuit Board (Sheet 9 of 13)

Item No.	Drawing No.	Description	Remarks
	77622400	PWA, Servo Coarse	
	77622440	PWA, Servo Coarse	
	77616722-3	PWA, Servo Coarse	
	75885602-5	PWA, Servo Coarse	
2	75885620-7	PWB Servo Coarse	
	77622420	PWB, Servo Coarse	
5	15128200-7	IC 8080A	
6	15153500-2	IC 8224	
7	15153400-5	IC 8228	
9	15151600-2	IC 8111	
10	15155400-3	IC 8212	
11	15164427-5	IC 8255A	
12	15164419-2	IC 8253	
13	1564402-8	IC 74LS257	
14	36187100-8	IC 7404	
15	15147400-4	IC 74LS138	
16	15145100-2	IC 74LS04	
17	15146900-4	IC 74LS175	
18	15146200-9	IC 74LS32	
19	15146300-7	IC 74LS74	
20	15148300-5	IC 74LS279	
21	15136400-5	IC 74LS86	
22	15145900-5	IC 74LS20	
23	15145400-6	IC 74LS08	
24	15162200-8	IC 74148	
25	1514500-0	IC 74LS14	
26	15146600-0	IC 74LS139	
27	75738661-0	Res Pac 2% 2.2K (15)	
28	75009935-0	Res Pac 2% 5.1K (13)	
29	15164404-4	IC MC4741C	
30	15156600-7	IC 201A	
31	95794600-7	IC LM339	
32	15164403-6	IC LF13201D	
33	15132702-0	IC D to A Converter	
34	83452205-4	Switch-8 Position	
35	51858100-4	Socket 24 Pin	
37	51858103-8	Socket 40 Pin	
38	94260301-0	Socket 16 Pin	
39	15161100-1	Volt Reg 78M12	
40	15161102-7	Volt Reg 78M15	
41	15137902-1	Volt Reg 79M15	
42	50241502-9	Volt Reg 9.0V	
43	51706300-4	Diode IN4454	
44	51751900-5	Trans, Silicon, 2N1893	
45	51585100-4	Tstr 2N2905A (PNP)	
46	77832363-4	Heat Sink	
47	94245412-9	Terminal, Wire Wrap	
48	94335900-0	Pad-Transistor MTG	
49	77832299-0	Heat Sink	
50	95683502-9	Stud, Press	

Figure 5-6. Servo Coarse Circuit Board (Sheet 10 of 13)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
51	92583002-8	Nut Lock	
52	39465705-0	Crystal 18 MHZ	
53	94233930-0	Inductor 33 uH	
54	17706766-7	Cap 20V 10% 10 uF	
55	24505237-8	Cap 35V 10% 4.7 uF	
56	77612232-7	Cap 20V +150-10% 68uF	
57	24504350-0	Cap 10V 20% 10 uF	
58	24504353-4	Cap 10V 20% 33uF	
59	94227214-7	Cap 500V +1PF 33	
60	94227221-2	Cap 500V 2% 62	
61	94227234-5	Cap 300V 2% 220	
62	94240428-6	Cap 50V 10% 560	
63	77830576-3	Cap 50V +80-20% 0.22uF	
64	94227238-6	Cap 100V 2% 330	
65	94227254-3	Cap 100V 2% 1500	
66	75887697-3	Cap 50V 5% 1500	
67	75888014-0	Cap 200V 5% 0.033 uF	
68	75888017-3	Cap 200V 5% .056 uF	
69			
70	75887699-9	Cap 50V 5% 2200	
71			
72	94240417-9	Cap 50V 10% 33	
73	94361400-8	Cap 50V +80-20% 0.10uF	
74	94360560-0	Res 1/4W 1% 422K	
75	94240410-4	Cap 50V 10% 6800	
76	94240442-7	Cap 50V 10% 0.033uF	
77	94240401-3	Cap 50V 10% 1000	
78	94240433-6	Cap 50V 10% 3300	
79	17705924-3	Res 1/4W 5% 0.33MEG	
80	94361401-6	Cap 50V 80-20% 0.01uF	
81	75721503-3	Res 1/8W 0.1% 7.5K	
82	94360352-2	Res 1/4W 1% 3.48K	
83	24507126-1	Res 1W 5% 110	
84	94360288-8	Res 1/4W 1% 825	
85	94360484-3	Res 1/4W 1% 75.0K	
86	94360304-3	Res 1/4W 1% 1.10K	
87	94360344-9	Res 1/4W 1% 2.87K	
88	94360354-8	Res 1/4W 1% 3.65K	
89	94360358-9	Res 1/4W 1% 4.02K	
90	94360364-7	Res 1/4W 1% 4.64K	
91	94360368-8	Res 1/4W 1% 5.11K	
92	94360300-1	Res 1/4W 1% 1.00K	
93	94360532-9	Res 1/4W 1% 215K	
94	94360404-1	Res 1/4W 1% 11.0K	
95	94360516-2	Res 1/4W 1% 147K	
96	94360408-2	Res 1/4W 1% 12.1K	
97	24500073-2	Res 1/4W 5% 2.7K	
98	94360420-7	Res 1/4W 1% 16.2K	


Figure 5-6. Servo Coarse Circuit Board (Sheet 11 of 13)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
99	94360568-3	Res 1/4W 1% 511K	
100	94360424-9	Res 1/4W 1% 17.8K	
101	94360440-5	Res 1/4W 1% 26.1K	
102			
103	94360452-0	Res 1/4W 1% 34.8K	
104	94360376-1	Res 1/4W 1% 6.19K	
105	94360460-3	Res 1/4W 1% 42.2K	
106	94360468-6	Res 1/4W 1% 51.1K	
107	94360476-9	Res 1/4W 1% 61.9K	
108	24507181-6	Res 1W 5% 5.6K	
109	24507129-5	Res 1W 5% 150	
110	75721506-6	Res 1/8W, 0.1%, 196K	
111	15145200-0	IC 74LS03	
112	94360536-0	Res 1/4W 1% 237K	
113	94360564-2	Res 1/4W 1% 464K	
114	94360576-6	Res 1/4W 1% 619K	
115	94360594-9	Res 1/4W 1% 953K	
116	24500015-3	Res 1/4W 5% 10	
117	94227226-1	Cap 300V 2% 100	
118	94240407-0	Cap 50V 10% 220	
119	24500049-2	Res 1/4W 5% 270	
120	24500051-8	Res 1/4W 5% 330	
121	24500063-3	Res 1/4W 5% 1K	
122	24500065-8	Res 1/4W 5% 1.2K	
123	24500067-4	Res 1/4W 5% 1.5K	
124	24500071-6	Res 1/4W 5% 2.2K	
125	24500075-7	Res 1/4W 5% 3.3K	
126	24500086-4	Res 1/4W 5% 9.1K	
127	24500080-7	Res 1/4W 5% 5.1K	
128	24500081-5	Res 1/4W 5% 5.6K	
129	24500083-1	Res 1/4W 5% 6.8K	
130	24500059-1	Res 1/4W 5% 680	
131	24500087-2	Res 1/4W 5% 10K	
132	24500091-4	Res 1/4W 5% 15K	
133	24500095-5	Res 1/4W 5% 22K	
134	24500099-7	Res 1/4W 5% 33K	
135	17705944-1	Res 1/4W 5% 2.2MEG	
136	17705905-2	Res 1/4W 5% 51K	
137	94360320-9	Res 1/4W 1% 1.62K	
138	17705912-8	Res 1/4W 5% .10MEG	
139	17705932-6	Res 1/4W 5% .68MEG	
140	17705940-9	Res 1/4W 5% 1.5MEG	
141	17705936-7	Res 1/4W 5% 1.0MEG	
142	24500140-9	Res 1.2W 5% 110	
143	24500135-9	Res 1/2W 5% 68	
144	94357500-1	Resistor Test Select	
145	77612039-6	Res Var-3/4W, 10%, 10K	
146	92498021-2	Terminal Swaged	

Figure 5-6. Servo Coarse Circuit Board (Sheet 12 of 13)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
147	94360336-5	Res 1/4W 1% 2.37K	
148	15164425-9	IC 776	
149	18748600-6	Compound 340	
150	82311900-3	Inject/Eject-Card	
151	93533118-1	Pin, Rolled	
152	83409902-0	Jumper PWB Solid Con	
153	94358500-0	Jumper Wire, Molded	
154	94360548-5	Res 1/4W 1% 316K	
155	94360520-4	Res 1/4W 1% 162K	
156	75894964-8	IC Prom BNPF #1	
157	75894984-6	IC Prom BNPF #2	
158	75895011-7	IC Prom BNPF #3	
160	94360552-7	Res 1/4W 1% 348K	
161	94360448-8	Res 1/4W 1% 31.6K	

Figure 5-6. Servo Coarse Circuit Board (Sheet 13 of 13)

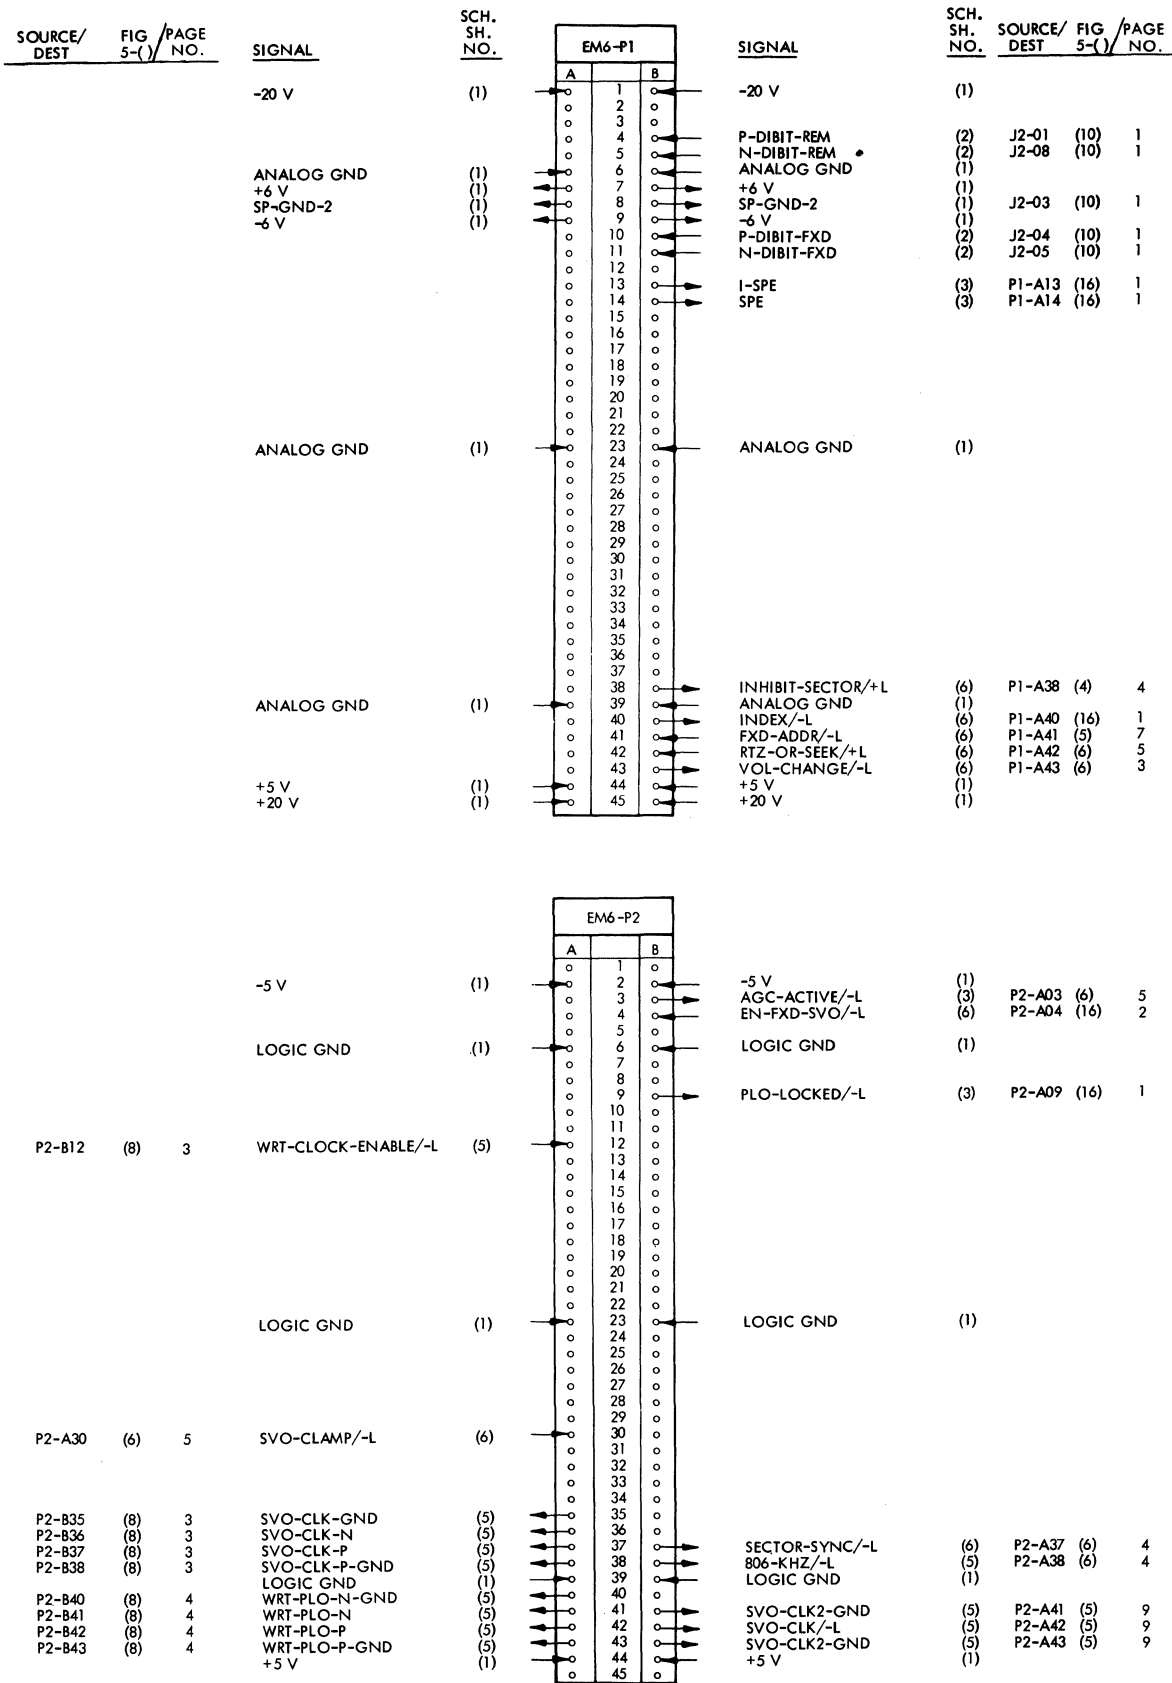

XX237a

Figure 5-7. Servo Fine Circuit Board (Sheet 1 of 11)

Figure 5-7. Servo Fine Circuit Board (Sheet 3 of 11)

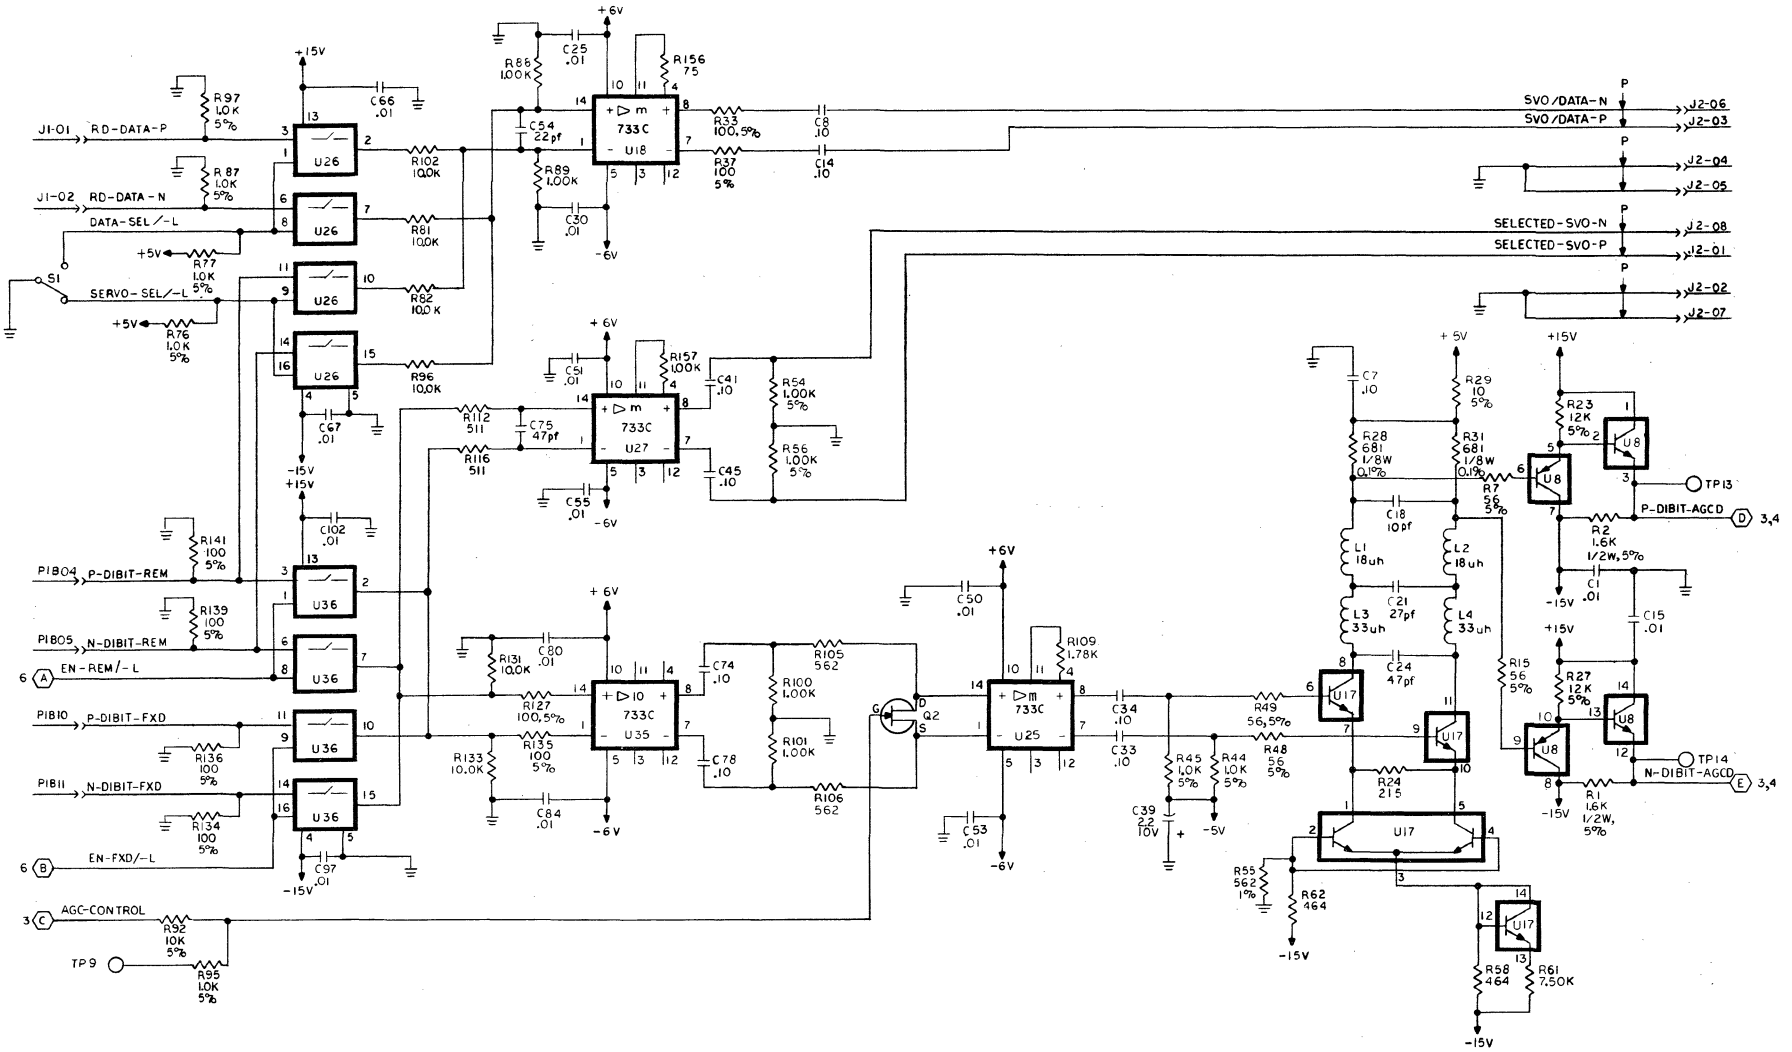


Figure 5-7. Servo Fine Circuit Board (Sheet 4 of 11)

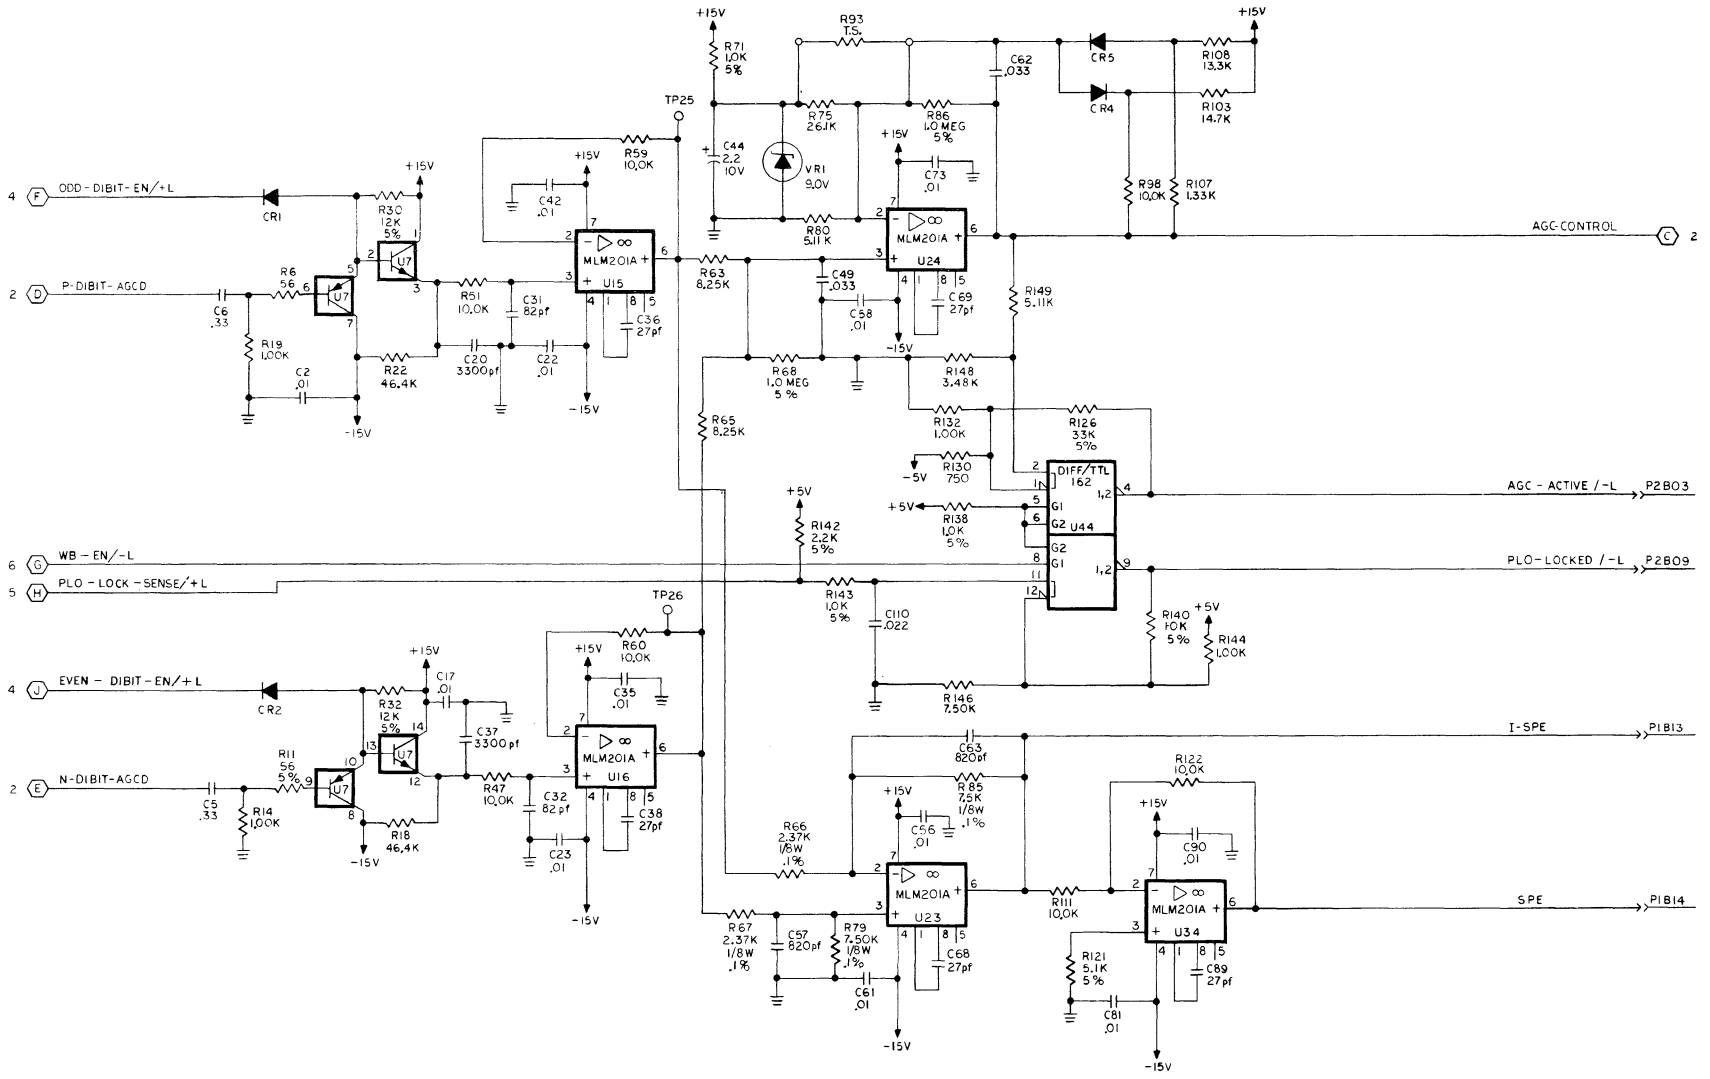


Figure 5-7. Servo Fine Circuit Board (Sheet 5 of 11)



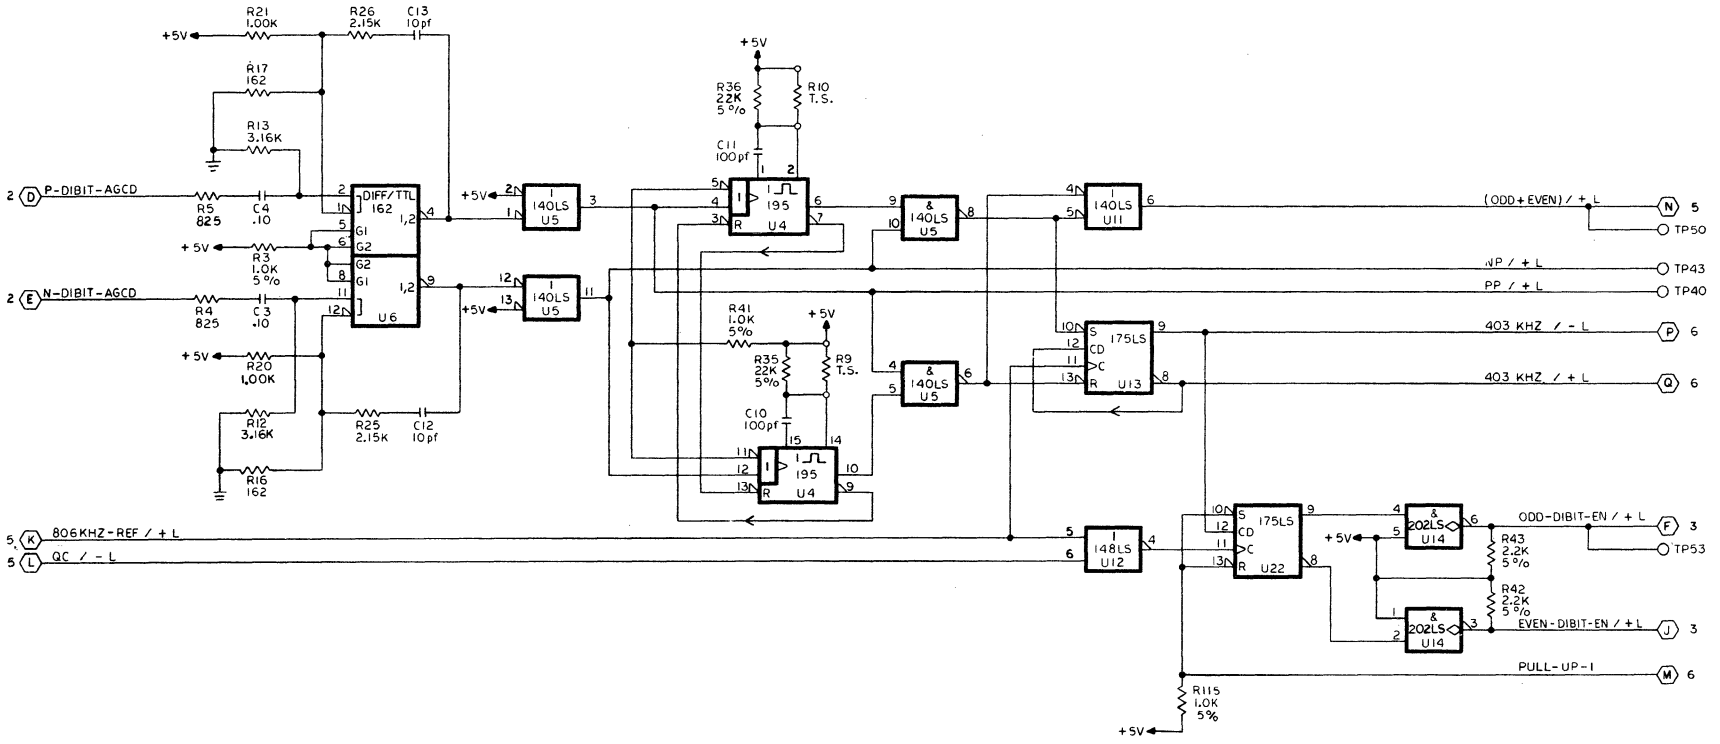


Figure 5-7. Servo Fine Circuit Board (Sheet 6 of 11)

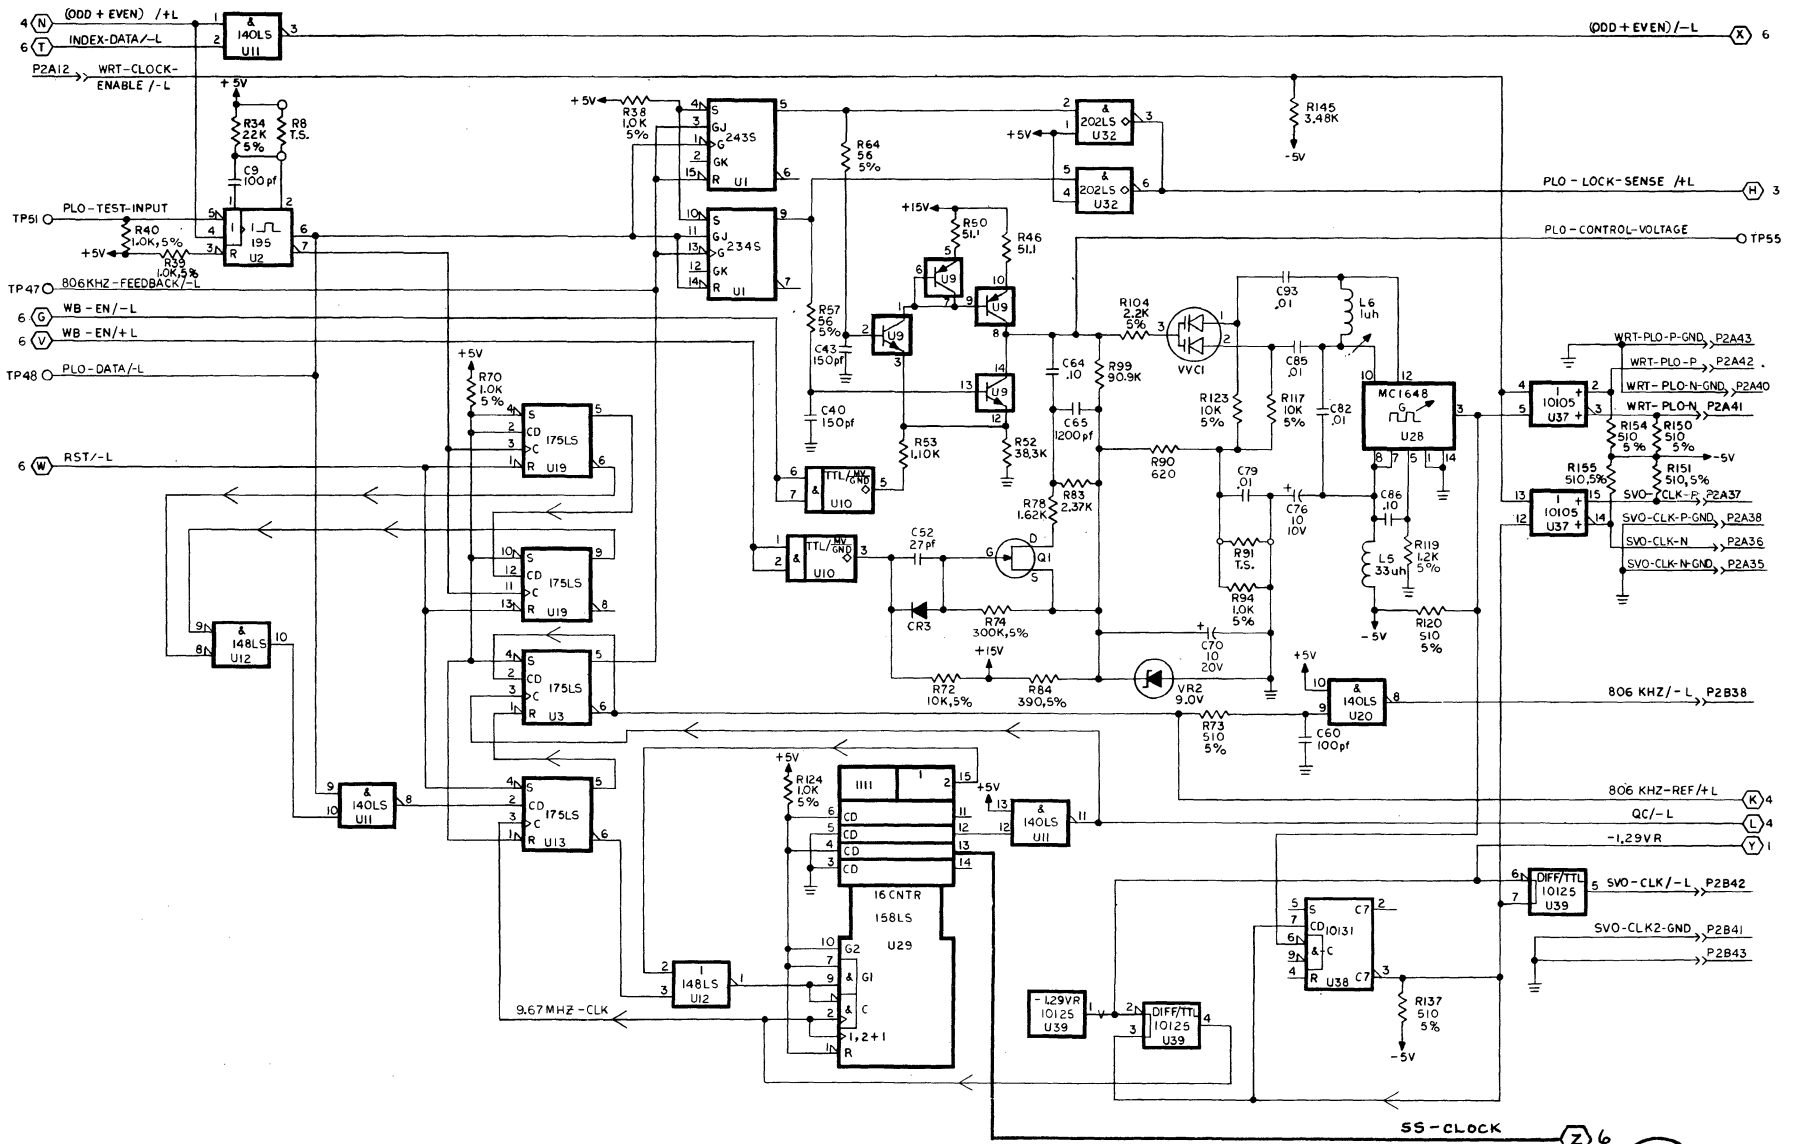

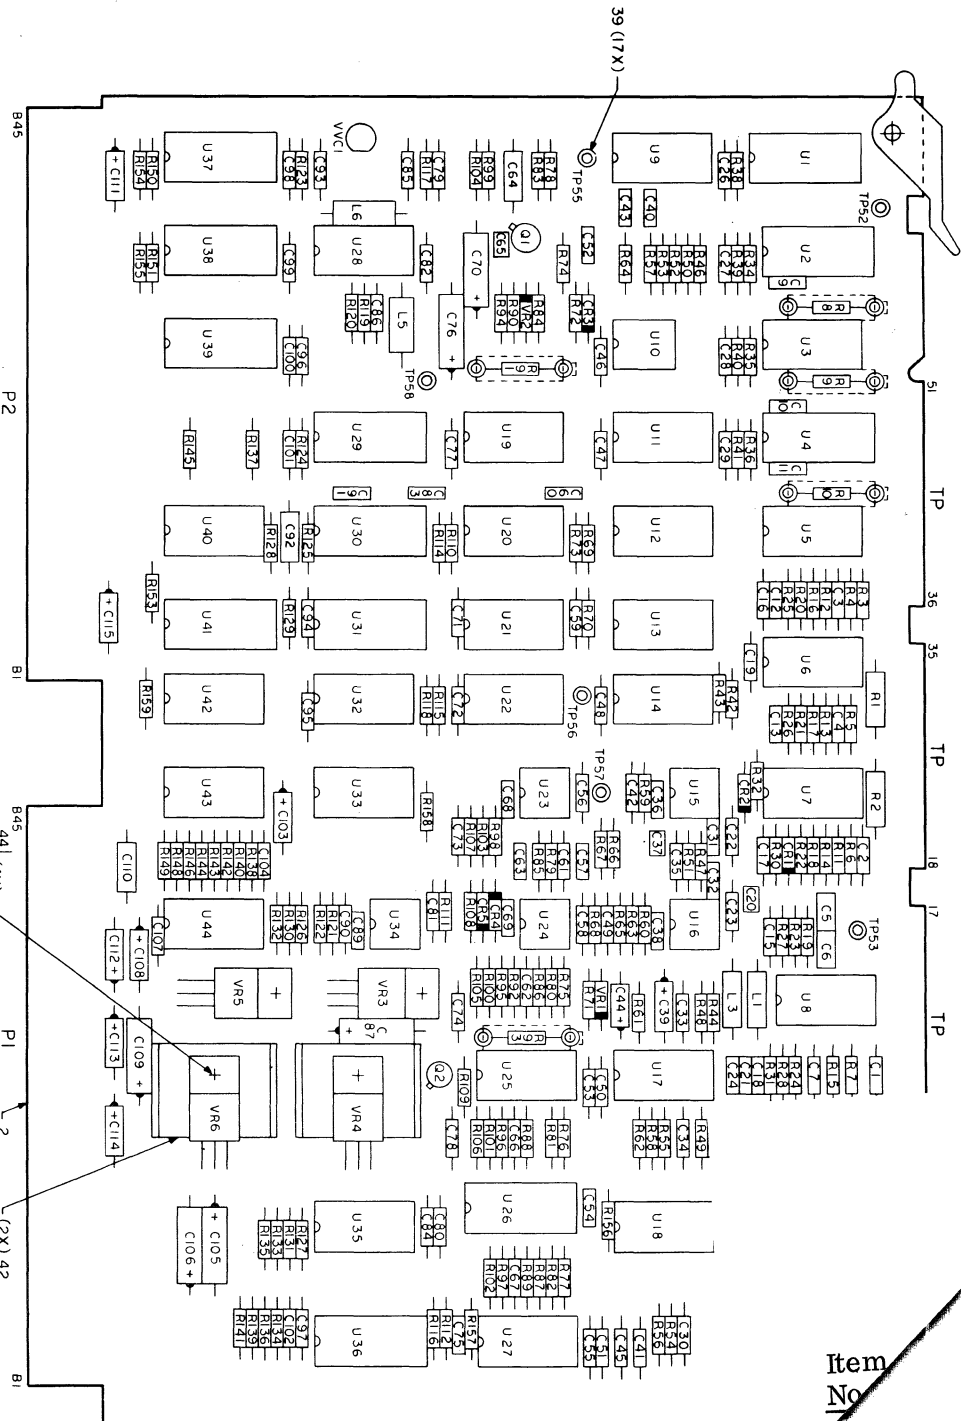

RES	PL ITEM	RES	PL ITEM	RES	PL ITEM	CAP	PL ITEM	CAP	PL ITEM	CONN	PL ITEM	IND	PL ITEM	DIODE	PL ITEM	TSTR	PL ITEM	VOLT REG	PL ITEM	VARI CAP DIODE	PL ITEM	SW	PL ITEM
R1	69	R59	93	R117	112	C1	66	C59	66	J1	40	L1	37	CR1	36	Q1	32	VR1	35	VVCI	46	S1	120
R2	69	R60	93	R118	109	C2	66	C60	57	J2	41	L2	37	CR2	36	Q2	32	VR2	33				
R3	109	R61	100	R119	103	C3	67	C61	66			L3	38	CR3	36			VR3	28				
R4	84	R62	79	R120	108	C4	67	C62	63			L4	38	CR4	36			VR4	29				
R5	84	R63	92	R121	111	C5	68	C63	59			L5	38	CR5	36			VR5	30				
R6	104	R64	104	R122	93	C6	68	C64	61			L6	123					VR6	31				
R7	104	R65	92	R123	112	C7	67	C65	62														
R8	119	R66	71	R124	109	C8	67	C66	66														
R9	119	R67	71	R125	96	C9	57	C67	66														
R10	119	R68	118	R126	115	C10	57	C68	54														
R11	104	R69	110	R127	105	C11	57	C69	54														
R12	88	R70	109	R128	95	C12	52	C70	49														
R13	88	R71	109	R129	109	C13	52	C71	66														
R14	85	R72	112	R130	83	C14	67	C72	66														
R15	104	R73	108	R131	93	C15	66	C73	66														
R16	74	R74	116	R132	85	C16	66	C74	67														
R17	74	R75	96	R133	93	C17	66	C75	55														
R18	97	R76	109	R134	105	C18	52	C76	48														
R19	85	R77	109	R135	105	C19	66	C77	66														
R20	85	R78	78	R136	105	C20	60	C78	67														
R21	85	R79	72	R137	108	C21	54	C79	66														
R22	97	R80	91	R138	109	C22	66	C80	66														
R23	113	R81	93	R139	105	C23	66	C81	66														
R24	77	R82	93	R140	112	C24	55	C82	66														
R25	82	R83	87	R141	105	C25	66	C83	57														
R26	82	R84	106	R142	110	C26	56	C84	66														
R27	113	R85	72	R143	109	C27	66	C85	66														
R28	70	R86	118	R144	85	C28	66	C86	67														
R29	101	R87	109	R145	89	C29	66	C87	49														
R30	113	R88	85	R146	100	C30	66	C88	—														
R31	70	R89	85	R147	—	C31	56	C89	54														
R32	113	R90	107	R148	89	C32	56	C90	66														
R33	105	R91	119	R149	91	C33	67	C91	57														
R34	114	R92	112	R150	108	C34	67	C92	61														
R35	114	R93	119	R151	108	C35	66	C93	66														
R36	114	R94	109	R152	—	C36	54	C94	66														
R37	105	R95	109	R153	109	C37	60	C95	66														
R38	109	R96	93	R154	108	C38	54	C96	67														
R39	109	R97	109	R155	108	C39	51	C97	66														
R40	109	R98	93	R156	90	C40	58	C98	67														
R41	109	R99	98	R157	85	C41	67	C99	67														
R42	110	R100	109	R158	110	C42	66	C100	67														
R43	110	R101	109	R159	109	C43	58	C101	66														
R44	109	R102	93			C44	51	C102	66														
R45	109	R103	95			C45	67	C103	47														
R46	75	R104	110			C46	66	C104	66														
R47	93	R105	81			C47	66	C105	48														
R48	104	R106	81			C48	66	C106	48														
R49	104	R107	86			C49	63	C107	66														
R50	75	R108	94			C50	66	C108	50														
R51	93	R109	73			C51	66	C109	49														
R52	99	R110	108			C52	54	C110	64														
R53	76	R111	93			C53	66	C111	47														
R54	109	R112	80			C54	53	C112	50														
R55	81	R113	—			C55	66	C113	50														
R56	109	R114	109			C56	66	C114	50														
R57	104	R115	109			C57	59	C115	47														
R58	79	R116	80			C58	66																

Item No

Figure 5-7. Servo Fine Circuit Board (Sheet 8 of 11)

	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75886300-5	PWA, Servo Fine	
2	75886320-3	PWB, Servo Fine	
5	15118500-6	IC ECL 10131	
6	15161600-0	IC 75461	
7	15163100-9	IC 733C	
8	15164403-6	IC LF13201D	
9	15156600-7	IC 201A	
10	50252900-1	IC 75107	
11	15104301-5	IC 9602	
12	15119500-5	IC ECL 10125	
13	15118100-5	IC ECL 10105	
14	15158600-5	IC 74S112	
15	15164422-6	IC ECL 1648	
16	15146800-6	IC 74LS161	
17	15146300-7	IC 74LS74	
18	15148000-1	IC 74LS109	
19	15124700-4	IC 74LS51	
20	15163303-9	IC 74LS164	
21	51783500-5	IC 9324	
22	15145200-0	IC 74LS03	
23	15145000-4	IC 74LS02	
24	15145100-2	IC 74LS04	
25	15144900-6	IC 74LS00	
26	94675200-3	IC CA3046/CA3346	
27	75889250-9	IC 6600-1	
28	15161102-7	Volt Reg 78M15	
29	15161101-9	Volt Reg 78M06	
30	15137902-1	Volt Reg 79M15	
31	15137901-3	Volt Reg 79M06	
32	75888005-8	Transistor 2N4860A	
33	50241502-9	Volt Reg 9.0V	
34	88923000-9	IC 74S74	
35	50241500-3	Volt Reg 6.2V	
36	51706300-4	Diode IN4454	
47	94233927-6	Inductor 18 uH	
38	94233930-0	Inductor 33uH	
39	92498021-2	Terminal Swaged	
40	75743602-7	Header-Right Angle	
41	77832292-5	Socket, 8 Pin	
42	77832299-0	Heat Sink	
43	95683502-9	Stud, Press	
44	92583002-8	Nut Lock	
45	18748600-6	Compound 340	
46	77612970-2	MVAM2	
47	24505259-2	Cap 6V 10% 6.8 uF	
48	17706712-1	Cap 10V 10% 10 uF	
49	17706766-7	Cap 20V 10% 10 uF	



Figure 5-7. Servo Fine Circuit Board (Sheet 9 of 11).

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
50	24505237-8	Cap 35V 10% 4.7 uF	
51	17706704-8	Cap 10V 10% 2.2 uF	
52	94227205-5	Cap 500V +1PF 10	
53	94227210-5	Cap 500V 5% 22	
54	94227212-1	Cap 500V +1pF 27	
55	94227218-8	Cap 500V +/-1PF 47	
56	94227224-6	Cap 300V 2% 82	
57	94227226-1	Cap 300V 2% 100	
58	94227230-3	Cap 500V 2% 150	
59	94227248-5	Cap 100V 2% 820	
60	75887701-3	Cap 50V 5% 3300	
61	94240448-4	Cap 50V 10% 10uF	
62	75887696-5	Cap 50V 5% 1200	
63	94240442-7	Cap 50V 10% .033uF	
64	94240440-1	Cap 50V 10% .022uF	
66	94361401-6	Cap 50V 8-20% .01uF	
67	94361400-8	Cap 50V +80-20%, 0.10 uF	
68	94354816-4	Cap 50V 20% .33uF	
69	24500168-0	Res 1/2W 5% 1.6K	
70	75721504-1	Res 1/8W .1% 681	
71	75721502-5	Res 1/8W .1% 2.37K	
72	75721503-3	Res 1/8W .1% 7.5K	
73	94360324-1	Res 1/4W 1% 1.78K	
74	94360220-1	Res 1/4W 1% 162	
75	94360168-2	Res 1/4W 1% 51.1	
76	94360304-3	Res 1/4W 1% 1.10K	
77	94360232-6	Res 1/4W 1% 215	
78	94360320-9	Res 1/4W 1% 1.62K	
79	94360264-9	Res 1/4W 1% 464	
80	94360268-0	Res 1/4W 1% 511	
81	94360272-2	Res 1/4W 1% 562	
82	94360332-4	Res 1/4W 1% 2.15K	
83	94360284-7	Res 1/4W 1% 750	
84	94360288-8	Res 1/4W 1% 825	
85	94360300-1	Res 1/4W 1% 1.00K	
86	94360312-6	Res 1/4W 1% 1.33K	
87	94360336-5	Res 1/4W 1% 2.37K	
88	94360348-0	Res 1/4W 1% 3.16K	
89	94360352-2	Res 1/4W 1% 3.48K	
90	94360184-9	Res 1/4W 1% 75.0	
91	94360368-8	Res 1/4W 1% 5.11K	
92	94360388-6	Res 1/4W 1% 8.25K	
93	94360400-9	Res 1/4W 1% 10.0K	
94	94360412-4	Res 1/4W 1% 13.3K	
95	94360416-5	Res 1/4W 1% 14.7K	
96	94360440-5	Res 1/4W 1% 26.1K	
97	94360464-5	Res 1/4W 1% 46.4K	
98	94360492-6	Res 1/4W 1% 90.9K	

Figure 5-7. Servo Fine Circuit Board (Sheet 10 of 11)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
99	94360456-1	Res 1/4W 1% 38.3K	
100	94360384-5	Res 1/4W 1% 7.50K	
101	24500015-3	Res 1/4W 5% 10	
103	24500065-8	Res 1/4W 5% 1.2K	
104	24500033-6	Res 1/4W 5% 56	
105	24500039-3	Res 1/4W 5% 100	
106	24500053-4	Res 1/4W 5% 390	
107	24500058-3	Res 1/4W 5% 620	
108	24500056-7	Res 1/4W 5% 510	
109	24500063-3	Res 1/4W 5% 1K	
110	24500071-6	Res 1/4W 5% 2.2K	
111	24500080-7	Res 1/4W 5% 5.1K	
112	24500087-2	Res 1/4W 5% 10K	
113	24500089-8	Res 1/4W 5% 12K	
114	24500095-5	Res 1/4W 5% 22K	
115	24500099-7	Res 1/4W 5% 33K	
116	17705923-5	Res 1/4W 5% .30MEG	
118	17705936-7	Res 1/4W 5% 1.0MEG	
119	94357500-1	Resistor Test Select	
120	41347800-9	Switch Toggle	
121	82311900-3	Inject/Eject-Card	
122	93533118-1	Pin, Rolled	
123	75887583-5	Inductor 5% 1.0 uH	


Figure 5-7. Servo Fine Circuit Board (Sheet 11 of 11)

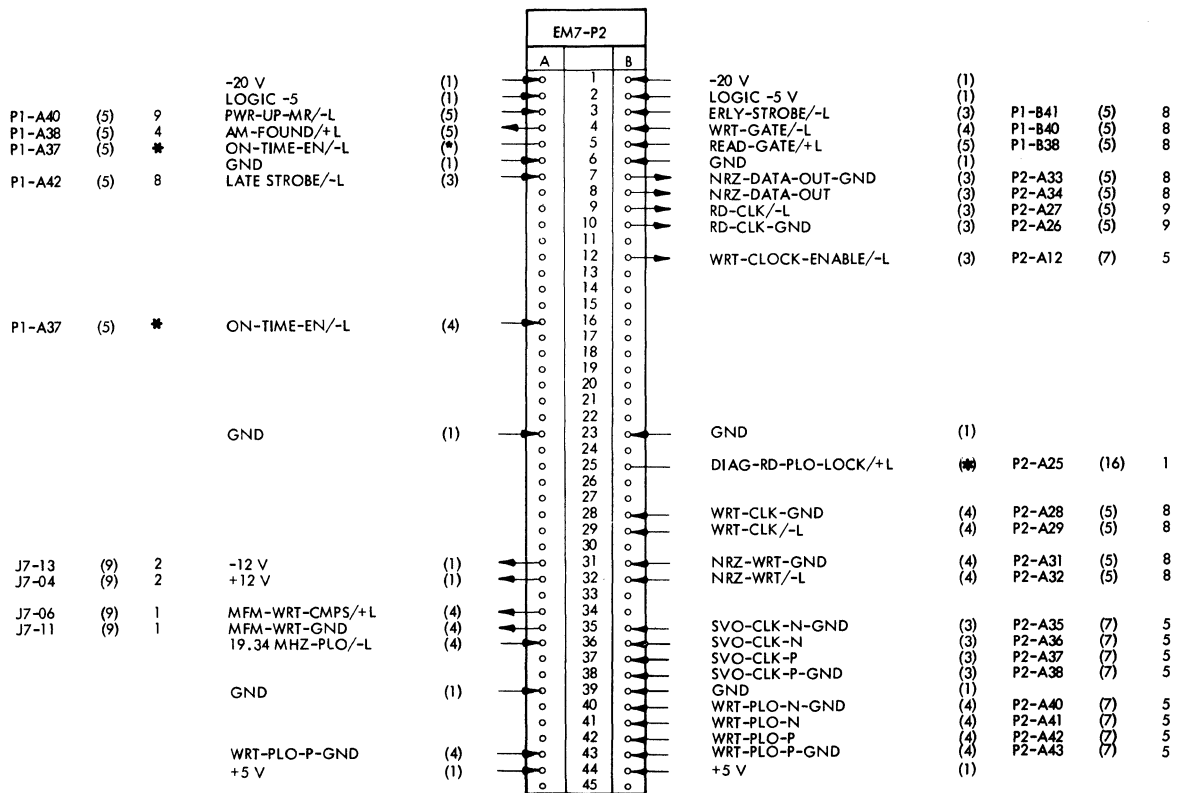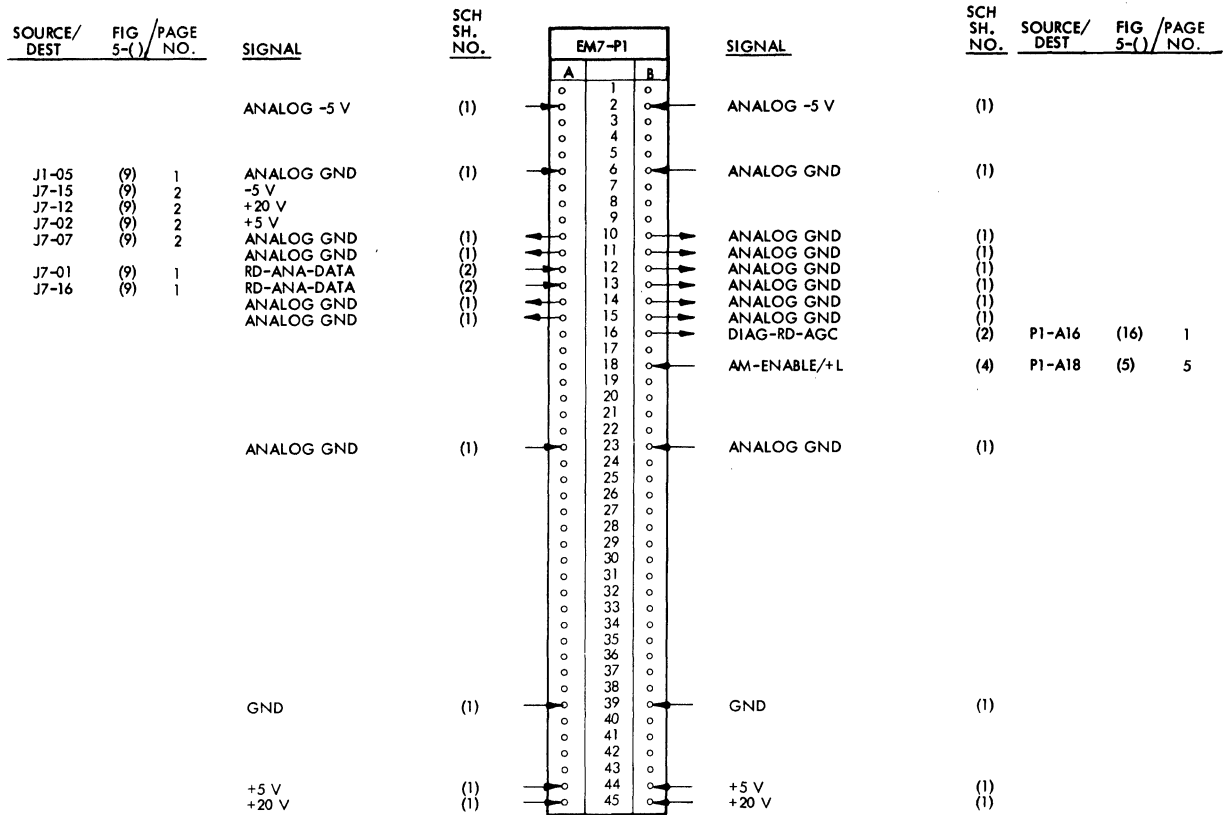

XX238a


* WIRED TO, BUT NOT USED ON PWA

Figure 5-8. Read/Write Circuit Board (Sheet 1 of 10)

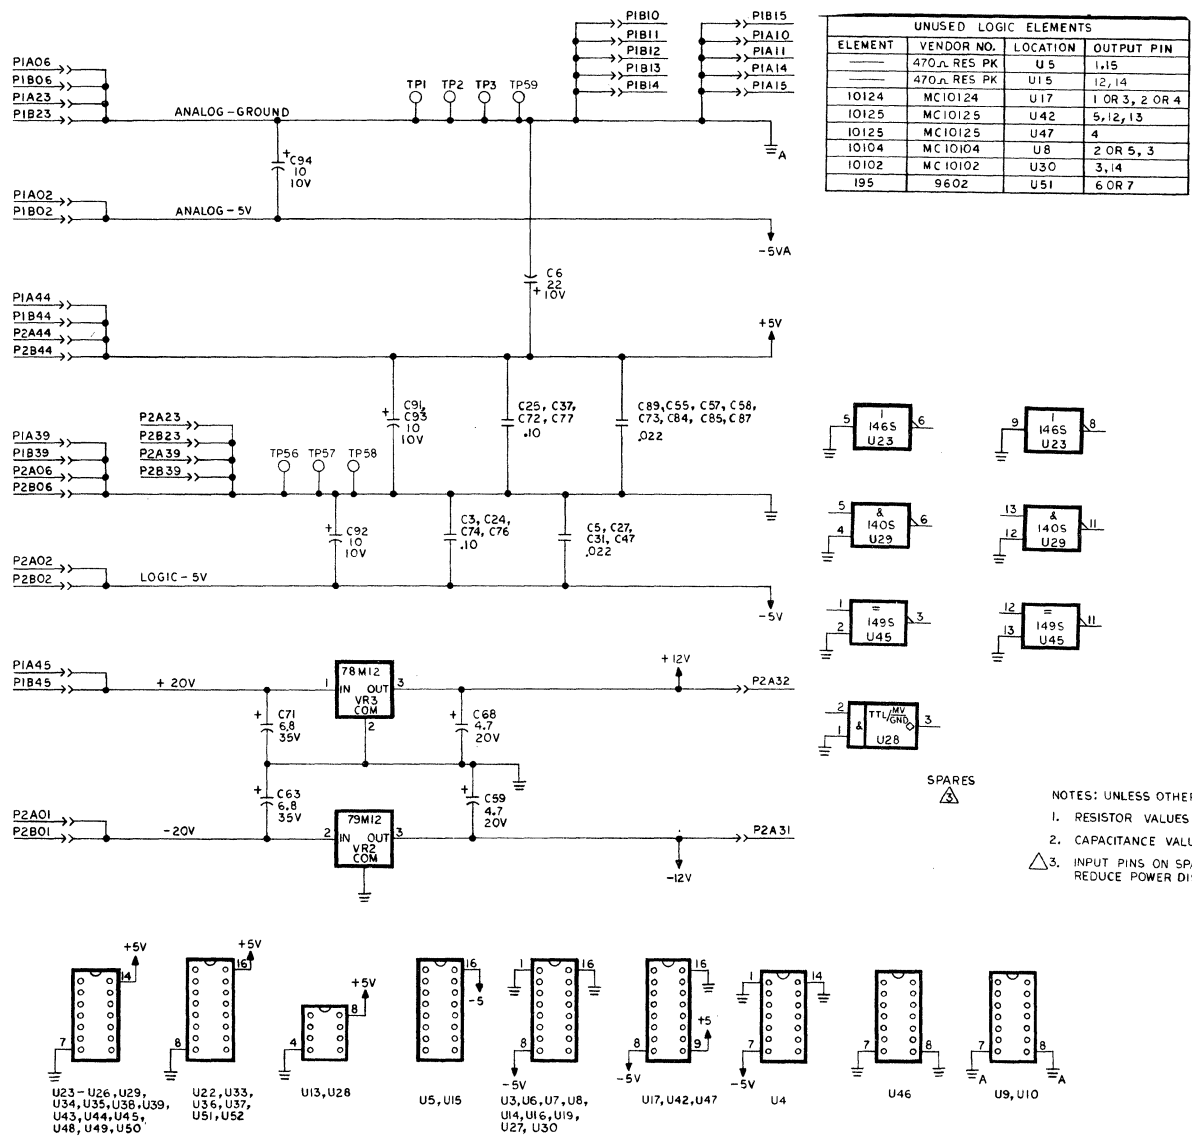

UNUSED LOGIC ELEMENTS			
ELEMENT	VENDOR NO.	LOCATION	OUTPUT PIN
---	470Ω RES PK	U 5	1,15
---	470Ω RES PK	U 5	12, 14
10124	MC10124	U17	1 OR 3, 2 OR 4
10125	MC10125	U42	5, 12, 13
10125	MC10125	U47	4
10104	MC 10104	U8	2 OR 5, 3
10102	MC 10102	U30	3, 14
195	9602	U51	6 OR 7

1

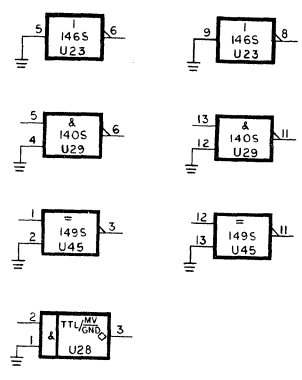

SPARES

- NOTES: UNLESS OTHERWISE SPECIFIED.
1. RESISTOR VALUES ARE IN OHMS, 1/4 W, ±1%.
 2. CAPACITANCE VALUES ARE IN MICROFARADS.
 3. INPUT PINS ON SPARES TIED TO GROUND TO REDUCE POWER DISSIPATION.

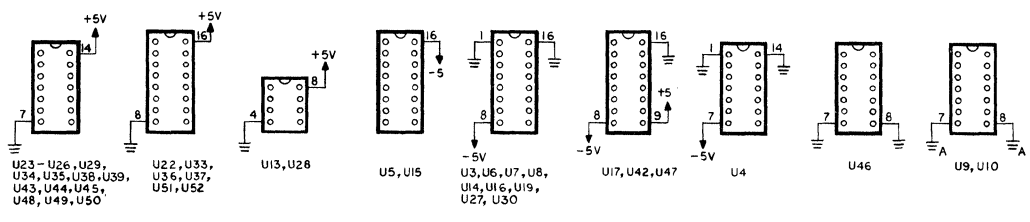


Figure 5-8. Read/Write Circuit Board (Sheet 2 of 10)

Figure 5-8. Read/Write Circuit Board (Sheet 4 of 10)



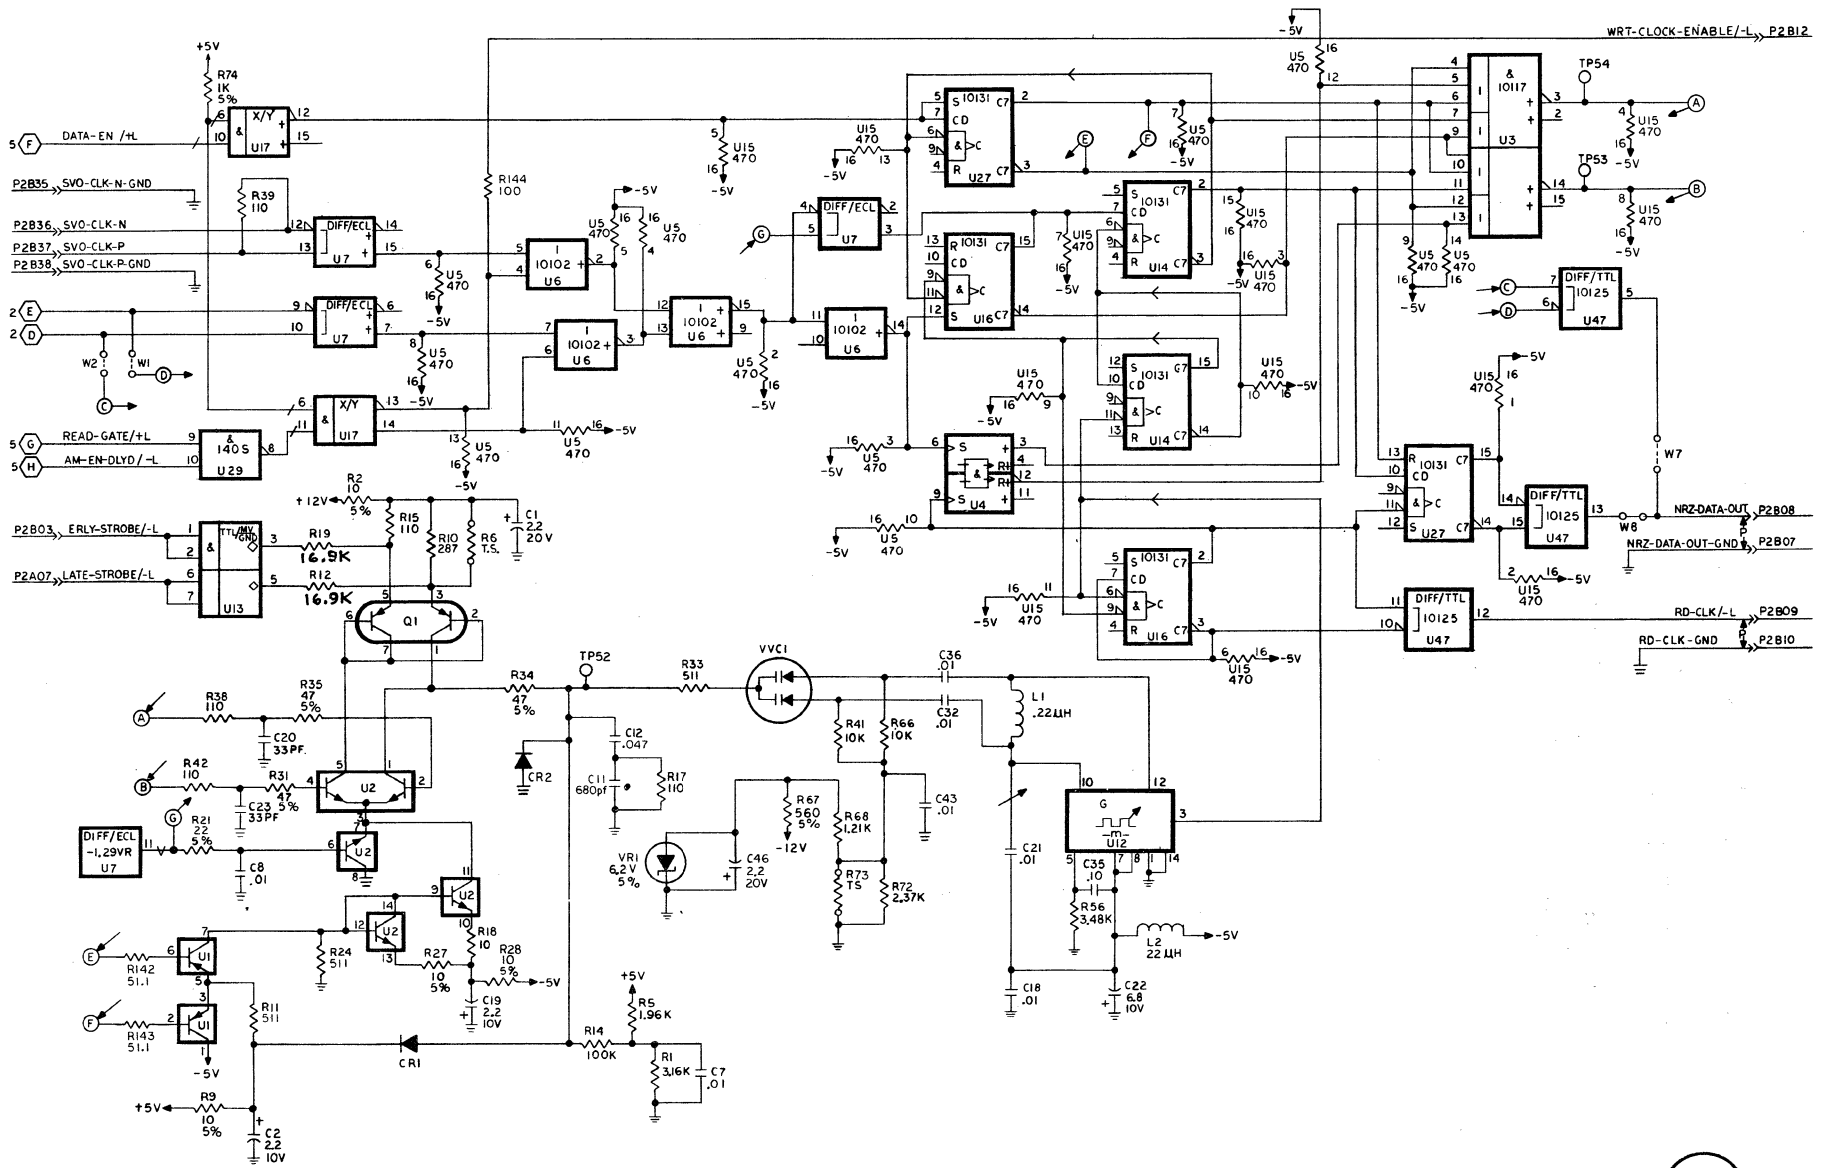


Figure 5-8. Read/Write Circuit Board (Sheet 6 of 10)

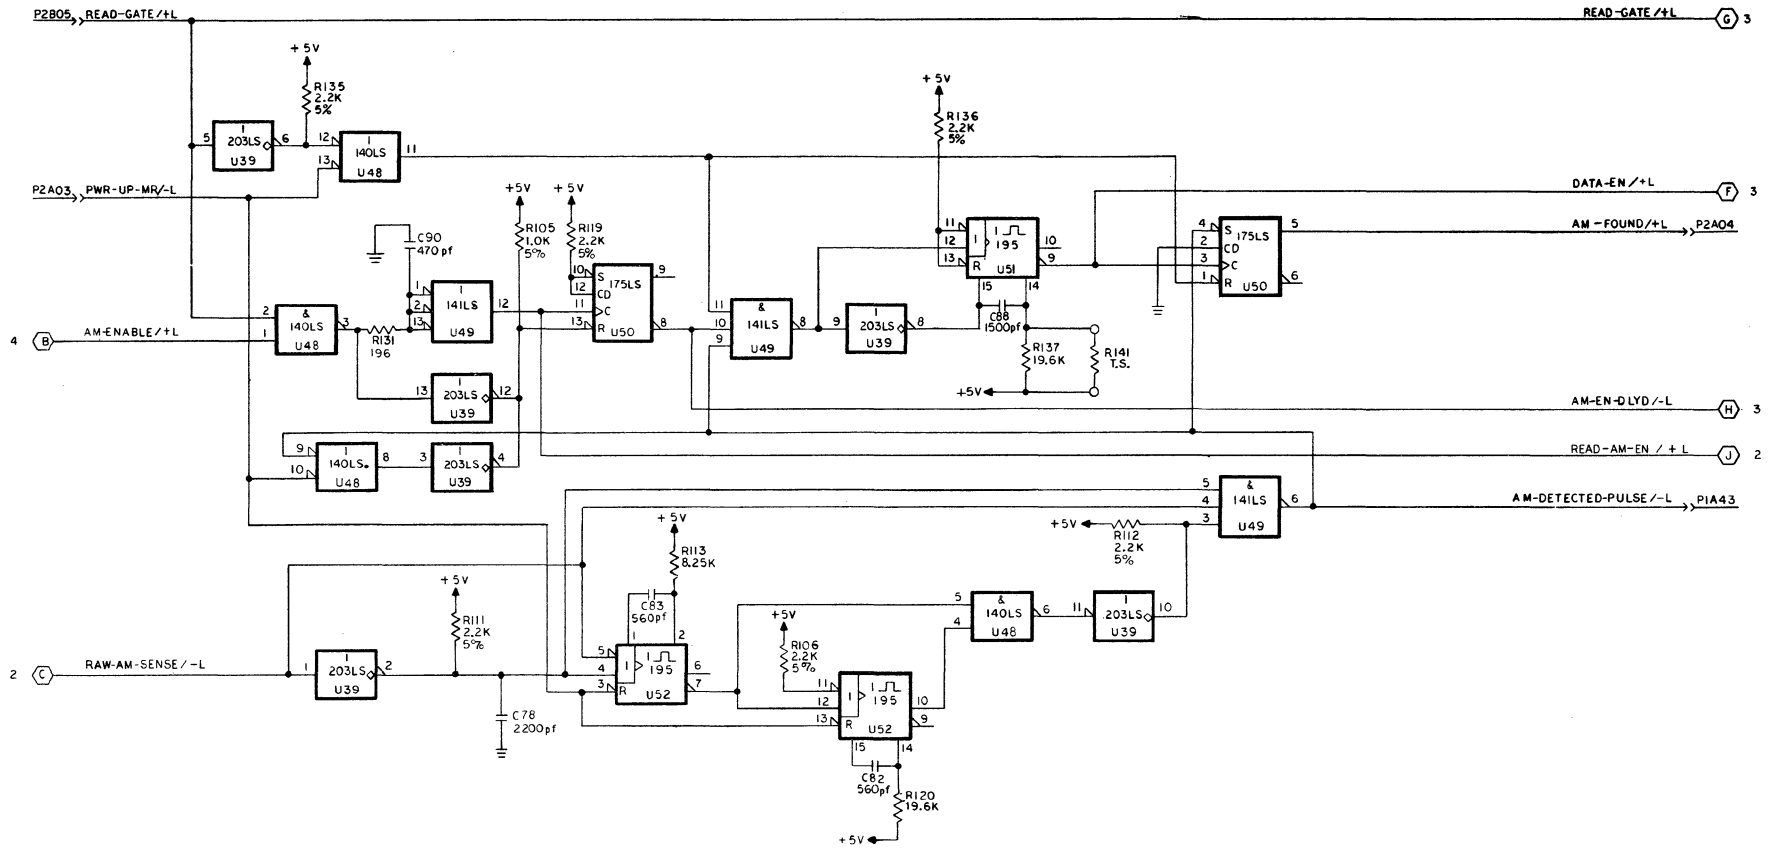

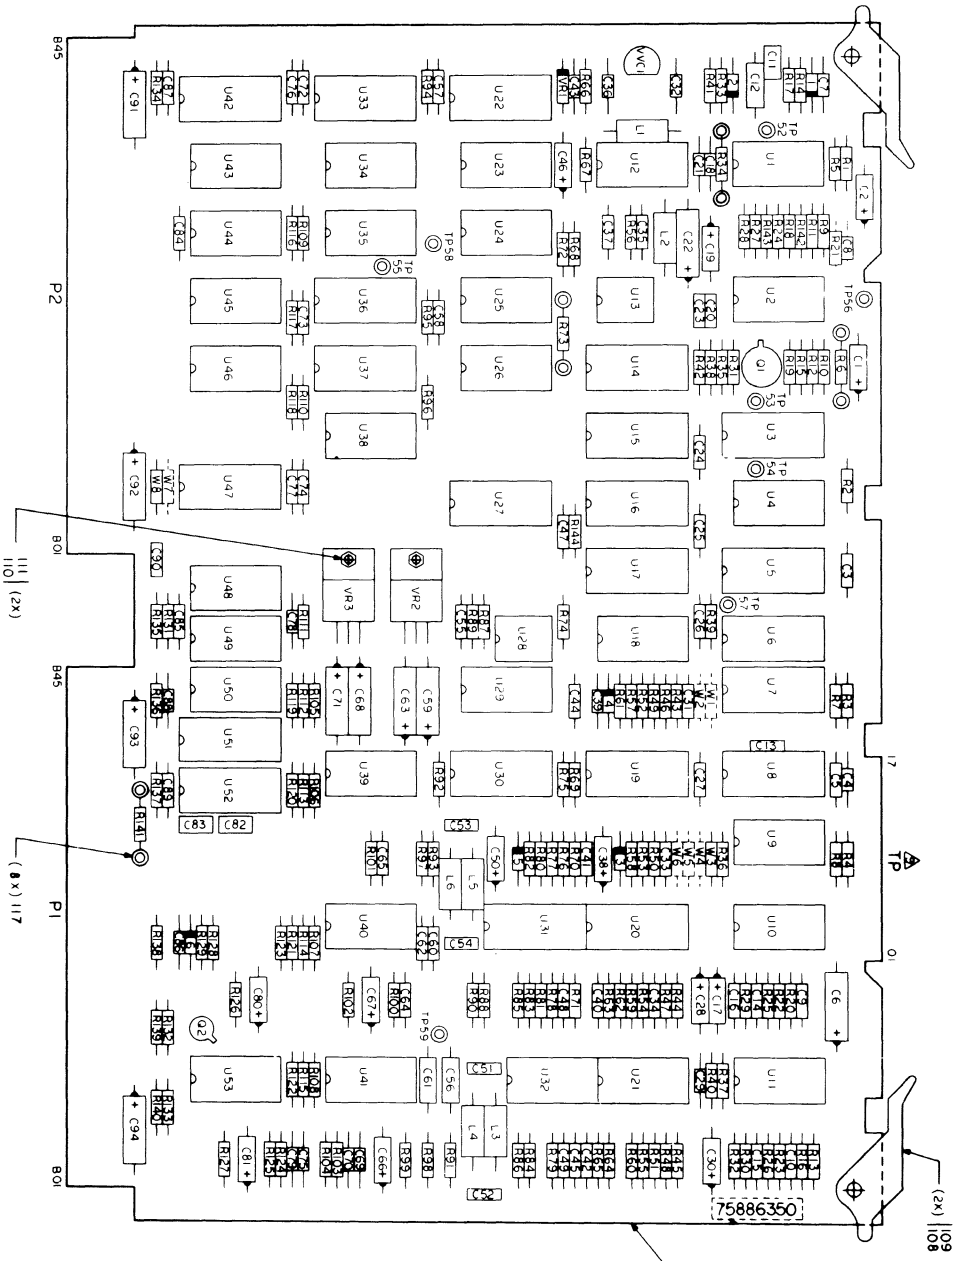


RES	PL ITEM	RES	PL ITEM	RES	PL ITEM	CAP	PL ITEM	CAP	PL ITEM	IC	PL ITEM	IND	PL ITEM	DIO	PL ITEM	TSTR	PL ITEM	VOLT REG	PL ITEM	VARI CAP DIODE	PL ITEM	JMPR	PL ITEM			
R1	72	R59	44	R117	50	C1	105	C59	106	U1	37	L1	27	CR1	83	Q1	38	VR1	118	VVC1	84	W1	—			
R2	44	R60	60	R118	48	C2	104	C60	101	U2	36	L2	26	CR2	83	Q2	40	VR2	81			W2	—			
R3	49	R61	74	R119	51	C3	103	C61	102	U3	13	L3	25	CR3	83			VR3	82			W3	42			
R4	49	R62	56	R120	79	C4	92	C62	101	U4	17	L4	25	CR4	83							W4	34			
R5	68	R63	67	R121	59	C5	100	C63	112	U5	39	L5	26	CR5	83							W5	15			
R6	43	R64	56	R122	58	C6	114	C64	103	U6	10	L6	26	CR6	—							W6	18			
R7	49	R65	56	R123	59	C7	99	C65	103	U7	2											W7	22			
R8	49	R66	77	R124	50	C8	99	C66	104	U8	1											W8	42			
R9	44	R67	41	R125	56	C9	103	C67	104	U9	35															
R10	61	R68	54	R126	44	C10	100	C68	106	U10	35															
R11	65	R69	49	R127	44	C11	116	C69	91	U11	37															
R12	120	R70	49	R128	—	C12	102	C70	9	U12	9															
R13	75	R71	44	R129	52	C13	89	C71	112	U13	32															
R14	80	R72	70	R130	—	C14	103	C72	103	U14	16															
R15	57	R73	43	R131	58	C15	100	C73	100	U15	39															
R16	71	R74	50	R132	55	C16	100	C74	103	U16	16															
R17	57	R75	49	R133	64	C17	105	C75	92	U17	4															
R18	44	R76	49	R134	56	C18	99	C76	103	U18	5															
R19	120	R77	67	R135	51	C19	104	C77	103	U19	16															
R20	55	R78	57	R136	51	C20	90	C78	98	U20	6															
R21	46	R79	44	R137	79	C21	99	C79	92	U21	36															
R22	62	R80	67	R138	71	C22	107	C80	104	U22	31															
R23	56	R81	57	R139	55	C23	90	C81	104	U23	20															
R24	65	R82	48	R140	64	C24	103	C82	96	U24	24															
R25	53	R83	65	R141	43	C25	103	C83	96	U25	23															
R26	56	R84	45	R142	73	C26	103	C84	100	U26	19															
R27	44	R85	65	R143	73	C27	100	C85	100	U27	16															
R28	44	R86	45	R144	56	C28	104	C86	95	U28	32															
R29	59	R87	67			C29	115	C87	100	U29	19															
R30	71	R88	61			C30	104	C88	97	U30	10															
R31	45	R89	67			C31	100	C89	100	U31	6															
R32	75	R90	61			C32	99	C90	94	U32	7															
R33	65	R91	64			C33	103	C91	113	U33	29															
R34	45	R92	49			C34	101	C92	113	U34	27															
R35	45	R93	64			C35	103	C93	113	U35	27															
R36	56	R94	50			C36	99	C94	113	U36	31															
R37	44	R95	50			C37	103			U37	29															
R38	57	R96	50			C38	105			U38	25															
R39	57	R97	64			C39	92			U39	21															
R40	77	R98	64			C40	103			U40	7															
R41	77	R99	44			C41	103			U41	7															
R42	57	R100	44			C42	101			U42	5															
R43	50	R101	44			C43	99			U43	30															
R44	62	R102	44			C44	100			U44	19															
R45	58	R103	62			C45	101			U45	28															
R46	71	R104	62			C46	105			U46	34															
R47	69	R105	51			C47	100			U47	15															
R48	71	R106	51			C48	103			U48	18															
R49	66	R107	45			C49	103			U49	22															
R50	49	R108	65			C50	105			U50	26															
R51	71	R109	50			C51	90			U51	33															
R52	78	R110	47			C52	88			U52	33															
R53	49	R111	51			C53	89			U53	7															
R54	62	R112	51			C54	93																			
R55	59	R113	76			C55	100																			
R56	71	R114	45			C56	102																			
R57	74	R115	58			C57	100																			
R58	48	R116	50			C58	100																			

Figure 5-8. Read/Write Circuit Board (Sheet 7 of 10)

Item No.	Drawing No.	Description	Remarks
	75886350-0	PWA Read/Write	
2	75886370-8	PWB, Read/Write	
5	15123100-8	IC NE521FH	
6	15164430-9	IC AM685	
7	15163100-9	IC 733C	
9	15164422-6	IC ECL 1648	
10	15118000-7	IC ECL 10102	
11	15120900-4	IC ECL 10104	
12	15121100-0	IC ECL 10116	
13	15118600-4	IC ECL 10117	
14	15119400-8	IC ECL 10124	
15	15119500-5	IC ECL 10125	
16	15118500-6	IC ECL 10131	
17	15126400-9	IC ECL 12040	
18	15144900-6	IC 74LS00	
19	88884500-5	IC 74S00	
20	88883700-2	IC 74S04	
21	15145300-8	IC 74LS05	
22	15145600-1	IC 74LS10	
23	88884200-2	IC 74S10	
24	88885300-9	IC 74S20	
25	15164407-7	IC 74S64	
26	15146300-7	IC 74LS74	
27	88923000-9	IC 74S74	
28	88922900-1	IC 74S86	
29	15158600-5	IC 74S112	
30	15158700-3	IC 74S140	
31	15164418-4	IC 74S195	
32	15161600-0	IC 75461	
33	15104301-5	IC 9602	
34	94262301-8	Delay Line 20 ns	
35	94262302-6	Delay Line 50 ns	
36	94675200-3	IC CA3046/CA3346	
37	77832298-2	IC MPZ 1500	
38	77612002-4	Tstr Dual 2N5583	
39	75738656-0	Res Pac 2% 470 (15)	
40	75888005-8	Transistor 2N4860A	
41	24500057-5	Res 1/4W 5% 560	
42	94358500-0	Jmpr Wire, Molded	
43	94357500-1	Resistor Test Select	
44	24500015-3	Res 1/4W 5% 10	
45	24500031-0	Res 1/4W 5% 47	
46	24500023-7	Res 1/4W 5% 22	
47	24500045-0	Res 1/4W 5% 180	
48	24500047-6	Res 1/4W 5% 220	
49	24500055-9	Res 1/4W 5% 470	

Figure 5-8. Read/Write Circuit Board (Sheet 8 of 10)

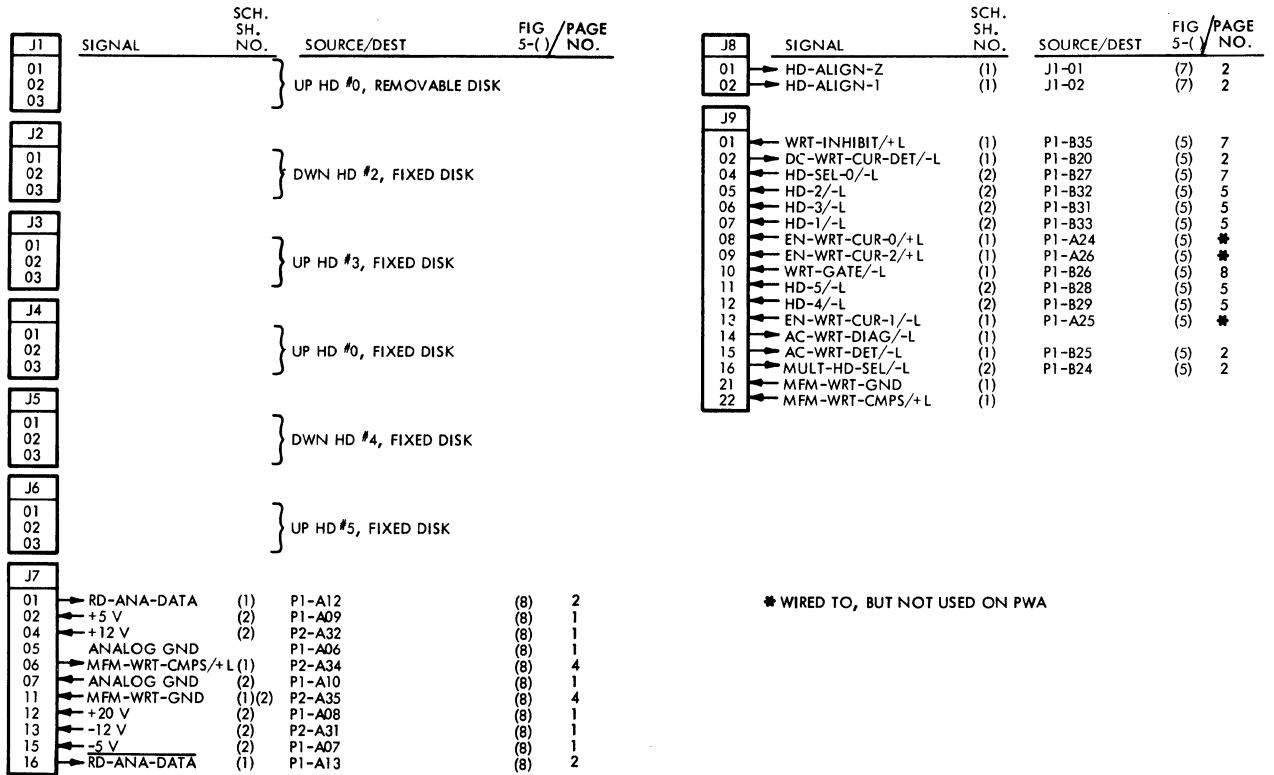

XX232a

Figure 5-9. Read/Write Preamp Circuit Board (Sheet 1 of 6)

UNUSED LOGIC ELEMENTS			
ELEMENT	VENDOR NO	LOCATION	OUTPUT PIN
2435	745112	U12	7,9
1465	74504	U7	2,12
	75401	U1	5


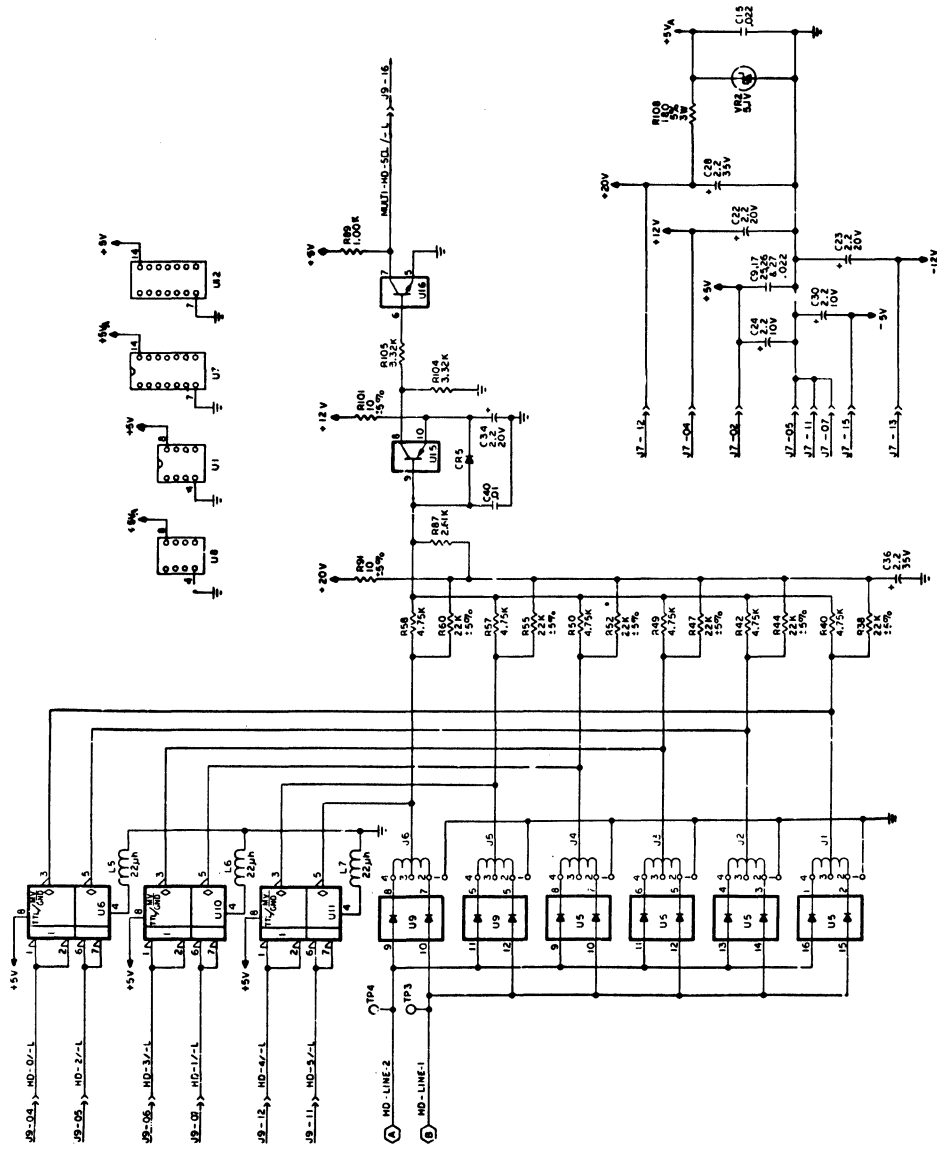


Figure 5-9. Read/Write Preamp Circuit Board (Sheet 3 of 6)

Figure 5-9. Read/Write Preamp Circuit Board (Sheet 4 of 6)

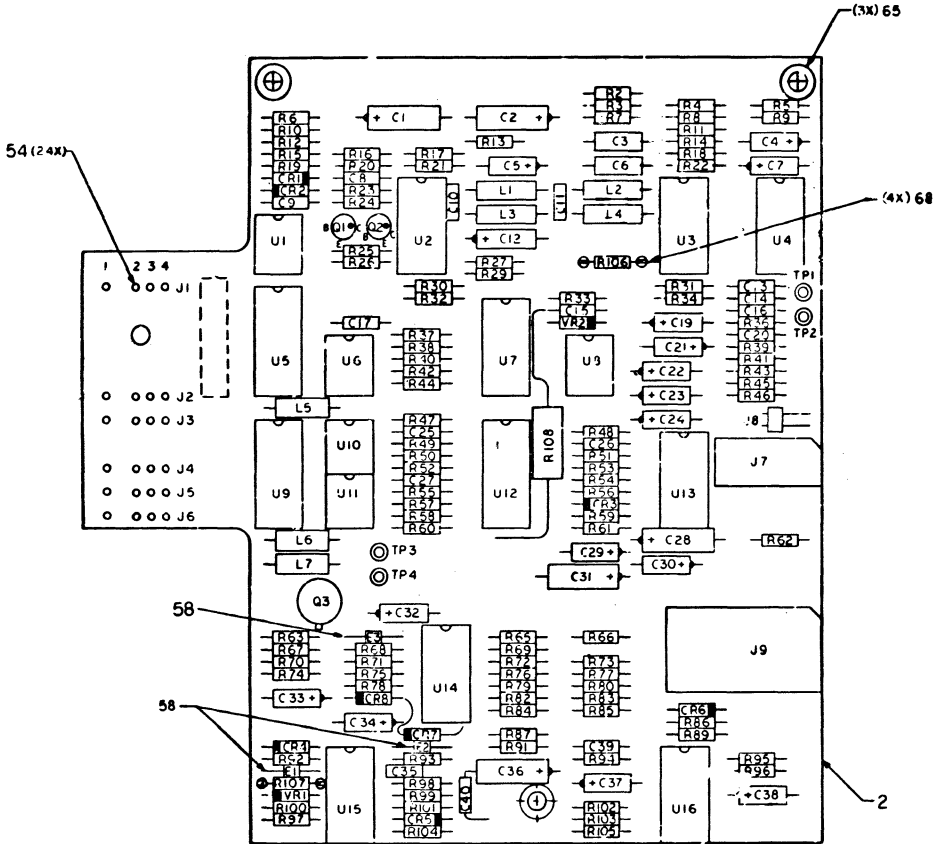

RES	PL ITEM
R1	—
R2	34
R3	46
R4	46
R5	34
R6	34
R7	46
R8	46
R9	34
R10	43
R11	48
R12	43
R13	34
R14	34
R15	43
R16	51
R17	34
R18	48
R19	43
R20	51
R21	34
R22	↑
R23	↑
R24	34
R25	37
R26	37
R27	45
R28	—
R29	45
R30	52
R31	37
R32	52
R33	45
R34	37
R35	—
R36	34
R37	45
R38	36
R39	34
R40	50
R41	63
R42	50
R43	63
R44	36
R45	64
R46	64
R47	36
R48	40
R49	50
R50	50
R51	48
R52	36
R53	52

VOLT REG	PL ITEM
VRI	19
VR2	19

RES	PL ITEM
R54	43
R55	36
R56	33
R57	50
R58	50
R59	66
R60	36
R61	69
R62	38
R63	42
R64	—
R65	48
R66	48
R67	52
R68	34
R69	41
R70	52
R71	38
R72	48
R73	48
R74	35
R75	38
R76	48
R77	48
R78	34
R79	48
R80	48
R81	—
R82	48
R83	48
R84	48
R85	48
R86	60
R87	61
R88	—
R89	45
R90	—
R91	33
R92	44
R93	48
R94	45
R95	45
R96	33
R97	39
R98	41
R99	49
R100	44
R101	33
R102	48
R103	33
R104	49
R105	49
R106	62
R107	67
R108	70

CAP	PL ITEM
C1	29
C2	29
C3	24
C4	26
C*	27
C6	24
C7	26
C8	67
C9	20
C10	23
C11	22
C12	26
C13	25
C14	25
C15	20
C16	23
C17	20
C1*	—
C19	25
C20	25
C21	25
C22	27
C23	27
C24	26
C25	20
C26	20
C27	20
C28	26
C29	26
C30	23
C31	27
C32	27
C33	26
C34	27
C35	21
C36	28
C37	27
C38	26
C39	20
C40	25

BEAD	PL ITEM
E1	53
E2	53
E3	53

IC	PL ITEM
U1	9
U2	11
U3	5
U4	5
U5	10
U6	9
U7	8
U8	7
U9	10
U10	9
U11	9
U12	6
U13	13
U14	12
U15	13
U16	11

TSTR	PL ITEM
Q1	15
Q2	15
Q3	14
Q4	—

CONN	PL ITEM
J7	57
J8	55
J9	56

IND	PL ITEM
L1	16
L2	17
L3	16
L4	17
L5	16
L6	16
L7	16

DIO	PL ITEM
CR1	18
CR2	↑
CR3	↑
CR4	↑
CR5	↑
CR6	↑
CR7	↑
CR8	18

TERM	PL ITEM
TP1	59
TP2	59
TP3	59
TP4	59

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75885752-8	PWA Read/Wrt Preamp	
2	75885772-6	PWB Read/Write Preamp	
5	15163100-9	IC 733C	
6	15158600-5	IC 74S112	
7	15113000-2	IC 75452	
8	88883700-2	IC 74S04	
9	15161600-0	IC 75461	
10	50241802-3	Diode Array, 8, D1C16	
11	77832297-4	IC MPQ 1000	
12	94675200-3	IC CA3046/CA3346	
13	77832298-2	IC MPQ 1500	
14	77612002-4	Tstr Dual 2N5583	
15	77612004-0	Transistor BFR91	
16	75887599-1	Inductor 5% 22 uH	
17	75887592-6	Inductor 5% 5.6uH	
18	51706300-4	Diode IN4454	
19	95818110-9	Volt Reg 5.1V IN5231	
20	94240440-1	Cap 50V 10% .022uF	
21	94227218-8	Cap 500V +/-1PF 47	
22	94227201-4	Cap 500V + 1 PF 5	
23	94227208-9	Cap 500V 1% 18	
24	94240448-4	Cap 50V 10% .10uF	
25	94240411-2	Cap 50V 10% .01uF	
26	24504342-7	Cap 10V 20% 2.2uF	
27	24504378-1	Cap 20V 20% 2.2uF	
28	24504333-6	Cap 35V 20% 2.2uF	
29	24504348-4	Cap 10V 20% 6.8uF	
33	24500015-3	Res 1/4W 5% 10	
34	24500023-7	Res 1/4W 5% 22	
35	24500031-0	Res 1/4W 5% 47	
36	24500095-5	Res 1/4W 5% 22K	
37	94360168-2	Res 1/4W 1% 51.1	
38	94360200-3	Res 1/4W 1% 100	
39	94360232-6	Res 1/4W 1% 215	
40	94360252-4	Res 1/4W 1% 348	
41	94360250-8	Res 1/4W 1% 332	
42	94360272-2	Res 1/4W 1% 562	
43	94360265-6	Res 1/4W 1% 475	
44	94360264-9	Res 1/4W 1% 464	
45	94360300-1	Res 1/4W 1% 1.00K	
46	94360322-5	Res 1/4W 1% 1.69K	
48	94360333-2	Res 1/4W 1% 2.21K	
49	94360350-5	Res 1/4W 1% 3.32K	
50	94360365-4	Res 1/4W 1% 4.75K	
51	94360368-8	Res 1/4W 1% 5.11K	

Figure 5-9. Read/Write Preamp Circuit Board (Sheet 5 of 6)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
52	94360400-9	Res 1/4W 1% 10.0K	
53	77832209-9	Bead Shielding	
54	94245412-5	Post-Wire Wrap	
55	75743702-5	Header-Right Angle	
56	77832294-1	Socket, 24 Pin	
57	77832290-9	Socket, 16 Pin	
58	92294022-6	Wire Bare Tinned	
59	92498021-2	Terminal Swaged	
60	94360328-2	Res 1/4W 1% 1.96K	
61	94360340-7	Res 1/4W 1% 2.61K	
62	94357500-1	Resistor Test Select	
63	24500056-7	Res 1/4W 5% 510	
64	24500036-9	Res 1/4W 5% 75	
65	77612307-7	Standoff, PWB	
66	94360314-2	Res 1/4W 1% 1.40K	
67	9420446-8	Cap 50V 10% .068uF	
68	77612165-9	Terminal Slotted	
69	54360281-3	Res 1/4W 1% 698	

Figure 5-9. Read/Write Preamp Circuit Board (Sheet 6 of 6)



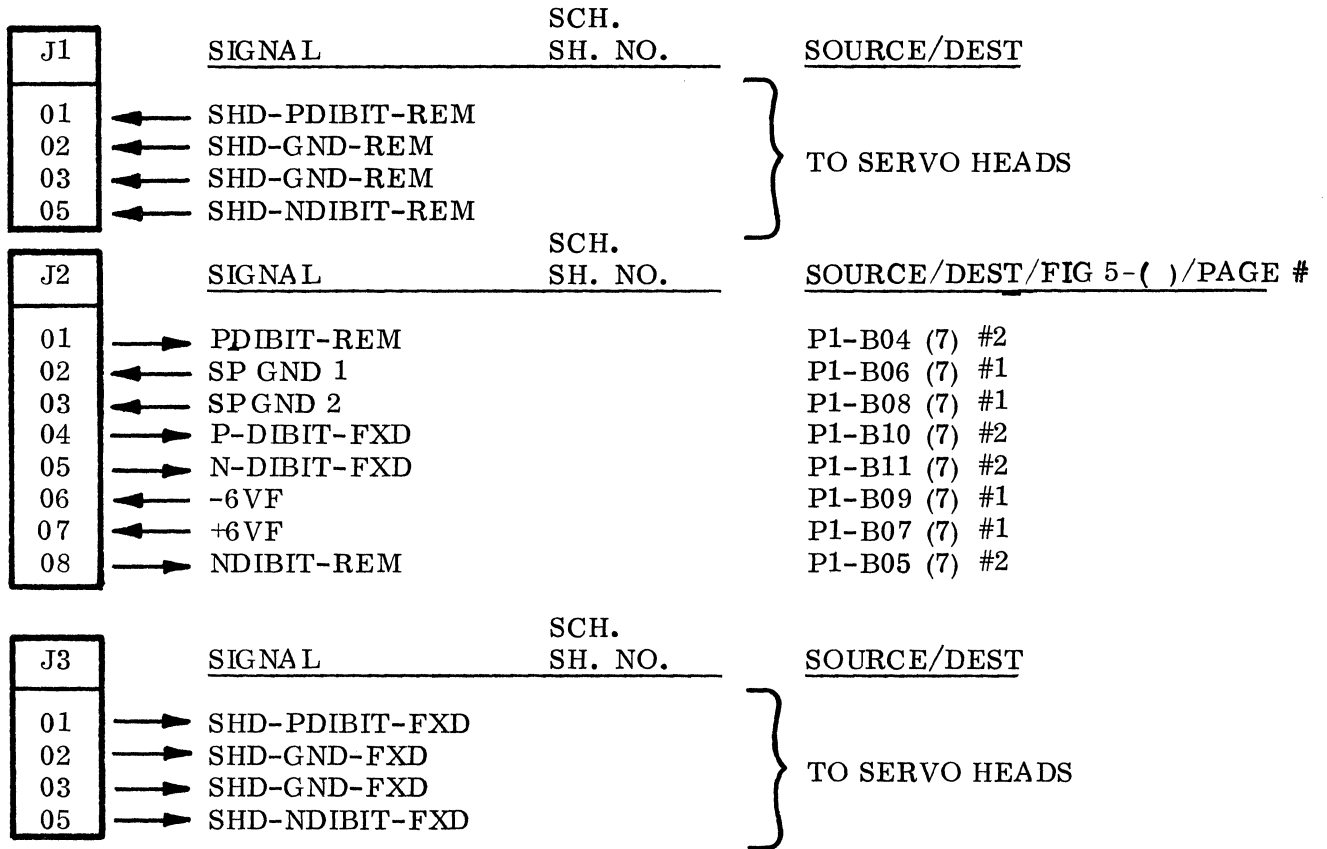


Figure 5-10. Servo Preamp Circuit Board (Sheet 1 of 4)

Figure 5-10. Servo Preamp Circuit Board (Sheet 2 of 4)

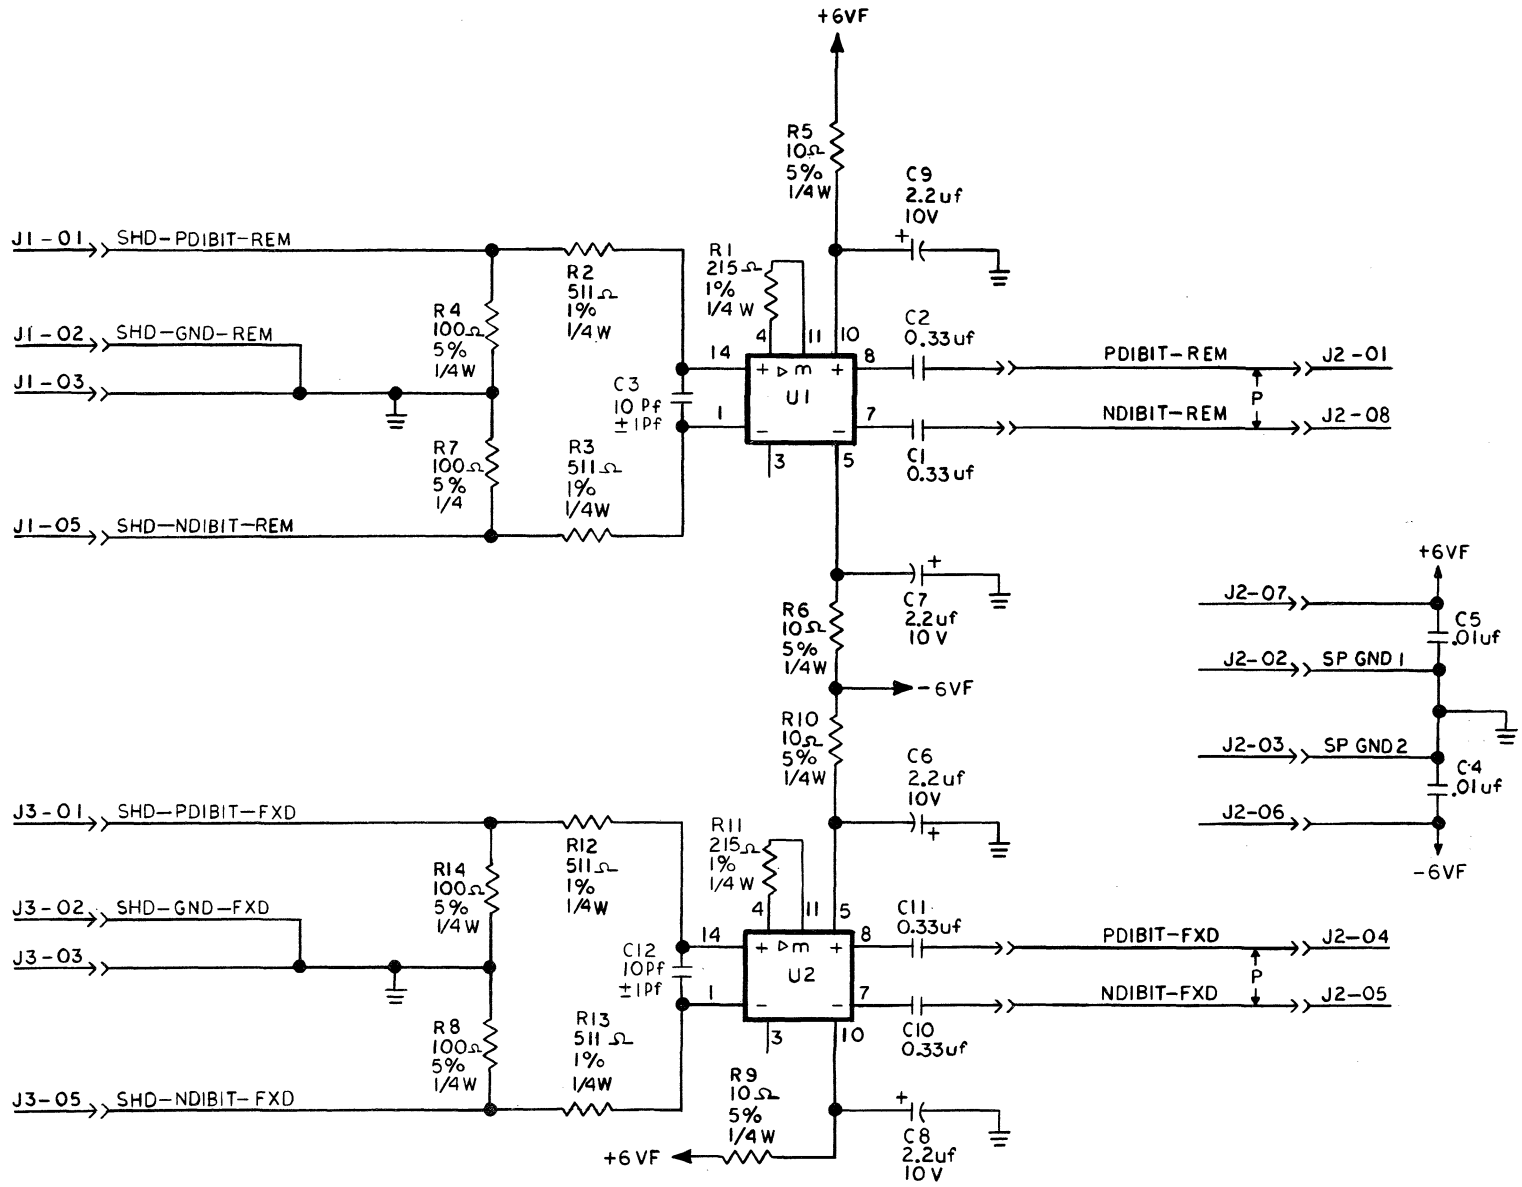

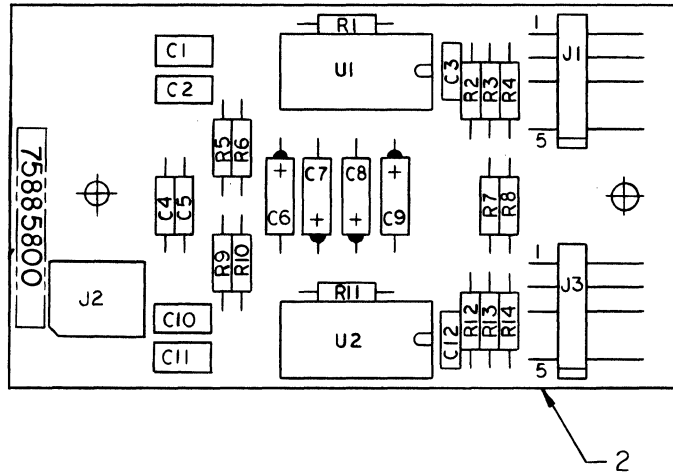

RES	PL ITEM
R1	8
R2	7
R3	7
R4	6
R5	9
R6	9
R7	6
R8	6
R9	9
R10	9
R11	8
R12	7
R13	7
R14	6

CAP	PL ITEM
C1	12
C2	12
C3	10
C4	13
C5	13
C6	11
C7	11
C8	11
C9	11
C10	12
C11	12
C12	10


IC	PL ITEM
U1	5
U2	5

CONN	PL ITEM
J1	14
J2	15
J3	14

Figure 5-10. Servo Preamp Circuit Board (Sheet 3 of 4)


<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75885800-5	PWA Servo Preamp	
2	75885820-3	PWB Servo Preamp	
5	15163100-9	IC 733C	
6	24500039-3	Res 1/4W 5% 100	
7	94360268-0	Res 1/4W 1% 511	
8	94360232-6	Res 1/4W 1% 215	
9	24500015-3	Res 1/4W 5% 10	
10	94227205-5	Cap 500V +1PF 10	
11	24504342-7	Cap 10V 20% 2.2uF	
12	94354816-4	Cap 50V 20% .33uF	
13	75808537-7	Cap 100V 10% .01uF	
14	75772401-8	Connector Hdr	
15	77832292-5	Socket, 8 Pin	

Figure 5-10. Servo Preamp Circuit Board (Sheet 4 of 4)

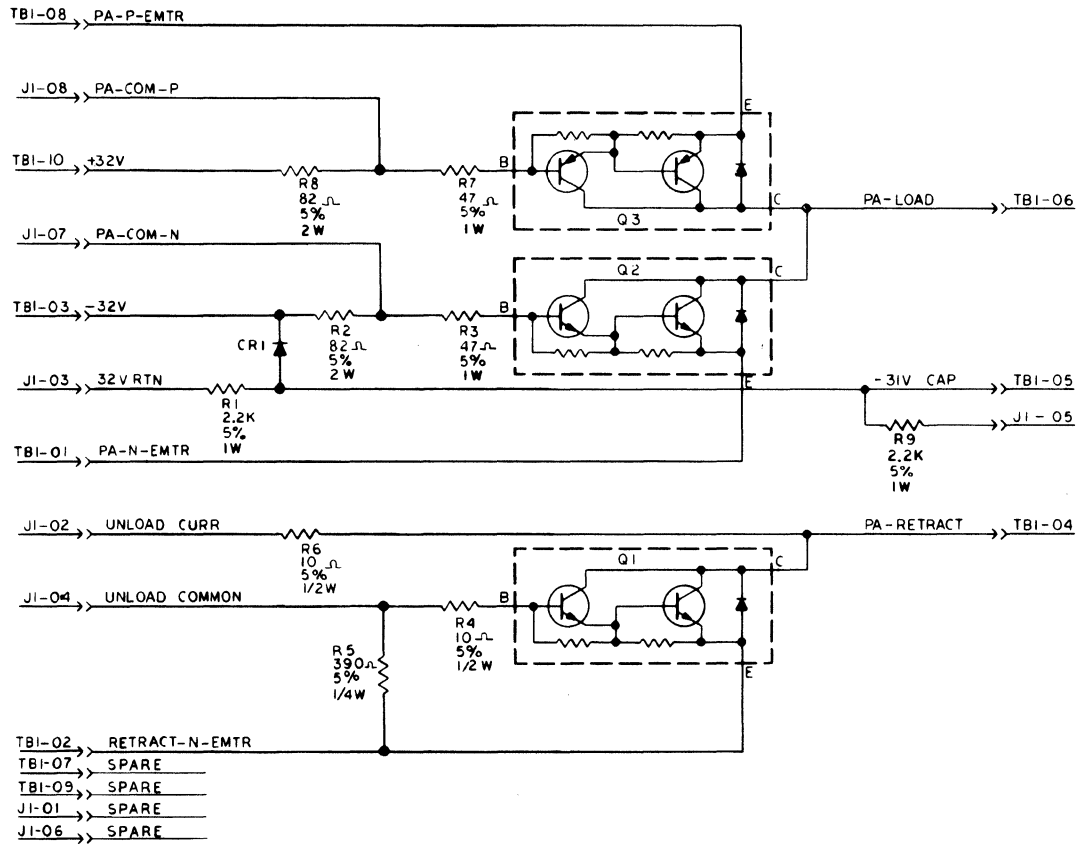

J1	SIGNAL	SCH. SH. NO.	FIG. PAGE SOURCE/DEST/5-()/ #
01	← SPARE		
02	← UNLOAD CURR		P1-B09 (6) #7
03	← 32V RET		P1-B11 (6) #7
04	← UNLOAD COMMON		P1-B10 (6) #7
05	→ -31-CAP		P1-B14 (6) #7
06	← SPARE		
07	← PA-COM-N		P1-B10 (6) #6
08	← PA-COM-P		P1-B08 (6) #6

Figure 5-11. Power Amp Circuit Board (Sheet 1 of 3)

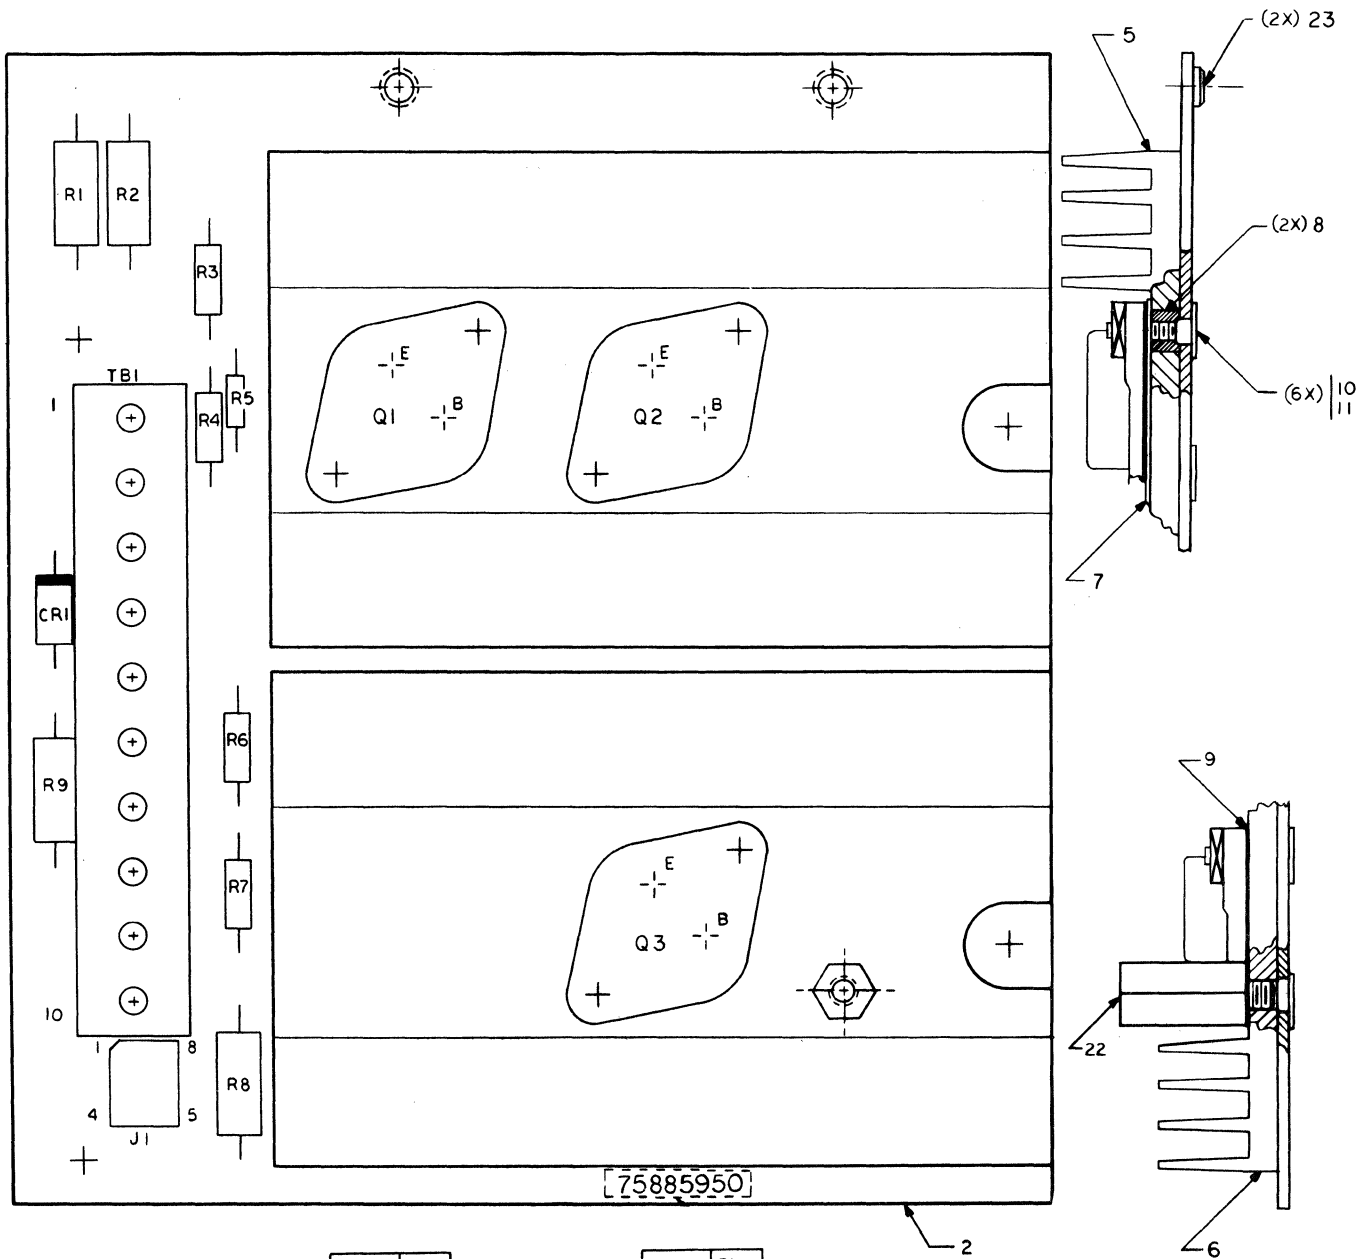

RES	PL ITEM
R1	17
R2	21
R3	16
R4	15
R5	20
R6	15
R7	16
R8	21
R9	17

TSTR	PL ITEM
Q1	12
Q2	24
Q3	13

TERM	PL ITEM
BD	18
TB1	18

CONN	PL ITEM
J1	19

DIO	PL ITEM
CRI	14

Figure 5-11. Power Amp Circuit Board (Sheet 2 of 3)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75885950-8	PWA, Power Amp	
2	75885970-6	PWB, Power Amp	
5	75886735-2	Heat Sink	
6	75886736-0	Heat Sink	
7	16798707-2	Wafer	
8	77832275-0	Spacer, Fibre	
9	18748600-6	Compound 340	
10	95683505-2	Stud, Press	
11	92583002-8	Nut Lock	
12	75887208-9	Transistor MJ11016	
13	50223603-7	Transistor	
14	75887484-6	Pwr Rectifier MR500	
15	24500115-1	Res 1/2W 5% 10	
16	77612864-7	Res 1W 5% 47	
17	24507171-7	Res 1W 5% 2.2K	
18	77832259-4	Terminal Strip	
19	77832292-5	Socket, 8 Pin	
20	24500053-4	Res 1/4W 5% 390	
21	24507123-8	Res 1W 5% 82	
22	51885504-4	Standoff, Male-Female	
23	94375501-7	Insert-PC Bd	
24	50223703-5	Trstr-PMD-16K-100	

Figure 5-11. Power Amp Circuit Board (Sheet 3 of 3)

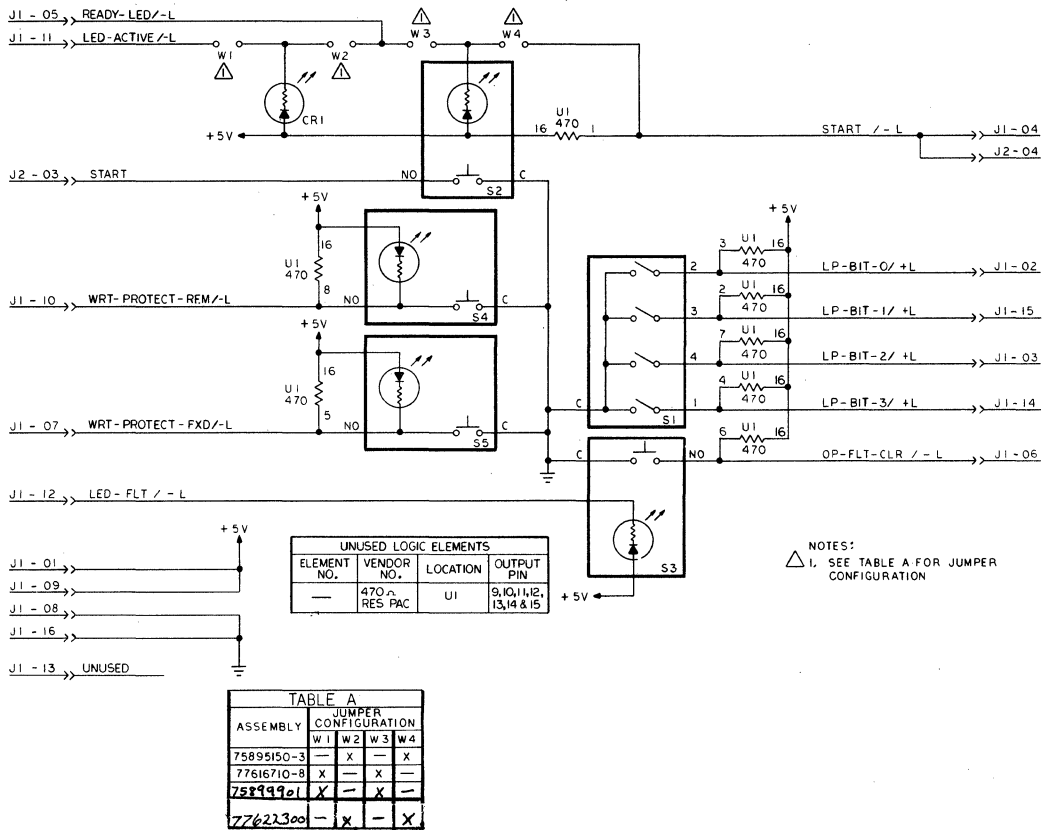




FIG PAGE

SOURCE/DEST/5-()/ #

J1	SIGNAL	
01	← +5V	P1-B03(5) #1
02	→ LP-BIT-0/+L	P1-B05(5) #6
03	→ LP-BIT-2/+L	P1-B08(5) #6
04	→ START/-L	P1-B10(5) #9
05	← READY-LED/-L	P1-B12(5) #4
06	→ OP-FLT-CLR/-L	P1-B14(5) #2
07	← WRT-PROTECT-FXD/-L	P1-B16(5) #9
08	← GND	P1-B18(5) #7
09	← +5V	P1-B19(5) #1
10	← WRT-PROTECT-REM/-L	P1-B17(5) #9
11	← LED-ACTIVE/-L	P1-B15(5) #8
12	← LED-FLT/-L	P1-B13(5) #7
14	→ LP-BIT-3/+L	P1-B09(5) #6
15	→ LP-BIT-1/+L	P1-B07(5) #6
16	← GND	P1-B04(5) #1

J2	SIGNAL	
03	← START	S3-N.O. (17) #1
04	→ START/-L	S1-C (17) #1

Figure 5-12. Operator Control Circuit Board (Sheet 1 of 3)

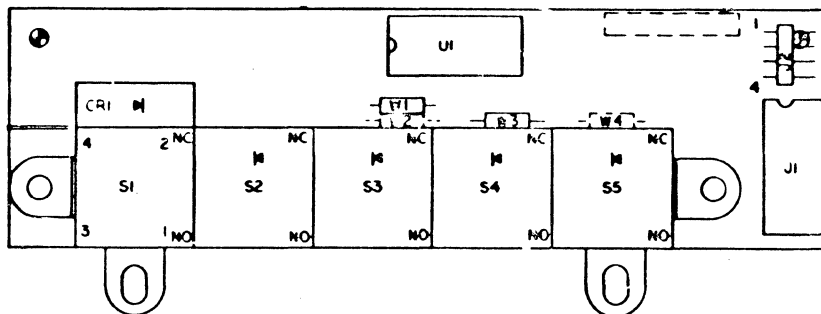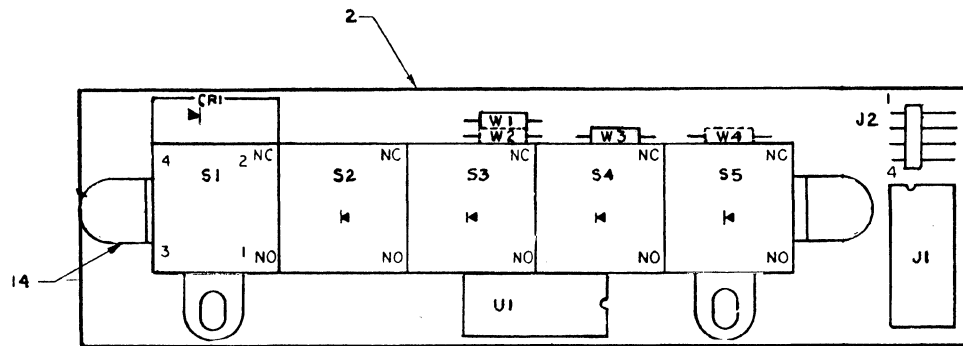

CONN	PL ITEM
J1	11
J2	12

DIO	PL ITEM
CRI	9

SW	PL ITEM
S1	5.18
S2	6.17
S3	7.17
S4	8.17
S5	8.17

IC	PL ITEM
U1	13

1

Table "A"		
PART NO.	CD	Coding Plug Identification
94398801	4	"1"
94398802	2	"2"
94398803	0	"3"
94398804	8	"4"
94398805	5	"5"
94398806	3	"6"
94398807	1	"7"

2

Table B		
Jmpr	P/L Item	Assembly P/N
W1	10	77616710, 75899901
W2	10	75895150, 77622300
W3	10	77616710, 75899901
W4	10	75895150, 77622300

NOTES:

1

IF OTHER THAN "0" PLUG IS REQUIRED ORDER REPLACEMENT FROM TABLE "A"

2

SEE TABLE "B" FOR JUMPER CONFIGURATION

Figure 5-12. Operator Control Circuit Board (Sheet 2 of 3)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	77622300	PWA OP CNTL	
	77616710	PWA OP CNTL	
	75895150	PWA OP CNTL	
	75899901	PWA OP CNTL	
	75899920	PWB OP CNTL	Used on 75899901
2	75895170	PWB OP CNTL	
5	94398900	Switch, Encoding	
6	94394019	Switch, Grn LED	
7	94394020	Switch, Red LED	
8	94394018	Switch, Yel LED	
9	94394103	Indicator, Grn LED	
10	94358500	Jumper Wire-Molded	
11	77832290	Socket, 16 Pin	
12	75743604	Header-Right Angle	
13	75738656	Res Pack 2% 470 Ohm (15)	
14	94398700	Mtg Bracket	
17	94394311	Lens, Black	
18	94398800	Encoding Button "0"	


Figure 5-12. Operator Control Circuit Board (Sheet 3 of 3)

J1	SIGNAL	SOURCE/DEST/5-()/ #	FIG PAGE
01	← BRK-PUL/+L	P1-B31 (6) #5	
02	← RUN/+L	P1-B33 (6) #5	
03	← PK-COV-UNLOCK/+L	P1-B35 (6) #5	
04	← LINE-OFF/+L	P1-B37 (6) #5	
05	← ANALOG GND	P1-B39 (6) #1	
06	← SVO-RLY/+L	P1-B36 (6) #5	
07	← LINE-EN/+L	P1-B34 (6) #5	
08	← SPARE		

J2	SIGNAL	SOURCE/DEST/5-()/ #	FIG PAGE
01	← +5VDC	} See Figure 5-17 #1	
02	← SSR+5		
03	← SSR-CNTL		
04	← GND		
05	← PK-COV +32		
06	← PK-COV-SOL		
07	← OVR-HT		
08	← OVR-HT-RTN		

NOTE: For TB1 and TB2 Wiring See Figure 5-17.

Figure 5-13. Relay Control Circuit Board (Sheet 1 of 4)

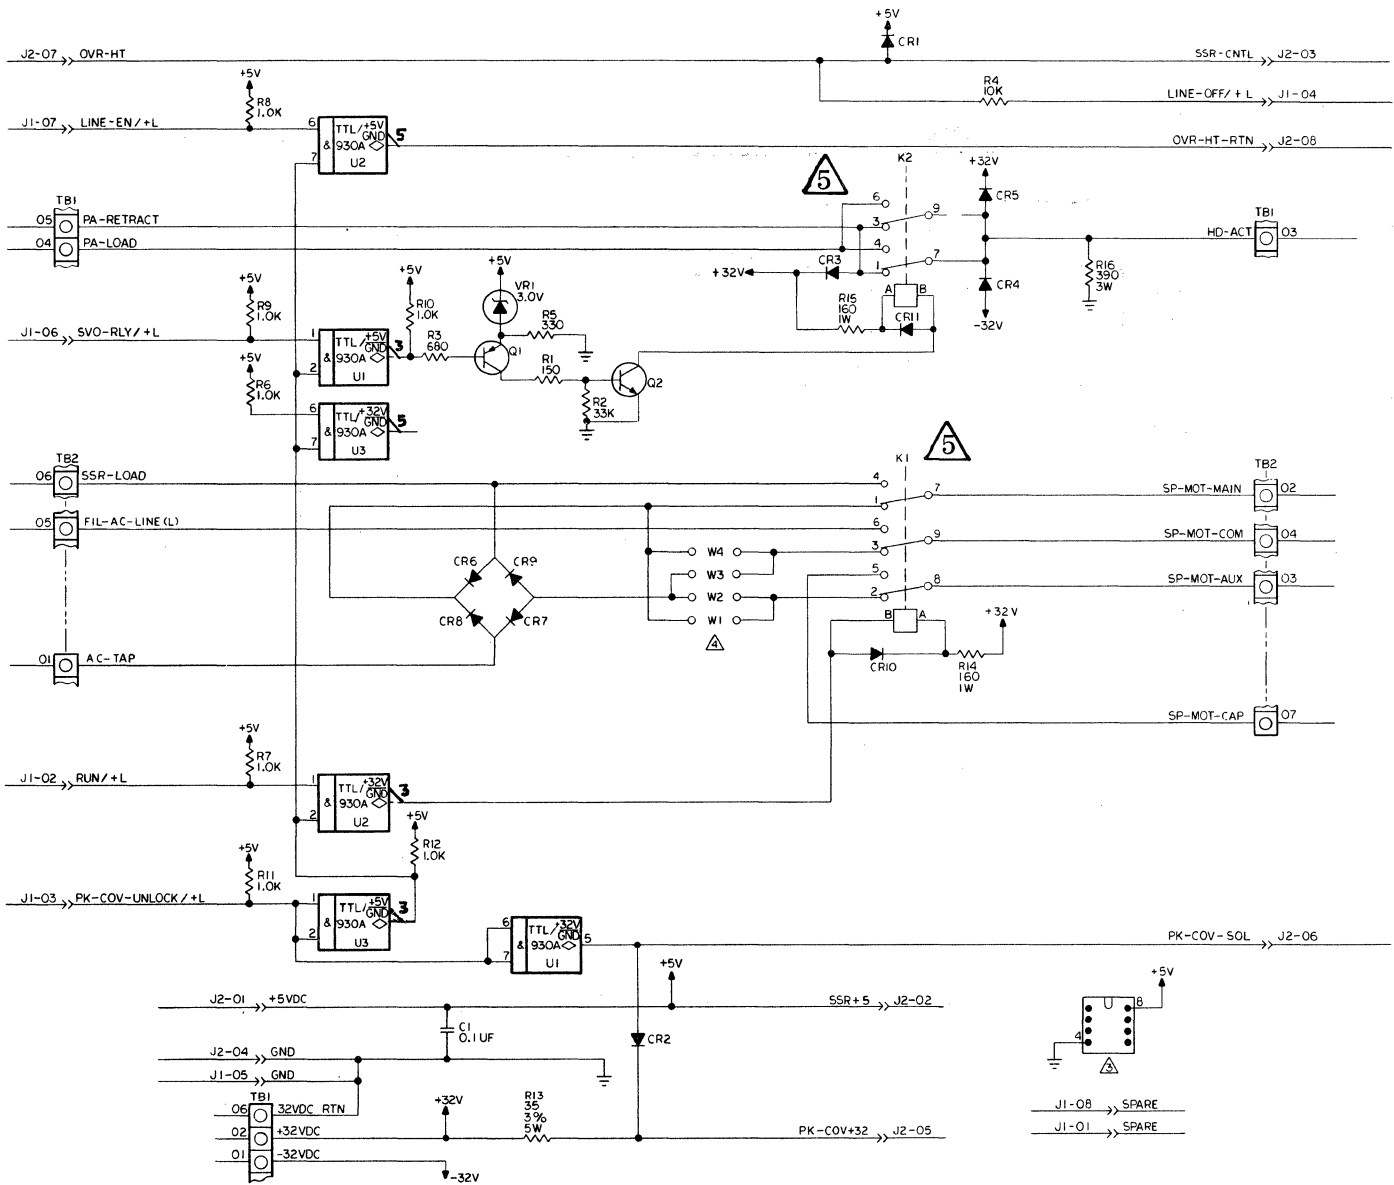


- NOTES:
1. DRAWING INTERPRETATION PER 900
 2. RESISTORS ARE IN OHMS, 1/4W, ±5%
 - △ 3. TYPICAL POWER CONNECTIONS FOR 8 PIN INT CKTS
 - △ 4. SEE TABLE A FOR JUMPER CONFIGURATION

△ 5. Relays shown in de-energized position.

TABLE A ASSEMBLY	JUMPER CONFIGURATION			
	W1	W2	W3	W4
75898850-5	-	X	-	-
75899120-2	X	-	X	-
75899130-1	-	-	X	-

Figure 5-13. Relay Control Circuit Board (Sheet 2 of 4)

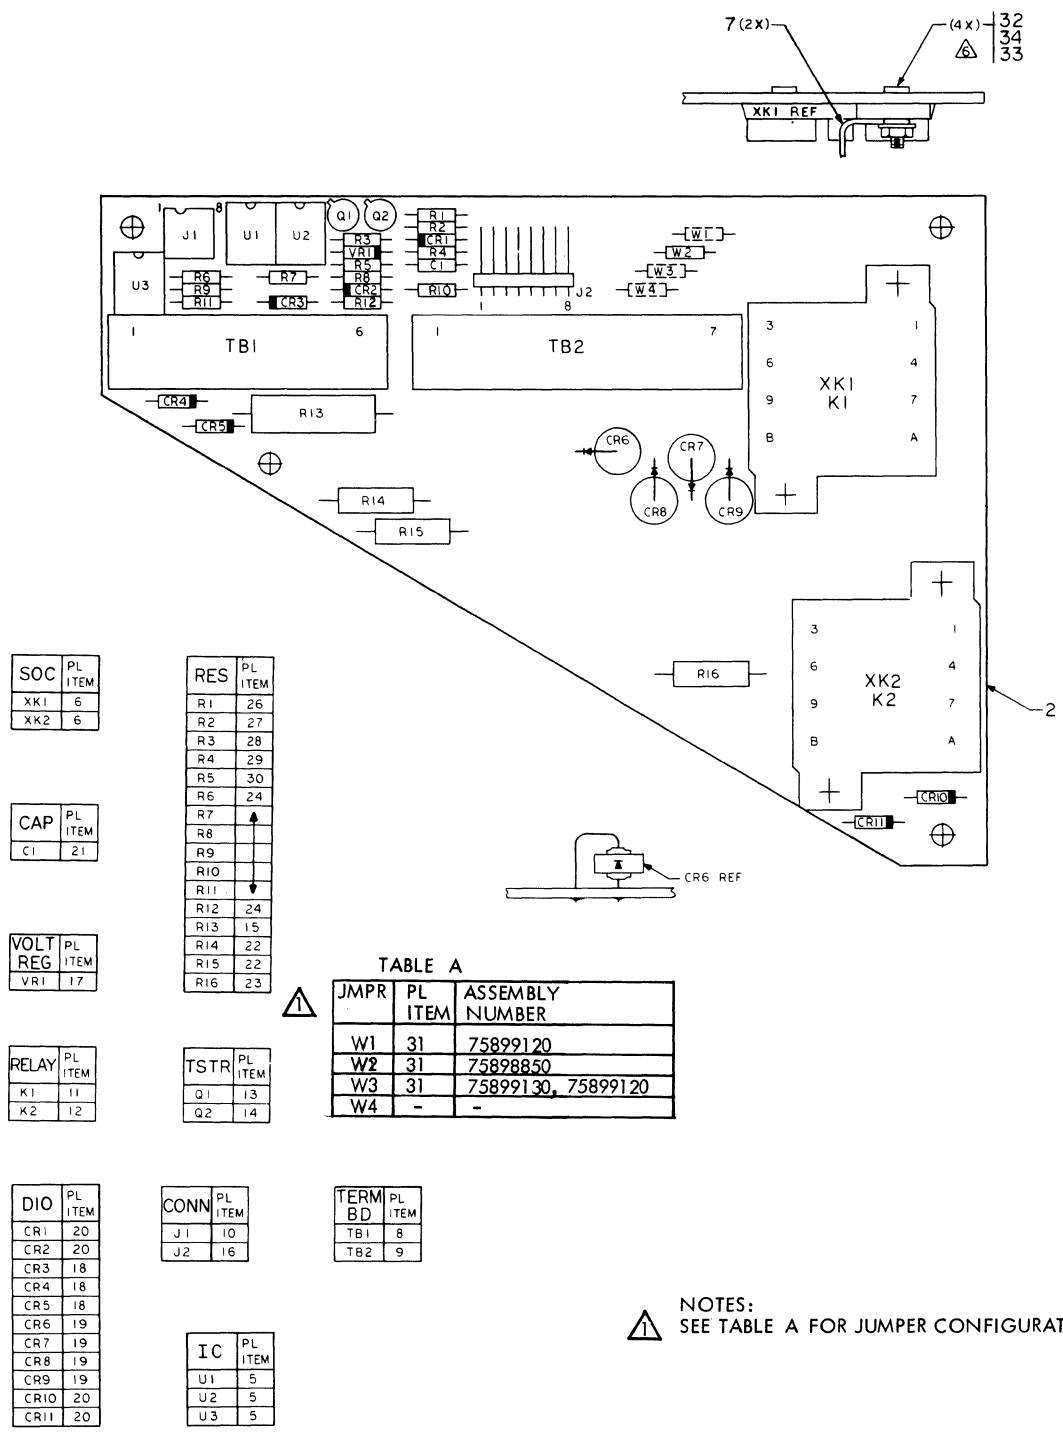

SOC	PL ITEM
XK1	6
XK2	6

CAP	PL ITEM
C	21

VOLT REG	PL ITEM
VR1	17

RELAY	PL ITEM
K1	11
K2	12

DIO	PL ITEM
CR1	20
CR2	20
CR3	18
CR4	18
CR5	18
CR6	19
CR7	19
CR8	19
CR9	19
CR10	20
CR11	20

RES	PL ITEM
R1	26
R2	27
R3	28
R4	29
R5	30
R6	24
R7	↑
R8	↑
R9	↑
R10	↓
R11	↓
R12	24
R13	15
R14	22
R15	22
R16	23

TSTR	PL ITEM
Q1	13
Q2	14

CONN	PL ITEM
J1	10
J2	16

IC	PL ITEM
U1	5
U2	5
U3	5

TABLE A

JMPR	PL ITEM	ASSEMBLY NUMBER
W1	31	75899120
W2	31	75898850
W3	31	75899130, 75899120
W4	-	-


⚠ NOTES:
SEE TABLE A FOR JUMPER CONFIGURATION.

Figure 5-13. Relay Control Circuit Board (Sheet 3 of 4)

Item No.	Drawing No.	Description	Remarks
	75898850	Relay Control PWA	
	75899120	Relay Control PWA	
	75899130	Relay Control PWA	
2	75898870	Relay Control PWB	
5	15164423	I. C. 75472	
6	22940901	Relay Socket	
7	22940903	Relay Retainer	
8	77832263	Terminal Strip	
9	77832262	Terminal Strip	
10	77832292	Socket, 8 Pin	
11	77612660	Relay	
12	22940808	Relay 15 Amp	
13	72035901	TSTR 2N2907A (PNP)	
14	51795600	TSTR 2N2222A (NPN)	
15	38846808	Res 5W 3% 35 Ohm	
16	75743608	Header-Right Angle	
17	95818104	Volt Reg 3.0 V 1N5225	
18	77612650	PWR Rectifier MR811	
19	95575000	Rectifier-Sil	
20	51706300	Diode 1N4454	
21	94361400	Cap 50 V +80-20% .01 uF	
22	24507130	Res 1W 5% 160 Ohm	
23	92222046	Res 3W 5% 390 Ohm	
24	24500063	Res 1/4W 5% 1K	
26	24500043	Res 1/4W 5% 150 Ohm	
27	24500099	Res 1/4W 5% 33K	
28	24500059	Res 1/4W 5% 680 Ohm	
29	24500087	Res 1/4W 5% 10K	
30	24500051	Res 1/4W 5% 330 Ohm	
31	94358500	Jumper Wire, Molded	
32	95683505	Stud, Press	
33	92583002	Nut Lock	
34	10125603	Washer Plain	


Figure 5-13. Relay Control Circuit Board (Sheet 4 of 4)

Figure 5-14. Terminator Circuit Board (Sheet 1 of 2)

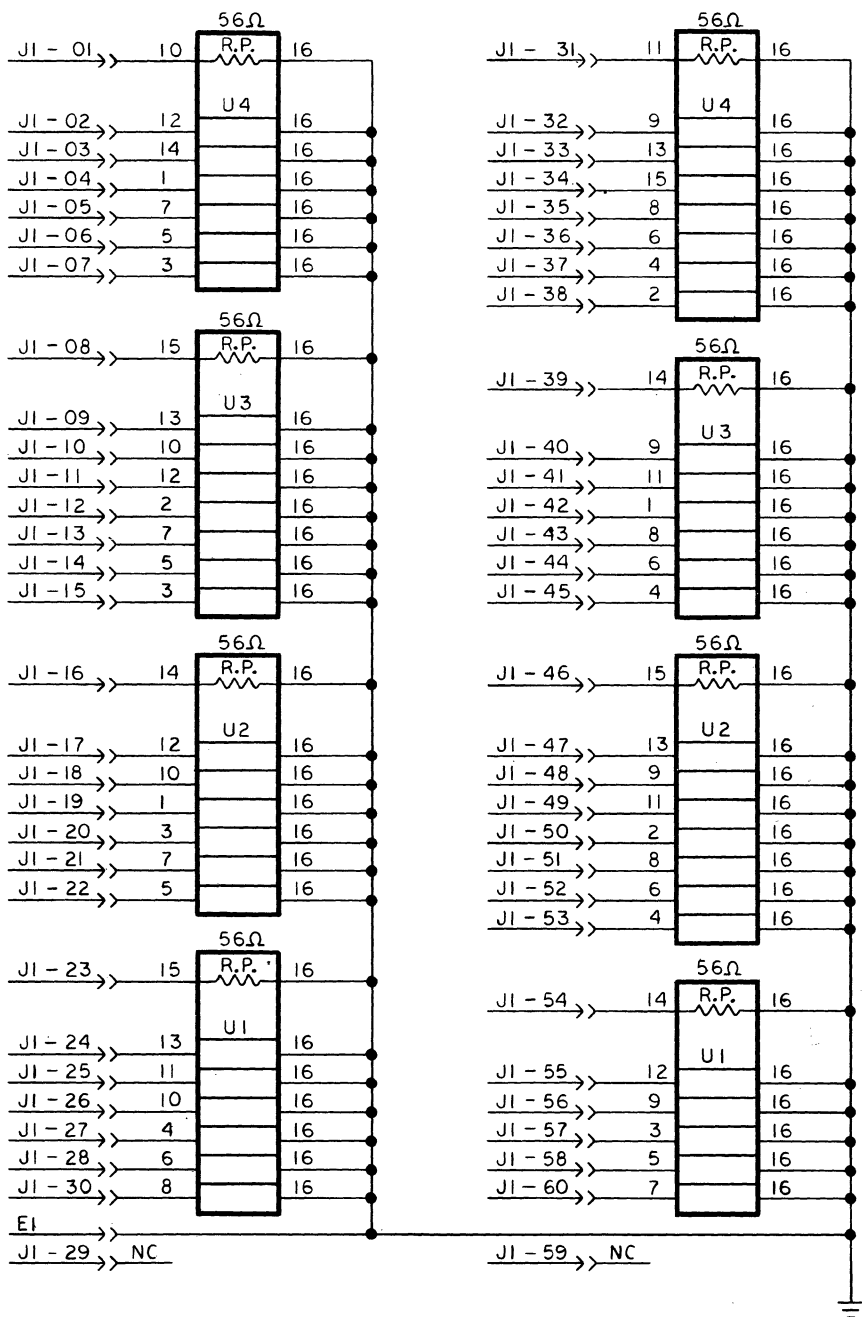

J1 = Terminator Connector, Mates with J2 shown in Figure 5-4.


GND receptacle, mates with J3 shown in Figure 5-4.

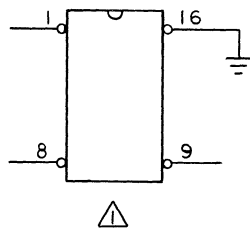

NOTE:
 △ I. TYPICAL MODULE FOR RESISTOR PACKS


IC	PL ITEM
U1	8
U2	↑
U3	↓
U4	8

CONN	PL ITEM
J1	5

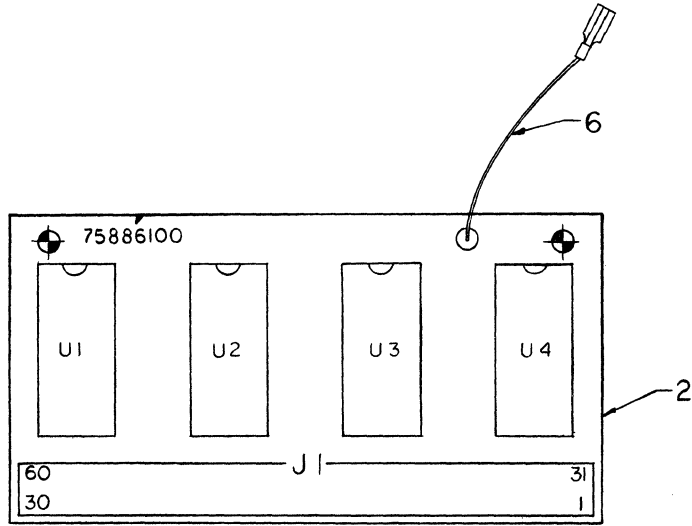

Item No.	Drawing No.	Description	Remarks
	75886100-9	PWA Terminator	
2	75886120-7	PWB Terminator	
5	75887431-7	Conn, Receptacle Assy	
6	75880638-4	Wire, Receptacle Assy	
8	62012927-0	Res Pac 5% 56 (8)	



Figure 5-14. Terminator Circuit Board (Sheet 2 of 2)

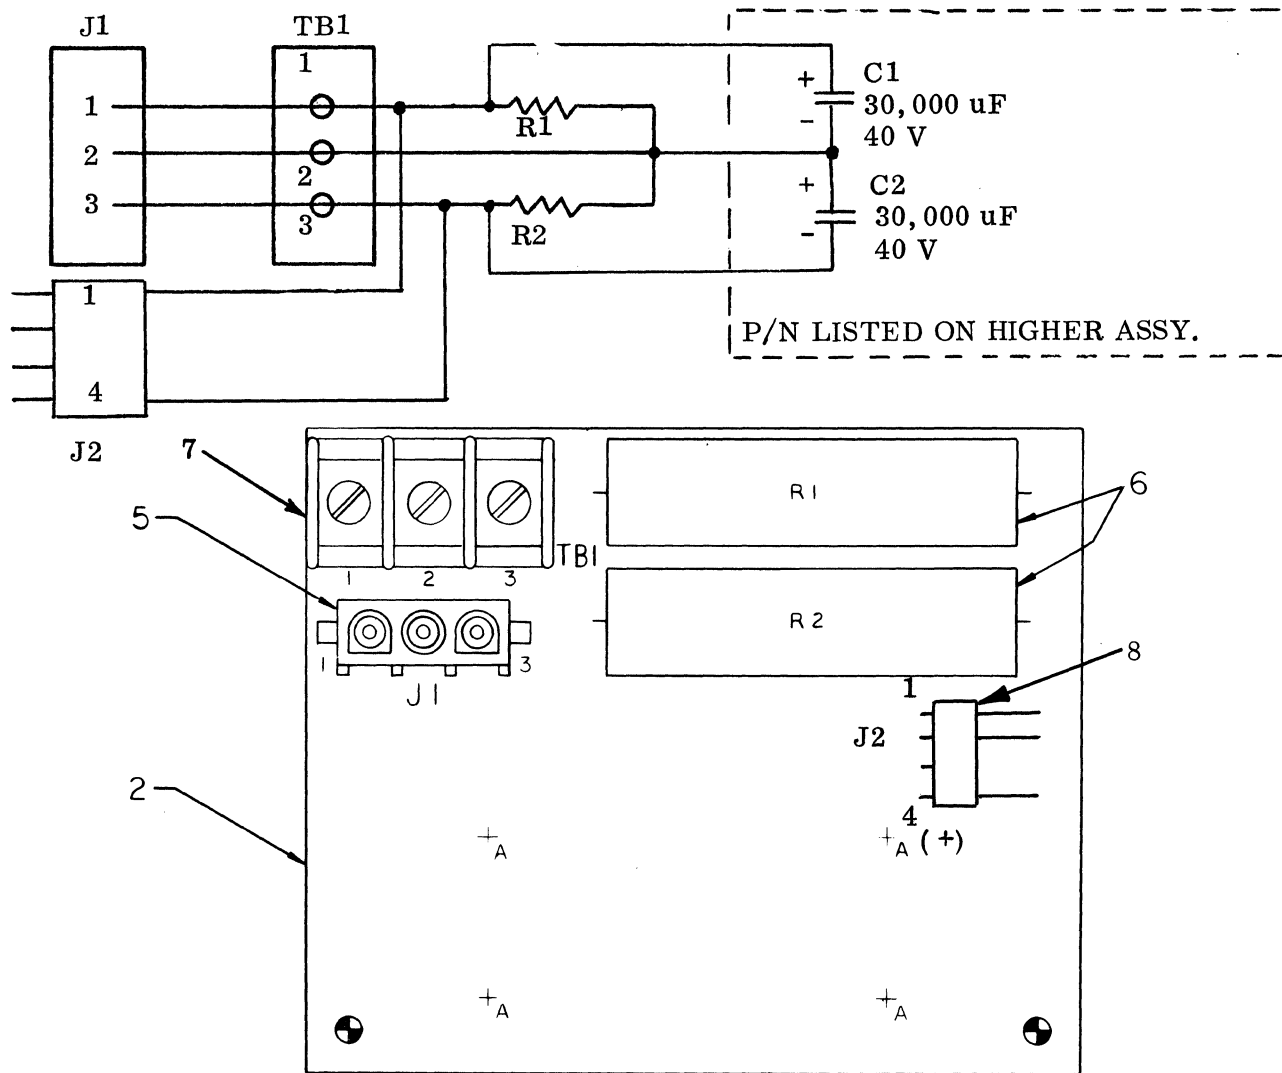

NOTE: For Comp. BD. interconnections see Figure 5-17.

Item No.	Drawing No.	Description	Remarks
	75895250-1	PWA, Component Board	
2	75895270-9	PWB, Component Board	
5	83435452-4	Connector, Plug/Cap	
6	51830521-4	Res 10W 5% 220	
7	94792383-5	Term Strip 3 Pos	
8.	75743604-3	Header 4 pos	


Figure 5-15. Component Board (32V Filter)

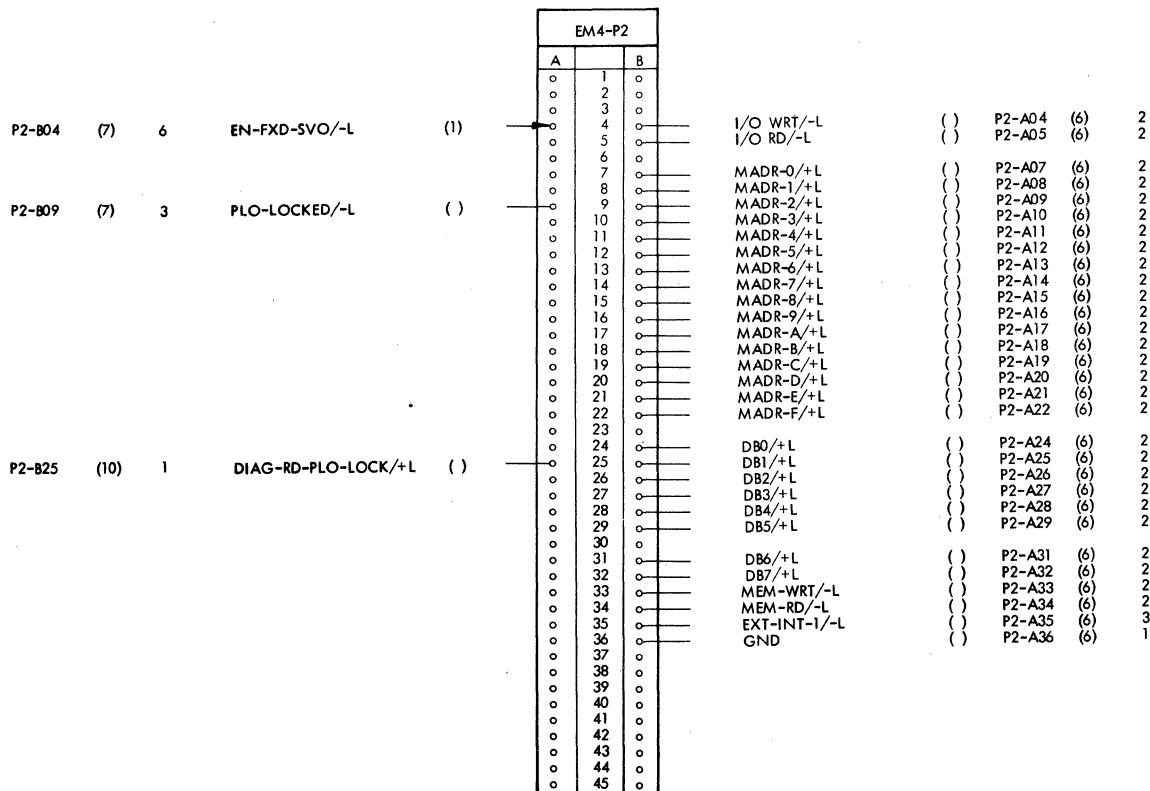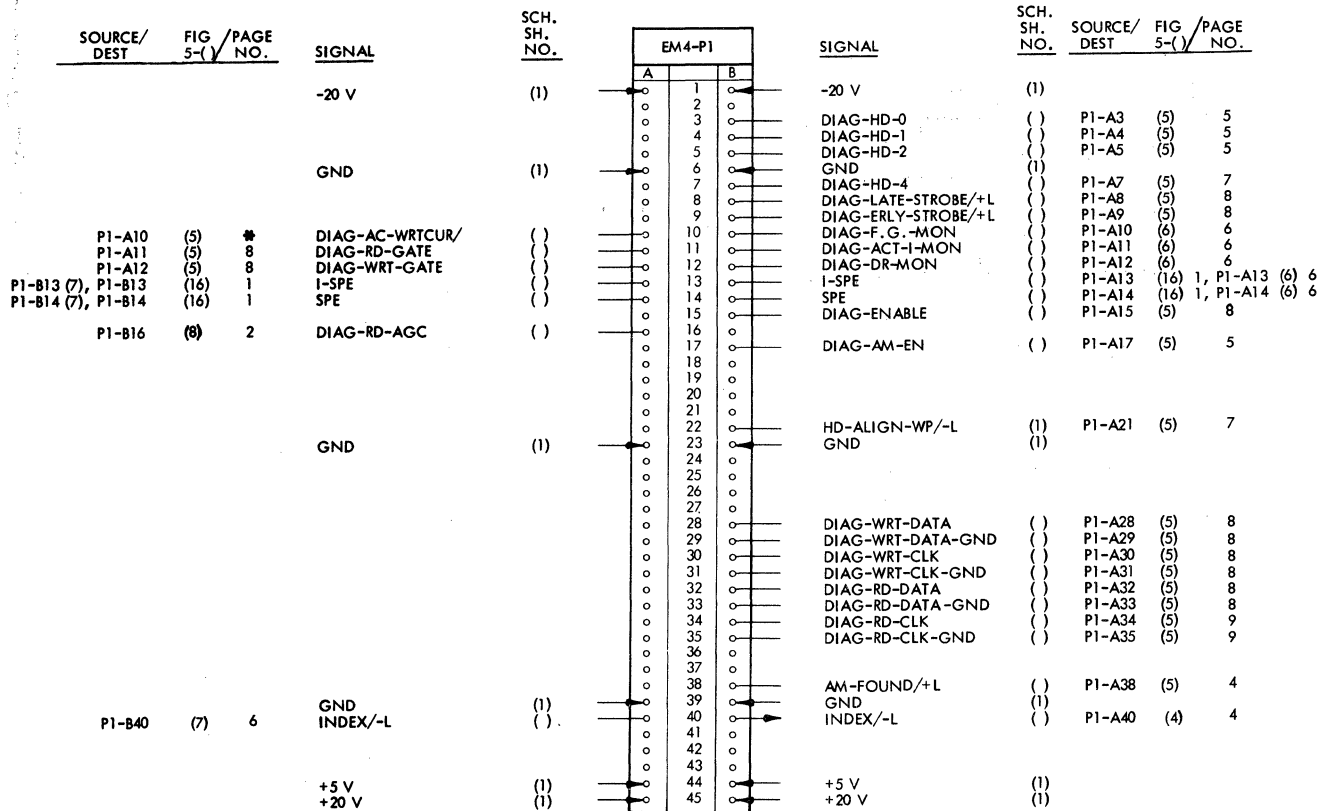

XX236a

*WIRED TO, BUT NOT USED ON PWA

Figure 5-16. Diagnostic/Hd Alignment Ckt Board (Sheet 1 of 4)

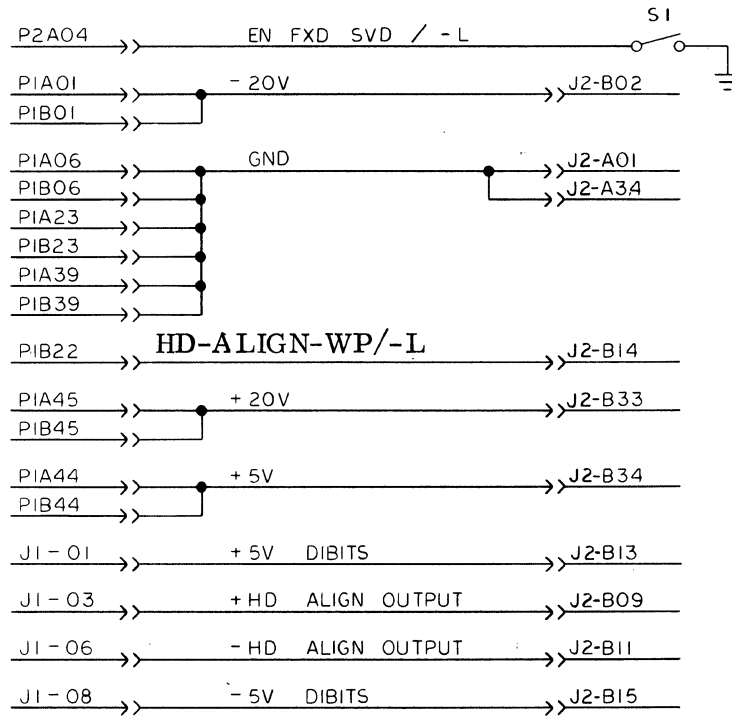

J1
01
03
06
08

SIGNAL

FIG PAGE
SOURCE/DEST/5-()/ #

SELECTED-SVO-P
SVO/DATA-N
SVO/DATA-N
SELECTED-SVO-N

J2-01 (7) #2
J2-03 (7) #2
J2-06 (7) #2
J2-08 (7) #2

Figure 5-16. Diagnostic/Hd Alignment Ckt Board (Sheet 2 of 4)

CONN	PL ITEM
J1	6
J2	5

SW	PL ITEM
SI	7
-	-

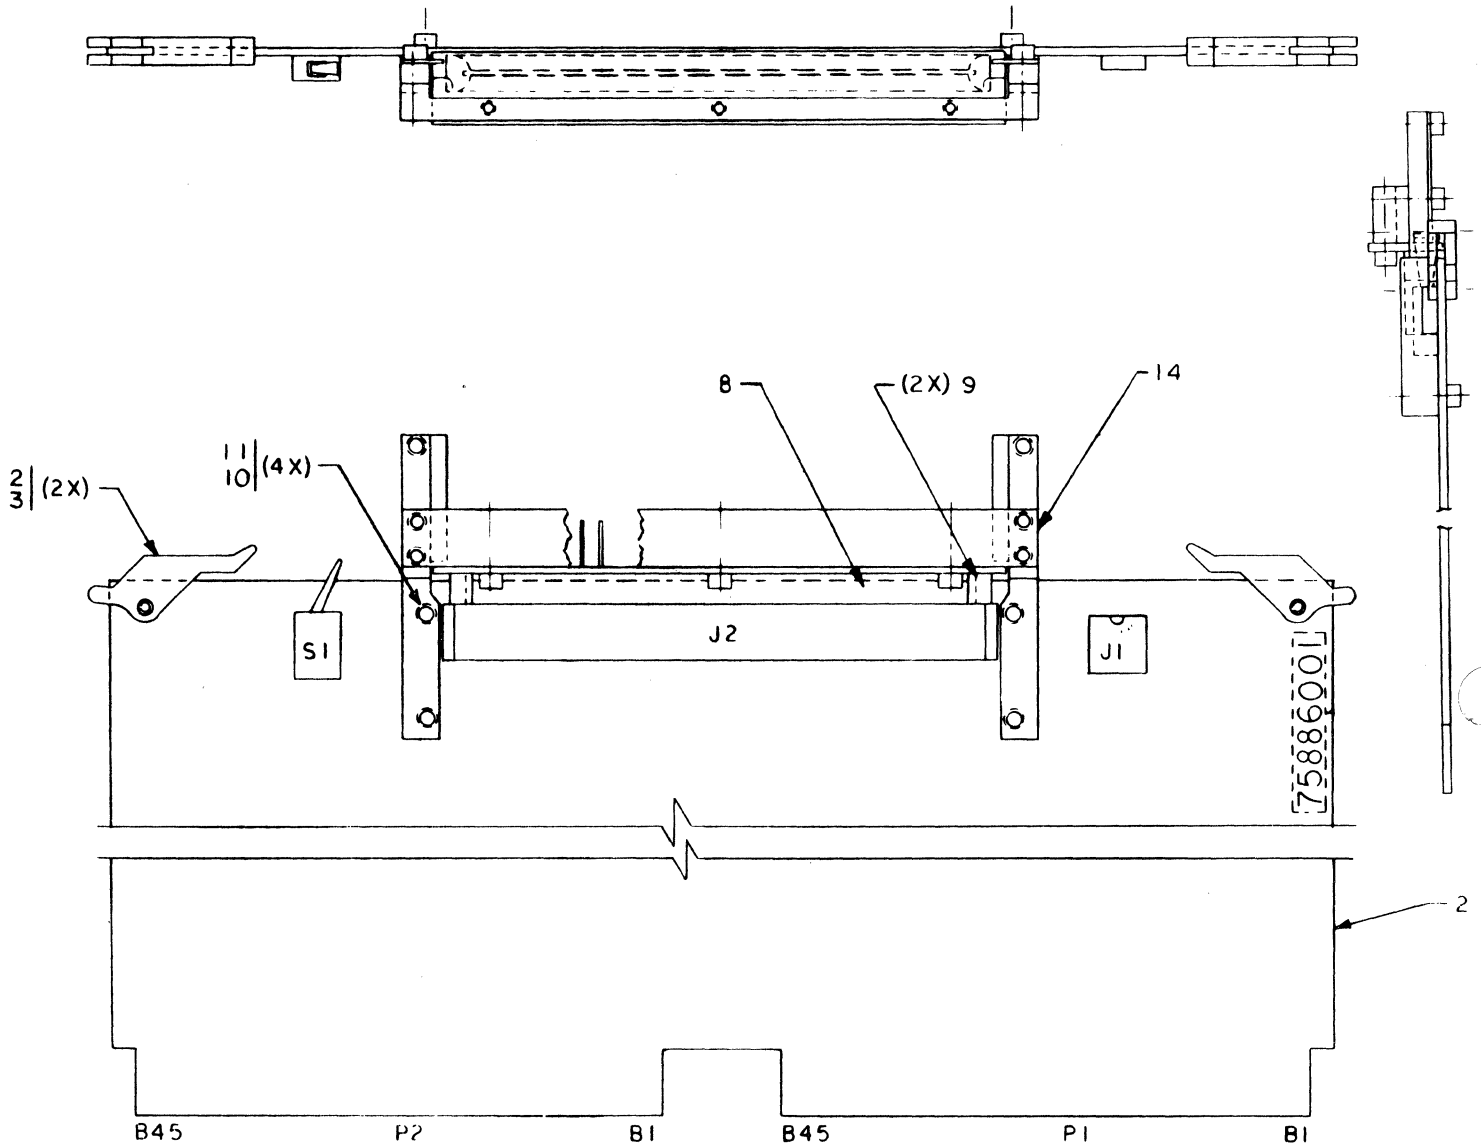



Figure 5-16. Diagnostic/Head Alignment C.B. (Sheet 3 of 4)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75886001-9	PWA Hd Alignment Ext	
2	75836021-7	PWB Hd Alignment Ext	
5	94243400-2	Conn-Card Mtd 62SOCK	
6	77832292-5	Socket, 8 Pin	
7	41347800-9	Switch Toggle	
8	46488401-4	Insulator, Pin	
9	46488500-3	Spacer	
10	10127113-8	Scr Pan HD Mach	
11	10126401-8	Washers Ext Tooth Lo	
12	82311900-3	Injct/Eject-Card	
13	93533118-1	Pin, Rolled	
14	75881526-0	Extender, Short	

Figure 5-16. Diagnostic/Head Alignment C.B. (Sheet 4 of 4)


Figure 5-19. Power Supply Wiring Diagram (50 Hz)
(Sheet 1 of 2)

NOTES: 1. DENOTES 2 WIRES IN 1 LUG.
2. See Figure 6-17 for fuse locations.

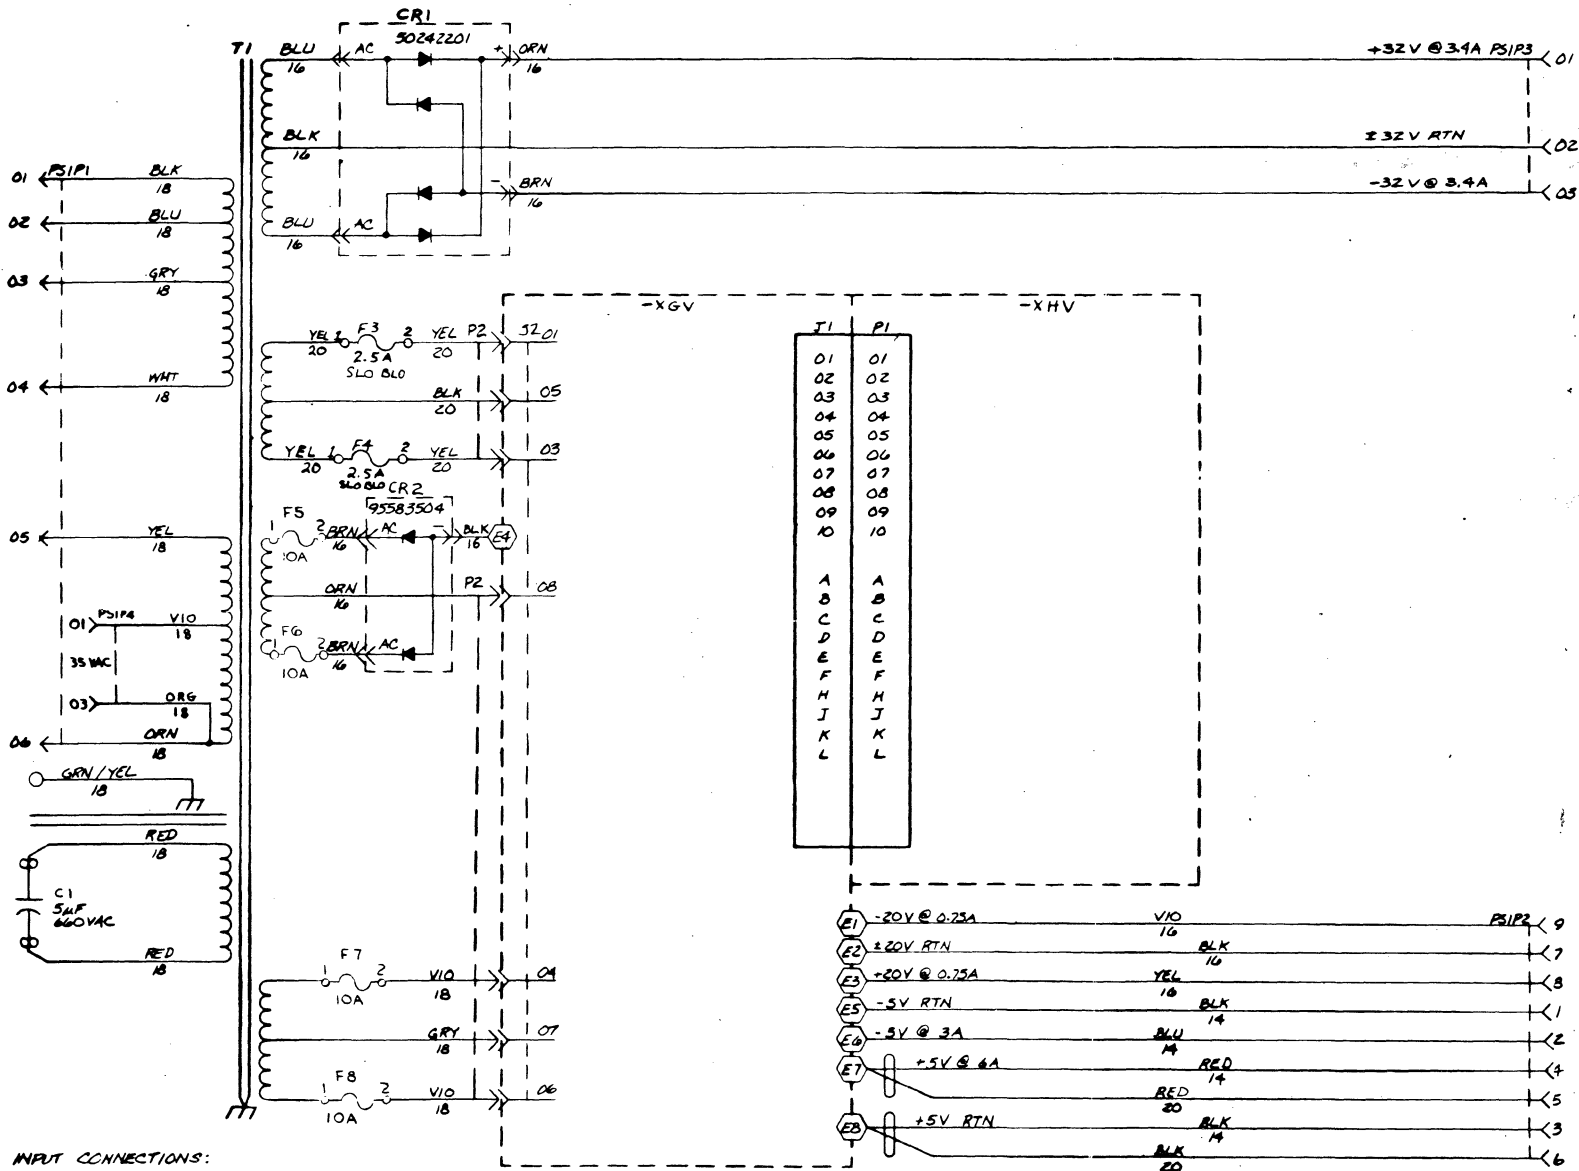

INPUT CONNECTIONS:

- FOR 100V ; CONNECT ORN TO WHT, YEL TO BLK.
APPLY AC TO GRY & WHT.
- FOR 120V ; CONNECT AS ABOVE . APPLY AC TO WHT & BLK.
- FOR 220V ; CONNECT YEL TO WHT. APPLY AC TO GRY & ORN.
- FOR 230V ; CONNECT YEL TO WHT. APPLY AC TO BLU & ORN.
- FOR 240V ; CONNECT YEL TO WHT. APPLY AC TO BLK & ORN.

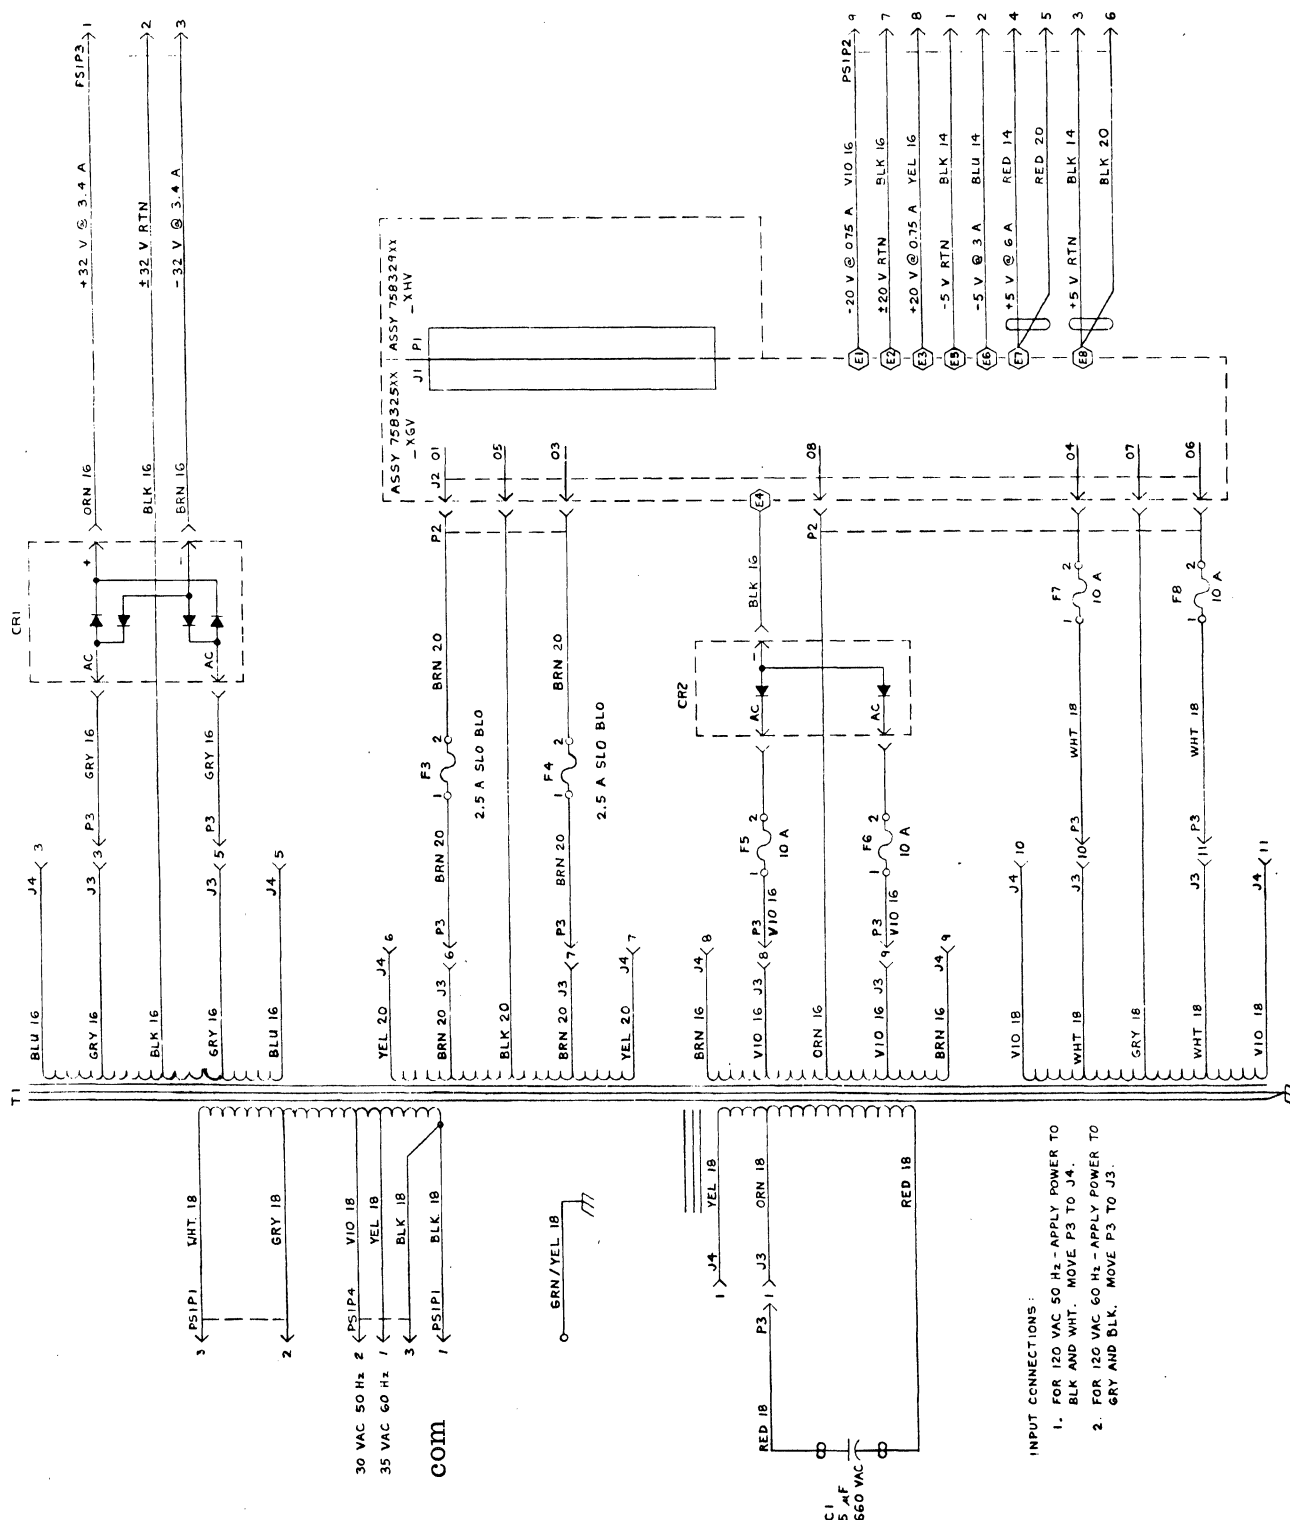

INPUT CONNECTIONS:
 1. FOR 120 VAC 50 Hz - APPLY POWER TO BLK AND WHT. MOVE P3 TO J4.
 2. FOR 120 VAC 60 Hz - APPLY POWER TO GRY AND BLK. MOVE P3 TO J3.


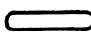
- NOTE: 1.  Denotes 2 wires in one lug.
 2. J3 is used for 60 Hz input.
 J4 is used for 50 Hz input.
 3. See Figure 6-17 for fuse locations.

Figure 5-19. Power Supply Wiring Diagram (50/60 Hz)
 (Sheet 2 of 2)



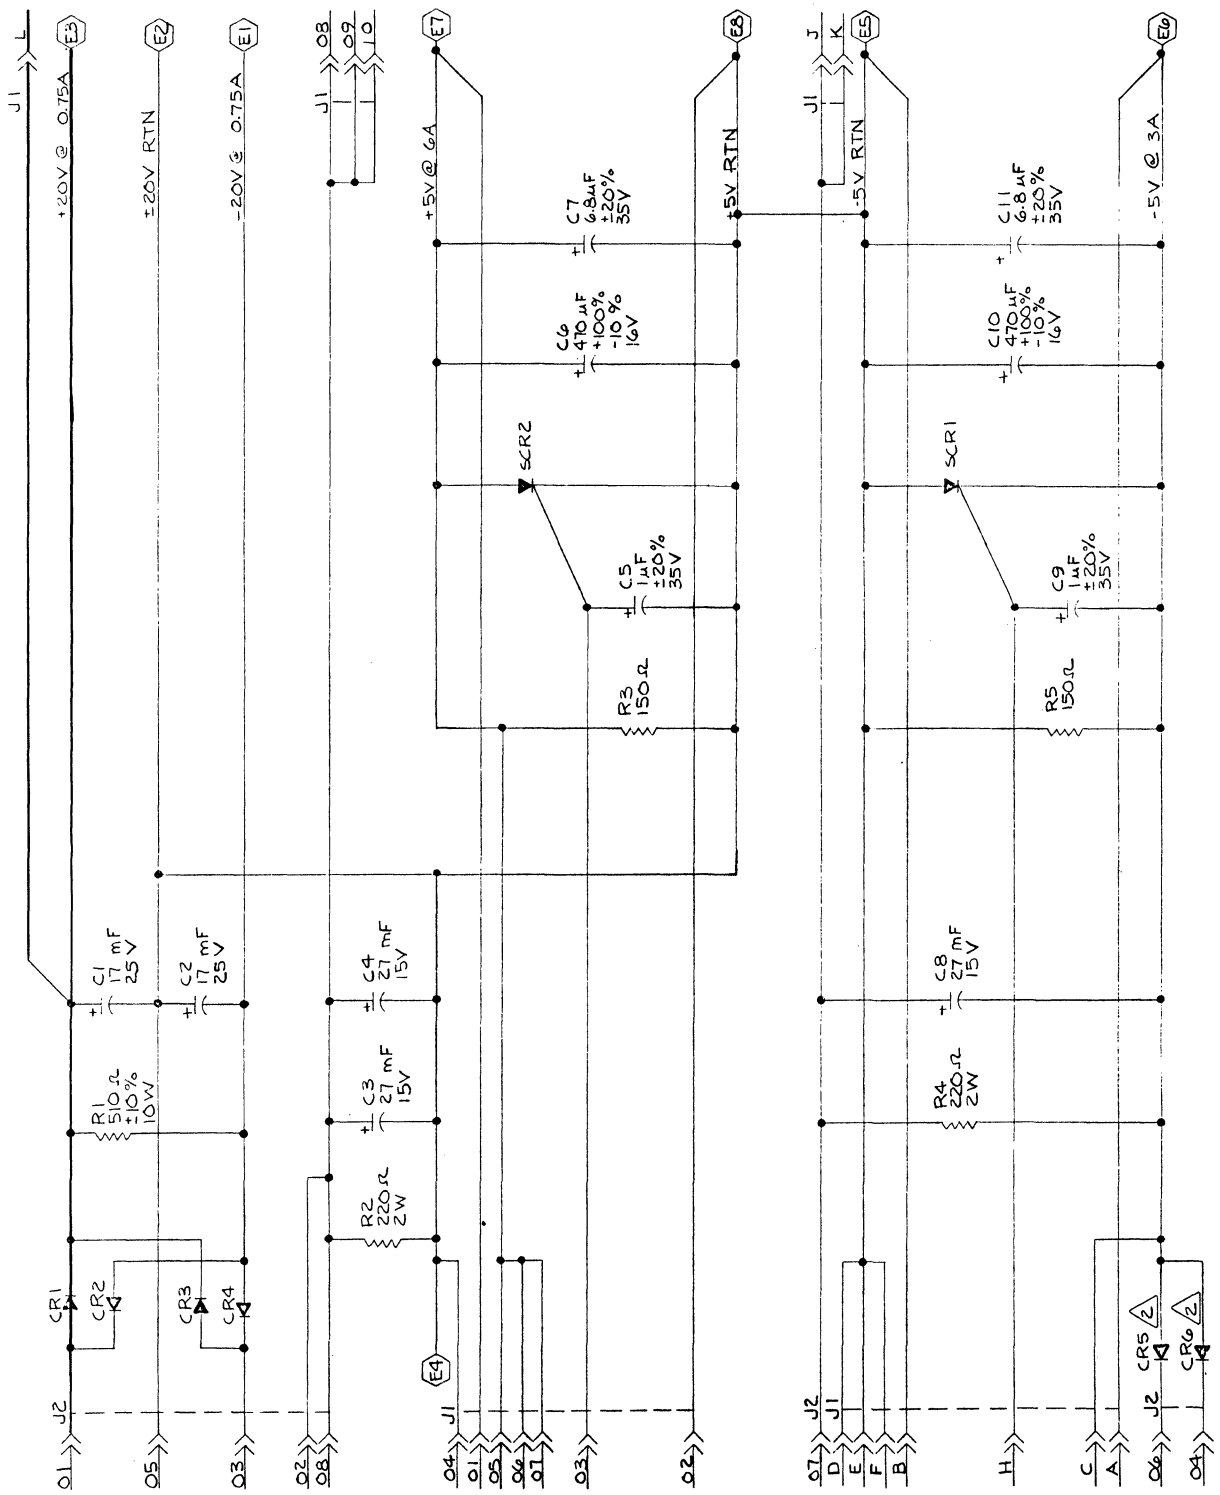

NOTES:


1. Unless otherwise specified:
 All diodes, Silicon, 95588200.
 All SCR's 2N4441, 94825900.
 All  indicates quick-connect terminals.

Figure 5-20. Mother Board (Sheet 1 of 3)



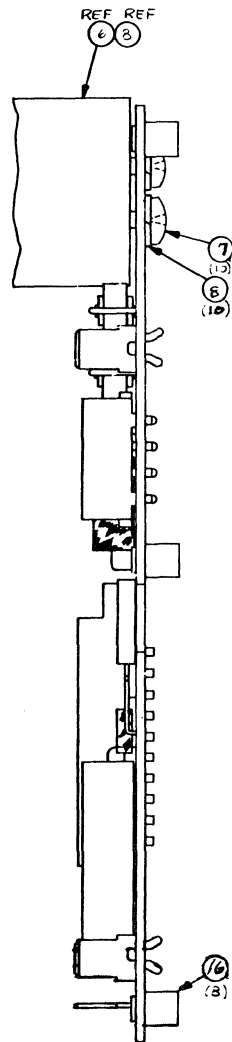


Figure 5-20. Mother Board (Sheet 2 of 3)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75832500	Mother Board	
1	75832400-8	AXGV Board Blank	
2	95595301-3	Connector, P.C. Mount	
3	95594119-0	Resistor, Fixed 10W 510 Ohms	
4	92512571-8	Resistor 2W 220 Ohms	
5	92512809-2	Res 1/2W 150 Ohm	
6	95642426-1	Cap, Electro 30 V DC	
7	92427153-9	Cap, Electro 470 uF 16 V	
8	95661328-5	Cap 18 V DC 27,000 uF	
9	92427039-0	Cap Electro 6.8MF 35V	
10	92427023-4	Cap Electro 1uF 35V	
11	95588200-6	Rect Sil 3 Amp 100 V	
12	95575000-5	Rectifier-Silicon, Hi-Current	
13	94825000-7	Rectifier, Silicon Controlled	
14	95524700-2	Terminal .250 Quick Connect	
15	95882801-4	Pin Header Assy (Double Row)	
16	94363101-0	Standoff-Threaded Swage	
17	93234236-3	Scr, Mach Pan Hd PH-10-32X5/16	
18	95524402-5	Washer, Lock	

Figure 5-20. Mother Board (Sheet 3 of 3)

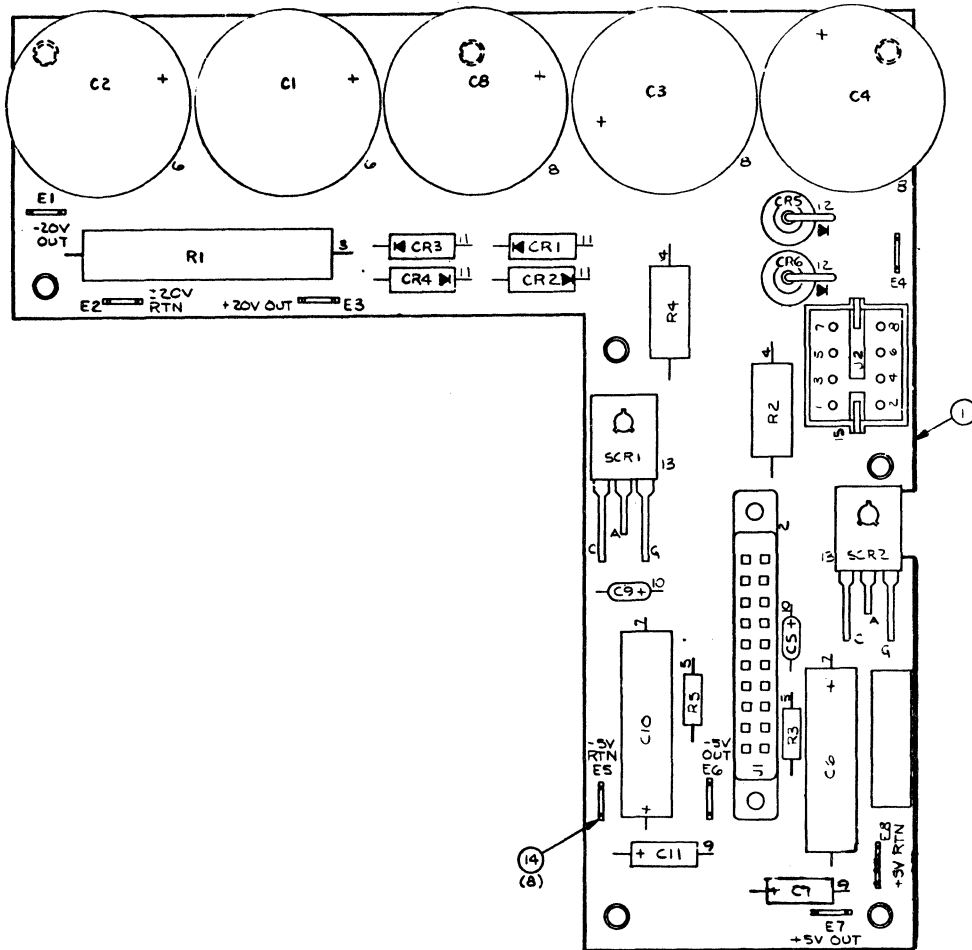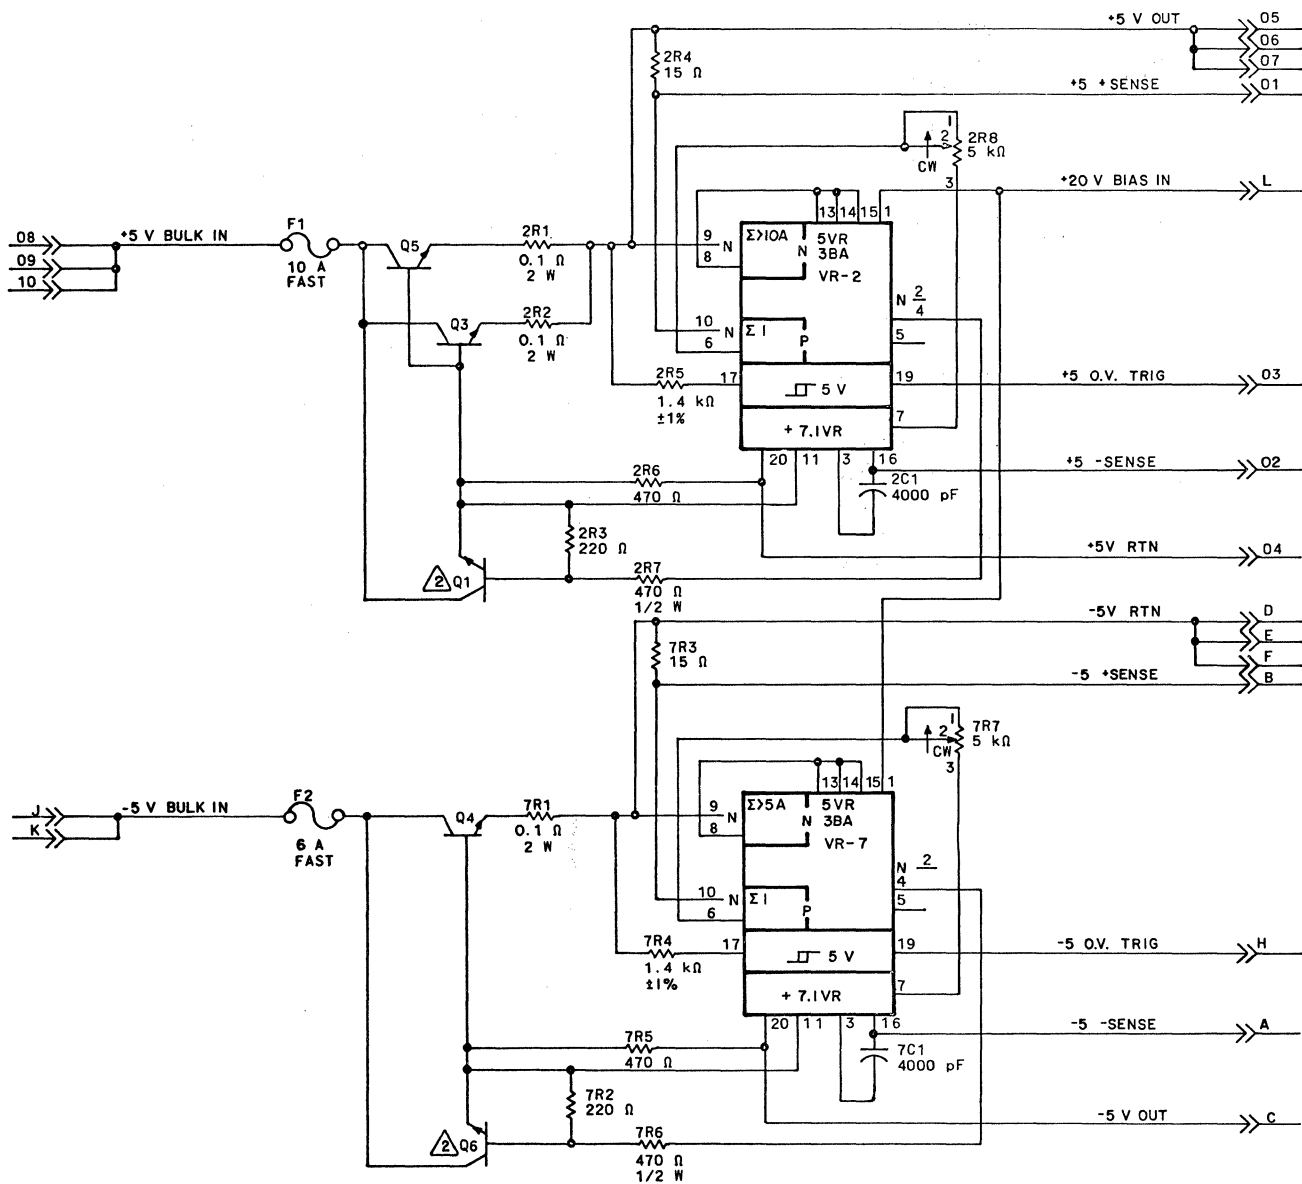

NOTES:

1. All Transistors, 2N3771, 94791000
2. All Potentiometers 1/2W ±10%
3. All Transistors, NPN, 95689901

Figure 5-21. Regulator Board (Sheet 1 of 3)

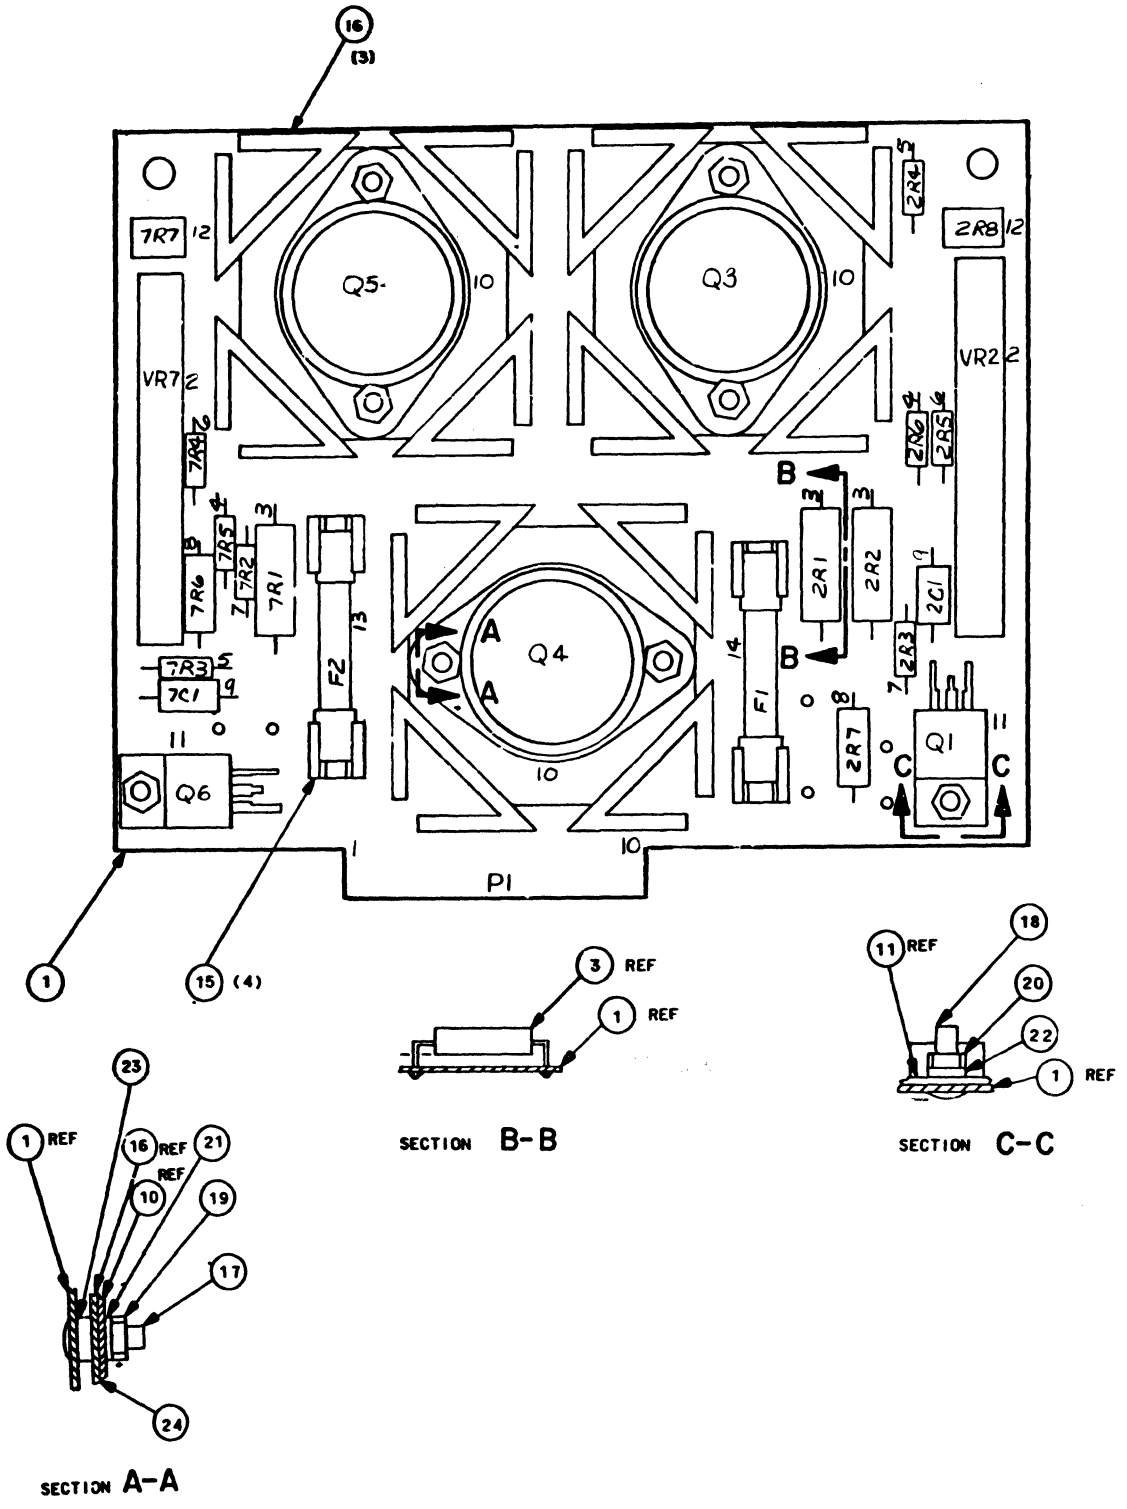


Figure 5-21. Regulator Board (Sheet 2 of 3)

<u>Item No.</u>	<u>Drawing No.</u>	<u>Description</u>	<u>Remarks</u>
	75832900	Regulator Board	
1	75832800-9	AXHV Board Blank	
2	15162000-2	Hybrid, Voltage Regulator	
3	24565788-7	Res-FXD, WW 2W 0.10 Ohms	
4	92512157-6	Resistor 1/4W 470 Ohms	
5	92512242-6	Resistor 1/4W 15 Ohms	
6	94360314-2	Res 1400 Ohms	
7	92512155-0	Resistor 1/4W 220 Ohms	
8	92512817-5	Res 1/2W 470 Ohm	
9	92496369-7	Cap Non-Electro 4000PF 80 V	
10	94791000-6	Tstr Sil NPN 150W 40 V 2N3771	
11	95689901-7	Transistor 7 Amp	
12	94391208-9	Potentiometer, Cermet, Trimmer	
13	93418334-4	Fuse 1/4X1 1/4 Glass 6A	
14	93418239-5	Fuse 1/4X/ 1/4 Glass	
15	95588400-2	Clip, Fuse	
16	94261000-7	Heat-Sink-Transistor	
17	95683511-0	Stud, Press	
18	95683503-7	Stud Press	
19	95510030-0	Nut, Hex Brass 6-32	
20	95510031-8	Nut, Hex Machine Screw 4-40	
21	95524401-7	Washer, Lock	
22	95524407-4	Washer, Lock	
23	95797300-1	Washer, Phenolic	
24	95533600-3	Grease Dielectric 4 oz. Tube	

Figure 5-21. Regulator Board (Sheet 3 of 3)

6.1 INTRODUCTION

This section contains the instructions required to maintain the Cartridge Model Disk Drive (CMD). The information is provided in the form of preventive maintenance and corrective maintenance. All maintenance should be performed by qualified and trained service personnel, using the procedures specified in this section.

In general, before performing any drive adjustments or maintenance procedures, install a scratch pack or its equivalent on the drive and switch the drive to an "Off-Line" mode of operation to prevent system interference.

NOTE

The paragraphs following safety precautions describe, in general terms, the methods used for gaining access to the various servicing areas of the drive. Once these procedures have been described, they will not be repeated in subsequent maintenance instructions. Therefore, maintenance personnel are urged to read through the general procedures at least once to become familiar with these standard procedures.

6.2 SAFETY AND SPECIAL MAINTENANCE PRECAUTIONS

Before proceeding with any maintenance, maintenance personnel should become familiar with the precautions given in paragraphs 6.2.1 and 6.2.2. Failure to practice these precautions may result in equipment damage and/or personal injury.

6.2.1 SAFETY PRECAUTIONS

- Use care when power is applied to the unit. Various voltages are present on the terminal block (TB1) on top of the voice coil magnet.
- Keep hands away from the actuator during seek operations and when reconnecting leads to the voice coil. Emergency retract voltage may be present which could cause sudden reverse motion of the carriage.
- Utilize the carriage locking pin when performing head alignment to prevent personal injury.
- Get help when raising and lowering the deck.

6.2.2 SPECIAL MAINTENANCE PRECAUTIONS

CAUTION

Do not use the circuit breaker to remove AC power from unit until the disk has stopped rotating. The blower must remain ON any time the disk is rotating to prevent the rotating disk from sucking in unfiltered air.

CAUTION

The CMD shall contain a cartridge at all times whether operating or not. This is necessary to insure proper sealing of shroud area from environmental contaminants.

In addition to the above special cautions the following precautions should be taken:

- Use caution while working near heads. If heads are touched, fingerprints can damage them. Clean heads immediately if they are touched.
- Keep pack access door closed unless it must be open for maintenance. This prevents entrance of dust into pack area. Deck should be left in the raised position only while absolutely necessary for maintenance. When leaving the area of the unit lower the deck. Contamination falling into the absolute filter exit could be blown into the disk area when normal operation is restored.
- Keep all watches, disk packs, meters, and other test equipment at least two feet away from the voice coil magnet when the cover of the unit is off.
- Use scratch pack for maintenance procedures, do not use data pack; otherwise customer data may be destroyed.
- Do not use CE alignment disk pack unless specifically directed to do so. These packs contain prerecorded alignment data that can be destroyed if test procedure requires drive to write. This alignment data cannot be generated in the field.
- Do not insert or remove any PWA board without first turning AC Power circuit breaker off.
- If power to spindle motor is lost while heads are loaded and voice coil lead wire is disconnected, immediately manually retract carriage. Otherwise heads will crash when disk speed is insufficient to permit heads to fly.
- If drive fails to retract heads and stop spindle when START/STOP switch is placed in STOP position, disconnect voice coil lead wire connector and manually retract carriage before troubleshooting the malfunction.
- Never load heads manually when spindle is not up to speed. It is recommended that the heads not be loaded manually though they are up to speed.

6.3 MAINTENANCE TOOLS

The special tools required to maintain the disk drive are listed in Table 6-1.

Table 6-1. Maintenance Tools

DESCRIPTION	PART NUMBER
Head Adjusting Tool	75893963
Model 1204-51 CE Disk Cartridge	76204400 ***
PWA Extender Board	75882560
Head Alignment Kit	75899096 **
Jumper Connector*	77612622
Torque Driver Wrench (For Head Alignment)	77611696
Velocity Transducer Tach Rod Guide Tool	75882565

*Used to Jumper E1 to E2 on Servo Coarse PWA to Defeat Servo Amp.

**See Appendix 6A-1 for Kit Parts List.

***This should not be used as a "scratch" disk for use in troubleshooting. A regular M1204 data disk Part no. 76204000 should be used. Use a disk that does not contain valuable data.

6.4 MAINTENANCE MATERIAL

The materials used in the procedures of this section are listed in Table 6-2.

Table 6-2. Maintenance Materials

MATERIAL	SOURCE
Gauze Lint-Free Media Cleaning Solution Tongue Depressors Dust Remover, Super Dry Computer Card	Control Data 12209713 Control Data 95033502 Commercially available Control Data 95047800 No. 5084

6.5 MAINTENANCE PROCEDURES - GENERAL

6.5.1 MAINTENANCE INDEX AND SCHEDULE

The CMD is designed to require minimal preventive maintenance. The preventive maintenance index provided in Table 6-3 is meant to be used only as a general guideline. The preventive maintenance index consists of seven levels based on a calendar period or on hours of operation (whichever comes first).

The corrective maintenance procedures listed in Table 6-3 are included to facilitate the replacement of malfunctioning assemblies. Adjustment procedures are provided to adjust the unit to the published specifications. Maintenance personnel should read the entire procedure prior to performing any of the steps. Steps of these procedures should be performed in sequence.

6.5.2 REMOVAL AND REPLACEMENT OF ASSEMBLIES, PWA BOARDS, AND I/O CABLES

No electrical or electronic component/assembly should be removed and/or replaced when the AC power is applied to the unit. Anytime the AC power is ON, the DC voltages are present on the electronics.

I/O cables should absolutely NOT be removed or replaced when AC power is applied to the unit.

Procedures for removal and replacement for maintenance purposes are given in section 6.7. Table 6-3 lists the removal and replacement procedures found in section 6.7. Figure 6-1 illustrates the locations of the Printed Wiring Assemblies.

Table 6-3. Maintenance Index and Schedule

PREVENTIVE MAINTENANCE	PARA.	SCHEDULE
Pre-Filter Removal and Replacement	6.6.1	4*
Inspect Actuator Assembly (Disks in)	6.6.2	4
Check Power Supply Outputs	6.6.4	4
Absolute Filter Removal and Replacement	6.6.1	6*
Clean Carriage Rails and Bearings (All Disks out)	6.6.3	7
DEFINITION OF SCHEDULE		
Level 0 - Daily, depending on conditions stated		
Level 1 - Weekly or 150 hours (no preventive maintenance scheduled)		
Level 2 - Monthly or 500 hours (no preventive maintenance scheduled)		
Level 3 - Quarterly or 1500 hours		
Level 4 - Semi-annually or 3000 hours (no preventive maintenance scheduled)		
Level 5 - Annually or 6000 hours		
Level 6 - 9,000 hours		
Level 7 - Only when required with corrective maintenance (not p.m.)		
CORRECTIVE MAINTENANCE, REMOVAL AND REPLACEMENT PROCEDURE, ADJUSTMENTS & TESTS PARA.		
Cover Removal and Replacement	6.7.1	
Raising and Lowering Base Deck	6.7.2	
Slide Mounted CMD Unit Removal and Replacement	6.7.3	
Spin Speed Sensor Removal and Replacement	6.7.4	
Static Ground Brush Removal and Replacement	6.7.5	
Removal and Replacement of Cartridge Receiver	6.7.6	
Fixed Disk Module Removal and Replacement	6.7.7	
Procedure for Cleaning Spindle and Fixed Disk Module Receiver Area	6.7.8	
Head Removal and Replacement (Read/Write and Servo)	6.7.9, 6.7.10	
Head Inspection and Cleaning	6.7.11	
Motor Removal and Replacement	6.7.12	
Blower Removal and Replacement	6.7.13	
Spindle Removal and Replacement	6.7.14	
Power Supply Removal and Replacement	6.7.15	
Heads Loaded Switch Replacement	6.7.16	
Actuator Magnet Removal and Replacement	6.7.17	
Carriage Assembly Removal and Replacement	6.7.18	
Carriage Rail Removal and Replacement	6.7.19	
Velocity Transducer Removal and Replacement	6.7.20	
Interlock Switch Adjustments	6.8.3	
Pulse Circuits Tests	6.8.4	
Servo System Adjustments	6.8.5	
Carriage Restraint Block Adjustment	6.8.6	
Fixed Pack Certification	6.8.2	

*Maximum times. Preventive maintenance may be required more frequently depending on dust contamination level of operation area.

6.6 PREVENTIVE MAINTENANCE

6.6.1 PREFILTER AND ABSOLUTE FILTER REMOVAL AND REPLACEMENT

Refer to Figure 6-1 for the following procedure.

1. Remove the front panel ① mounting screws ② which are accessed through the front panel air inlet slot at each side, and at the back of the inlet hole.
2. Remove the front panel.
3. The prefilter ③ is secured at the right and left edges by a bracket ⑤ at each edge. Remove the screw ④ holding each bracket and remove the brackets. Remove the prefilter ③.
4. The prefilter can be cleaned or replaced. To clean the prefilter agitate it in a mild detergent solution. Blow in the reverse direction with a low pressure nozzle until dry.
5. Reinstall the prefilter by reversing steps 1, 2 and 3.
6. Remove top cover and raise deck per procedure given in paragraph 6.7.
7. To remove the absolute filter ⑥ lift it at its rear end enough to allow it to be pulled toward the rear of the unit. This should free the front end from the hole in the manifold. Lift the filter out of the unit. Replace the filter with movements the reverse of those required for removal.
8. Lower the deck, install Front Panel and replace the top cover per the procedure in paragraph 6.7.
9. Restore power to the unit. Allow blower to purge the unit for 10 minutes.
10. Restore drive to normal operating condition.

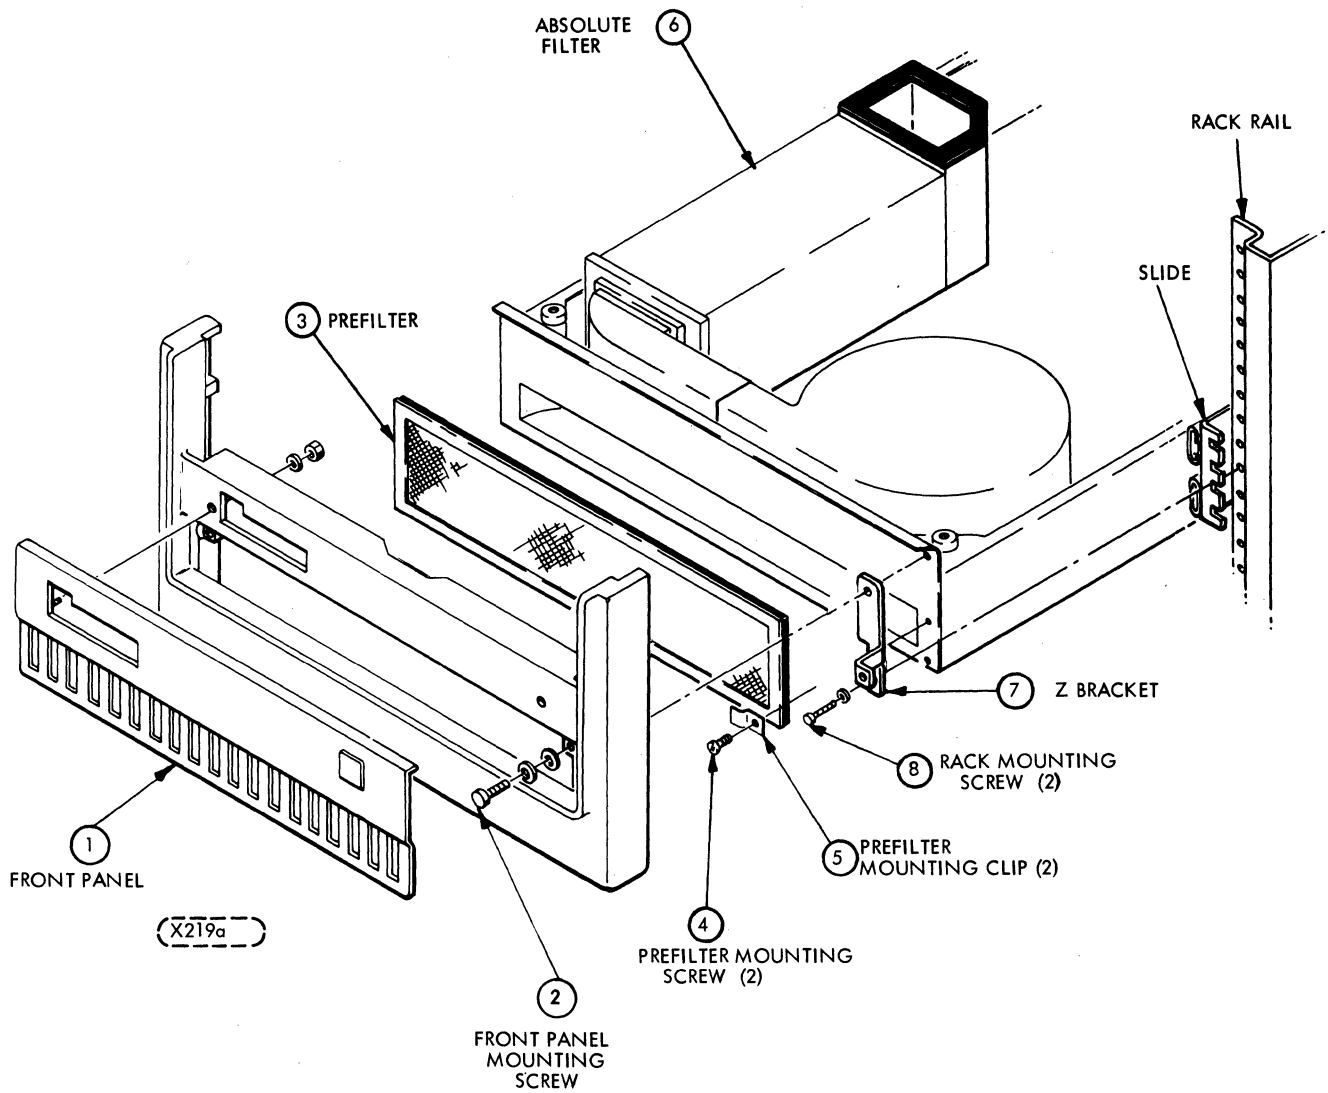


Figure 6-1. Filter Removal and Replacement

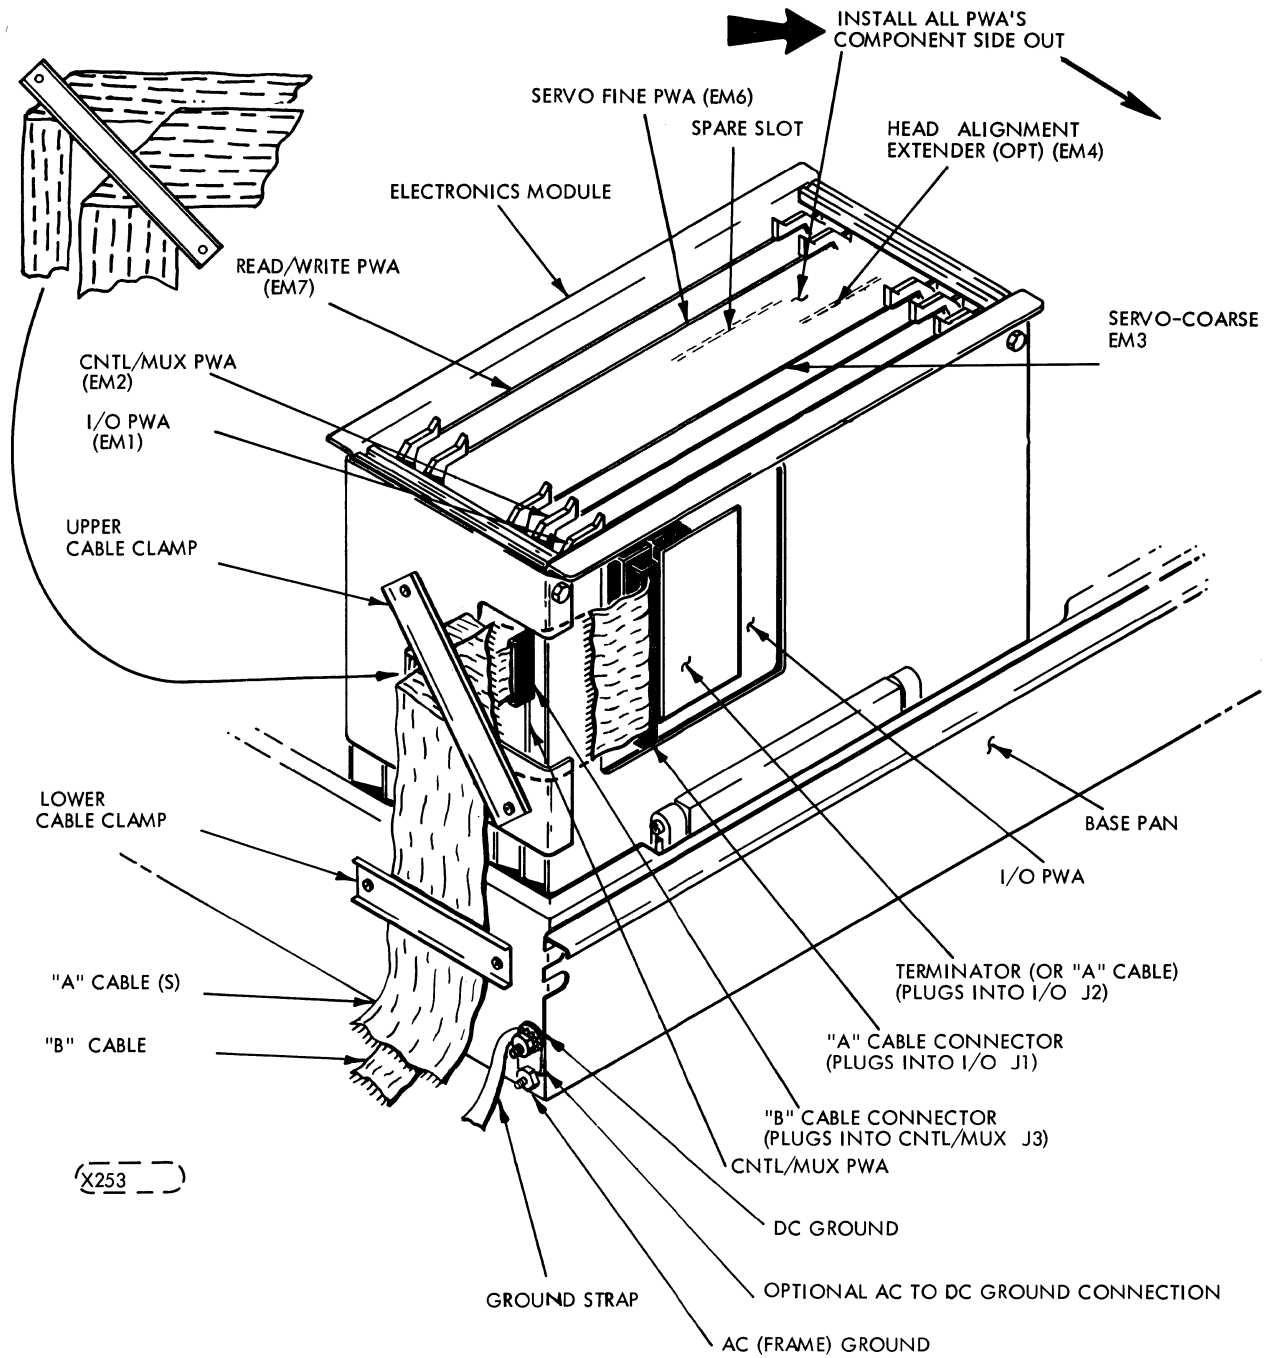


Figure 6-1a. I/O Cable Installation and PWA Names/Locations



6.6.2 ACTUATOR ASSEMBLY INSPECTION AND CLEANING WITH FIXED DISK MODULE STILL IN THE DRIVE

1. Set AC POWER circuit breaker to OFF.
2. Remove top cover per paragraph 6.7.
3. Remove disk cartridge disk module.
4. WITHOUT LOADING THE HEADS inspect entire actuator for presence of dust and other foreign materials. Pay particular attention to the rail surfaces of the carriage and bearing assembly, but do not load heads. The heads may be moved up to 1/2 inch (12 mm) toward the spindle in order to inspect the rail and bearings.
5. Use lint-free gauze dampened with media cleaning solution (not soaked) to remove deposits or attracted particles.
6. Push the carriage back into the fully retracted position.
7. Restore drive to normal operating condition.

6.6.3 INSPECT AND CLEAN CARRIAGE RAILS AND BEARINGS WITH BOTH DISK MODULES REMOVED FROM THE DRIVE

To ensure that the carriage moves freely along the rails, it is essential that the rail and bearing and bearing plate surfaces be kept clean. Any obstruction to free movement of the carriage may cause cylinder address errors. This procedure assumes that both the disk cartridge and the fixed disk module have been removed from the spindle. This cleaning procedure is not to be done with the disks on the spindle. It is recommended that cleaning of the carriage rails and bearings be done whenever the fixed disk module is removed, or whenever the carriage is removed. However, when replacing the carriage the heads will not be on it, so the carriage can be moved back and forth along the rails as described in step 3 below. If there are no heads on the carriage the disk modules need not be removed.

1. Lift the electronics module and swing it out to the side.
2. Carefully and slowly push the coil forward to extend the heads.
3. Once head arms have cleared cams, gently slide carriage and coil assembly back and forth along full length of rails. While moving coil be aware of any possible irregularity (bumps or jerks) in movement. A sudden irregularity indicates dirt on rails or bearings. Do not confuse pressure of flex leads and head leads with a sudden irregularity in motion. Pressure from leads is a smooth change.
4. If a sudden irregularity in motion was noted in previous step proceed to next step. If no sudden irregularity in motion was noted, cleaning is not required. Terminate procedure by returning carriage to heads unloaded position (fully retracted).

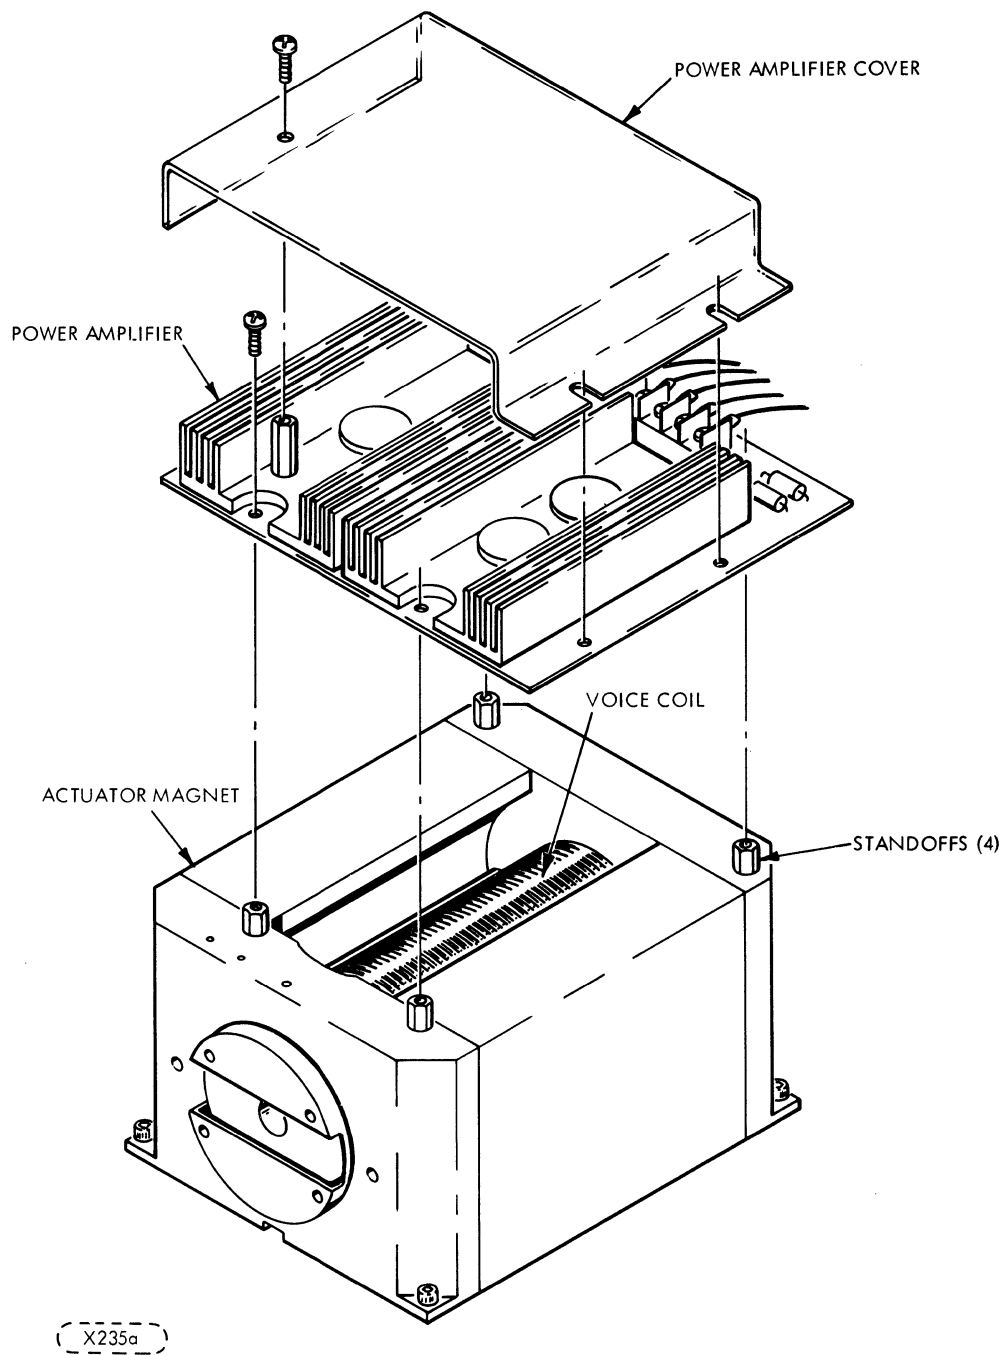


Figure 6-2. Removal of Power Amplifier for Access to Voice Coil

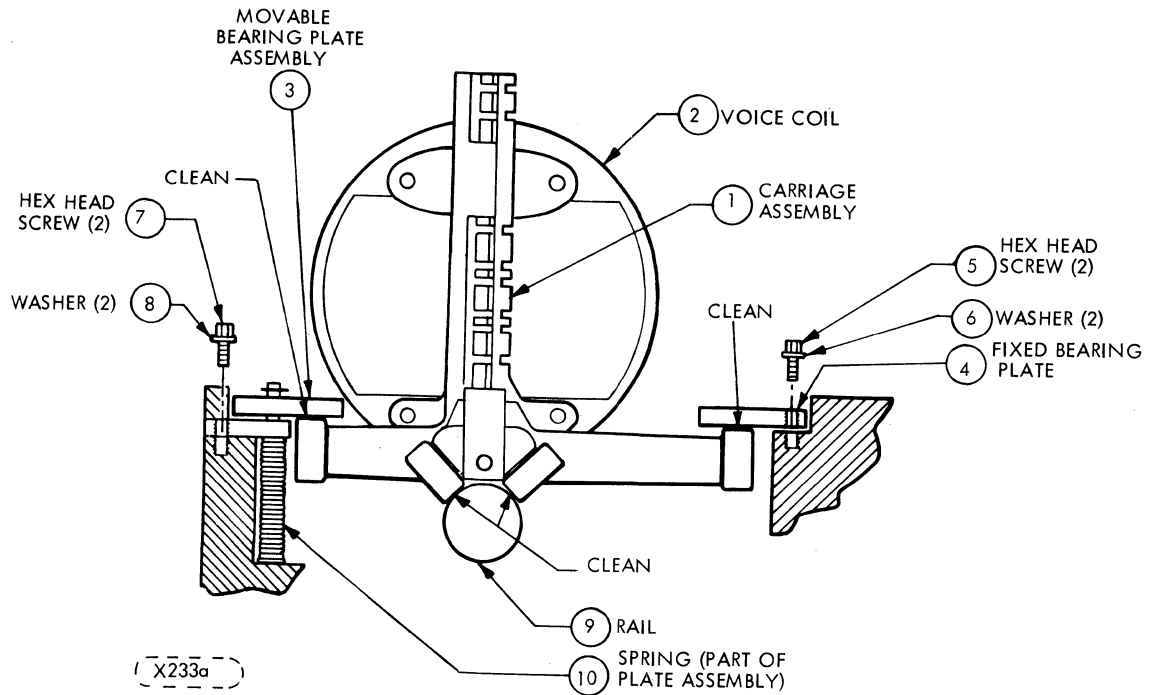


Figure 6-3. Carriage Rails and Bearings

5. Using a cotton swab dampened (not soaked) in media cleaning solution, clean rail, side bearing plate and bearing surfaces. Move carriage back and forth carefully to insure all surfaces are reached. See Figure 6-3.
6. When rail, bearing plate and bearing cleaning is completed, repeat step 3 to ensure that the carriage moves freely without sudden irregularities in its motion. If carriage now moves smoothly throughout its travel, proceed to next step. If sudden irregularities persist, visually inspect rail and bearings using a strong light. Look for deterioration of rail or bearing surfaces. If no problems can be seen, remove the side bearing plates and inspect them for deterioration. Surface deterioration requires replacement of defective part.
7. Return carriage heads to unloaded position (fully retracted).
8. Install the head-arms if they are not on the carriage. See Section 6.7.9 and 6.7.10. Align the heads per Section 6.8.5.4.
9. Replace Electronics Module into unit. Lower deck to normal position if it was raised to aid in the cleaning and inspection procedure.
10. Install new disk module, and disk cartridge if applicable see Section 6.7.6 and 6.7.6.
11. Replace top cover.
12. Restore power to unit.

6.6.4 CHECK POWER SUPPLY OUTPUTS

Power supply outputs can be checked at EM pins called out by wire list in Section 8.

6.7 CORRECTIVE MAINTENANCE

6.7.1 COVER REMOVAL AND REPLACEMENT

Perform the following procedure to remove and replace the cover on the unit.

1. Insure that power is removed from the unit.
2. Release the two fasteners at the rear of the unit which secure the top cover. Lift the cover up and to the rear to remove it from the unit. The front end of the cover is secured only by two short tabs which fit into two slots in the front panel.
3. To replace the cover insert the two tabs at the front of the cover into the two slots in the front panel. Lower the cover into place and fasten the two fasteners at the rear of the unit to secure the cover.

6.7.2 RAISING AND LOWERING THE BASE DECK ASSEMBLY

Perform the following procedure to gain access to items under the base deck assembly (remove the top cover first per 6.7.1). Refer to Figure 6-4, 6-5 and 6-6.

1. Using a 3/16 inch hex driver remove the two screws (A) which secure the deck casting to the shock mounts at the front of the unit. Make sure rear shipping bolt and spacer have been installed so that the weight of the deck does not shear the rear shock mounts (see Figure 3-2).
2. Remove the two screws (A) (Figure 6-5) which secure the Electronics Module and loosen or remove the lower I/O cable clamp by loosening or removing one or both of the screws securing it. These screws may be stored in the top of the plastic hinge block. Lift the Electronics Module and swing it out to the side (Figure 6-5). Be careful not to allow the cables attaching to the module to catch or chaff on anything.
3. Remove the two screws (2) which secure the front panel and remove the front panel (1). Refer to Figure 6-1.
4. Lift the deck assembly until the two support legs are straight, then lower the deck to the point where the two legs support the deck. Help should be obtained in straightening the two legs.
5. To lower the base deck assembly again:

Lift the deck until the support legs can be pushed toward the rear to unlatch them. Hold the deck with both hands and push both support arms to the rear with one of the fingers on each hand. Use both hands to lower the deck into place. The deck is capable of a small amount of sidewise movement so be careful not to allow the pack access door mounting bracket to strike the control panel PWA. Also, be sure that the wiring bundle to the Electronics Module does not get pinched between the deck and the base pan. Be sure motor pulley is clear of cables.

6. Reinstall the two screws which secure the deck to the shock mounts.
7. Restore the Electronics Module to its normal position by swinging it up and lowering it into the base pan. Reinstall the two screws (A) to secure the Electronics Module and secure the I/O cable clamp by tightening the two screws which secure it.
8. Replace the front panel and secure it with the two screws removed in step 3.
9. Replace the top cover per 6.7.1.
10. Remove the rear shipping bolt and spacer which were installed in step 1. Insert the bolt through the hole in the spacer and insert bolt into stowage hole (Figure 3-2).


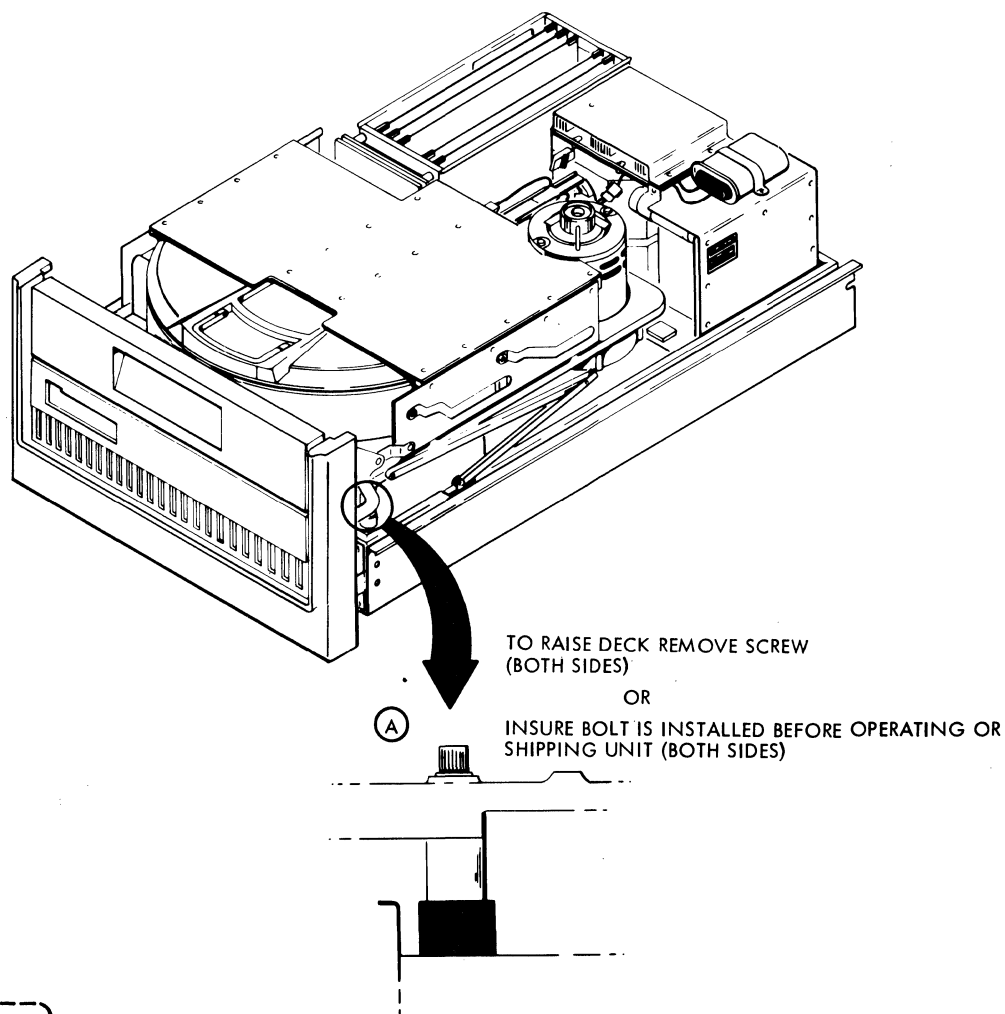


Figure 6-4. Deck Hold Down Bolt Location

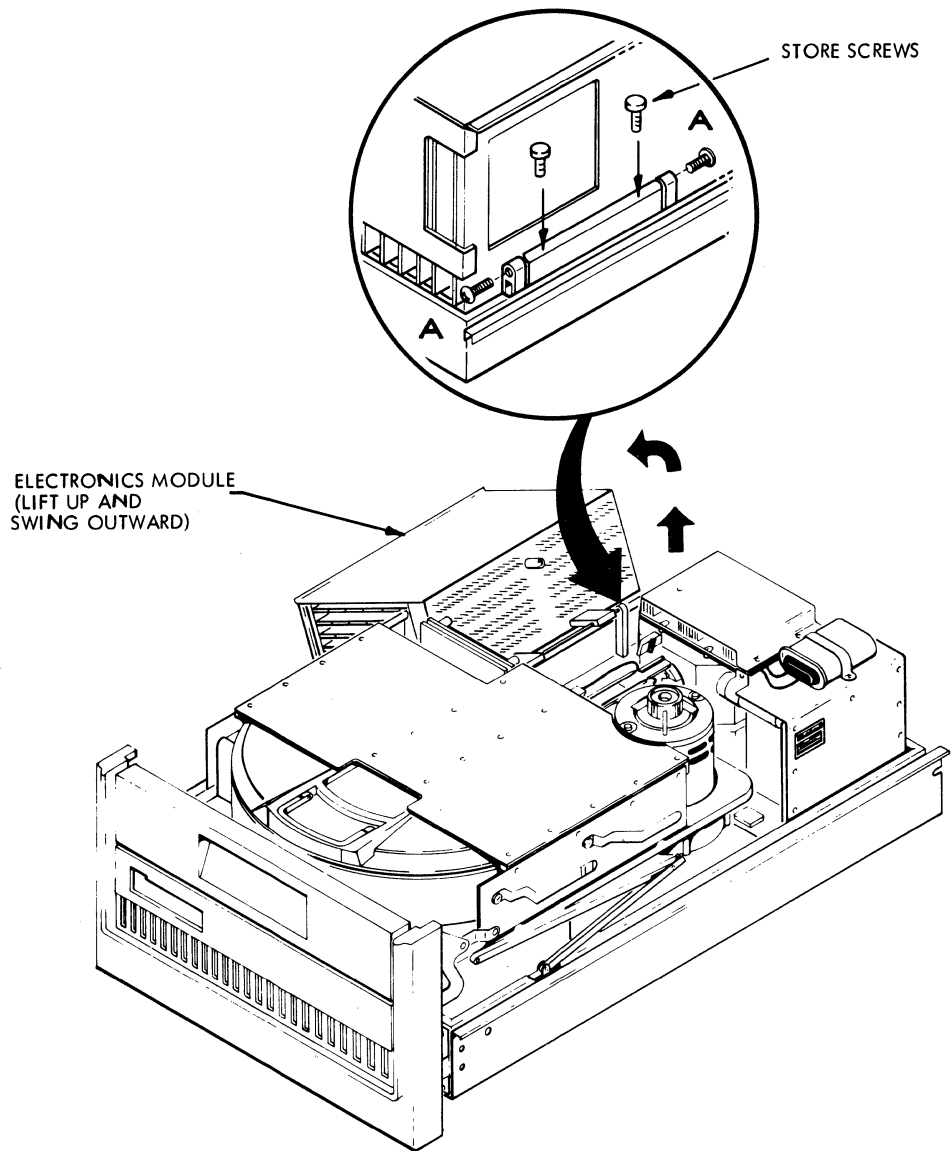


X248

Figure 6-5. Accessing Underside of Electronics Module

(LATER)

Figure 6-6. Deck Raised to Maintenance Position



6.7.3 SLIDE MOUNTED CMD, REMOVAL AND REPLACEMENT

Refer to Figure 6-1 for the following procedure.

1. Remove the front panel ① mounting screws ② which are accessed through the front panel air inlet slot at each side, and at the back of the inlet hole.
2. Remove the front panel.
3. Remove the Rack mounting screw ⑥ from each side of the Z Bracket ⑦ and pull the device out of the rack on its slides.

CAUTION

Because this device may be mounted in various cabinet configurations, care shall be taken when extending the device from the rack to insure that the cabinet and device remain stable and the cabinet does not overturn.

4. Replace by following steps 1 - 3 in reverse order.

6.7.4 SPIN SPEED SENSOR REMOVAL AND REPLACEMENT

Perform the following procedure to remove and replace the Spin Speed Sensor. Refer to Figure 6-7.

1. Press START switch to stop rotation of motor.
2. Set AC circuit breaker to OFF.
3. Remove top cover. Refer to paragraph 6.7.1.
4. Raise base deck to maintenance position. Refer to Paragraph 6.7.2.
5. Using a 9/64 inch Allen screwdriver remove the screw (2) which secures the Spin Speed Sensor Assembly to the spindle housing (9).
6. Disconnect the Spin Speed Sensor cable connector (5) (EMP10) from the Servo Course PWA connector EM3-P1 (8) at the Mother Board. Numerous cable ties will have to be removed to free the Spin Speed Sensor cable.
7. Remove the Spin Speed Sensor (3) from the Spin Speed Sensor Mounting Bracket (1) by removing a small flat head screw (4).
8. Install the new Spin Speed Sensor on the mounting bracket (1). Make sure the alignment pin (6) on the sensor is inserted in the bracket alignment hole (7). Secure with the flat head screw (4) removed in step 7.
9. Connect the connector on the Spin Speed Sensor Cable (5), EMP10) to wire wrap pins A24 through A28 of EM3-P1 on the Mother Board (three other cables are connected to EM3-P1). Be sure to orient the connector (5) so that the unused pin in the connector connects to pin A25 of EM3-P1. Replace cable ties tying cable into cabling system.
10. Replace Spin Speed Sensor assembly on bracket (1).
11. Replace Bracket (1) on Spindle Housing (9).

NOTE

There is no tolerance adjustment necessary as the mounting holes of the sensor and the bracket provide sufficient alignment accuracy for proper operation of the sensor.

12. Replace Static Ground Brush (10) with a new one (optional, but desirable if a new one is available). See Paragraph 6.7.5 for Removal and Replacement procedure.
13. Lower base deck, swing Electronics Module back into position and replace top cover.
14. Restore power to unit.

6.7.5 REMOVAL AND REPLACEMENT OF STATIC GROUND BRUSH

The Static Ground Brush rides on the bottom of the spindle and removes static electricity from the spindle assembly. The brush will eventually wear excessively but this can be avoided if the brush is removed and replaced at an opportune time when the underside of the base deck is being accessed for some other maintenance work. The removal and replacement procedure is as follows.

1. Press the START switch to stop rotation of the motor.
2. Set AC circuit breaker to OFF.
3. Remove top cover. Refer to paragraph 6.7.1.
4. Raise the deck to maintenance position. Refer to paragraph 6.7.2.
5. Refer to Figure 6-7. Remove the two screws (11) which retain the Static Ground Brush (10).
6. Remove and replace the Static Ground Brush.
7. Replace and tighten the two screws (11) which retain the brush to the Spin Speed Sensor bracket (1).
8. Perform steps 1 - 4 in reverse order.



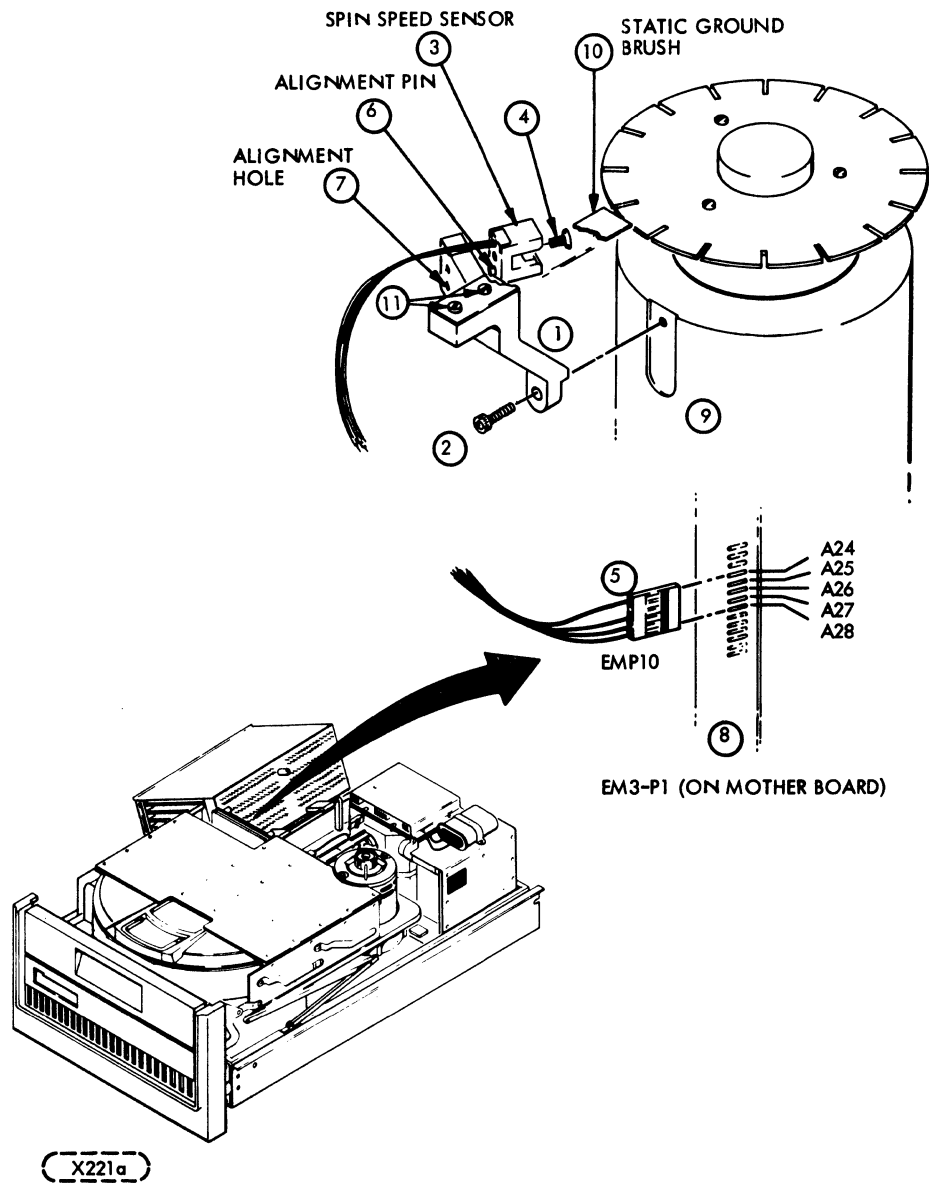


Figure 6-7. Removal and Replacement of Spin Speed Sensor Assembly

6.7.6 REMOVAL AND REPLACEMENT OF CARTRIDGE RECEIVER ASSEMBLY


Refer to Figure 6-8 which illustrates the parts called out in the following description.

6.7.6.1 Removal of Cartridge Receiver Assembly

1. Remove cartridge from the unit per section 2.7.
2. Remove unit cover per section 6.7.1.
3. To detach the front access door from the receiver assembly remove retaining clip (D) using a small screw driver or long nose plier (both sides), and remove the pin (F) and bushing E from both sides. Store the three parts (D), (E), and (F) in a safe place to avoid losing.
4. Loosen the four screws (H) enough to allow the cam plate (C) to clear the bearings (I) on one side.
5. Lift the receiver plate (B) on the side where the cam plate grooves have cleared the bearings and shift it to the other side such that the cam plate on the other side clears the bearings also. Lift the receiver assembly from the unit.
6. Disconnect the spring (R) from the cam lever (Q).
7. Loosen the two set screws (P).
8. Remove cam lever (Q) and nylon washer (S) from shaft assembly (T).
9. Carefully slide the shaft assembly (T) out of the bearing support (U) if shaft assembly is to be replaced. If it is desired to remove the separator plate, it is only necessary to slide the shaft assembly (T) in the shaft support bearing (U) until the shaft assembly clears the support bearing.


6.7.6.2 Replacement of Cartridge Receiver Assembly

1. Carefully slide the shaft assembly (T) into the shaft support bearing (U) and through the hole in the side of the base deck wall.
2. Slide the nylon washer (S) onto the shaft.
3. Slide the cam lever (Q) onto the shaft.
4. With the cam lever resting forward against the stop on the outside of the fixed pack receiver wall, adjust the roller (V) height to 0.0540 ± 0.005 inch (1.37 ± 0.01 mm) from the separator plate surface, with the roller oriented away from the spindle center rather than towards the spindle center.

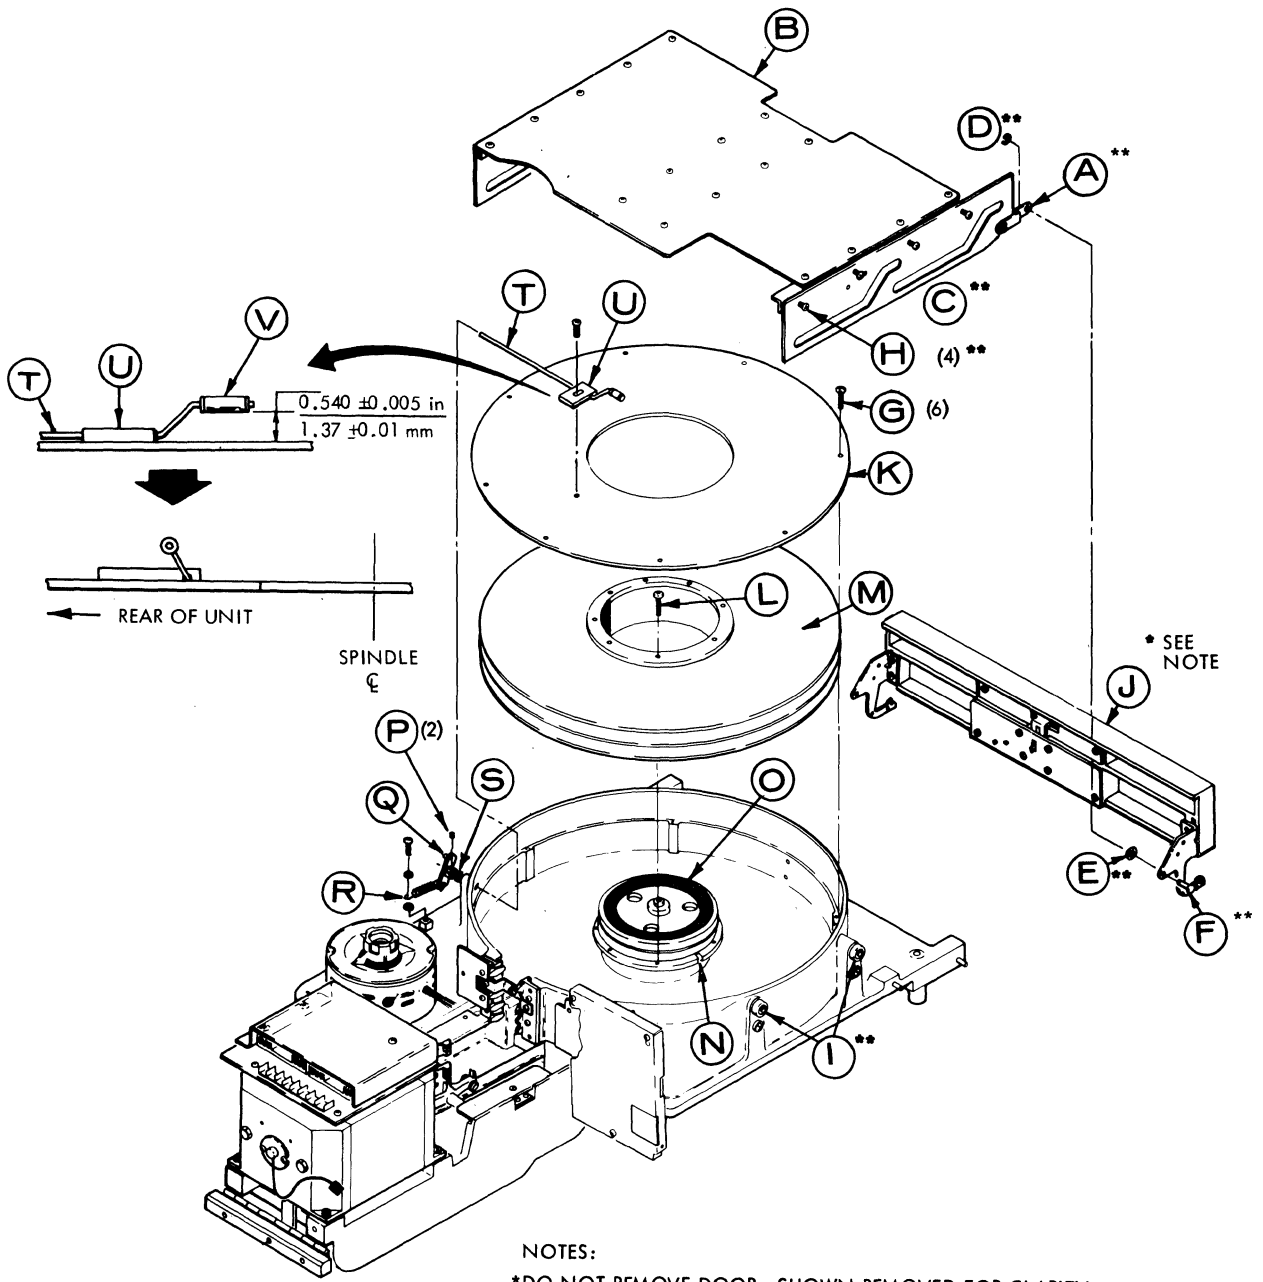

(XX006a)

Figure 6-8. Removal of Receiver Plate Assembly and Fixed Disk Pack

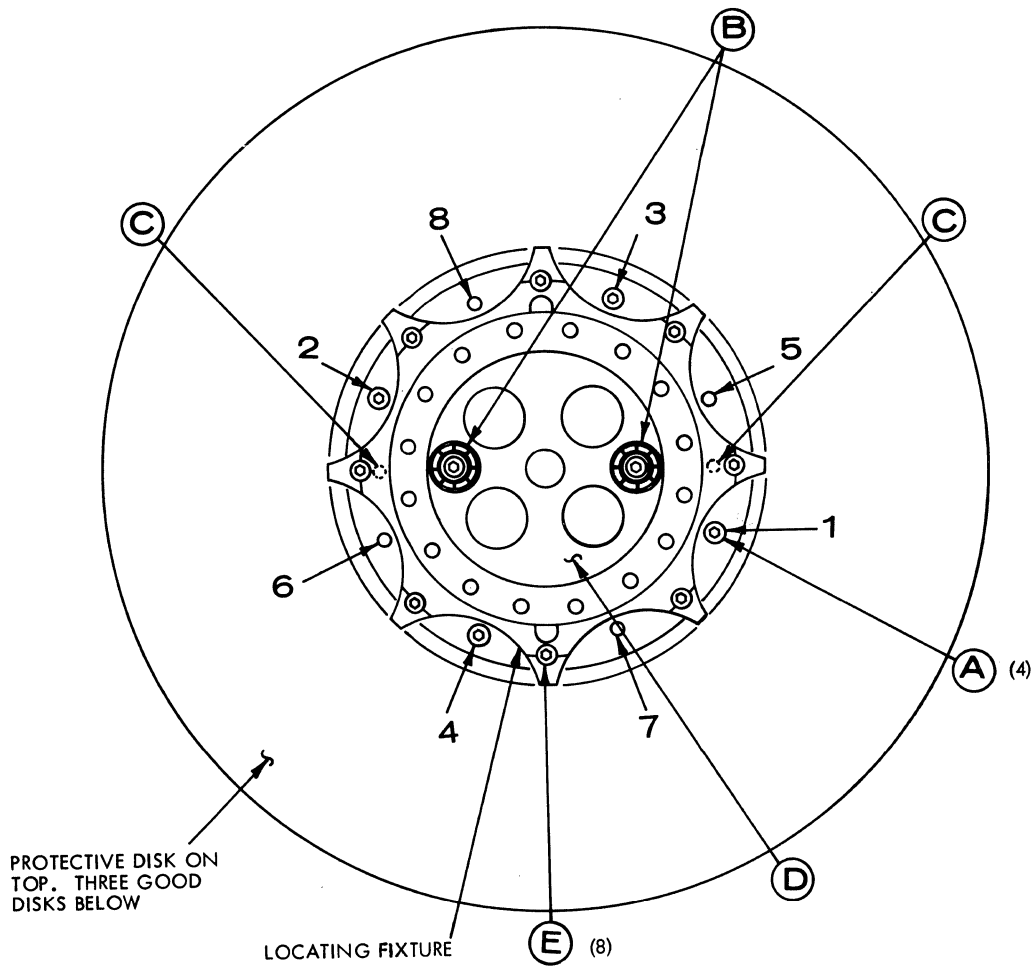

XX004a

Figure 6-9. Fixed Disk Pack Locating Fixture and Protective Disk

5. Tighten the two set screws (P) to 12 ± 1 lbf-in (1.32 ± 0.1 Nm) torque.

NOTE

The stop on the shaft assembly (T) must be against the bearing support (U) and the cam lever (Q) must be against the bushing to eliminate any axial looseness of shaft assembly when the set screws are tightened.

6. Re-attach the spring (R) to the cam lever (Q) .
7. Re-install the receiver assembly in its forward-most position by placing the bearing wheels (I) in their respective cam plate slots at the rear end of the slots. Install the side with the non-loose cam plate first and then the side with the loose cam plate (its four retaining screws were loosened in step 4 of 6.7.6.1).
8. Tighten the four screws (H) which fasten the cam plate to the receiver top plate.
9. On each side re-attach the front access door to the linkage to the cam plate using the pin (F) , the nylon bushing (E) and the clip (D) .
10. Close the cartridge access door and watch the pin on cam lever (Q) . Make sure that the pin on the cam lever goes into the groove in a nylon cam block mounted on the inside of the right (as viewed from the front of the unit) cam plate. Make sure that as the access door is opened roller (V) lifts off the surface of the separator plate (K) and ends up 0.540 ± 0.005 inches (1.37 ± 0.01 mm) off the surface of the separator plate, as shown in Figure 6-8.
11. Replace the top cover per section 6.7.1.
12. Replace the cartridge in the unit.

6.7.7 FIXED DISK MODULE REMOVAL AND REPLACEMENT

The fixed disk module is replaceable in the field only by adequately trained personnel using the proper procedure and in an environment that is as clean as possible. Minimum conditions shall be a typical clean office type area where there is no smoking allowed during the replacement procedure. Better than this is preferable. The fixed disk module must be replaced as an assembly using a special locating fixture which provides the required locating accuracy for installing the pack on the spindle. The special locating fixture that comes with the new pack must be returned for reuse.

NOTE

The special locating fixture that comes attached to the fixed module CANNOT be reused on the same pack at the drive site. If the fixed module servo disks have too much "runout" the fixture CANNOT be reinstalled to properly center the fixed module. Both the fixed module and the special locating fixture must be returned to the factory and a new fixed module and fixture set must be obtained.

The following procedure should be followed meticulously when replacing the fixed disk module. Refer to Figures 6-8 and 6-9 for aid in locating parts mentioned in the procedure.

1. Place the unit in a clean environment as described previously.
2. Remove the cartridge receiver per Section 6.7.6.
3. Remove the 6 screws (G) which retain the separator plate (K).
4. Remove the separator plate (K).
5. Remove the 8 screws (L) which fasten the fixed module (M) to the spindle (P).
6. Lift the fixed module up and out.
7. Clean and inspect the spindle and fixed disk module area as detailed in section 6.7.8. If there has been mechanical damage to the removed fixed module or if the carriage rail and bearings are dirty, clean and inspect per section 6.6.3.
8. Lift the Velcro fasteners which secure the fixed module shipping container lid to the container base and remove the lid.

NOTE

Extreme care must be taken in handling of the fixed module to insure that it is not damaged or contaminated by body contact or dirty environment. If fixed module is dropped it must not be used but must be returned.

9. Refer to Figure 6-9. To remove the Fixed disk module and locating fixture assembly from the shipping container, remove the four screws located at (A) and lift the fixture/disk module assembly out using the fixture body as a hand hold.
10. Carefully inspect the bottom of the disk module for contamination on the mounting surface. Wipe clean with a lint free clean cloth.

11. Note the orientation of the plastic pins (C) on the bottom of the fixed module. Place the fixture/fixed pack assembly onto the spindle insuring that the plastic pins fit into the slots (N) in Figure 6-8) on the unit spindle hub. This alignment insures that the holes in the spindle and captivated screws in the fixture at (B) (Figure 6-9) are also aligned. The fixed module hub shall fit firmly against the spindle hub.
12. Start the two screws (B) by hand making certain that they engage correctly with the threads of the corresponding hole in the spindle. Advance the two screws alternately to insure that the plate (D) is kept level relative to locating fixture. Tighten the screws and torque them to 4 lbf-in (0.45 Nm). Rotate the fixture and fixed module and inspect for any large observable radial or axial runout on the fixed module. Close visual inspection of the fixed disks may show a radial runout of 0.01 inches* or less which is within normal limits. Axial runout which is the vertical disk displacement or wobble may also be observable but this should be less than 0.005 inches*. The top disk which is a protective disk should be ignored in this visual inspection.
13. If any excessive runout is observed loosen the two screws (B) and re-seat the locating fixture/fixed module assembly on the spindle. When the ball on the bottom of the fixed pack properly seats in the counter-sunk hole in the top of the spindle shaft the radial and axial runout shall be within the limits defined in item 12 above.
14. Install the 8 screws (L) (Figure 6-8) which were removed in step 8. Install these in the holes marked 1 through 8 in Figure 6-9. Tighten these 8 screws in numerical order and in the torque steps specified. Torque the 8 screws in numerical order using 4 lbf-in (0.45 Nm). Repeat the sequence using 7 lbf-in (0.8 Nm) and then again using 10 lbf-in (1.13 Nm).
15. The fixed module is now located to the unit spindle. Rotate the fixed module to insure that there are no large observable radial or axial runouts on the fixed module. If there are, remove the 8 screws and the two captive screws and start over from step 12.
16. When the fixed module is located on the spindle, the locating fixture must be removed from the fixed module and spindle.
17. Disengage the two captive screws (B) (Figure 6-9).
18. Remove the 8 screws (E) which fasten the fixture to the fixed module (Figure 6-9).
19. The fixture is now free and can be lifted up and out of the unit. One disk which is a protective disk comes off with the fixture. The remaining disk which is now exposed is a good disk and care should be exercised to not drop anything on this top disk. Do not get any moisture on or touch any of the disks in the fixed module.

*These values cannot be actually measured but are given as a guide to show the order of magnitude of the acceptable runout. Except in very rare instances, unacceptable runout will be so great that it will be easy to discern when compared with the 0.01 and 0.005 values given here.

20. Replace the separator plate (K) (Figure 6-8) back into the unit as soon as possible. Replace and tighten the 6 screws (G) that secure the separator plate.
21. Install the locating fixture to the removed fixed module if available using the 8 screws at (E) (Figure 6-9).
22. Install the fixture and removed fixed module into the container and secure using the 4 screws at (A) (Figure 6-9).
23. If the fixed module is not to be returned with the locating fixture, fasten the fixture plate to the shipping container at two (E) hole locations using two screws supplied in the container.
24. Replace the cover on the container and place back into the shipping box.
25. Replace the receiver plate assembly (B), Figure 6-8) per section 6.7.6.2. However, do not replace the top cover as called out in that section.
26. Perform the Initial Head Alignment Procedure given in section 6.8.5.4.
27. Replace the top cover per section 6.7.1

6.7.8 PROCEDURE FOR CLEANING SPINDLE AND FIXED DISK MODULE AREA

In order to prevent head to disk contact, it is imperative that the disk module area be cleaned. The following procedure assumes that the fixed disk module has been removed from the device.

1. Carefully vacuum entire fixed disk module shroud area and parts removed from the module area. This does not include the fixed module itself.
2. Using a wad of adhesive type tape, remove any particles not removed during vacuuming. This can also be used to remove particles which have attached themselves to the spindle magnet.
3. Using a clean piece of lint free cloth dampened in media cleaning solution, carefully clean the spindle, giving particular attention to the reference surfaces to which the fixed disk module and cartridge are mounted. Clean the receiver plate (Item (K) Figure 6-8) and wipe all surfaces of the shroud clean of dirt and smudges.

6.7.9 READ/WRITE HEAD REMOVAL AND REPLACEMENT

Head/Arm replacement criteria are given in paragraph 6.7.9c.

Perform the following procedure to remove and replace the heads. Refer to Figure 6-10.

1. Press START switch to stop drive motor.
2. Set AC circuit breaker to OFF. Remove power cord from power source.
3. Remove the disk pack. Refer to paragraph 2.8.
4. Remove the cover from the unit. Refer to paragraph 6.7.1.
5. Remove the head connector retainer (D) in Figure 6-11.
6. Unplug the head cable (2) of the head to be removed.
7. Remove the screw (3) (Figure 6-10) which secures the head to be removed using a 3/32 inch Ball Allen screwdriver. Hold the head arm with one hand while removing the screw because the arm easily slips out of its mounting grooves and it could fall and damage the head. Do not drop the screw or flat washer as it may be drawn into the magnet assembly area.
8. While holding the head with the head cam arm (9) supported by the cam tower (10), very carefully move it slightly clockwise and forward into the disk area until the head/arm is clear of the carriage (1) and the cable (2) clears the carriage. Move the head/arm (4) to the spindle motor side of the carriage and then to the rear, up and out of the unit.

CAUTION

Do not allow heads to load against themselves. Gimbal springs are extremely delicate and easily damaged. Nothing should contact any head. If head pad is touched, perform head cleaning procedure (finger prints can cause head crashes).



9. Install replacement head/arm as follows:
 - a. From the spindle motor side, slide the head connector and cable (2) through the vacant head/arm slot. Be careful not to let the connector slide across the head of an adjacent head/arm.
 - b. With the head cam arm (9) supported by the cam tower (10), move the head/arm toward the carriage until the head/arm is seated in the two notches (8) in the carriage (1) (see Figure 6-10).
 - c. Using a 3/32 inch Ball Allen screwdriver install the screw (3) which secures the head/arm to the carriage. Retain a hold on the head/arm until the screw is in far enough to prevent the head/arm from coming out of the notches (8) in the carriage. Do not completely tighten the screw at this point in the installation. Torque to 4 1/2 lbf-in (0.40 to 0.51 Nm).
 - d. Connect the head connector to the Read/Write Preamp Board. Make sure the connector is oriented so that the hole pattern matches the pin pattern, otherwise pins could be bent when an attempt is made to force the connector onto the pins.
10. Replace the head connector retainer (D in Figure 6-11).
11. Connect input power cable to external power source.
12. Set AC power circuit breaker to ON.
13. Perform Read/Write Head/Arm Alignment Check and Adjustment procedure (para. 6.8.5.4).
14. When alignment is complete torque the head securing screws per para 6.8.5.4.
15. Replace the Electronics Module in the unit with care.
16. Replace unit top cover.
17. Restore power to the unit.

6.7.10 SERVO HEAD/ARM REMOVAL AND REPLACEMENT

1. Press START switch to stop drive motor.
2. Set the AC POWER circuit breaker to OFF.
3. Disconnect the input power cable from external power source.
4. Open the pack access door. The pack need not be removed, however.
5. Remove the top cover.
6. Lift the Electronics Module and swing it to the side of the unit.
7. Raise the base deck to the maintenance position.
8. Remove the two screws (B) which secure the cover to the Servo Preamp Assembly (Figure 6-11).
9. Remove the cover to the Servo Preamp Assembly. Slide toward carriage and then up.
10. Remove the head cable from the cable clamp (C).
11. Remove the head connector retainer (E).
12. Disconnect the Servo Head/Arm Cable connectors from the tie point plate (A) and the Servo Preamp PWA.
13. Remove the Servo Head/Arm as described in steps 7 through 9c of paragraph 6.7.9.
14. Connect the head connectors to the Servo Preamp PWA and the tie point plate. Make sure each connector is oriented such that the hole pattern matches pin pattern, otherwise pins could be bent when an attempt is made to force the connector onto the pins.
15. Replace the Servo Preamp cover. Replace two screws (B). Insert head cables into cable clamps (C).
16. Replace the head connector retainer (E).
17. Close the pack access door.
18. Connect input power cable to power source.
19. Set AC circuit breaker to ON.
20. Perform Servo Head Alignment Check and Adjustment Procedure (paragraph 6.8.5.4).
21. When alignment is complete torque the head securing screws per para. 6.8.5.4.
22. Replace the Electronics Module in the unit with care.
23. Replace the top cover.
24. Restore power to the unit.

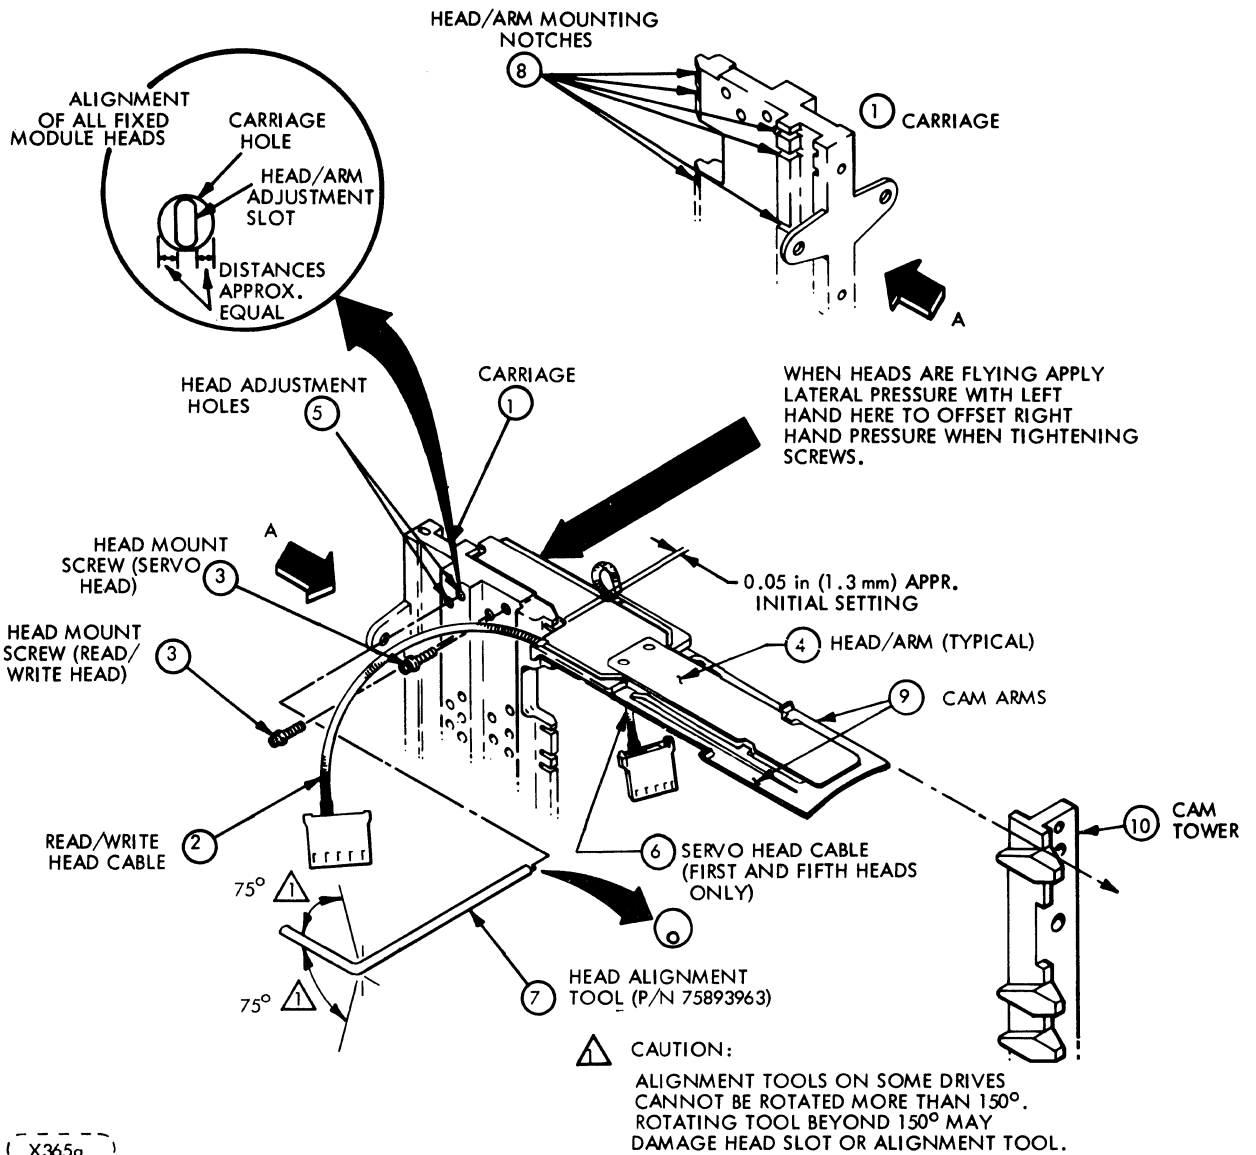


Figure 6-10. Head/Arm Removal and Replacement and Alignment

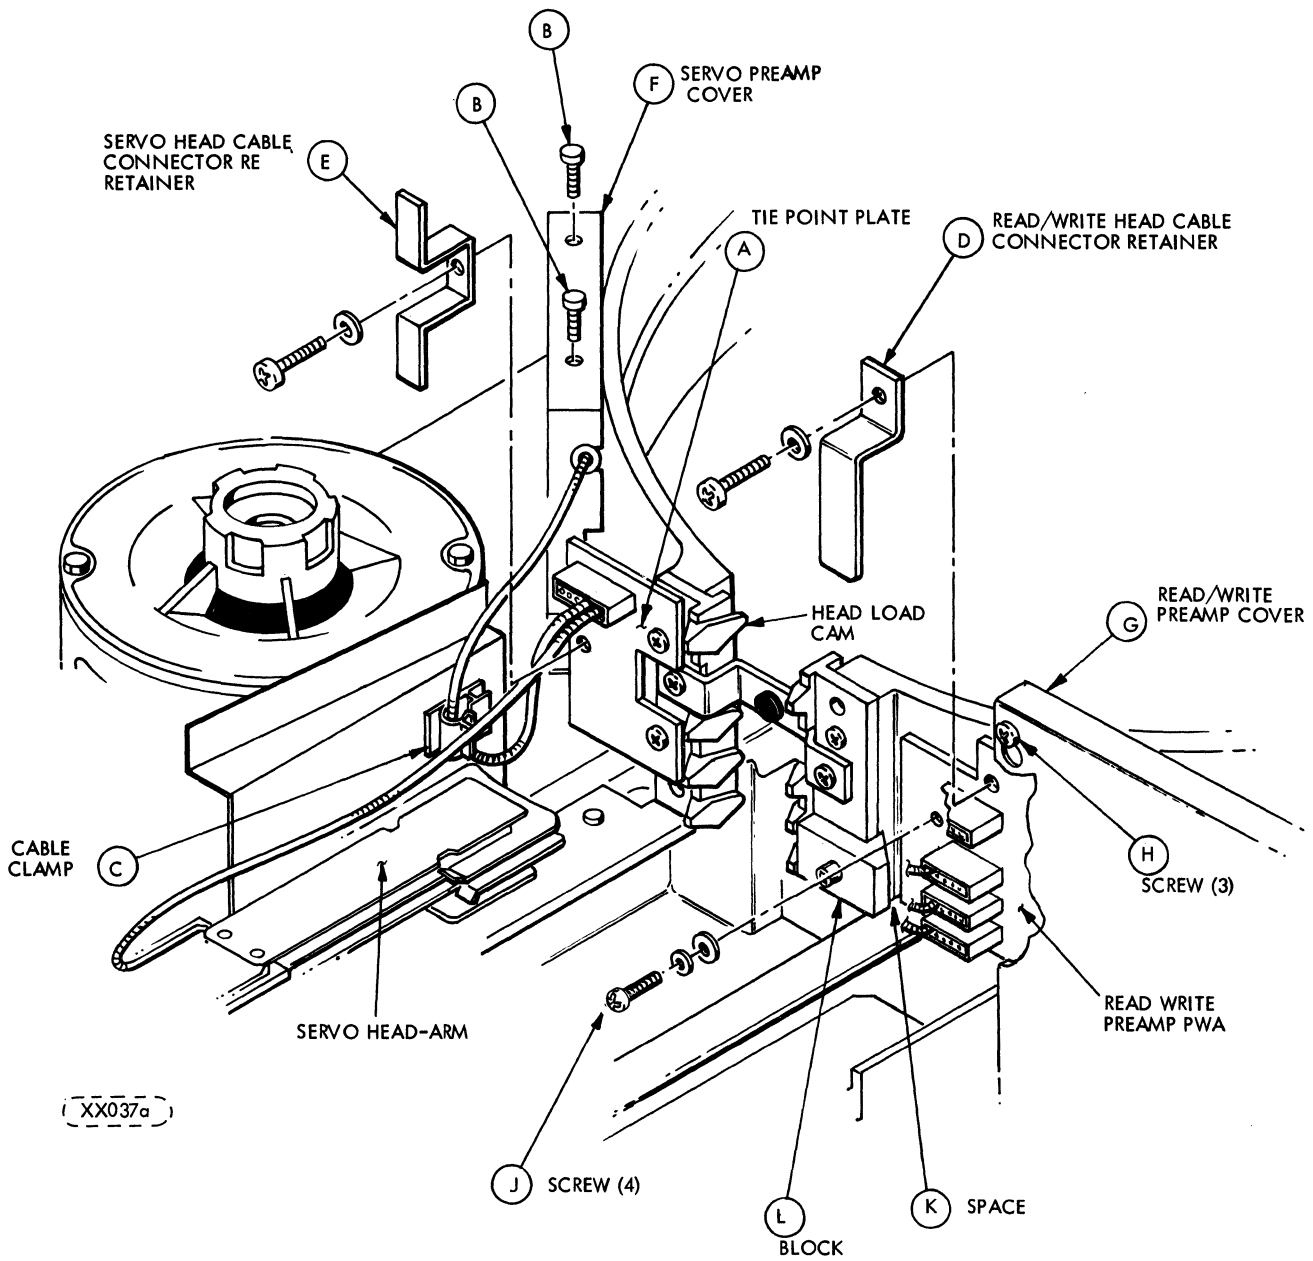


Figure 6-11. Servo Head/Arm Assembly

6.7.11 HEAD INSPECTION AND CLEANING

General

The drive has a positive pressure filtration system that eliminates the need for periodic inspection and cleaning of heads. The heads should be inspected for the following reasons only:

1. A problem is traced to a specific head or heads; for example, excessive data errors.
2. Head to disk contact is suspected. This may be indicated by an audible ping, scratching noise, or a burning odor when the heads are over the disk area.
3. Concentric scratches are observed on the disk surfaces.
4. Contamination of pack is suspected (possibly due to improper storage of the pack).
5. The pack has been physically damaged (possibly due to dropping or bumping).

CAUTION

Do not attempt to operate the media on another drive until full assurance is made that no damage or contamination has occurred to the media.

Do not attempt to operate the drive with another media until full assurance is made that no damage or contamination has occurred to the drive heads or to the shroud area.

a. Head Inspection

CAUTION

Do not smoke when inspecting or cleaning heads. Use extreme care not to damage the head.

Do not touch the head pad or gimbal spring with fingers or tools.

If head must be laid down, do not allow the head pad to gimbal spring to touch anything.

Prior to removing head for inspection, use a bright directional light to inspect pack while it is mounted on drive spindle. If pack shows signs of concentric scratches or any surface damage in data zone, reject pack. (Small tick marks in the head loading zone are not cause for pack rejection.

Remove suspected head as described in the Head Removal and Replacement procedure. Refer to Figure 6-12 observe the head/arm, and perform the suggested remedy as follows:



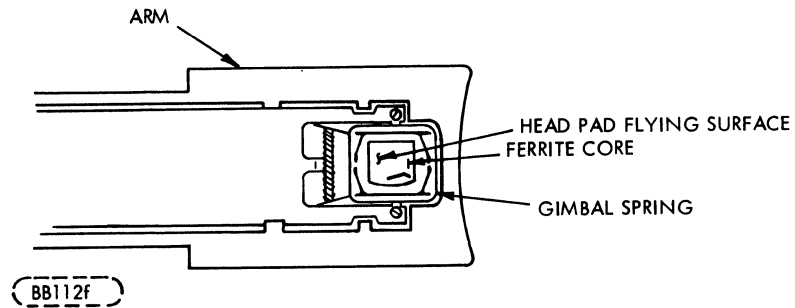


Figure 6-12. Typical Head/Arm Components

1. If reddish-brown oxide deposits exist on the head, replace or clean the head/arm assembly.
2. If head appears scratched, replace or clean the head/arm assembly.
3. If head appears damaged, replace the head/arm assembly.
4. If the gimbal spring (it holds the head pad to the arm) is bent or damaged, replace the head/arm assembly.

b. Head Cleaning

CAUTION

Head cleaning is a delicate procedure which is not recommended. It should not be undertaken unless it is absolutely necessary and then it should be performed by properly trained personnel only.

Refer to Figure 6-13 if head cleaning is required and perform the following procedure. Use care not to damage any part of the head arm assembly.

CAUTION

In the following step, hold the can of dust remover upright (vertical). If the can is not held upright, liquid propellant will be sprayed on the head.

1. Use super dry dust remover (see list of Maintenance Tools and Materials) to blow off all loose particles from the head pad (flying surface), from the edge of the head pad, and from the holes in the head pad. Hold the nozzle one-fourth to one-half inch (6 to 12 mm) from the head pad. Spray with a back and forth motion across the head pad, making certain to hold the can only in a vertical position.

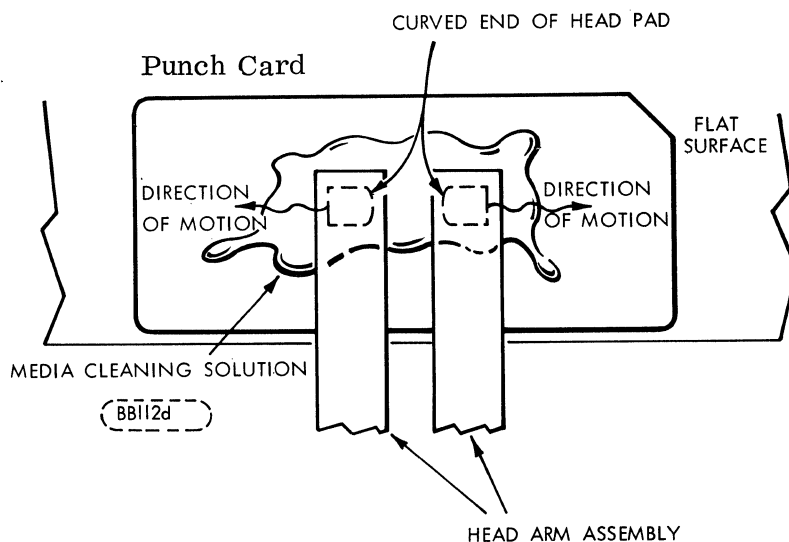


Figure 6-13. Head Cleaning Motion

2. Clean a smooth, flat working surface, for example, a glass or formica table top.
3. Place a new, unpunched, clean computer card with the back side up (printing down) on the clean flat working surface as shown in Figure 6-13.

CAUTION

Care should be taken to avoid excess cleaning solution. Excess solution on the head cable may remove the plasticizer and make the cable stiff. A stiff cable reduces the flexibility of the head pad and could cause broken wires.

4. Moisten a small area in the center of the card with media cleaning solution. (refer to the list of Maintenance Tools and Materials).

CAUTION

Inspect the media cleaning solution for contamination, rust, dirt, etc. Do not use contaminated solution.

5. Very carefully place the head pad flying surface on moistened area and move head pad from moistened area to dry area in a zig-zag motion as shown in Figure 6-13. Move head in a direction away from curved end of head pad. If it is moved in the opposite direction the sharp edge of the curved end will cut into the computer card and prevent movement and proper cleaning.

NOTE

Discoloration of media cleaning solution and computer card indicate that oxide particles are being removed from head pad flying surface.

6. Repeat steps 3, 4, and 5 using a clean computer card and clean media cleaning solution each time until no discoloration on card is present.
7. After discoloration has ceased, inspect head to determine that oxide deposits were removed. If deposits remain but show signs of being removed, repeat cleaning procedure until deposits are removed.
8. Blow OFF heads again using super dry dust remover as in step 1. Be sure all lint and dust are removed.
9. If oxide deposits cannot be removed, replace head/arm assembly.
10. If oxide deposits were removed and head passes inspection according to the Head/Arm Replacement Criteria, reinstall head.
11. Follow Head Replacement procedure to install cleaned head or a replacement head as required.

c. Head/Arm Replacement Criteria

A head/arm assembly requires replacement if any of the following conditions exist:

1. Consistent oxide buildup on the same head, indicating repeated head to disk contact. It should be noted that a new head should not be installed unless the disk is also replaced, since a new head would not likely fly over a damaged surface.
2. Appreciable oxide buildup which cannot be removed.
3. Scratches on the head flying surface.
4. Imbedded particles in the head pad flying surface.
5. Bent or damaged gimbal spring.
6. Any apparent physical damage to head/arm assembly.

6.7.12 SPINDLE MOTOR REMOVAL AND REPLACEMENT

Perform the following procedure to remove and replace the Spindle Motor Assembly. Refer to Figure 6-14.

1. Perform the procedures given in paragraphs 6.7.1 and 6.7.2.
2. Disconnect the motor wires which go to the Relay Control Board. See Figure 6-14 which shows the four wires (6) which go to RCTB2.
3. Remove the Spindle Drive Belt.
4. Remove the motor belt drive pulley. To do this loosen the set screw in the pulley collar using a 5/32 inch Allen screw driver.
5. Using a 9/64 inch Allen screw driver remove the four screws which secure motor to the motor base plate. Remove the motor from the unit.
6. Install the new motor. Orient the motor so that the wires exit the motor toward the side of the unit rather than toward the middle from the unit.
7. Secure the motor to the base plate using the screws removed in Step 5. No torque specification is given, but do not over tighten.
8. Replace the motor belt pulley. See Figure 6-14. Using a good scale for measurement position the pulley so that it is mounted on the shaft with the edge of the pulley 0.280 inches (7.1 mm) away from the plate surface as shown. Torque the screw in the collar to 64 lbf-in (7.2 Nm).

9. Reconnect the wires as shown in Figure 6-14.
10. Position the smooth side of the drive belt around the spindle pulley. Hold the belt taut around the pulley while performing the next step so the belt does not slip off pulley.
11. While maintaining hand tension on the belt, roll the belt onto motor pulley while manually rotating the spindle pack hub in a counterclockwise direction. Rotate the spindle pulley several revolutions to seat the belt on the pulley.
12. Lower the deck to its normal position. Insert the screws which fasten the unit to the shock mounts at the front of the unit. Swing the Electronics Module back into place carefully.
13. Install the top cover.
14. Install the disk pack.
15. Restore power to the unit.


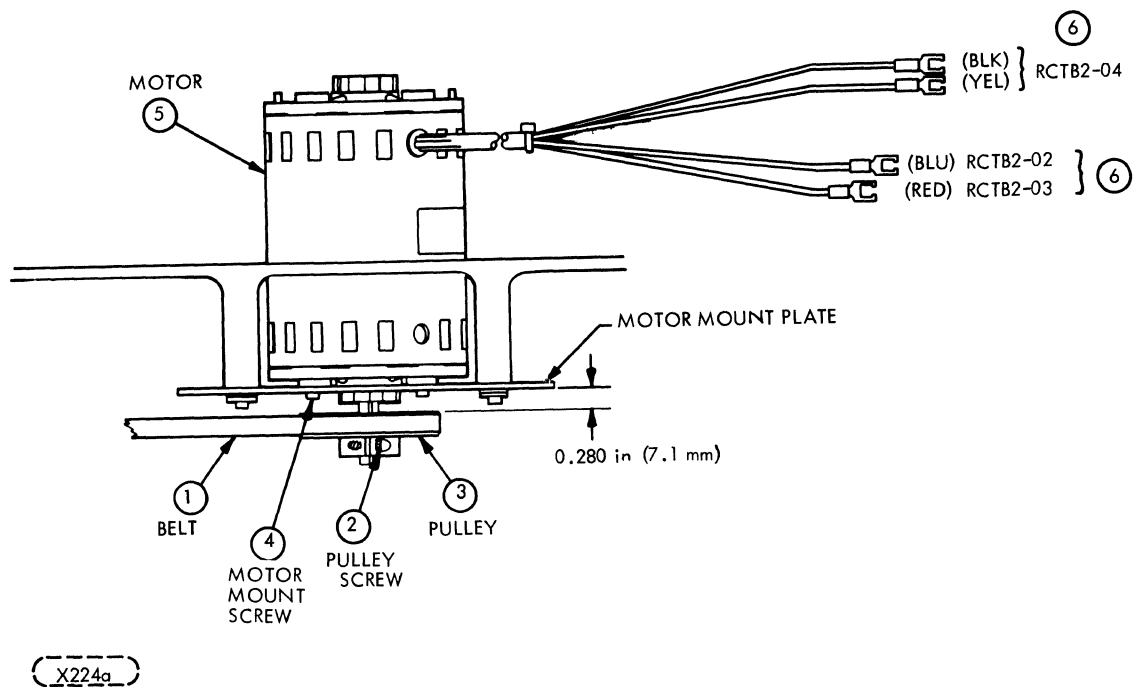


Figure 6-14. Drive Motor Assembly

6.7.13 BLOWER REMOVAL AND REPLACEMENT

1. Press START switch to stop rotation of motor.
2. Remove AC power plug.
3. Set AC circuit breaker to OFF.
4. Remove top cover. Refer to paragraph 6.7.1.
5. Raise deck assembly to maintenance position per 6.7.2.
6. Remove screws and washers (1), (2), (3) and (4). See Figure 6-16.
7. Remove blower electrical connections (5) and (6) in Figure 6-16.
8. Pull the blower toward the side of the unit to dislodge the blower muzzle from the cooling manifold. Remove the blower from the unit.
9. Install the replacement blower assembly in the unit. Orient the electrical lead wires as shown in Figure 6-16.
10. Secure the blower assembly to the intake manifold using the screws and washers removed in step 6.
11. Connect the blower lead wires per Figure 6-16.
12. Lower the deck from the maintenance position. Re-install the screws which secure the deck to the front shock mount.
13. Replace the Electronics Module in its place in the unit.
14. Replace top cover.
15. Replace AC power cable.
16. Set AC circuit breaker to ON.
17. Restore unit to normal operation.

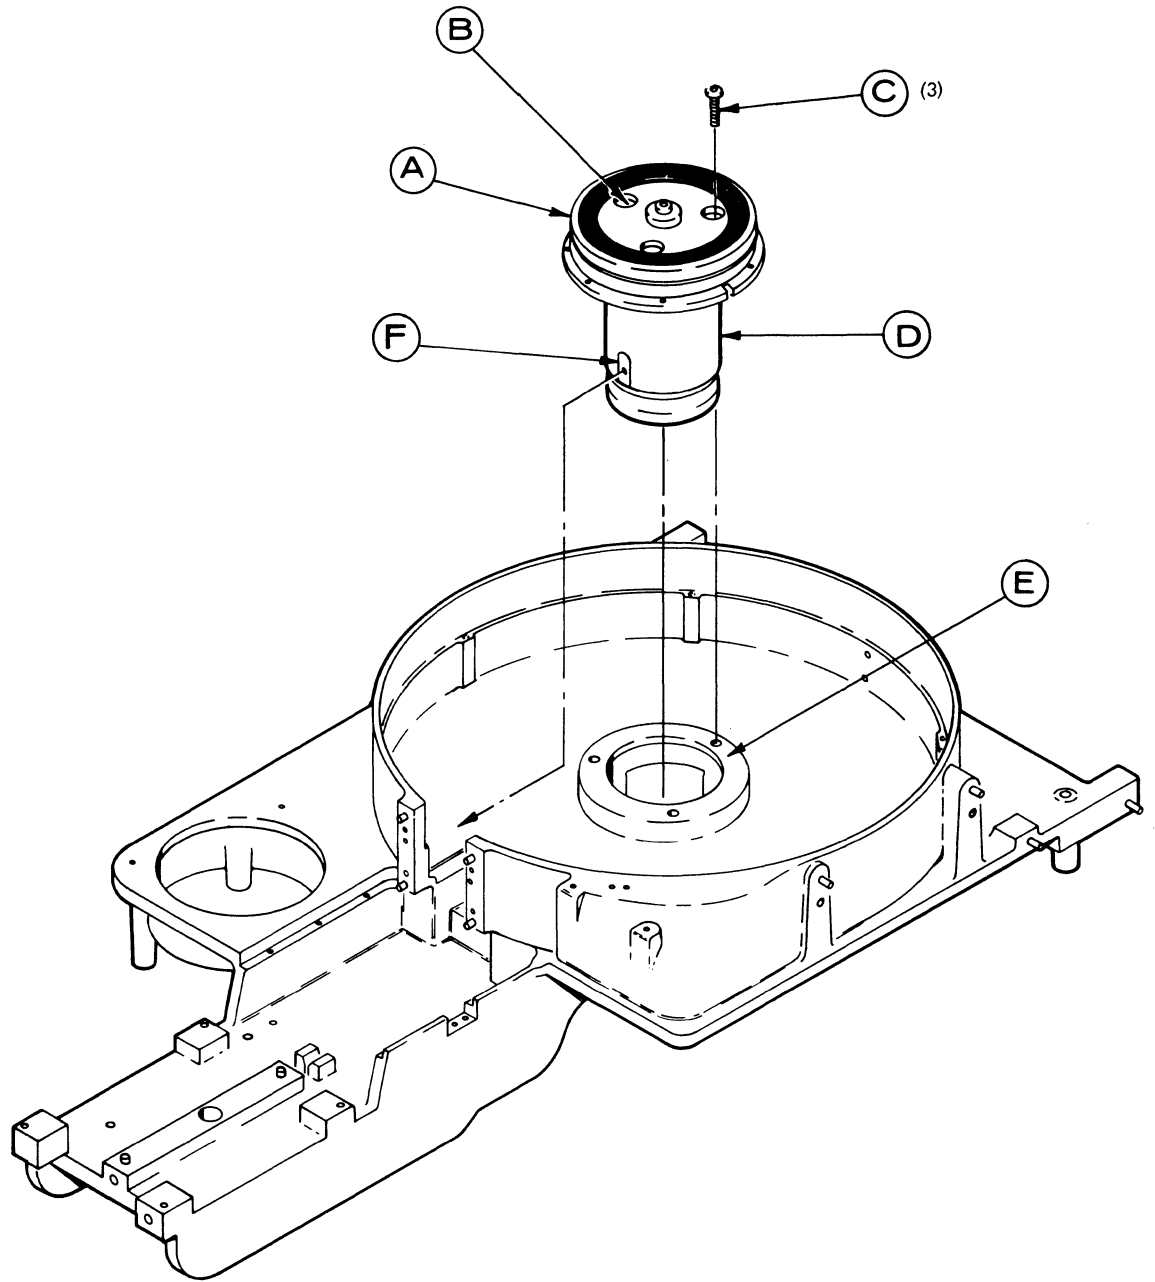

XX008a

Figure 6-15. Spindle Removal and Replacement

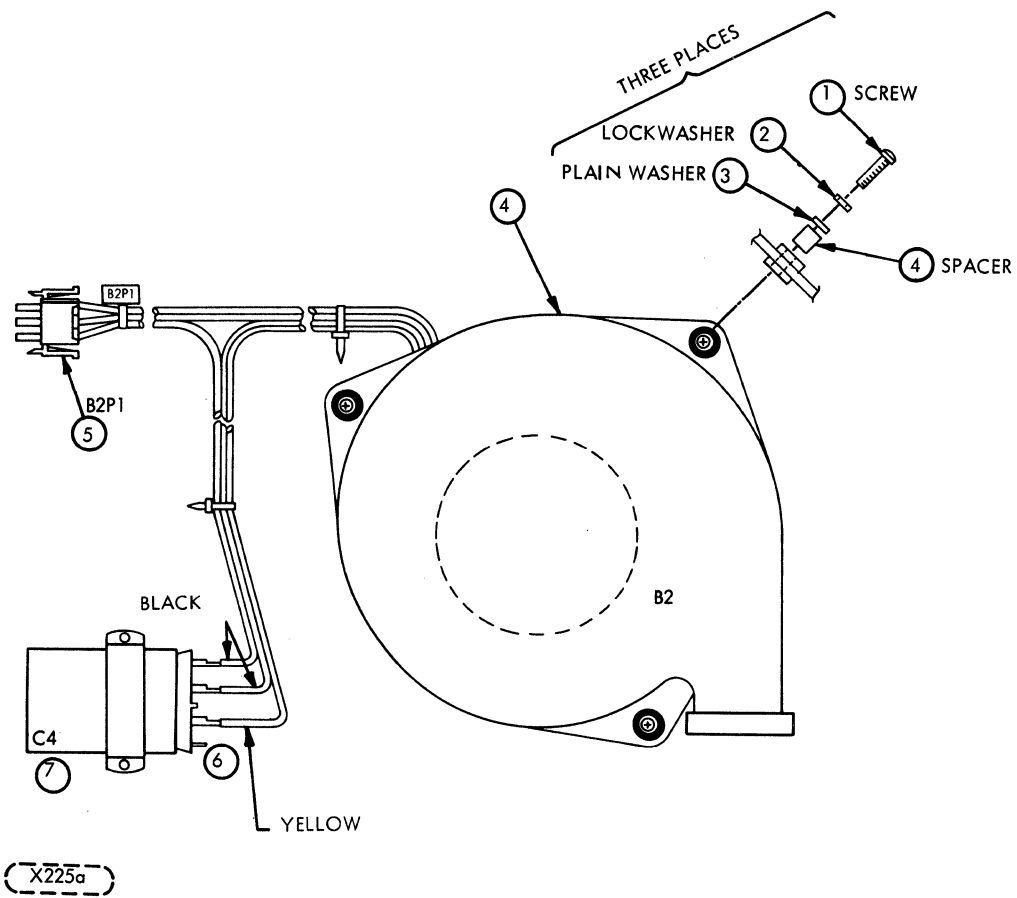


Figure 6-16. Blower Assembly

6.7.14 SPINDLE REMOVAL AND REPLACEMENT

Refer to Figure 6-15 as an aid in understanding the following description.

NOTE

The fixed disks are removed and replaced with a new disk pack as part of this procedure. If possible, the information stored on the fixed disks should be retrieved and stored elsewhere before beginning this procedure. If this is not done the information on the fixed disks will be lost.

1. Remove AC power from the unit.
2. Remove disk cartridge per Section 2.7.
3. Remove top cover per Section 6.7.1.
4. Remove the receiver assembly per Section 6.7.6.
5. Remove the fixed disk module per Section 6.7.7 and perform cleaning and inspection as outlined in Sections 6.7.7 and 6.7.8.
6. Elevate the base deck per Section 6.7.2.
7. Rotate the spindle by hand and move the belt toward the edge of the pulley until the belt comes off. Remove speed transducer/static ground bracket from Spindle Hub. Remove slotted disk from bottom of spindle pulley. See Section 6.7.4. Lower the deck to normal position.
8. Rotate the spindle hub (A) by hand until the three holes B in the hub line up with the screws (C).
9. Using a size 3/16 inch hex wrench remove the three screws (C).
10. Remove the spindle (D) from the unit.
11. Insert the new spindle in the hole (E) in the base deck and line up the holes in spindle with the holes in the base deck and at the same time insure that the Spin Speed Sensor bracket mounting slot (F) in the spindle housing is oriented toward the drive motor.
12. Install the three screws (C) which secure the spindle to the base deck.
13. Torque the screws to 100 lbf-in (11.3 Nm). A torque wrench which accepts a 3/16 inch hex driver wrench is required.
14. Raise the base deck assembly per Section 6.7.2.
15. Reinstall the slotted disk and the speed transducer/static ground bracket (including the Spin Speed Sensor) on the spindle.



16. Position the smooth side of the drive belt around the spindle pulley. Hold the belt taut around the pulley while performing the next step so the belt does not slip off the pulley.
17. While maintaining hand tension on the belt, roll the belt onto the motor pulley while manually rotating the spindle pack hub in a counterclockwise direction. Rotate the spindle pulley several revolutions to seat the belt on the pulley.
18. Lower the deck to its normal position. Insert the screws which fasten the unit to the shock mounts at the front of the unit. Swing the Electronics Module back into place carefully so as not to pinch any wires.
19. Install the new fixed pack per Section 6.7.7.
20. Install the disk cartridge.
21. Restore power to the unit.

6.7.15 REMOVAL AND REPLACEMENT OF POWER SUPPLY, PWA BOARDS AND FUSES

Refer to Figure 6-17.

6.7.15.1 PWA Removal and Replacement

Proceed as follows to remove the two PWA boards.

1. Stop and power down per 2.3.3 and 2.3.4.
2. Remove the Power Supply from the drive per Section 6.7.15.3.
3. Remove two screws (9) to free the power transistor PWA (10).
4. PWA (10) plugs into a printed circuit board connector mounted on PWA (12). Remove PWA (10) from this connector.
5. Perform steps 1 - 3 in reverse order to install new transistor PWA (10).
6. To remove the capacitor mount PWA (12) remove the power transistor PWA (10) as given in steps 1 - 3.
7. Disconnect the 8-pin connector (13) from PWA (12).
8. Disconnect the three single quick disconnect terminals (16) from PWA (13).
9. Remove screw (15) which secures the end capacitor to the power supply chassis.
10. Remove the seven screws (11) which secure the capacitor mount PWA to the power supply chassis.
11. Slide the PWA (12) out of the power supply.
12. To install Power supply boards perform the steps 1 - 10 in reverse order.
13. Replace Power Supply in the drive.
14. Connect drive to power source and restore to normal operation.

6.7.15.2 Fuse Removal and Replacement

Fuses F1, through F8 are mounted in the power supply (four in front, four in the side). F1 thru F4 are easily accessible should it be necessary to replace one (see Figure 6-17). Removal of F5 thru F8 requires removal of the power supply from the base pan (para. 6.7.15.3). To remove and replace a power supply fuse proceed as follows.

1. STOP and Power down drive per 2.3.3 and 2.3.4.
2. Remove AC line cord from power source.
3. Remove top cover.

4. Swing Electronics Module out to allow deck to be raised.
5. Raise deck assembly to maintenance position.
6. Remove desired fuse (6) or (8) . Replace with good fuse.
7. To remove (5) or (7) remove power supply per 6.7.15.3. Replace bad fuse. Replace Power Supply.
8. Lower deck assembly to normal position.
9. Swing Electronics Module back into place.
10. Replace top cover.
11. Connect AC cord to power source.
12. Restore unit to normal operation.

6.7.15.3 Power Supply Removal and Replacement

To remove and replace the Power Supply Assembly perform the following procedure.

1. STOP and Power down the drive per 2.3.3 and 2.3.4. Remove AC line cord from power source.
2. Remove the top cover. Refer to Paragraph 6.7.1.
3. Remove the four screws (4) which secure the power supply to the base pan. These are removed from the under side of the unit. Push power supply toward front of unit as far as it will go.
4. Disconnect the frame ground wire (14) at power supply end.
5. Swing out the Electronics Module to allow deck to be raised. Refer to paragraph 6.7.2.
6. Raise the deck assembly to maintenance position.
7. Disconnect the four connectors PS1P1 (1), PS1P2 (2), and PS1P3 (3) and PS1P4 (17) .
8. Remove the power supply from unit.
9. Install power supply back in its place in the drive.
10. Perform steps 7 through 1 in reverse.

6.7.16 HEADS LOADED SWITCH REMOVAL AND REPLACEMENT

1. STOP and Power down the drive per 2.3.3 and 2.3.4. Remove AC Power cord from power source.
2. Remove top cover.

3. Identify (label) heads loaded switch leadwires. Disconnect the lead wires at the switch terminals.
4. Remove the two screws and washers which secure the heads loaded switch to its mounting bracket.
5. Position the replacement switch on mounting bracket (pretravel adjustment bracket must be under switch actuator arm). Loosely secure switch to the bracket using two screws and washers.
6. Perform Heads Loaded Switch Adjustment procedure starting at step 8 (refer to paragraph 6.8.3).

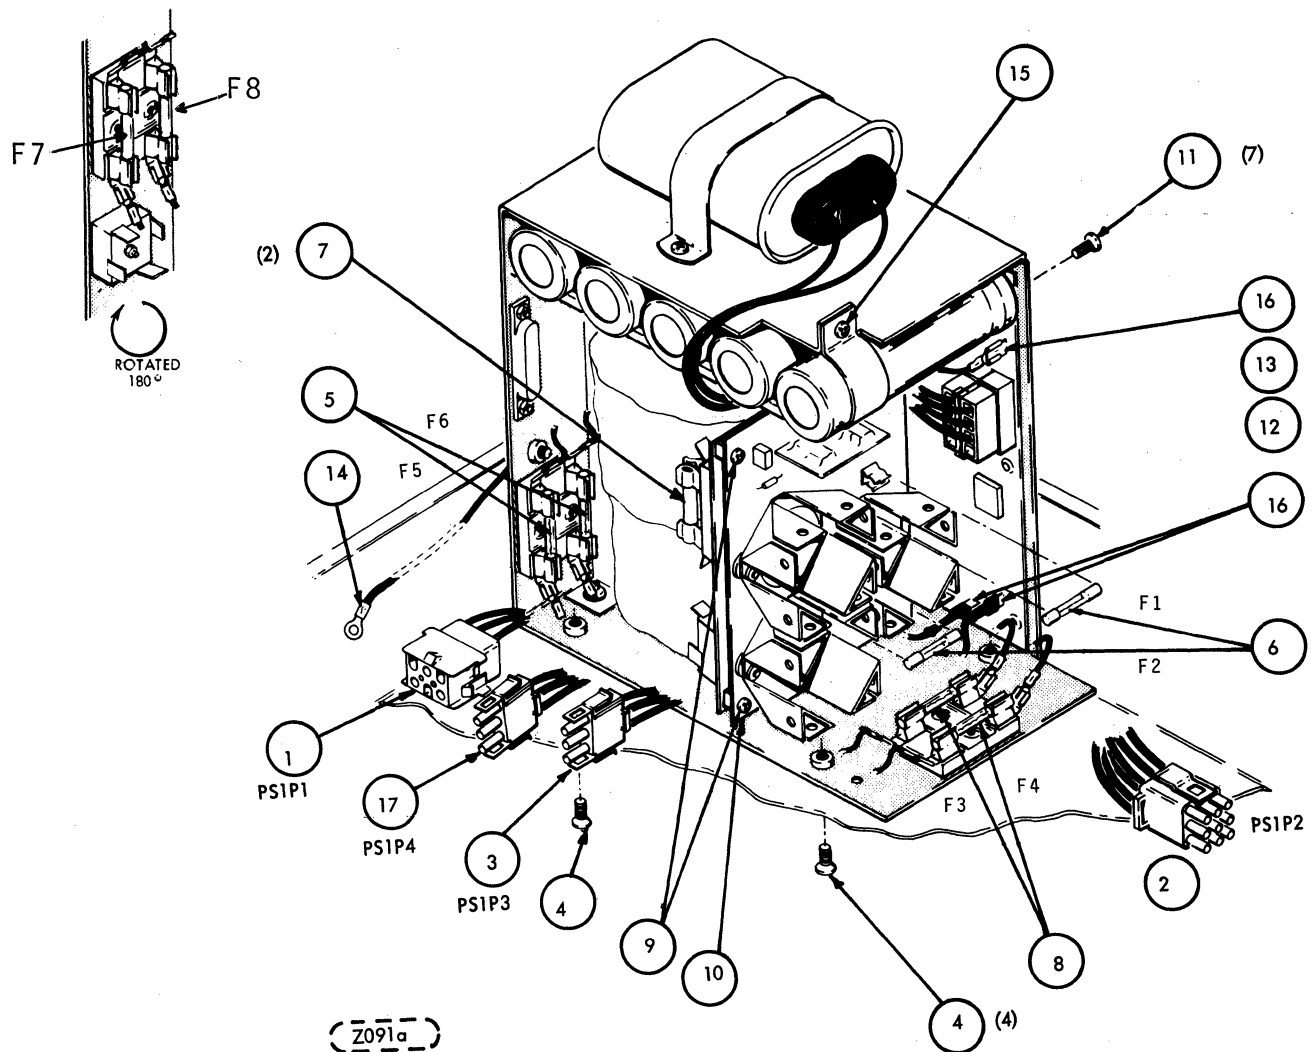


Figure 6-17. Power Supply Assembly

6.7.17 ACTUATOR MAGNET REMOVAL AND REPLACEMENT

Refer to Figure 6-18 and 6-19 for the following removal and replacement procedure.

- a. Position the START/STOP switch to the STOP position and wait for the READY light to stop blinking. Set AC circuit breaker to OFF.
- b. Remove the top cover per 6.7.1.
- c. Remove the Power Amplifier mounted on top of the Actuator Magnet. Remove the plastic cover (Figure 6-2) and then remove the four screws and four standoffs that fasten it and move it aside being careful not to excessively kink the wires connected to it.
- d. Remove the two screws (A) which fasten the Velocity transducer housing (D) to the voice coil magnet (B).
- e. Slide the Velocity Transducer housing out of the Actuator Magnet.
- f. Remove the Heads Loaded Switch per paragraph 6.7.17.
- g. If the carriage is not to be removed, the carriage complete with heads shall be secured in its rearmost position prior to removal or replacement of the magnet. This insures that the heads are not unintentionally loaded onto the disks or allowed to slip off the head cam towers. Securing the carriage can best be done by taping the carriage bearing support (see Figure 6-2) to the top of the bearing plate. The Electronics Module side is least obstructed and therefore the most convenient side to tape.
- h. Remove the four screws (C) which fasten the actuator magnet to the base deck. This requires a 4/32 in. hex driver tool.
- i. Carefully slide the magnet to the rear of the drive. Be very careful not to damage voice coil or the velocity transducer magnet core (F), Figure 6-19) which is attached to the carriage and protrudes through the velocity transducer hole in the actuator magnet.
- j. To replace the actuator magnet carefully insert the velocity transducer magnetic core (F), Figure 6-19) into the velocity transducer hole in the actuator magnet.
- k. Carefully insert the voice coil into the circular slot in the face of the actuator magnet as the magnet is being slid forward.
- l. Insert the front locator pin on the base deck into the groove at the front, bottom of the actuator magnet and slide the magnet forward until the rear pin slides into and is firmly seated at the rear of its groove and the four magnet mounting holes line up with the holes in the base deck.
- m. Fasten the actuator magnet to the base deck with the four hex head screws removed in step e.

- n. Insert the indented end of the Velocity Transducer Magnet Core Guide tool (P/N 75882565) through the hole in the Velocity Transducer housing. Use the indentation in the end of the tool to capture the end of the Velocity Transducer Magnet Core and keep it centered in the Velocity Transducer housing hole so that the Velocity Transducer housing will easily slide over the core.
- o. Insert the Velocity Transducer housing into its hole in the Actuator Magnet while guiding the core into its hole in the transducer housing with the guide tool. Remove the guide tool when it is no longer needed to guide the core.
- p. Replace the Velocity Transducer housing and secure it to the Actuator Magnet using the two screws removed in step c.
- q. Install the Power Amp PWA which was removed in step b. Fasten down with four screws.
- r. Fasten the Head Load Switch bracket to the Actuator Magnet using the two screws removed in step e. Reconnect the switch lead wires.
- s. Adjust the Head Load Switch per paragraph 6.8.3.
- t. Adjust the carriage restraint blocks per 6.7.21.
- u. If a new magnet is being installed remove the carriage lock pin from the old magnet and install it on the new magnet.
- v. Set the AC circuit breaker to ON.
- w. Start the spindle and return the unit to the system for testing using system diagnostic routines.

6.7.18 CARRIAGE ASSEMBLY REMOVAL AND REPLACEMENT

- a. Press STOP/START switch to stop the unit operation and remove AC power from the unit when READY lamp has stopped blinking.
- b. Remove top cover per 6.7.1.
- c. Remove the head arms from the carriage per Sections 6.7.9 and 6.7.10.
- d. Remove the velocity transducer housing and actuator magnet as described in Section 6.7.17.
- e. Disconnect the voice coil lead connector. See Figure 6-19.
- f. Using a screw driver remove the two screws (A) that secure the voice coil lead support bracket to the base deck.
- g. Remove the tape that was used to secure the carriage while the magnet was removed.
- h. Remove the voice coil by moving it to the rear of the unit with the right hand while guiding the voice coil lead support bracket around obstacles on the base deck with the left hand.

- i. If a new carriage is to be installed it must be installed without any head arms.
- j. Remove the Velocity Transducer Magnet Core from the removed carriage and install it on the new carriage per Section 6.7.20.
- k. Clean the carriage bearings and rails per Section 6.6.3.
- l. Install the carriage assembly in the unit, guiding the bearings onto the rail and under the bearing plates with the right hand while guiding the voice coil lead bracket around obstacles with the left hand. Be careful not to bend the Velocity Transducer Magnet Core.
- m. Make sure the carriage moves freely as described in step 3 of Section 6.6.3. Reclean the bearings and rails if necessary.
- n. Secure the voice coil lead support bracket with the two screws removed in step c above.
- o. Install the actuator magnet and velocity transducer housing per Section 6.7.17.
- p. Move the carriage over its full travel several times to insure that the voice coil does not drag or touch the actuator magnet.
- q. Install the head arms per Sections 6.7.9 and 6.7.10.
- r. Re-connect the voice coil connector.
- s. Perform the head alignment as described in Section 6.8.5.4.
- t. Replace top cover.
- u. Place the unit in operation in the system.

6.7.19 REMOVAL AND REPLACEMENT OF THE CARRIAGE CENTER RAIL AND/OR SIDE BEARING

- a. Press STOP/START switch to stop unit operation and remove AC power when READY indicator stops blinking.
- b. Remove top cover per Section 6.7.1.
- c. Remove the velocity transducer housing and actuator magnet per Section 6.7.17.
- d. Remove the carriage assembly per Section 6.7.18.
- e. If the center rail is to be removed, raise the base deck to the maintenance position as described in Section 6.7.2.

To remove the center rail (A) proceed as follows (see Figure 6-20):

- f. Remove screw (B) which secures the carriage rail (A).
- g. Remove the carriage rail (A) from the unit.
- h. Before installing the carriage rail in the unit inspect to see that it is clean and free from all contamination.
- i. Install the carriage rail in the unit.
- j. Install the screw which secures the carriage rail and torque it to 1.25 ± 0.25 lbf-in (0.14 ± 0.03 Nm).

NOTE

This torque specification is critical and should be rigidly adhered to.

- k. Lower the base deck assembly and secure it per Section 6.7.2.

To remove and replace the side bearing plate (F) proceed as follows (see Figure 6-20):

- l. Remove screw (C) and remove the air baffle (D).
- m. Remove screws (E) and remove bearing plate (F).
- n. Install new bearing plate and secure with screws (E).
- o. Replace the air baffle (D) and secure with screw (C).

To remove and replace the plate assembly (H) proceed as follows (see Figure 6-20):

- p. Remove the two screws (G) and remove the plate assembly (H).
- q. Install the new plate assembly (H) and secure it with the two screws (G).
- r. Replace carriage assembly per section 6.7.18.
- s. Replace transducer housing and actuator magnet per section 6.7.17.

6.7.20 REMOVE AND REPLACEMENT OF VELOCITY TRANSDUCER

For the following procedure refer to Figures 6-18 and 6-19.

- a. Position the START/STOP switch to the STOP position and wait for the READY light to stop blinking. Set AC circuit breaker to OFF.
- b. Remove the top cover per 6.7.1.
- c. Remove the two screws (A) which secure the Velocity Transducer Housing (D) to the voice coil magnet (Figure 6-18).
- d. Unscrew the Velocity Transducer Magnet Core (F) from the rear of the carriage using a 3/16 inch open end wrench.
- e. Remove the Velocity Transducer Housing and Core together.

- f. Disconnect the Velocity Transducer Connector.
- g. To replace the Velocity Transducer Assembly insert the core and the housing together into the hole in the actuator magnet.
- h. Screw the core into the hole in the back of the carriage and tighten the core in the hole using a 3/16 inch open end wrench.
- i. Replace the top cover.
- j. Restore power to the unit and place in operation in the system.

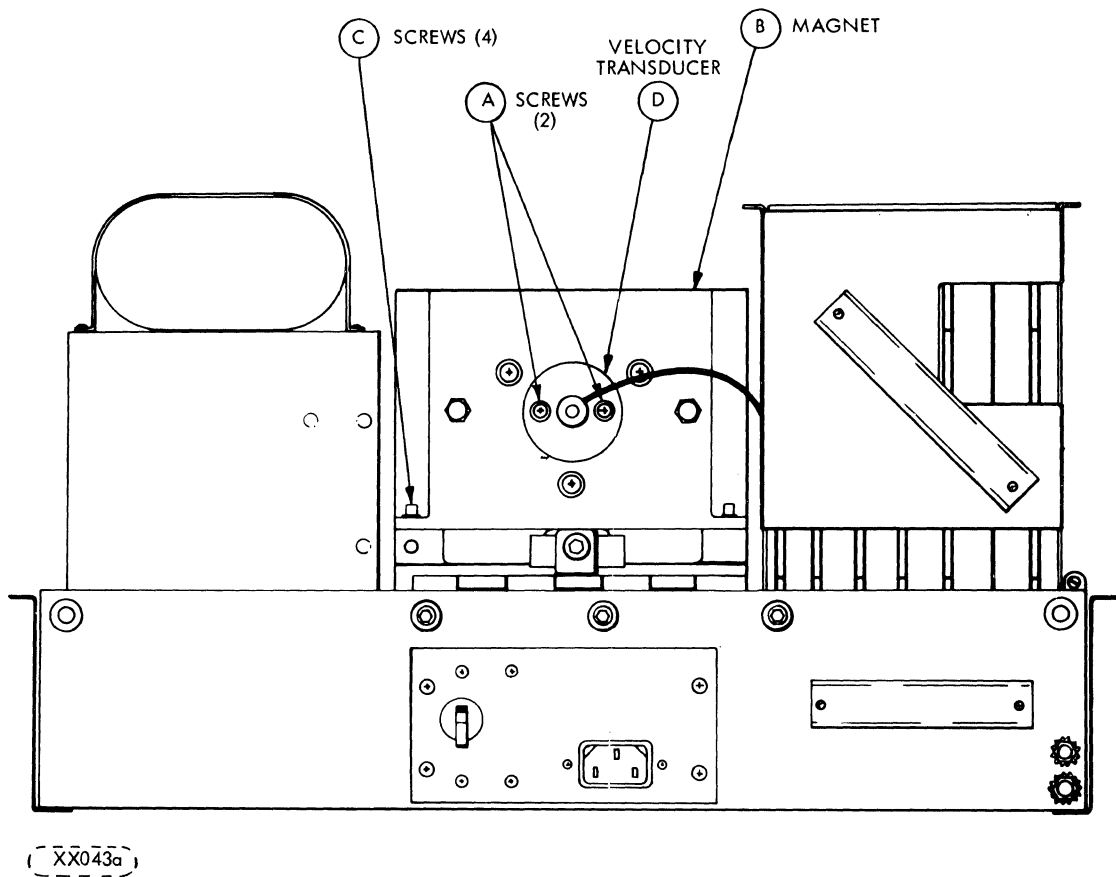


Figure 6-18. Velocity Transducer and Actuator Magnet Removal

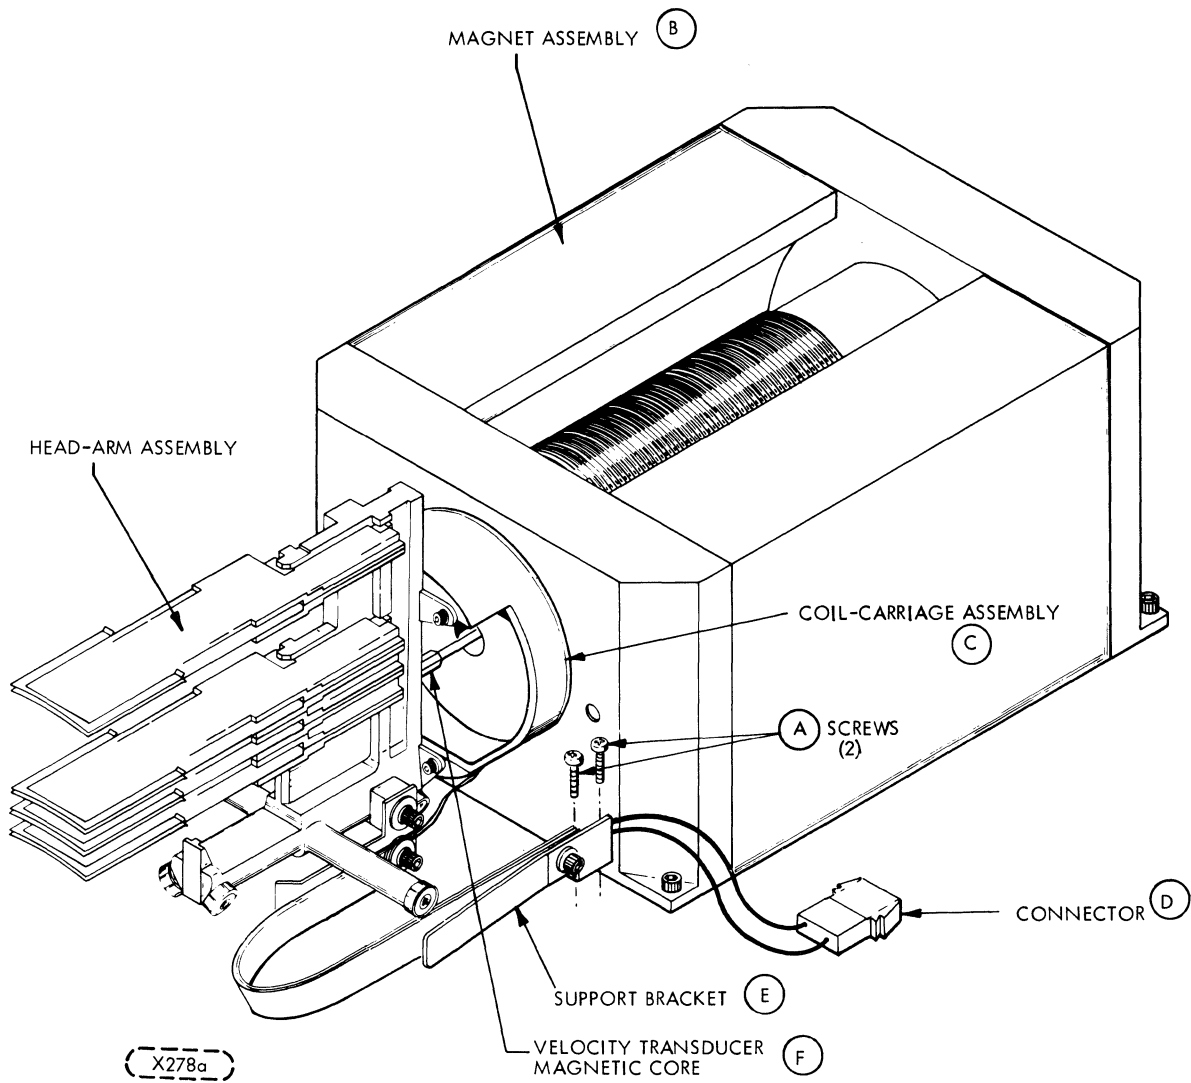


Figure 6-19. Actuator Elements (Power Amplifier Removed)

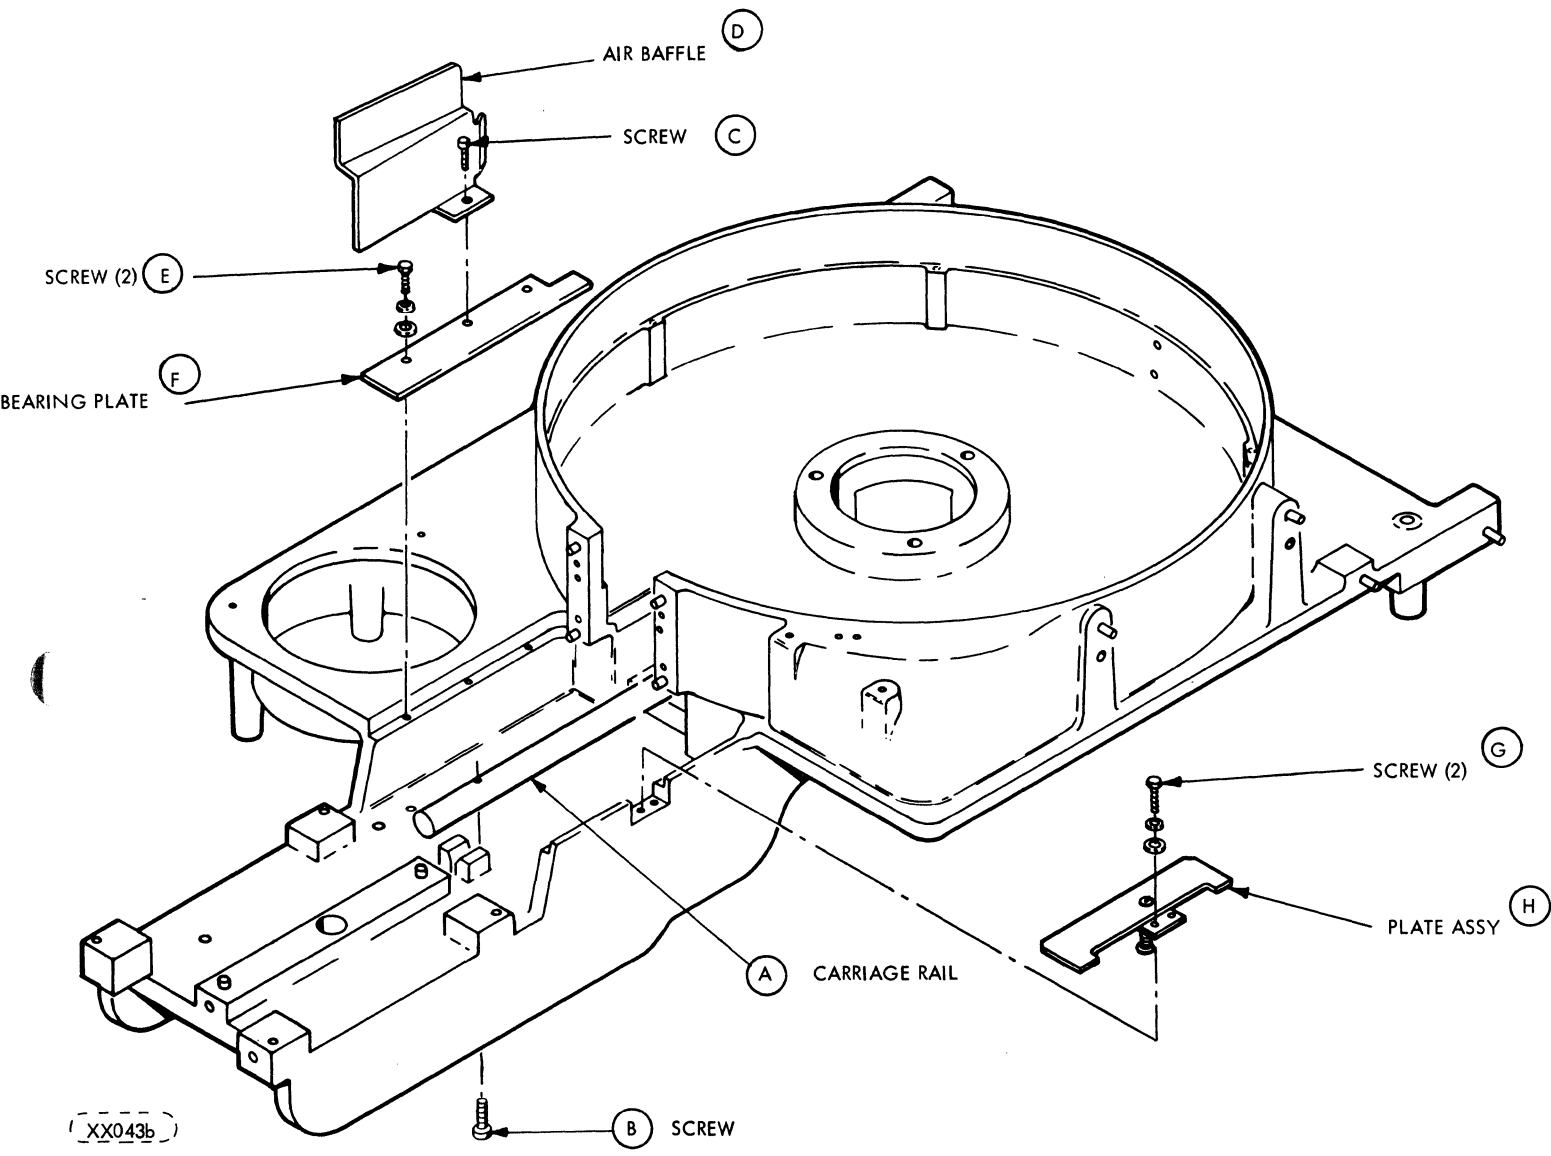


Figure 6-20. Carriage Rail Removal and Replacement



6.7.21 REMOVAL AND REPLACEMENT OF CARTRIDGE ACCESS DOOR LOCK SOLENOID

To remove and replace the cartridge access door lock solenoid, proceed as follows.

Refer to Figure 6-20.1 for visualization of the part names used in the description.

- a. Stop the operation of the unit. Wait until the spindle has completely stopped.
- b. Do not remove AC power from the unit.
- c. Refer to Figure 2-1. Lift on the door release slide (A) and pull open the cartridge access door (B) in Figure 6-20.1). If door will not open refer to Section 2.8.2. Proceed with next step when the door has been opened and AC power is removed.
- d. Remove the five screws (D) using a 1/4 inch nut driver. Save the screws.
- e. Move tab (G) in direction shown by arrow in order to retract solenoid plunger.
- f. While holding the solenoid plunger retracted, lift latch cover plate (C) from the door (B).
- g. Remove the wires from the solenoid (F) electrical connection tabs.
- h. Remove the two screws (E) which secure the solenoid (F) to the cover plate. Discard the old solenoid but retain the bracket (H).
- i. Install the new solenoid to the cover plate (C) using bracket (H) and secure with the two screws (E).
- j. Adjust the positions of the solenoid and bracket to the dimensions I, J and K as shown in Figure 6-21. Position the solenoid relative to the bracket so that the plunger does not contact its mounting bracket and so the tip of the plunger extends through the hole in the bracket when not retracted but does not extend beyond the end of the bracket when the plunger is retracted.
- k. Tighten the mounting hardware.
- l. Connect the two wires which were removed from the old solenoid to the proper tabs as illustrated in View Z - Z in Figure 6-20.1.
- m. Install the latch cover plate assembly to the access door. To do this, lift up on the door release slide (A) and pull back the solenoid plunger so it will clear the shoulder at the bottom of the door release, and then let the solenoid plunger return to resting position when the cover plate is properly in place.
- n. Install the five screws removed in step d but allow them to remain loose. Position the bottom edge of the cover plate against the protruding edge at the bottom of the access door. Move the cover plate sideways until the solenoid bracket is against the side of the door release slide. This reduces the play in the door release slide.
- o. Tighten the cover plate mounting screws.

- p. Check to see that the door release slide will operate the release catch properly when the solenoid plunger is pulled back with tab **G**.
- q. Install a cartridge if it was removed at the beginning of this procedure.
- r. Close the cartridge access door. The unit is ready for normal operation.
- s. Restore AC power to the unit and make sure the access door can be opened.
- t. Activate the START switch to operate the unit.

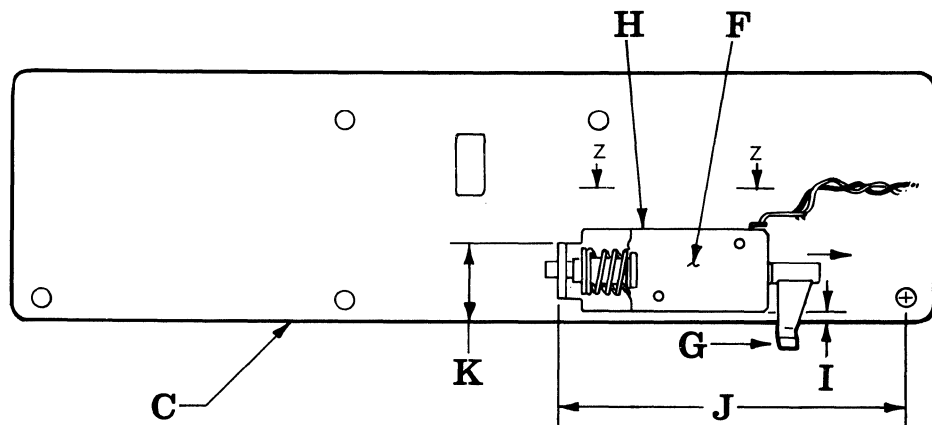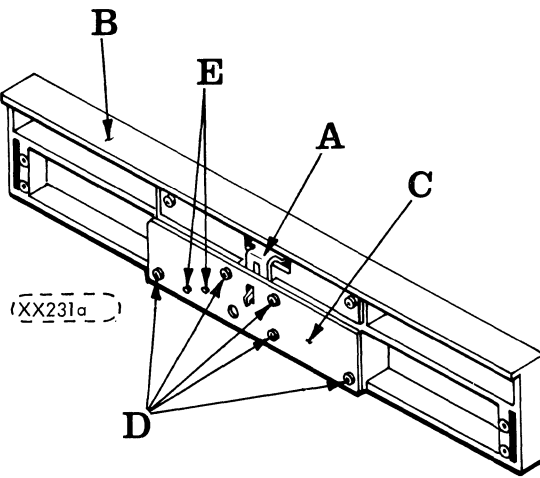

DIMENSION	INCHES	mm
I	0.055 ±0.01*	1.39 ±0.3
J	2.76 ±0.01	70.10 ±0.3
K	0.68 ±0.01	17.27 ±0.3

*DIMENSION APPLIES AT REAR END OF SOLENOID ONLY AS SHOWN

(XX231b)

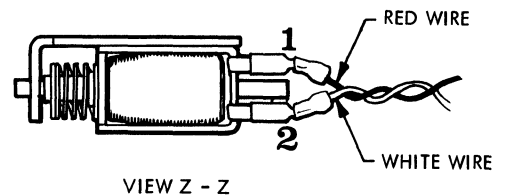


Figure 6-20.1 Cartridge Access Door Showing Latch Lock Solenoid



6.8 DRIVE TESTS AND ADJUSTMENTS

6.8.1 GENERAL

The tests and adjustments contained in this subsection are those which every drive must pass to be considered operationally acceptable.

If a more detailed test or adjustment procedure is needed to isolate a malfunction, refer to the Trouble Analysis Aids procedures which follow these procedures.

6.8.1.1 Manual Head Positioning

Manual head positioning with spindle not up to proper speed should NEVER be done.

Manual head positioning with power on and disk pack up to speed is not recommended unless required by maintenance procedure or loss of servo control makes it necessary.

1. Should manual loading at the heads be unavoidable, observe the following safety precautions during manual carriage operation.
 - Make certain that heads will unload or are unloaded before turning power off.
 - If power to drive motor is lost while heads are loaded and voice coil leadwires are disconnected, immediately retract carriage. Otherwise, heads crash when disk speed is insufficient to enable heads to fly.
 - When positioning heads, do not use excessive downward force on voice coil.
 - Before reconnecting voice coil leadwire connector, make sure fingers and tools are clear of coil and actuator.
 - Do not use CE disk pack unless specifically directed to do so. Use only the type of pack called for in the maintenance procedure.
2. Install a scratch cartridge (refer to disk Cartridge Installation and Removal) and transfer all data from the fixed disks to some other storage location.

CAUTION

If loss of servo control necessitates manual loading and unloading of heads, observe the following:

Do not load heads unless spindle is up to speed (READY has ceased blinking).

When manually loading or unloading heads, simulate normal load (unload) speed of servo under electrical control.

Disconnect voice coil leadwire connector before attempting to load heads.

3. Press drive START/STOP switch to allow normal spindle start and first seek.
(if it will).
4. Remove top cover per Paragraph 6.7.1.
5. Disconnect voice coil leadwire connector (refer to Figure 6-18).

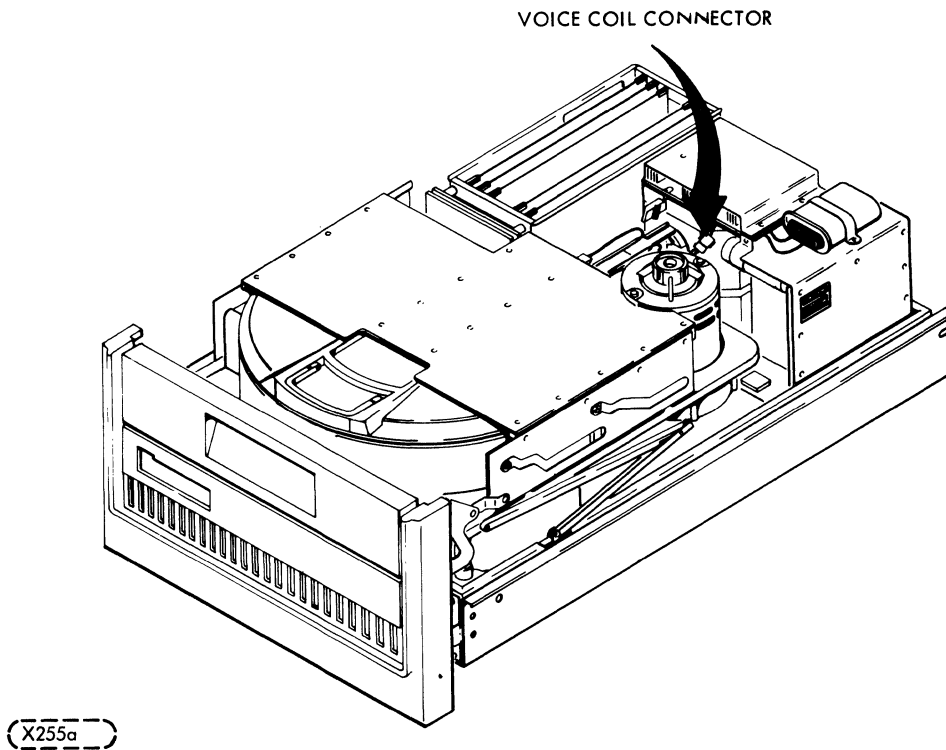


Figure 6-21. Voice Coil Leadwire Connector

6. Very carefully position carriage as required by maintenance procedure by applying a lateral (parallel to carriage movement) pressure to top of the carriage.

WARNING

Keep hands away from actuator.

7. Reconnect voice coil leadwire connector halves:
 - a. Make sure hands and fingers are clear of heads, carriage or coil.
 - b. Touch connector halves together and ensure carriage locks on cylinder or retracts fully. * If erratic voice coil movement is noticed, remove connection immediately and troubleshoot malfunction.
 - c. After carriage locks on cylinder or retracts full, * firmly seat voice coil leadwire connector halves.
8. Command an RTZ before any seeks are performed.
9. Replace top cover.

6.8.2 CERTIFICATION OF FIXED MEDIA

After replacement of the fixed media it is necessary to certify each data surface to identify the number and location of flaws in the media which may cause read errors. This can only be done after installation of the fixed module since the precise location of each data track is not determined until the module is installed.

1. Perform the head alignment procedure as defined in para. 6.8.5.4.
2. Format each data surface with the format and number of sectors normally used. A single sector on each track with one large data field is preferred but not necessary.
3. Read the format with nominal strobe and no offset. If any error is detected, note the track location and re-read. Track locations for which an error is detected more than once must be flagged and excluded from further use. Use spare track locations 808 - 822 as alternatives.
4. Repeat steps 2 - 3 only for alternate track locations.
5. Write data pattern I in Figure 6-22 in each data field.
6. Read the data pattern written in 5 above using the strobe and offset combinations shown in Figure 1. Record the track location of any error detected.
7. Repeat Steps 5 and 6 for data patterns II through IV in Figure 6-22.
8. Examine the record of track locations for which errors were detected in Step 6. Flag all track locations which appear more than once. Exclude these tracks from further use. Use spare track locations 808 - 822 as alternates.
9. Repeat Steps 2 - 8 only for alternate track locations.

WRITE DATA PATTERNS

- I. 3B63B63B₁₆
- II. E255FE25₁₆
- III. FFFFA924₁₆
- IV. FE254A80₁₆

READ COMBINATIONS

- | | |
|------------------|----------------|
| A - NOM STROBE | 1 - NOM OFFSET |
| B - EARLY STROBE | 2 - FWD OFFSET |
| C - LATE STROBE | 3 - REV OFFSET |

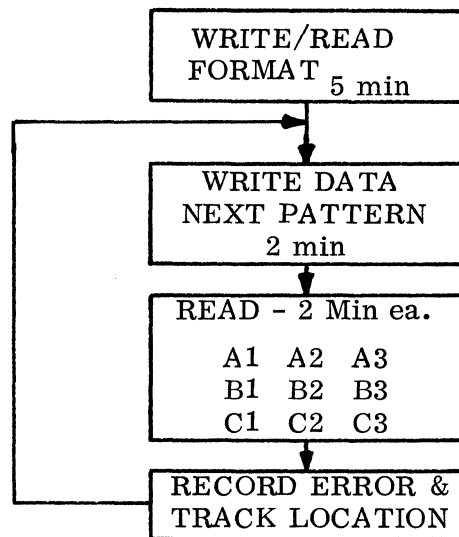


Figure 6-22. Certification of Fixed Media

6.8.3 SWITCH ADJUSTMENTS

NOTE

The following definition applies to paragraphs 6.8.3.2, 6.8.3.3 and 6.8.3.4 which follow.

The "Switch Operating Position" is defined as that position of the switch lever at which the switch lever at which the switch contact points switch from a normal (switching mechanism at rest, not being stressed) position to operating position (switching mechanism stressed so it wants to return to "normal" position). At the Switch Operating Position the normally open contacts will close (normally closed contacts will open). The Switch Operating Position can be determined by the snap action noise of the switch contacts as they change positions, or by the placing a multimeter (set to RX1 scale) across the switch common (C) and normally open contacts (NO). At the Switch Operating Position the multimeter will change indication from infinity to zero Ohms.

6.8.3.1 Heads Loaded Switch Adjustment

1. STOP and power down per 2.3.3 and 2.3.4.
2. Remove top cover.
3. Identify heads loaded switch leadwires.
4. Connect a multimeter (set to RX1) across switch terminals.
5. With carriage retracted, multimeter should indicate zero ohms.

CAUTION

Do not move carriage forward far enough to fall off the cam tower and thus allow heads to load onto the disks.

6. Slowly move carriage towards spindle while observing multimeter. Multimeter must indicate infinite ohms when carriage has traveled 0.07 (± 0.04) inch from full retract stop. (Distance is measured from rear edge of carriage to magnet.) If adjustment is needed, proceed to next step. If no adjustment is needed, proceed to step 9.

NOTE

Make certain that carriage is fully retracted while performing next step.

7. Loosen screws securing heads loaded switch to mounting bracket. Adjust switch position until it actuates after 0.07 (± 0.04) inch travel from full retract stop. Tighten screws when switch position correctly adjusted.
8. Install top cover.
9. Set AC POWER circuit breaker to ON.
10. Press START switch to operate drive.

6.8.3.2 Cartridge-In-Place Switch Adjustment

1. Stop the spindle and power down per paragraphs 2.3.3 and 2.3.4.
2. Remove the disk cartridge.
3. Remove the cover per 6.7.1.
4. Identify the switch and leadwires. See Figure 6-22a.
5. Measure the distance "X" between the casting edge and the switch lever when the switch is at the operating position. See Note at beginning of Section 6.8.3. Dimension "X" as shown in Figure 6-22a should be 0.10 ± 0.04 inches (2.54 ± 1 mm).
6. If the switch does not operate within the specified measurement, loosen the hardware that secures the switch to the mounting bracket and adjust the switch position.
7. When adjustment is correct, check hardware for adequate tightness and replace leadwires to the common and normally open switch terminals.
8. Install top cover.
9. Install disk cartridge.
10. Set AC power circuit breaker to ON.
11. Press START switch to operate the drive.

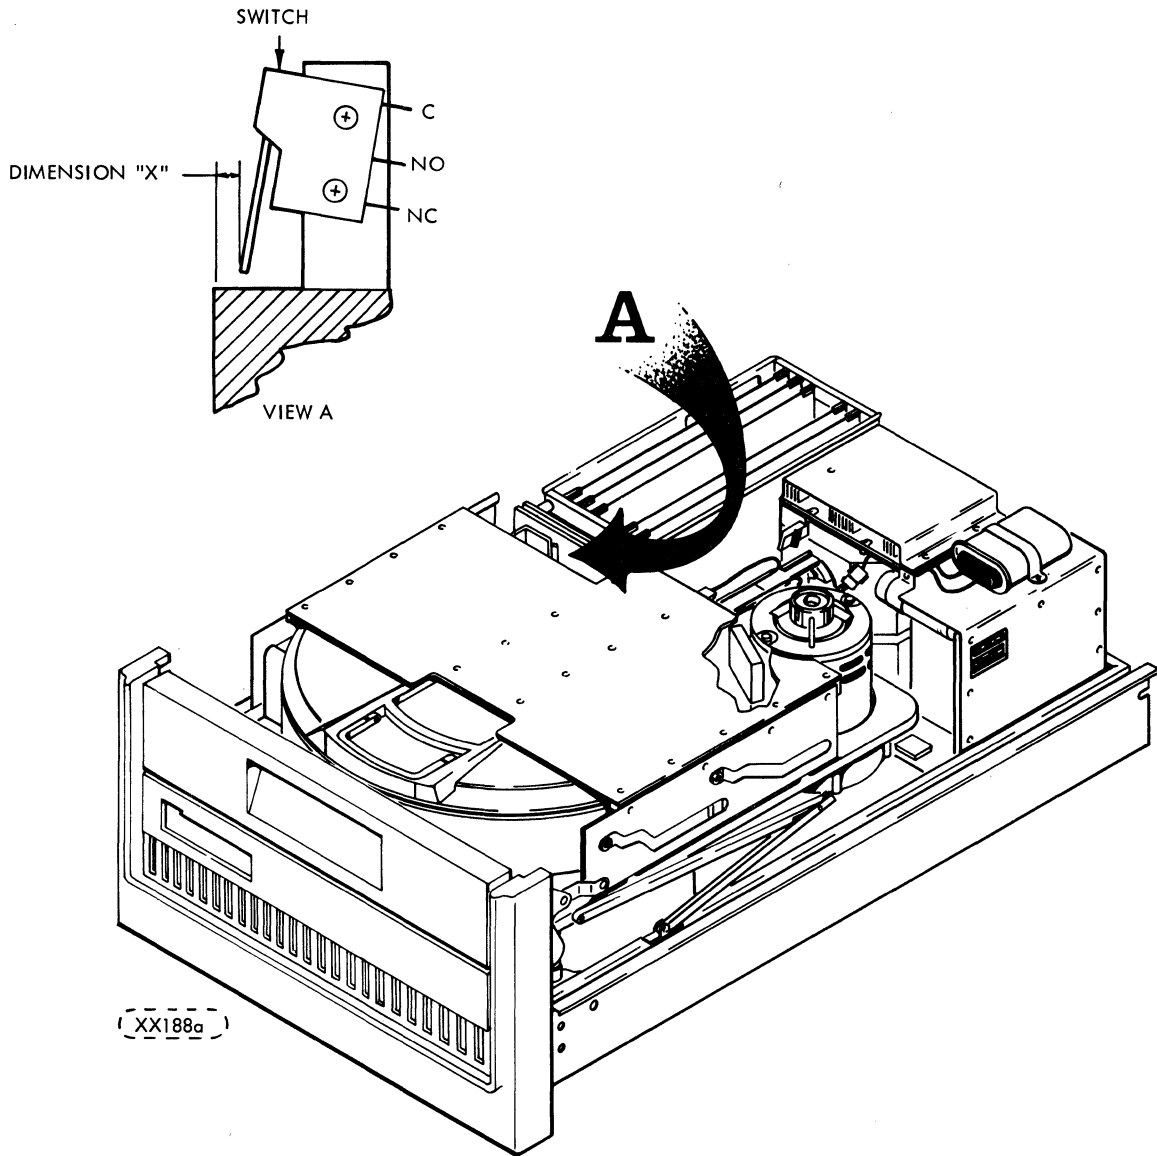


Figure 6-22a. Cartridge-In-Place Switch Adjustment

6.8.3.3 Deck Down Interlock Switch Adjustment

1. STOP and power down per 2.3.3 and 2.3.4.
2. Remove cover per 6.7.1.
3. Swing Electronics Module to the maintenance position per 6.7.2. Do not raise the Base Deck Assembly.
4. Locate the switch and switch leadwires (see Figure 6-22b).
5. With Base Deck in the normal (down) position the switch should be in the operating position (see NOTE at beginning of Section 6.8.3 on operating position and test method) and the normally open contacts should be closed.
6. If the switch is not in the operating position, loosen the hardware that secures the switch mounting bracket to the Deck support bracket and adjust the switch upward such that the Base Deck casting will contact the switch lever and operate the switch.
7. When adjustment is complete, check that the mounting hardware is adequately tight and replace the leadwires to the common (C) and normally open (NO) switch terminals.
8. Replace the Electronics Module to normal position.
9. Replace the top cover.
10. Set the AC power circuit breaker to ON.
11. Push the START switch to operate the drive.

6.8.3.4 Cartridge Access Door Interlock Switch Adjustment

1. Stop the unit and power down per 2.3.3 and 2.3.4.
2. Remove the cover from the unit per 6.7.1.
3. Remove the front panel per 6.7.3.
4. Refer to Figure 6-22c for the following steps. Identify the Cartridge Access Door Closed Interlock Switch and its leadwires.
5. Remove the Striker Plate mounting screws.
6. Remove the Striker Plate and spacer(s) and disconnect the leadwires.
7. Loosen the switch mounting hardware.
8. Refer to View "A" in Figure 6-22c. Adjust the position of the switch until the operating position* is reached at 0.150 ± 0.010 inches (3.8 ± 0.3 mm) below the striker plate top. This is dimension "Z" in View "A" and is measured coincident with the center line of the Striker Plate slotted mounting holes.

* Refer to the NOTE at the beginning of Section 6.8.3 on operating position and test method.


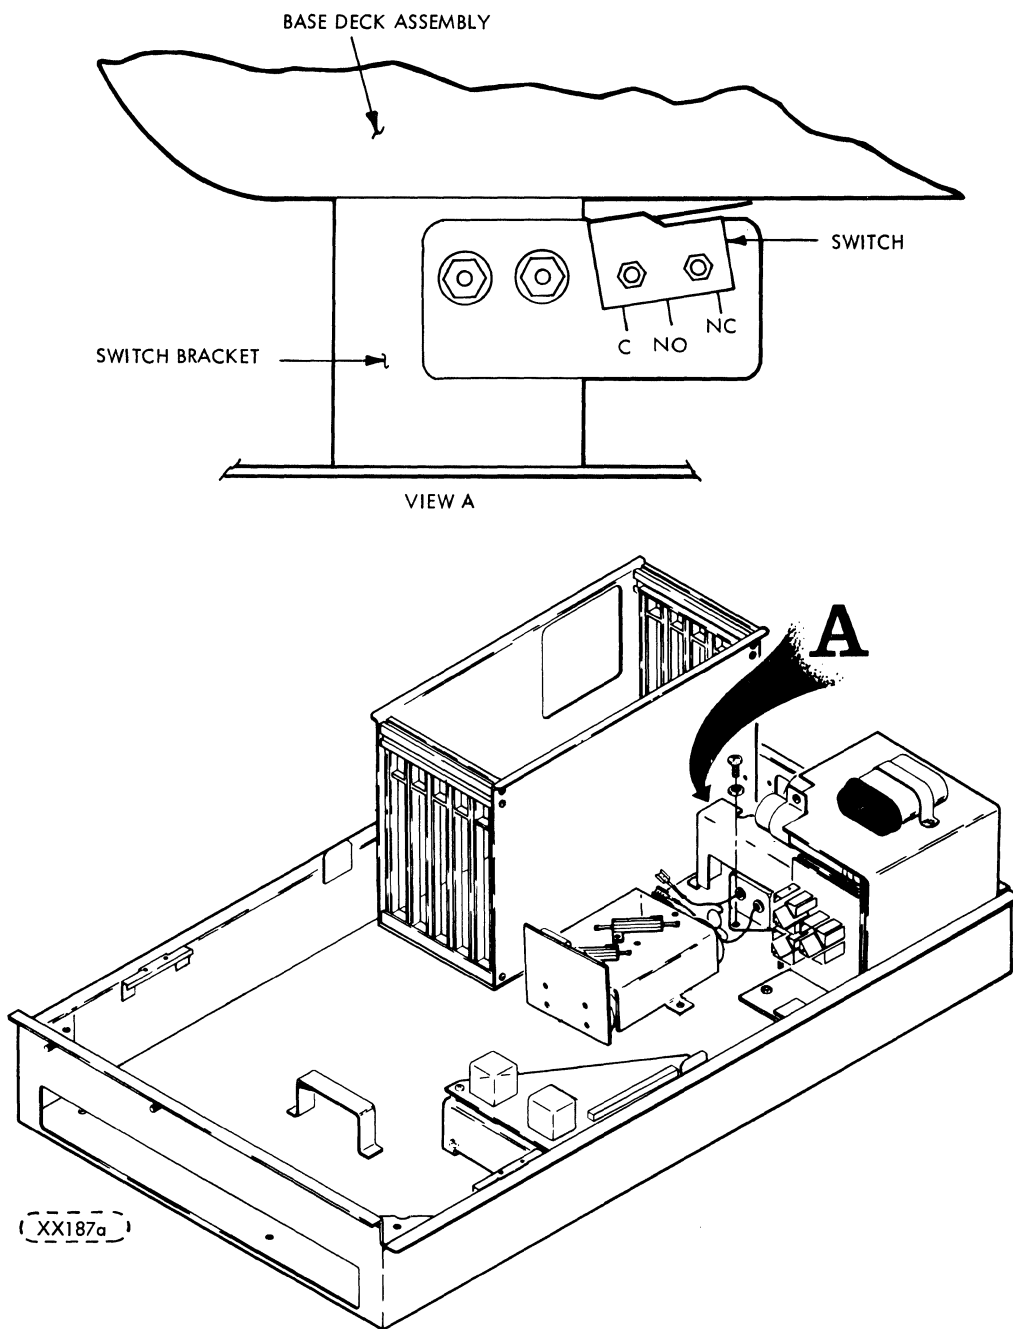


Figure 6-22b. Deck Down Interlock Switch Adjustment



(XX187b)

Figure 6-22c. Cartridge Access Door Interlock Switch Adjustment

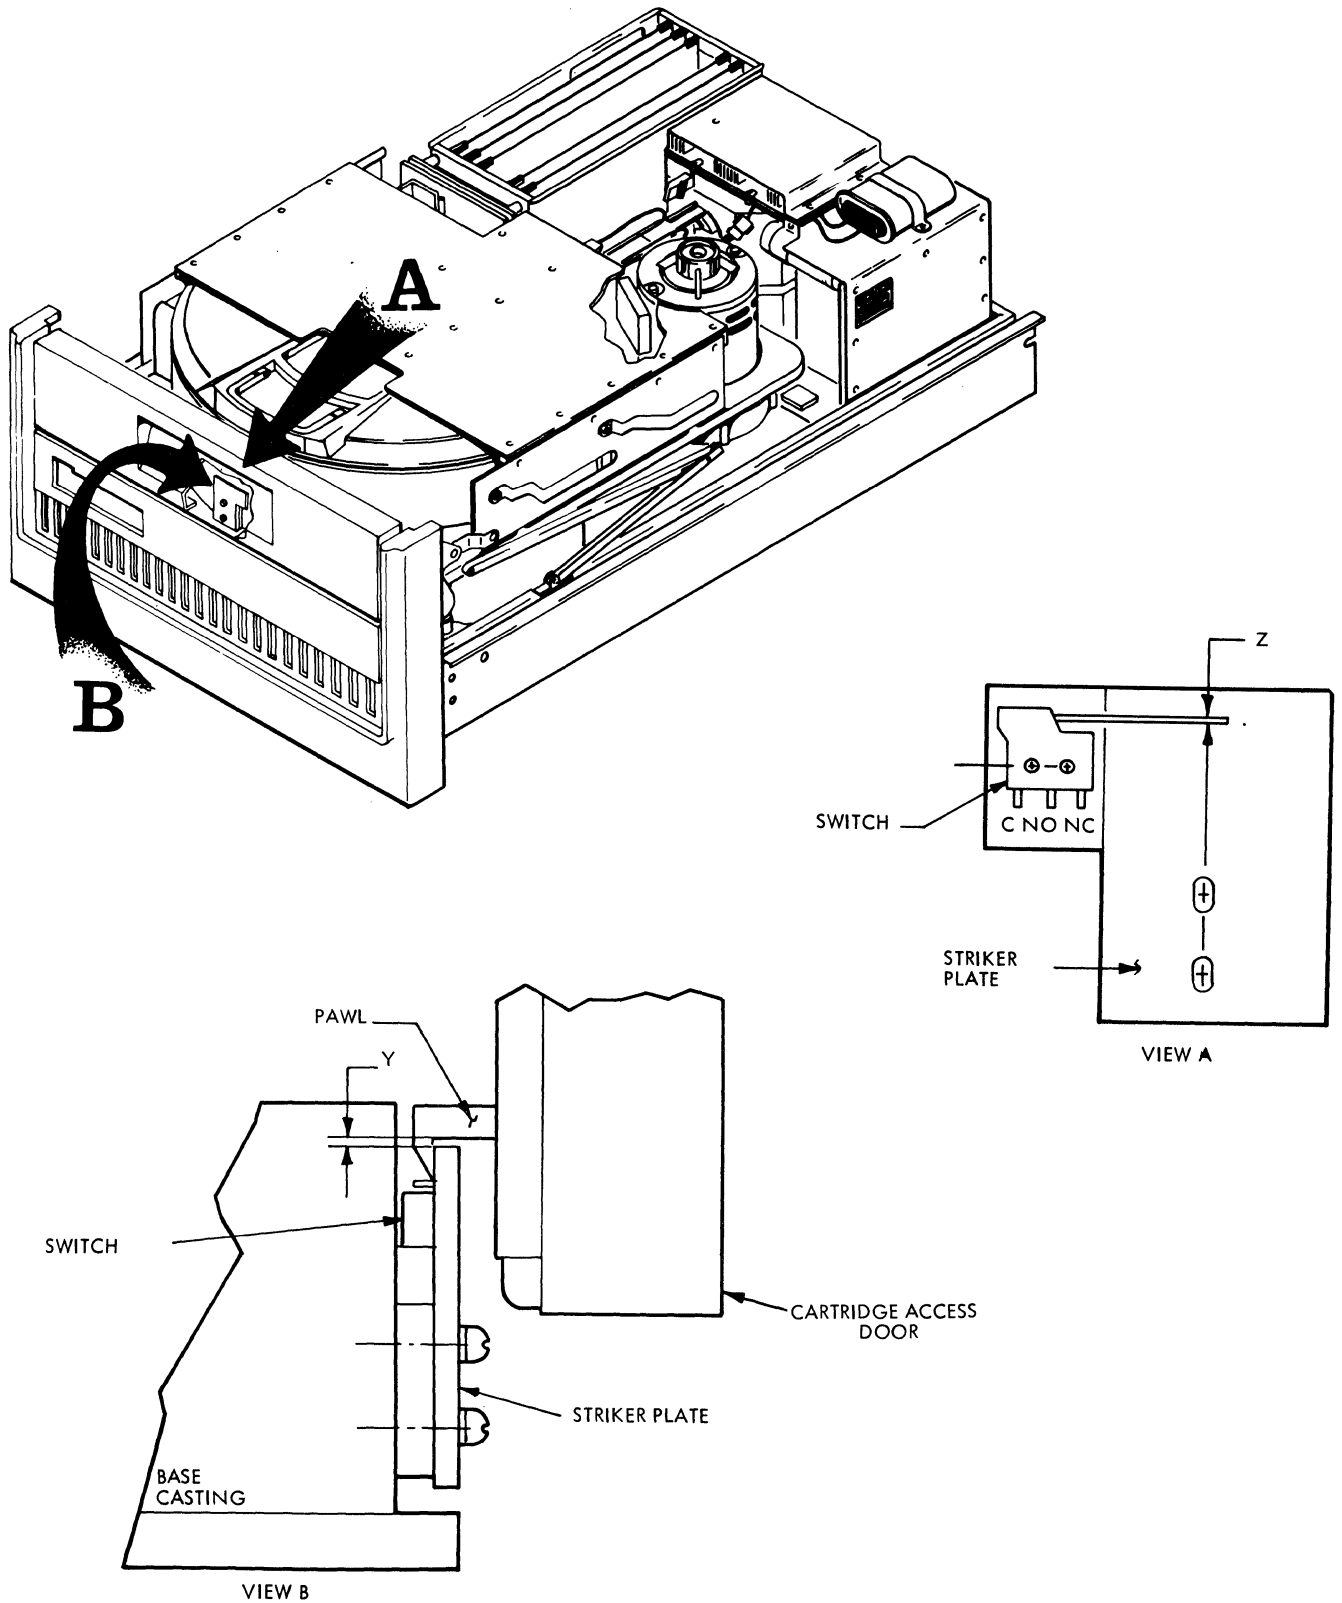


9. Tighten the switch mounting hardware and check to see that the operating position (dimension "Z") has not changed. If the operating position has changed readjust per steps 7 and 8 above.
10. Replace the leadwires, spacer(s), Striker Plate and mounting hardware. Do not tighten the Striker Plate mounting screws yet.
11. Close the door to the locked position.
12. Adjust the Striker Plate such that dimension "Y" in View B is 0.06 ± 0.01 inch (1.5 ± 0.3 mm) while applying a force of 5 to 10 pounds (22.5 to 45 Newtons) as when opening the door. Applying this force to the door causes the pawl to raise to its highest point relative to the Striker Plate.
13. Tighten the Striker Plate mounting hardware.
14. With the door still closed and locked, verify that any movement of the door due to "play" will not allow the switch contacts to open. If the switch contacts open readjust the switch per this procedure.
15. Replace the front panel and top cover.
16. Set AC power circuit breaker to ON.
17. Push START switch to operate the drive.

6.8.4 PULSE CIRCUITS TESTS

6.8.4.1 Spin Speed Sensor Test

1. STOP and Power down per 2.3.3 and 2.3.4. Remove AC line cord from power source.
2. Remove top cover. Remove screws which secure Electronics Module.
3. Lift Electronics Module and swing to side of unit.
4. Connect oscilloscope probe channel A to TP16 on top edge of Servo-Course PWA (see Figure 3-16).
5. Set oscilloscope vertical sensitivity to 2 Volt/div for channels A & B; horizontal sensitivity to 0.1 msecond/div.
6. Set AC POWER circuit breaker to ON. Connect AC line cord to power source. Operate START switch.
7. When READY indicator comes on unit should be up to speed. Pulse width of the Spin Speed Sensor pulses should be approximately 120 μ s (this is not critical and varies slightly with spindle speed. The width after shrinking is more important (see step 8). See waveforms shown below.



(X360b)

8. Change horizontal sensitivity to 1 μ s per div. and put probe from channel B on EM3P2-B7 of the Servo-Coarse PWA. The pulse should have been shrunk to about 1 μ s in duration (100 ns min, 8.5 μ s max).

6.8.5 SERVO SYSTEM ADJUSTMENTS AND DISABLING PROCEDURE

6.8.5.1 General

There are only two adjustments that are required by field service personnel and these are the velocity gain adjustment and the servo and data read/write head alignment. The procedures for these are given in paragraphs 6.8.5.2 and 6.8.5.4. Misadjustment of these may cause difficulties that appear to be malfunctions of the hardware. If any servo PWA is replaced or swapped between drives and a malfunction appears that wasn't there before, check velocity gain.

6.8.5.2 Velocity Gain Adjustment

Position switch S1-8 on the Servo Coarse PWA to the OFF (open contacts) position (right side down)*. Actuate the momentary switch on the Control/Mux PWA (S1) and observe the fault indicators (see Figure 2-3)*. Velocity gain is adjusted to the correct value using adjustable resistor R7 on the Servo Coarse PWA. When S1 on the Control/Mux PWA is actuated, the carriage seeks to track 822 and stops there. One of the Fault indicators #3 through #7 will light to indicate the status of the Velocity gain. Table 6-4 shows the interpretation of the Fault indicators when S1 is activated and shows which way to turn R7 to bring the Velocity gain into proper adjustment. Each time S1 is actuated the drive performs a seek to track 822 and the M.P. calculates the velocity of the carriage and stores it. The value of velocity stored is compared with the correct value in the M.P. which then commands one of the indicators #3 through #7 be turned on, depending on the results of the comparison.

Table 6-4. Velocity Gain Adjustment Table

INDICATOR #	INTERPRETATION	SERVO COURSE R7 ADJUSTMENT
3	Velocity gain very low	Turn clock-wise coarse
4	Velocity gain low	Fine tune clock-wise
5	Velocity gain all right	No adjustment necessary
6	Velocity gain high	Fine tune counter clock-wise
7	Velocity gain very high	Turn counter clock-wise coarse

Adjust Resistor R7 slowly and actuate S1 after each R7 adjustment until Fault indicator #5 only is on, and then continue to turn the R7 adjustment screw an additional 1/4 turn in the same direction. Return S1-8 on the Servo Coarse to its normal (ON) position.

6.8.5.3 Servo Disable Procedure

It it should be necessary to disable the servo system for some reason, follow the procedure given below:

- STOP and power down per 2.3.3 and 2.3.4.
- Remove top cover of the unit.
- Remove the Servo Coarse PWA from the Electronics Module.
- Jumper together Pins E1 and E2 located in the middle, right side (component side) of the Servo Coarse PWA. Refer to Figure 3-16. A jumper plug is available.
- Replace Servo Coarse PWA. Apply power as needed.
- Remove jumper on E1 and E2 when it becomes necessary to enable the servo system again.
- Replace top cover and restore to normal operation.

*See Section 6-9 "Maintenance Aids"

6.8.5.4 CMD Head Arm Alignment

General

This section describes the procedure which should be used to align the heads of the Cartridge Module Drive (CMD) and describes the operation of some of the equipment used.

CAUTION

The maintenance manual specifically instructs field personnel to utilize correct tools and procedures when performing "Head Arm Alignment".

This CAUTION is intended to emphasize the critical nature of this procedure and hopefully prevent any further head arm or alignment tool damage due to unfamiliarity.

1. Read and understand the "Head Arm Alignment" procedure as explained in the maintenance manual.
2. Use only the specified alignment tool and calibrated torque screwdriver/bit.
3. Ensure the alignment tool is clean and free of damage.
4. Ensure the head mounting screws are tightened to the specified torque requirement. (Damage to the tool or head arm can occur if adjustment is attempted on a head that has been tightened excessively.)
5. When inserting the adjustment tool, locate the head arm slot with the tip of the tool, prior to applying any turning force.
6. When turning the tool, enough inward force should be applied on the tool, so as to prevent the tip of the tool from disengaging from the adjustment slot.

NOTE: "Rounding-out" of the head arm adjustment slot prevents further adjustment of that particular head and may ultimately require replacement.

Steps 4, 5 and 6 are especially intended to prevent "Rounding-out" of the head arm adjustment slot and/or damage to the adjustment tool.

The equipment required for the head arm alignment procedure is listed below.

- Field Test Exerciser (FTU) or system controller
- CMD Alignment Kit P/N 75882399 or 75899096
- Carriage Locking Tool P/N 75891573 (stowed on actuator magnet)
- Head Alignment Tool P/N 75893963
- C.E. Cartridge P/N 76204400

Head alignment procedures described in this section are listed below in order of their presentation in this section:

- a. General CMD Alignment Principles.
- b. Initial Head Alignment Procedure.
- c. Cartridge Read/Write Data Head Alignment Procedure.
- d. Cartridge Servo Head Alignment Procedure.
- e. Fixed Disk Module Data Read/Write Head Alignment Procedure.
- f. Fixed Disk Module Servo Head Alignment Procedure.

General CMD Alignment Principles

NOTE

Each CMD is aligned at the factory and should not need any additional alignment at the customer's site. Due to the differences in CE cartridges, thermal stability and mechanical tolerances, it is possible to exceed the standards of this procedure when checking alignment with a different CE cartridge other than the one used for initial alignment. The only time alignment would become necessary is if data recovery becomes a problem (data error or seek errors). Alignment should then be accomplished as per this procedure to minimize these accumulative differences.

In general the head alignment is accomplished on all heads by first mechanically aligning each of the fixed disk module heads when the module is first installed. Figure 1-1 shows how the oblong slot in the side of the head arm is "eyeball" aligned in the center of the round hole 5 in the carriage. An RTZ command then positions the fixed servo head on track zero, and with that carriage position as a reference the cartridge servo head is aligned. If only the two cartridge heads need to be aligned the fixed servo head is positioned to track zero and the cartridge servo head aligned. Once the cartridge servo head is aligned it is used as a reference for aligning the cartridge data head. Once this alignment is made only the cartridge heads are normally aligned after that.

NOTE

Any change in initial position of the fixed disk module servo head affects the alignment of all the fixed disk module data heads. Since there are no alignment tracks on or available to the fixed disk module data heads these heads are not normally adjusted. However, should it be necessary to align one or more of the fixed disk module heads after the initial alignment a procedure is given at the end of this section which describes the means of realignment of a fixed disk module servo or data head, though it is more involved than the normal procedure.

Head alignment on the CMD requires an alignment extender PWA to adapt the CMD Head Alignment PWA (AZPV or HFSV PWA one of which is part of the kit P/N 75882399) (75899096) for use with the CMD electronics module. The AZPV or HFSV Head Alignment PWA operates as described in the following paragraphs.

The Head Alignment PWA (called AZPV or HFSV hereafter) develops an alignment voltage derived from a voltage the Servo and Read/Write Preamplifiers produce from read head signals. When reading from a C. E. cartridge the voltage from the AZPV or HFSV PWA will be proportional to the distance that the cartridge servo (or data) head is offset from the track centerline. The drive actuator should have been positioned to the track zero centerline as defined by the fixed disk module servo head when aligning the cartridge servo head or to the centerline as defined by the cartridge servo head when aligning the cartridge data head. To measure the voltage proportional to the offset which is produced by the AZPV or HFSV PWA connect a null meter to the AZPV or HFSV PWA as shown in Figure 6-23.

There are three toggle switches on the AZPV or HFSV PWA which control the AZPV or HFSV PWA operation. These are shown in Figure 6-23 and their operation is described below.

- S1 This switch changes the polarity of the alignment voltage produced on the AZPV or HFSV PWA. This switch is used when null meter readings are taken for the purpose of calculating the offset of the head being aligned.
- S2 This switch selects the head output which will be used as an input to the AZPV or HFSV PWA. Position "S" selects the tracking servo head as an input to the AZPV or HFSV PWA (The tracking servo head is the one selected by S1 on the Head Alignment Extender PWA). Position "R/W" selects whichever of the cartridge heads (servo or data) that have been selected by the BUS OUT interface lines or by S1 on the Servo Fine PWA located in EM6.
- S3 This switch selects the sensitivity range of the AZPV or HFSV PWA. In the "X.1" position the alignment voltage is attenuated by a factor of 10. Head alignment error cannot be accurately measured with S3 in this position. In the "X1" position the alignment voltage is not attenuated and the head alignment error can be accurately measured.

Four indicators are provided on the HFSV PWA (but not on AZPV) to ensure that the PWA is operating properly and is receiving the proper data. These indicators are described as follows:

- POWER - When lighted it indicates that power is applied to the PWA.
- INPUT - When lighted it indicates that the voltage levels of the input signals are too low for the alignment PWA to operate.
- BAD TRACK - When lighted it indicates a short duration loss of input to the HFSV PWA. A one-shot circuit maintains the lighted condition for at least four seconds. When S1 is switched from P to N or N to P the indicator will light for its four second cycle each time the switch is moved.
- MODE - When lighted it indicates that either S2 is in the "S" (servo) position or S3 is in the "X.1" position. When either of these conditions exist (light on) read/write head alignment error cannot be measured.

Head alignment is required on a new drive before leaving the factory, when a used drive has a fixed disk module replaced, and when any of the drive servo or data heads are replaced. If a head replacement is required because of contact between the disk and the head, the disk module involved should also be replaced, as a new head would not fly over a damaged disk.

Initial Head Alignment Procedure

Following is a description of the initial head alignment procedure; that is, the procedure to be used when aligning the heads for the first time on a new unit or when the fixed disk module is replaced.

1. Operate the START switch to the STOP position to stop the drive motor. Wait until the motor has stopped. That is, when the READY indicator has stopped blinking.
2. Set AC circuit breaker in the rear of the unit to OFF position.
3. Install the "C.E." cartridge (P/N 76204400) and activate the write protect switches located on the operator control panel.
4. Raise the case cover assembly.
5. Install the AZPV or HFSV Head Alignment PWA (P/N 54226509) into the Head Alignment Extender PWA (see Figure 6-23) and install the entire assembly in the electronics module location EM4.
6. Install the two head alignment calbes between the Head Alignment Extender PWA, the Servo-Fine PWA (located in EM6) and the Read/Write Preamp PWA as illustrated in Figure 6-23.

NOTE

Make sure the arrow on the connector head lines-up with pin 1 of both connectors J1 and J2 on the Head Alignment Extender PWA and the Servo-Fine PWA.

7. Set switch S1 on the Head Alignment Extender PWA to "FXD" position.
8. Connect the null meter leads to test points Z and X on the AZPV or HFSV PWA (red wire to "+").
9. Connect FTU to drive. Refer to FTU maintenance manual for installation instructions.

NOTE

The FTU meter can be used instead of the alignment kit meter (P/N 73576400). However, if the FTU meter is used ignore the bottom scale. Refer to the FTU maintenance manual.

10. Connect oscilloscope to ground and dibit test points (marked "Read Signal) on the Head Alignment PWA (AZPV or HFSV).
11. Remove screws which secure the electronics module (**A** Figure 6-5) to the hinge bracket and carefully lift the module directly up and slowly swing it out to the side and leave in the rest position.

CAUTION

Use only head alignment tool P/N 75893963. (**7** in Figure 6-24). Use of a different tool can cause permanent damage to head/arm and carriage.

Inspect head adjustment tool for damage (nicked, scratched, etc.) at adjustment end. End should have a polished surface where it enters carriage. Polish end with crocus cloth if aluminum deposits are present, and wipe clean. Do not use emery cloth, sandpaper, or files, which can permanently damage tool, and subsequently damage heads and carriage holes. Do not use a defective tool. Repair or replace tool if damage exists.

Use care when using the head alignment tool **7** (refer to Figure 6-24). The tool should slip easily through the alignment hole (in the carriage) and into the slot in the head/arm. When adjusting the head, the tool should turn freely in the hole. If anything more than a small amount of force is required to adjust the head/arm, the tool is probably binding in the hole (in the carriage).

12. Center the alignment slot of all heads (read/write data and servo) associated with the fixed disk module (see **5** in Figure 6-24).

CAUTION

While torquing the head clamping screws **3** (Figure 6-24) use only straight allen wrench and keep it as perfectly aligned as possible with head mounting screw. If care is not taken during this operation head/arm may be pushed out of alignment.

13. Torque all fixed pack head clamping screws ③ to $12 \pm 1/2$ lbf-in (1.26 to 1.38 Nm) while observing the centering ⑤ .
14. Torque the head clamping screws of the removable cartridge heads to $4 \pm 1/2$ lbf-in (0.40 to 0.51 Nm).
15. Set AC power circuit breaker to ON.
16. Press START switch to start drive motor and load heads.
17. Perform thermal stabilization: Allow drive to run with heads loaded for a minimum of 60 minutes. If head/arm alignment check is being performed on more than one drive, the CE disk pack needs only a 15 minute purge per drive after head/arm alignment check has been performed on the preceding drive (provided drive under test has been running for 60 minutes immediately preceding check).


CAUTION

MAKE CERTAIN THAT NO ELECTRICAL CONDUCTORS SUCH AS THE CARRIAGE LOCKING TOOL, HEAD ALIGNMENT TOOL, SCREW DRIVER OR OTHER SUCH TOOLS COME IN CONTACT WITH THE HEAT SINKS MOUNTED ON TOP OF THE VOICE COIL ACTUATOR.

18. Insure the following switches are set in the positions given:
 - S1 of Servo-fine in "SERVO" position.
 - S1 of Head Alignment Extender PWA in "FXD" position.
 - S1 of AZPV or HFSV PWA in "N" position.
 - S2 of AZPV or HFSV PWA in "RW" position.
 - S3 of AZPV or HFSV PWA in "X1" position.

NOTE


All AZPV or HFSV PWA switches are positioned toward the rear of the drive.

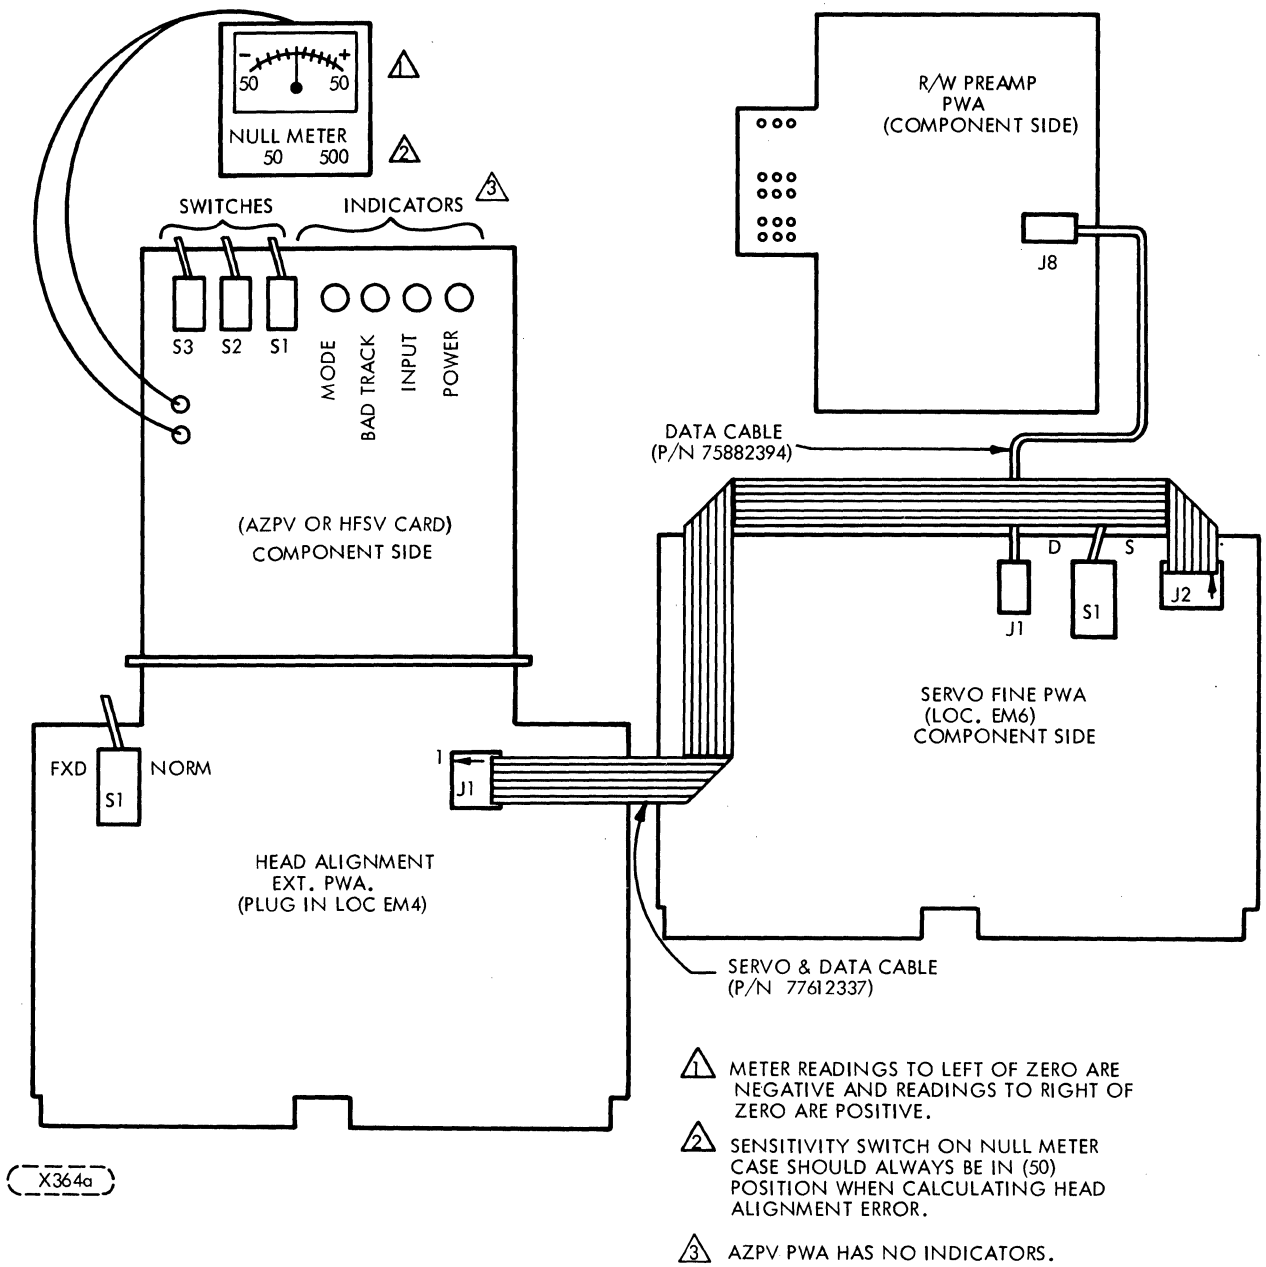

- ⚠ METER READINGS TO LEFT OF ZERO ARE NEGATIVE AND READINGS TO RIGHT OF ZERO ARE POSITIVE.
- ⚠ SENSITIVITY SWITCH ON NULL METER CASE SHOULD ALWAYS BE IN (50) POSITION WHEN CALCULATING HEAD ALIGNMENT ERROR.
- ⚠ AZPV PWA HAS NO INDICATORS.

X364a

Figure 6-23. Head Alignment Block Diagram

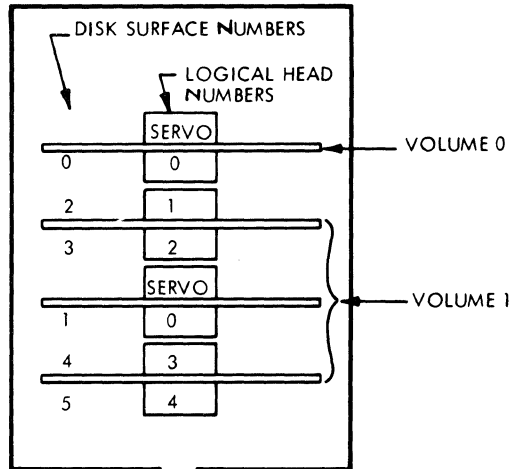

X325a

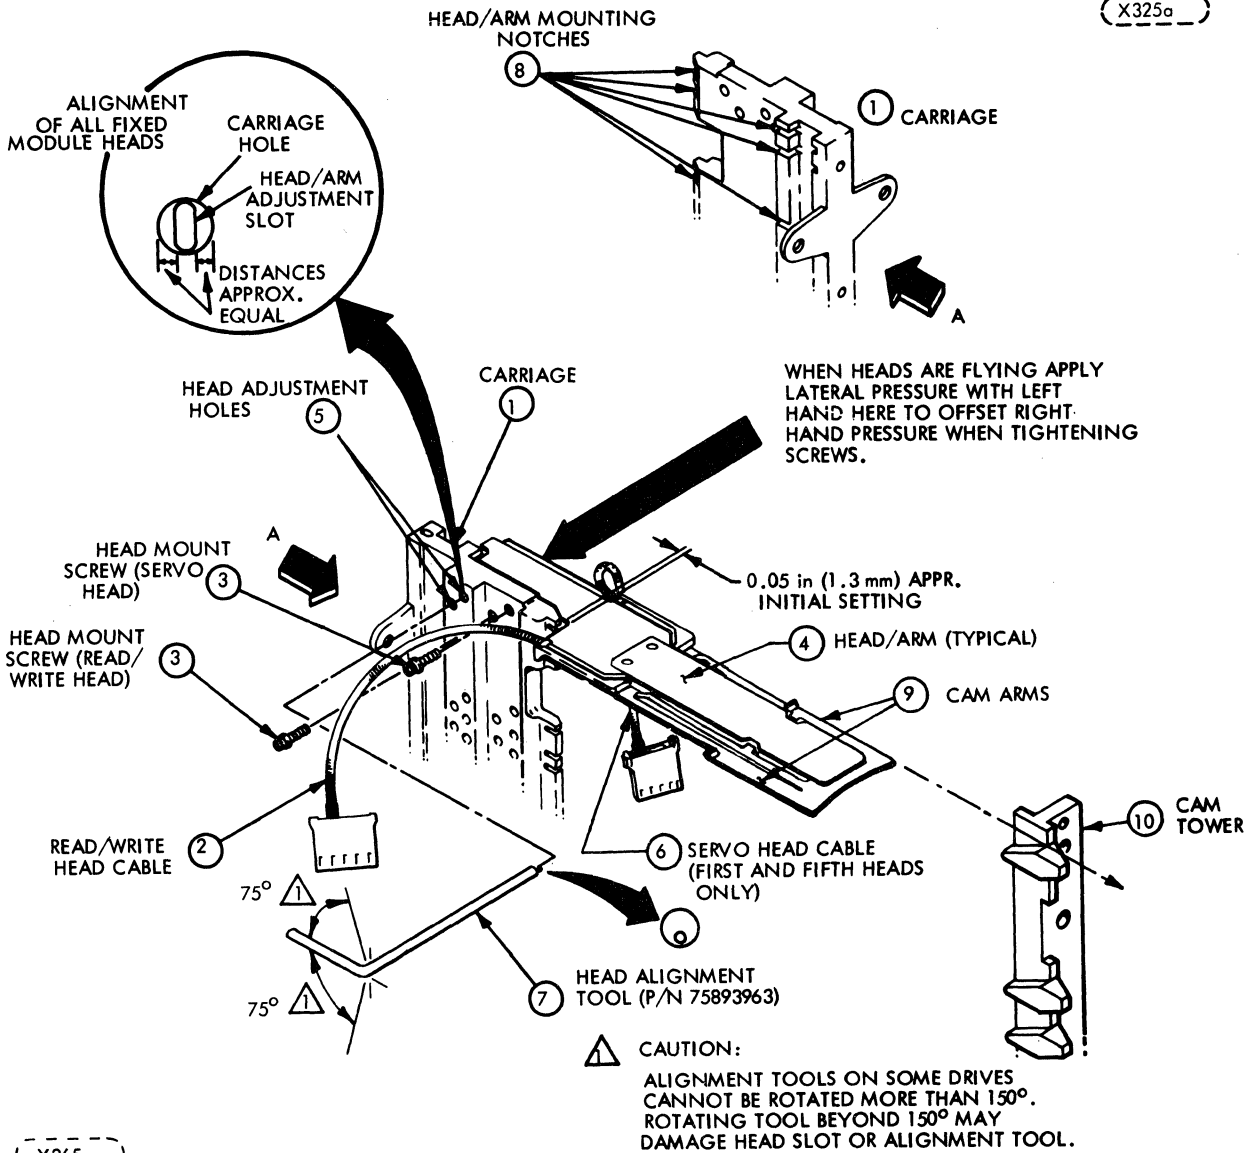


Figure 6-24. Head/Arm Removal and Replacement and Alignment

OSCILLOSCOPE SETTINGS

LOGIC GROUND TO SCOPE GROUND

VOLTS/DIV

CH 1 - 0.5 V
CH 2 - NOT USED

TIME/DIV


A - 0.5 μ s
B - NOT USED

TRIGGERING

A - INTERNAL POSITIVE
B - NOT USED

PROBE CONNECTIONS (USE X10 PROBE)

CH 1 TO FTU DIBITS JACK
CH 2 NOT USED

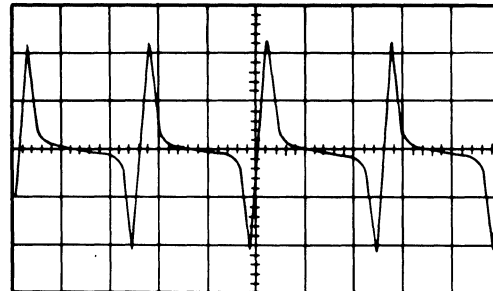

X369a

Figure 6-25. Guard-Band Waveform Pattern

OSCILLOSCOPE SETTINGS

LOGIC GND TO SCOPE GND

VOLTS/DIV

CH 1 - 0.2 V
CH 2 - NOT USED

TIME/DIV


A - 0.5 μ s
B - NOT USED

TRIGGERING

A - INTERNAL POSITIVE
B - NOT USED


PROBE CONNECTIONS (USE X10 PROBE)

CH 1 TO FTU DIBITS JACK
CH 2 - NOT USED

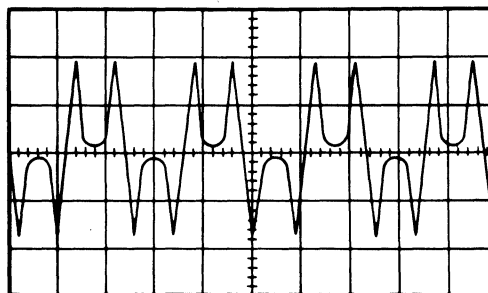

X369b

Figure 6-26. Balanced Dibit Pattern

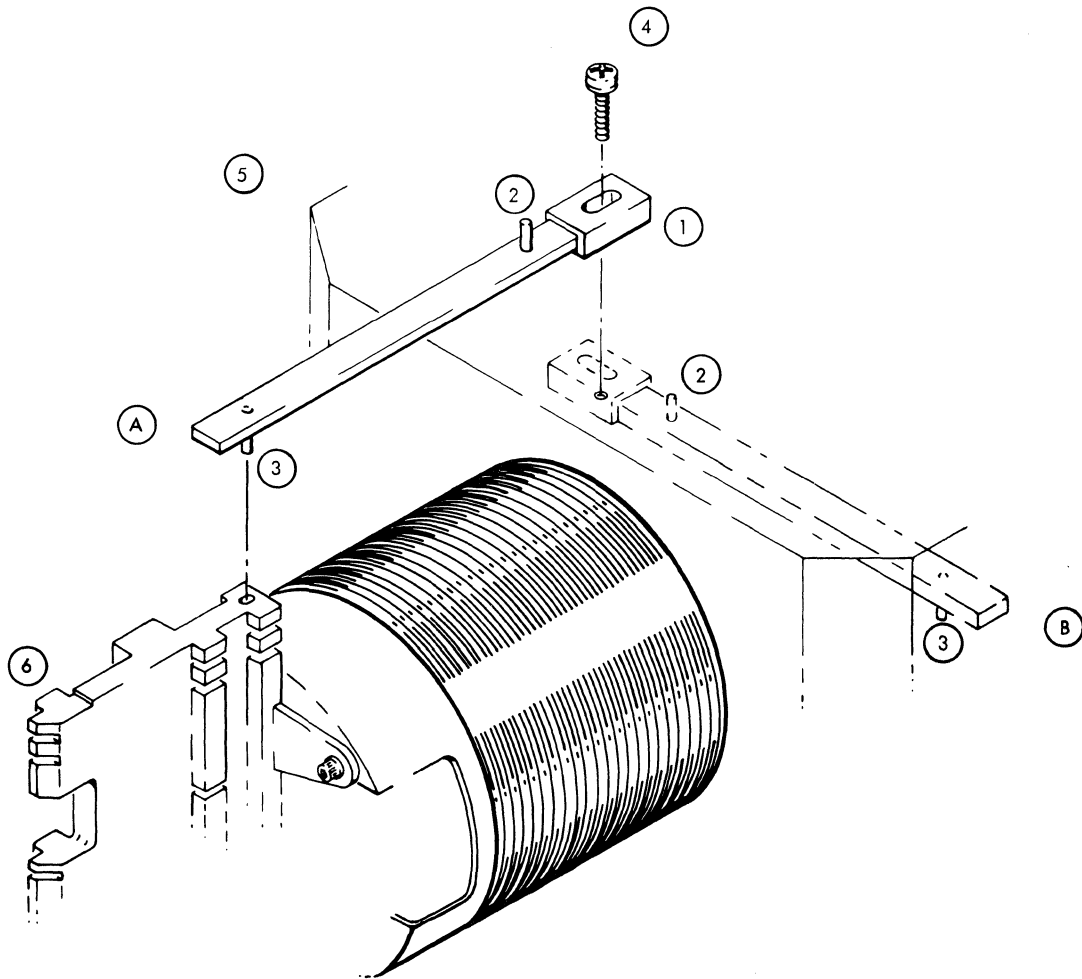

- (X231b)
- (A) CARRIAGE LOCK PIN (1) IN HEAD ALIGNMENT POSITION
 - (B) CARRIAGE LOCK PIN (1) IN OPERATING POSITION

Figure 6-27. Carriage Locking Tool-Head Alignment Position

19. Issue an RTZ command. This command is necessary to initialize the servo on track "0" of the fixed pack.

CAUTION

Whenever the heads are adjusted and the clamping screws are turned while the heads are flying, extreme care should be taken so as not to move the carriage assembly in a lateral direction (right angles to the normal direction of head movement). THE RESULTANT FORCE CAN ROTATE THE CARRIAGE ASSEMBLY AND CAUSE SEVERE DAMAGE TO THE HEADS AND DISKS. This motion can be prevented by applying sufficient counter force on the opposite side of the carriage as shown by the large arrow in Figure 6-24.

20. Assuming the head alignment tool is to be manipulated with the right hand, place the left hand with the side of the pointer finger against the carriage assembly on the opposite side from where the head alignment tool is inserted. Apply pressure with the left hand only when the right hand applies pressure and then try to apply equal pressure with both hands (see step 21 below).
21. Using a head alignment tool (P/N 75893963) move the cartridge servo head toward the rear of the drive until the outer guard-band is reached. The outer guard band can be located by observing the waveform on the oscilloscope (see Figure 6-25). The waveform shape and amplitude remains constant throughout the guard-band.
22. Once the guard band has been located use the tool to move the cartridge servo head toward the disk center until cylinder number zero is reached. This can be determined by the meter reading of null (centered) and a scope waveforms as shown in Figure 6-26. Remove the head alignment tool.

NOTE

Steps 21 and 22 should be repeated to insure that cylinder zero is captured.

23. Perform a seek to cylinder 404. Null meter should be set to its least sensitive range.
24. Install Carriage Locking Tool P/N 75891573. See Figure 6-27.
 - a. Allow drive temperature to stabilize for 5 minutes at this cylinder.

25. Calculate the offset using the following procedure:

- Oscilloscope waveform should be similar to Figure 6-26.
- Set null meter to its least sensitive range (switch S3 of AZPV or HFSV PWA must be on "X1").
- Move S1 of AZPV or HFSV PWA to "P" and record meter reading.
- Calculate the offset as described below.

$$(P) - (N) = \text{OFFSET}$$

P is the meter reading with the POS/NEG switch in the POS position. N is the meter reading with the POS/NEG switch in the NEG position. Meter readings to the right of zero are positive. Meter readings to the left of zero are negative.

EXAMPLE 1: $P = +20, N = +15; (P) - (N) = (20) - (15) = 5$

EXAMPLE 2: $P = +20, N = -15; (P) - (N) = (20) - (-15) = 35$

EXAMPLE 3: $P = -20, N = +15; (P) - (N) = (-20) - (+15) = -35$

26. Insert the head alignment tool again and remembering to offset any force applied by the tool hand with the other hand, adjust the cartridge servo head position to obtain a calculated offset of less than ± 50 mV.
27. Torque the servo head clamping screw to $12 \pm 1/2$ lbf-in (1.26 to 1.38 Nm).
28. Re-calculate the offset and make any minor (only) adjustment required if the offset calculates to be greater than ± 50 mV. A minor (but only minor) adjustment can be made after the clamping screw has been tightened.
29. REMOVE THE CARRIAGE LOCKING TOOL, BEING CAREFUL TO KEEP HANDS OUT OF THE WAY OF THE CARRIAGE IN CASE IT SHOULD RETRACT.
30. Perform a seek to cylinder 8. Allow drive to stabilize five minutes at this cylinder.
31. Calculate the offset as in step 25. Record the offset calculated for later reference.
32. Seek to cylinder 800. Allow drive to stabilize for five minutes at this cylinder.
33. Calculate the offset as in step 25 and record the offset for later reference.

NOTE

Oscilloscope waveforms at cylinders 8 and 800 should be similar to Figure 6-26. Calculated offset should be less than ± 600 mV. If either cylinder offset is greater than ± 600 mV, repeat steps 23 through 33. Minor compensatory adjustments can be made at cylinder 404 in an attempt to effect the offset at cylinders 8 and 800. However, the final calculated offset can not exceed ± 100 mV at cylinder 404.

34. Set the following switches to the positions given:
 - S1 of Servo Fine to "DATA".
 - S1 of Head Alignment Extender PWA to "NORMAL".
 - S1 of AZPV or HFSV PWA to "N".
 - S2 of AZPV or HFSV PWA to "R/W".
 - S3 of AZPV or HFSV PWA to "X1".
35. Command RTZ.

NOTE

This insures that the drive will servo on the cartridge servo and select data head 0.

36. Repeat steps 23 through 33 for the cartridge data head.
37. Command an alternate seek between cylinders 257 and 512 for a minimum of 30 seconds.
38. Check the cartridge servo head alignment. To do this set the following switches to the positions given:

- S1 of the Servo Fine PWA to "SERVO".
- S1 of the Head Alignment Extender PWA to "FXD".
- S1 of AZPV or HFSV PWA to "N".
- S2 of AZPV or HFSV PWA to "R/W".
- S3 of AZPV or HFSV PWA to "X1".

Seek to cylinder 404, allow drive to stabilize 5 minutes and calculate the offset as in step 25 for the cartridge servo head. If the calculated offset is greater than 300 mV repeat steps 23 through 33 and then 37 and 38.

39. Check the cartridge data head alignment. To do this set the following switches to the positions given and perform the other operations as specified:
 - S1 of the Servo Fine PWA to "DATA".
 - S1 of the Head Alignment Extender PWA to "NORM".
 - Select head 0 (i.e., issue RTZ command).
 - Seek to cylinder 404, allow drive to stabilize for 5 minutes and calculate the offset for the cartridge data head as described in step 25. If the calculated offset exceeds 300 mV at any of these alignment cylinders repeat steps 34 through 39.

40. When head alignment is satisfactorily completed press the STOP/START switch to stop the drive and wait until the spindle drive motor has stopped.
41. Remove the CE cartridge and install the cartridge into its protective cover.
42. Write Protect switches on the operators panel can be released if desired.
43. Set the AC circuit breaker (rear of drive) to the OFF position.
44. Remove the head alignment kit from drive:
 - Meter
 - AZPV or HFSV PWA and extender PWA
 - Cable from R/W preamp PWA to Servo Fine PWA
 - Cable from extender PWA to Servo Fine PWA.
45. Return the Electronics Module to its normal position and install locking screws (Figure 6-5).

CAUTION

USE EXTREME CAUTION when setting the Electronics Module down into its normal position. Cables that are in the close proximity of the Electronics Module will be damaged if caution is not used.

46. Store the carriage locking tool in its normal operating position as shown in Figure 6-27.
47. Install the drive cover assembly.

CARTRIDGE DATA HEAD ALIGNMENT PROCEDURE

The procedure for aligning a newly replaced (per section 6.7.5) cartridge data read/write head is given in the following paragraphs.

CAUTION

Use only head alignment tool P/N 75893963. (7 in Figure 6-24). Use of a different tool can cause permanent damage to head/arm and carriage.

Inspect head adjustment tool for damage (nicked, scratched, etc.) at adjustment end. End should have a polished surface

where it enters carriage. Polish end with crocus cloth if aluminum deposits are present, and wipe clean. Do not use emery cloth, sandpaper, or files, which can permanently damage tool, and subsequently damage heads and carriage holes. Do not use a defective tool. Repair or replace tool if damage exists.

Use care when using the head alignment tool (7) (refer to Figure 6-24). The tool should slip easily through the alignment hole (in the carriage) and into the slot in the head/arm. When adjusting the head, the tool should turn freely in the hole. If anything more than a small amount of force is required to adjust the head/arm, the tool is probably binding in the hole (in the carriage).

Refer to "INITIAL HEAD ALIGNMENT PROCEDURE" in performing the following steps for the CARTRIDGE DATA HEAD.

- A. Perform steps 1 through 11.
- B. Perform steps 14 through 17.
- C. Perform steps 34 through 37.
- D. Perform steps 39 through 47.

CARTRIDGE SERVO HEAD ALIGNMENT PROCEDURE

The procedure for aligning a newly replaced (per section 6.7.6) cartridge servo head is given in the following paragraphs.

CAUTION

Use only head alignment tool P/N 75893963. (7) in Figure 6-24. Use of a different tool can cause permanent damage to head/arm and carriage.

Inspect head adjustment tool for damage (nicked, scratched, etc.) at adjustment end. End should have a polished surface where it enters carriage. Polish end with crocus cloth if aluminum deposits are present, and wipe clean. Do not use emery cloth, sandpaper, or files, which can permanently damage tool, and subsequently damage heads and carriage holes. Do not use a defective tool. Repair or replace tool if damage exists.

Use care when using the head alignment tool (7) (refer to Figure 6-24). The tool should slip easily through the alignment hole (in the carriage) and into the slot in the head/arm. When adjusting the head, the tool should turn freely in the hole. If anything more than a small amount of force is required to adjust the head/arm, the tool is probably binding in the hole (in the carriage).

Refer to "INITIAL HEAD ALIGNMENT PROCEDURE" in performing the following steps for the CARTRIDGE SERVO HEAD.

- A. Perform steps 1 through 11.
- B. Perform step 14 through 47.

FIXED DISK MODULE DATA READ/WRITE HEAD ALIGNMENT PROCEDURE

The procedure for aligning a newly replaced (per Section 6.7.7) fixed disk module data read/write head is given in the following paragraphs.

CAUTION

Use only head alignment tool P/N 75893963. (7 in Figure 6-24). Use of a different tool can cause permanent damage to head/arm and carriage.

Inspect head adjustment tool for damage (nicked, scratched, etc.) at adjustment end. End should have a polished surface where it enters carriage. Polish end with crocus cloth if aluminum deposits are present, and wipe clean. Do not use emery cloth, sandpaper, or files, which can permanently damage tool, and subsequently damage heads and carriage holes. Do not use a defective tool. Repair or replace tool if damage exists.

Use care when using the head alignment (7) (refer to Figure 6-24). The tool should slip easily through the alignment hole (in the carriage) and into the slot in the head/arm. When adjusting the head, the tool should turn freely in the hole. If anything more than a small amount of force is required to adjust the head/arm, the tool is probably binding in the hole (in the carriage).

NOTE

In order to recover data when changing a fixed disk module data read/write head the host system must be utilized in order to read the formatted surface involved.

- a. Allow the drive to stabilize by running with heads loaded for a minimum of 15 minutes.
- b. Seek to and attempt to read from the replaced head at cylinder 404 (a continuous loop read and error print-out is desired).
- c. Install the carriage locking tool in the head alignment position as shown in Figure 6-27.
- d. Connect an oscilloscope so as to be able to lock at the read analog differential voltage across TP1 and TP2 of the read/write preamp PWA. Move the newly replaced head slowly in the forward and reverse directions with the head alignment tool while watching the read voltage and listening to the error print out. Adjust initially for maximum read voltage. Continue adjusting until no error is printed.
- e. Torque the head clamping screw to $12 \pm 1/2$ lbf-in (1.26 to 1.38 Nm) and readjust the head for zero error printout if necessary.
- f. Repeat the fine tune adjustment step with the head alignment tool until the drive will read error free.
- g. Remove the head alignment tool.
- h. Remove carriage locking tool (see step 29). It should be noted that although the above procedure is designed to recover as much of the customer data as possible, the error rate performance cannot be guaranteed over the range of environmental extremes normally specified for the drive. Therefore, it is recommended that all of the data be recovered from and be rewritten on the surface covered by the newly replaced head.
- i. Operate the STOP/START switch to the STOP position and wait for the drive to stop turning.
- j. Set the AC circuit breaker to OFF.
- k. Install case cover assembly.
- l. Turn on AC circuit breaker and start the drive.

FIXED MODULE SERVO HEAD ALIGNMENT PROCEDURE

The procedure for aligning a newly replaced (per Section 6.7.8) fixed servo head is given in the following paragraphs.

CAUTION

Use only head alignment tool P/N 75893863. (7 in Figure 6-24). Use of a different tool can cause permanent damage to head/arm and carriage.

Inspect head adjustment tool for damage (nicked, scratched, etc.) at adjustment end. End should have a polished surface where it enters carriage. Polish end with crocus cloth if aluminum deposits are present, and wipe clean. Do not use emery cloth, sandpaper, or files, which can permanently damage tool, and subsequently damage heads and carriage holes. Do not use a defective tool. Repair or replace tool if damage exists.

Use care when using the head alignment tool (7) (refer to Figure 6-24). The tool should slip easily through the alignment hole (in the carriage) and into the slot in the head/arm. When adjusting the head, the tool should turn freely in the hole. If anything more than a small amount of force is required to adjust the head/arm, the tool is probably binding in the hole (in the carriage).

- a. The fixed disk module servo head clamping screw should have been torqued to 4 1/2 lbf-in (0.4 Nm) when installed.
- b. Plug the cartridge servo head connector into J3 (bottom header) of the Servo Preamp PWA.
- c. Plug the fixed disk module servo head connector into J1 (top header).

Refer to "INITIAL ALIGNMENT PROCEDURE" in performing the following steps.

- d. Perform steps 5 through 11 for the fixed disk module servo head.
- e. Perform steps 15 through 33 for the fixed disk module servo head.
- f. Perform steps 37, 38 and 40 for the fixed disk module servo head.

CAUTION

Make sure adjustment is on the fixed disk module servo head.

- g. Set CB1 to the OFF position.
- h. Plug the Cartridge servo head connector into header J1 of the Servo Preamp PWA.
- i. Plug the fixed disk module servo head connector into header J3 of the Servo Preamp PWA.

NOTE

It is recommended that the data on the fixed disk module be recovered and re-formatted subsequent to completion of the alignment procedure involving a fixed pack servo.

- j. Set AC circuit breaker to the ON position.
- k. Start the Drive
- l. Recover and reformat the fixed disk module data.
- m. Stop the Drive.
- n. Perform steps 43 through 47.

6.8.6 CARRIAGE RESTRAINT BLOCK ADJUSTMENT

The carriage restraint blocks limit the carriage roll movement during head adjustment. Re-adjustment of these blocks is necessary when (a) The actuator magnet is removed and replaced. (b) The carriage is replaced. (c) The carriage center rail and or side bearing plates are replaced.

NOTE


Block G (Figure 6-28) must be adjusted with the carriage fully extended. This can be done only with the spindle up to speed and heads at track 823 or when the heads and/or all disks have been removed from the drive.

1. Position carriage at inner track to check or adjust dimension \textcircled{C}
2. Check dimension \textcircled{C} to insure that it is between 0.001 and 0.005 inches (0.025 - 0.125mm). This measurement should be done by sliding a 0.001 and a 0.003 inch thick shim (0.03 and 0.08mm shims) between the block \textcircled{G} and the bearing plate \textcircled{K} .
3. To adjust dimension \textcircled{C} , loosen screw F and slide a 0.003 inch (0.08mm) shim between the bearing plate \textcircled{K} and the block \textcircled{G} . Move the block \textcircled{G} down to firmly clamp the shim and tighten screw \textcircled{F} .
4. Repeat step 2.
5. If this spacing is not correct, repeat steps 3 and 4 above.

NOTE

Block H (Figure 6-28) must be adjusted with the carriage fully retracted.

1. Position carriage in retracted position to check or adjust dimension \textcircled{D} .
2. Check dimension \textcircled{D} to insure that it is between 0.001 and 0.005 inches (0.025 and 0.125mm) This measurement should be done by sliding a 0.001 and 0.003 inch thick shim (0.003 and 0.08mm shims) between the block H and the bearing plate \textcircled{K} .
3. To adjust dimension \textcircled{D} , loosen screw E and slide a 0.003 inch (0.08mm) shim between the bearing plate \textcircled{K} and the block \textcircled{H} . Move the block \textcircled{H} down to firmly clamp the shim and tighten screw \textcircled{E} .
4. Repeat step 2.
5. If this spacing is not correct, repeat steps 3 and 4 above.

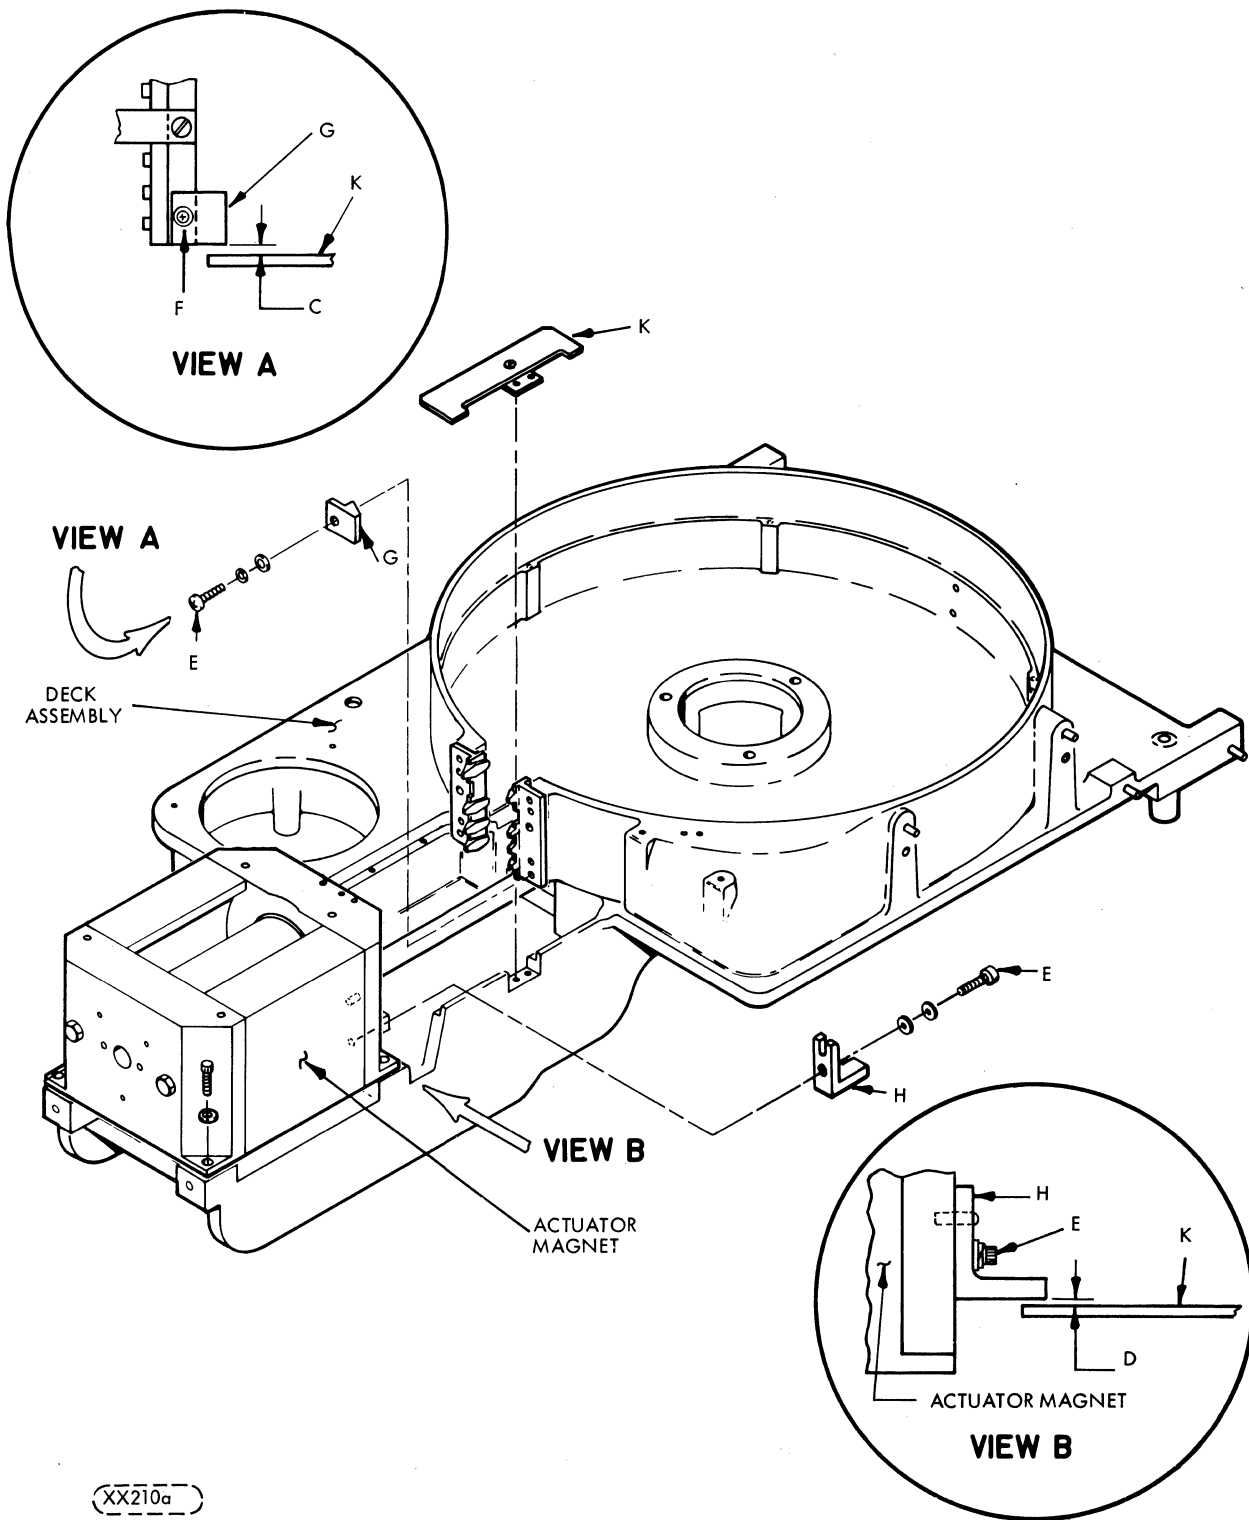

XX210a

Figure 6-28. Carriage Restraint Block Adjustment

6.9 MAINTENANCE AIDS

6.9.1 MAINTENANCE SWITCHES AND INDICATORS

Maintenance switches and indicators are listed with a brief functional description in Tables 6-5 and 6-6. These switches and indicators are located on the Control/Mux, I/O Servo Coarse and Servo Fine PWAs in the Electronics Module and should only be accessed by the field service Engineer. Although the indicator on the operators panel on the front of the unit have some value for maintenance purposes, they are discussed in Section 2 so their use need not be discussed here. Those switches and indicators which are intended solely for maintenance purposes are discussed in this section. The switches and indicators can be seen on the component layout drawings which accompany each schematic diagram in Section 5. See page 5-1 for page number of the various schematics.

On the Control/Mux PWA (see Figure 2-3) is a bank of seven LED maintenance indicators numbered CR1 through CR7 which have four different uses. They are used for 1) displaying non-microprocessor detected faults, 2) displaying the present cylinder address held in the Microprocessor, 3) displaying microprocessor-detected faults, and 4) assisting in velocity gain adjustment. As viewed from the component side of the PWA, CR1 is leftmost and CR7 is rightmost, with a separation between CR1 and CR2 that is slightly wider than that between the rest of the indicators. This space is to separate CR1 from CR2 and the other indicators which have multiple meanings, with the meaning depending on the settings of switches. The normal situation is with S1-8 on the Servo-Coarse PWA in the ON position and S1 on the Control/Mux PWA in the OFF position.* Under the indicators CR1-CR7 are abbreviations which represent the non-Microprocessor-detected faults. Following a Master Reset of the unit electronics, as long as S1 on the Control/Mux PWA is not positioned to the ON position, operation of the fault indicators remains in Mode 1. This is shown in Figure 5-5. Table 6-6 shows the meanings of the abbreviations. For example "NH" means "NO HEAD SELECT FAULT", "MP" means "MICROPROCESSOR FAULT CODE ACTIVE", "WF" means "WRITE FAULT", and so on.

Table 6-6 charts the different ways in which the indicators CR1-CR7 are used (called "Display Modes"), and Figure 6-29 contains a flow chart which may aid in the understanding of how the indicators are used. Paragraph 6.9.1.1 describes in more detail the 5 Display Modes listed in Table 6-6.

*S1 is a momentary action switch and remains OFF until manually actuated.

Table 6-5. Description of Maintenance Switches and Their Functions

SWITCH	NAME	LOCATION	FUNCTION
S1*	Fault Clear	Cntl/Mux PWA	<p>Momentary toggle switch which performs several functions in conjunction with the Maintenance Display Indicators CR1 - CR7 as follows:</p> <ol style="list-style-type: none"> 1. Resets the fault latches when in the non-microprocessor fault display mode.** 2. The same actuation of S1 that resets fault latches (#1 above) also initiates the present cylinder address display mode and causes the two highest order binary bits of the present address to be displayed on CR6 and CR7. Subsequent S1 actuations display the remainder of the cylinder addresses and a separator state. 3. After the separator state following cylinder address display, Actuations of S1 cause microprocessor-detected error conditions to be displayed on CR3-CR7. Resets the M.P. fault store and sets fault code into the fault latches for display on CR3-CR7. 4. When CR3 - CR7 are used to aid velocity gain adjustment, actuation of S1 causes the drive to execute a seek to maximum cylinder number, after which the status of the velocity is displayed.
S1	Remote/Local	I/O PWA	<p>Toggle switch provides manual override of power sequence lines or when remote spindle start is used.</p>
S2	On Line/ Off Line	I/O PWA	<p>Provides manual capability of inhibiting drive transmitted signals except for Read/Write Clocks and Data.</p>
S1	Data/Servo Select	Servo Fine PWA	<p>Used for head alignment. Selects either read data or servo dibits for use in aligning the read/write or servo heads. Positioning this switch has no effect unless the Head Alignment Extender PWA is plugged into EM4 and a special cable is connected from J2 of the Servo Fine PWA to J1 on the extender. Section 6.8.7 discusses the use of this switch and switches on the extender.</p>

* See also Table 6-6 where the use of this switch is explained further.

** The display modes of the CR1-CR7 indicators are explained in Table 6-6 and paragraph 6.9.1.1.

SWITCH	NAME	LOCATION	FUNCTION
S1-8	Velocity Gain Adj Enable	Servo Coarse PWA	When S1-8 is in the ON position it enables the use of the fault latches and fault indicators CR3 - CR7 (on the Control/Mux PWA) to display the status of the servo system velocity gain adjustment. The switches S1-1 through S1-8 are OFF when pressed down on the right side of the switch. When S1-8 is in the OFF position, it enables the displaying of faults on the fault indicators. See Figure 6-2 and refer to Table 6-6 for more information on the use of this switch.
S1-1*** through S1-7	Sector Number Select	Servo Coarse PWA	The voltages on the seven outputs of this switch are interpreted as a seven digit binary number by the microprocessor. It is used by the M. P. to generate the number of sector pulses per revolution required by the drive user. See paragraph 3.10.1 for more details

***Not used normally for maintenance, but mentioned here to complete the description of switch S1 on the Servo Coarse PWA.

Table 6-6. Interpretation of Control/Mux Fault Display Indicators

DISPLAY MODE	SWITCH/INDICATOR								DESCRIPTION OF INDICATOR MEANING/ FUNCTION	
	CONTROL/MUX PWA									
	S1-8 (SVO-CRSE)	S1 (SWITCH)**	CR1	CR2	CR3	CR4	CR5	CR6		CR7
1	1	0	1	0	*	*	*	*	*	NO HEAD SELECT FLT. Indicates that an attempt has been made to select a non-existent head. (NH)
1	0	0	*	0	*	*	*	*	*	Lights only when M. P. is active. (MP)
1	0	0	*	0	1	*	*	*	*	WRITE FAULT. Indicates that a loss of AC or DC write current has occurred. (WF)
1	0	0	*	0	*	1	*	*	*	WRITE OR READ OFF CYL. Indicates that an attempt was made to write or read during a seek, RTZ or volume change. (W-R)
1	0	0	*	0	*	*	1	*	*	WRITE AND READ FLT. Indicates an attempt to write and read simultaneously. (W+R)
1	0	0	*	0	*	*	*	1	*	VOLTAGE FLT. Indicates a below normal voltage. (VF)
1	0	0	*	0	*	*	*	*	1	HEAD SELECT FLT. Indicates a multiple head select (2 or more heads selected). (HS)
2	0	1A	0	1	‡	0	0	C9	C8	The two highest order bits of the present cylinder address displayed by first S1 actuation. Resets mode 1 fault.
2	0	2A	0	1	‡	C7	C6	C5	C4	The next high order four bits of present cylinder address displayed by second S1 actuation.
2	0	3A	0	1	‡	C3	C2	C1	C0	The lowest order four bits of the present cylinder address displayed by third S1 actuation.
3	0	4A	0	1	0	0	0	0	0	Separator state between cylinder address display mode and Microprocessor Fault Summary display mode.
4	0	A	0	1	M4	M3	M2	M1	M0	A hexadecimal coded, binary number (M4--M0) is displayed which indicates a microprocessor detected error condition. The actuation of S1 displays the code from the first fault store location that contains an error code. Subsequent actuations of S1 displays all other error codes stored, displaying one at a time until all have been displayed. Each location is cleared when displayed. Table 6-7 lists all error codes and meaning of each. 0111111 indicates all M. P. Fault Summary Codes have been displayed.
4	0	XA	0	1	M4	M3	M2	M1	M0	
4	0	A	0	1	1	1	1	1	1	
5	1	A	0	0	1	0	0	0	0	Servo velocity gain adjust display. CR3 ON indicates velocity is very slow during seek to max cyl.***
5	1	A	0	0	0	1	0	0	0	CR4 ON indicates velocity slow during seek to max cyl.
5	1	A	0	0	0	0	1	0	0	CR5 ON indicates velocity all right during seek to max cyl.
5	1	A	0	0	0	0	0	1	0	CR6 ON indicates velocity fast during seek to max cyl.
5	1	A	0	0	0	0	0	0	1	CR7 ON indicates velocity very fast during seek to max cyl.

NOTES: "1" means switch OFF or indicator "ON"; "0" means switch ON or indicator "OFF".

*Any or all of these indicators could be on at the same time except CR2 which has no meaning in mode 1. The fault description defines the meaning of that indicator in whose column the "1" appears.

**"A" means a momentary actuation of this switch. (Its output goes to ground)

"1A" means first actuation of the switch; "2A" means second actuation, etc.

***A seek is made to maximum cylinder number with each S1 actuation.

‡Always "0" except when cyl. address is zero, then it's "1".

6.9.1.1 Maintenance Indicator Display Modes

Display Mode 1: Display of Non-Microprocessor Detected Faults

As shown in Table 6-6, this display mode occurs only when M. P. detects switch S1-8 on the Servo-Coarse PWA being on the ON position and S1 on the Control/Mux PWA being in the OFF position. * One or more of the fault indicators CR1 and CR3 - CR7 can be turned on after a non-microprocessor detected fault occurs, so more than one at a time could be ON. The fault latches that drive the CR1 - CR7 indicators directly can be reset only by S1 (on Cntl/Mux) or Power-ON Master Reset. However, the non-microprocessor detected faults are also stored in another register whose outputs go across the interface. This latter register is reset from the interface or front panel CLEAR switch or S1 (but only if the fault conditions are gone). Actuating S1 to reset the fault latches also starts Display Mode 2 or 4.

Display Mode 2: Display of the Present Cylinder Address

When S1 on the Control/Mux PWA is actuated in display mode 1, the fault latches are reset, CR2 indicator is turned ON, and indicators CR6 and CR7 display the highest order two binary bits of the present cylinder address (the address used by the drive in performing the last seek operation). S1 need only be actuated momentarily. When S1 is actuated a second time the information displayed by CR6 and CR7 will be cleared and CR4 through CR7 will then display the next four high order binary bits of the Present cylinder address. The third actuation of S1 will change the information displayed on CR4 CR7 to the low order four binary bits of the present cylinder address. CR3 will always be zero except when the cylinder address digit displayed on CR4-CR7 is zero which time CR3 will turn ON. The ten bits displayed as described above are to be interpreted as three hexadecimal numbers representing the address of the last seek performed by the drive. At the time the cylinder address bits are displayed the location storing the address is cleared.

Therefore, before a new present cylinder address could be displayed a new seek to a different volume or different cylinder would have to be performed.

*Even though S1-8 is ON no faults will be displayed unless the Microprocessor causes them to be displayed.

Display Mode 3:

The next (fourth) actuation of switch S1 after the three actuations of Display Mode 2 turns off CR3 - CR7 leaving only CR2 ON. This is a separator state between Display Mode 2 and Display Mode 4. The only way Display Mode 3 can be entered is through Display Mode 2, but display mode 4 can be entered through Display Modes 1 or 3. Display mode 3 does not occur if display mode 2 does not occur. If display mode 3 does not occur it should be recognized that the first three actuations of S1 constituted the first three M. P. Fault Summary codes in display mode 4. Therefore, the first three codes should be written down as one cannot be sure what the code represents until the fourth S1 actuation which will be either the separator code (display mode 3) or a fault code of display mode 4.

Display Mode 4:

Assuming that display modes 2 and 3 occurred first, the fifth actuation of S1 places operation in Display Mode 4 which is called the "microprocessor Fault Summary" mode. This is the mode that displays the Microprocessor-detected errors. The Microprocessor has a fault store area in its RAM where it stores a different binary code number for each error detected.

The fifth actuation of S1 as mentioned above will display on CR3-CR7 the code in the first fault store location where an error code is stored. Those locations in the fault store where no error code has been stored will not be displayed.

Subsequent actuations of S1 displays all other error codes stored, displaying them one at a time until all error codes have been displayed. Table 6-7 lists all the error codes and the meaning of each. The next S1 actuation after the last error code has been displayed displays all ones on CR2 - CR7 (all lights ON). The next actuation after all ones displays all zeros (all lights OFF but CR2). Subsequent actuations of S1 jumps the displays back and forth between ones and zeros on CR2 - CR7 until some operation is performed by the drive (i. e., seek, read or write, RTZ, etc.). After the drive gets back in the idle mode of operation after an operation it will be in Display Mode 1 again. Display mode 4 could directly follow mode 1 in some situations. A typical situation would be after a seek was commanded but the ready and "ON-track" condition was never reached. Any time the cylinder address is cleared and a new seek is not completed, modes 2 and 3 would be skipped.

If the fault readout process is somewhere in mode 4 when a seek is performed, operation returns to mode 1. The M. P. error codes still stored in the M. P. fault store (i. e., those which hadn't been displayed before the seek occurred) remain there and will be displayed the next time mode 4 is in process. Any new faults which may be stored before operation returns to mode 4 through subsequent actuations of S1 in the normal manner will be displayed with the remaining faults.

Display Mode 5:

When S1-8 on the Servo-Coarse PWA is placed in the OFF position. (right side of switch depressed when facing switch from component side of PWA), the servo system velocity can be displayed on CR3-CR7. Paragraph 6. 8. 5. 2 describes the use of this display mode in adjusting the servo velocity gain.

Table 6-7. Microprocessor Fault Codes and Meanings

Codes 01 through 0C represent the 12 phases of operation that are checked by the microprocessor. Codes 0F through 1E represent the fault types that could have occurred in one of the phases. In display mode 4 the phase codes are read out in order first and then the fault codes in order. Code hex 1F is read after the last fault code is read out.

<u>HEX CODE</u>	<u>BINARY CODE*</u>	<u>PHASE OF OPERATION</u>
01	00001	RETURN TO TRACK CENTER
02	00010	WAIT FOR COARSE SEEK COMPLETION
03	00011	AFTER SEEK SETTLING
04	00100	IDLE LOOP
05	00101	RETURN TO ZERO MOTION
06	00110	END OF VELOCITY TABLE
07	00111	HEAD LOAD
08	01000	AWAIT AGC DURING HEAD LOAD
09	01001	AWAIT TRACK CENTER-LOAD OR RTZ
0A	01010	SETTLING-LOAD OR RTZ
0B	01011	OFFSET ACTIVE
0C	01100	CLEAR OFFSET SETTLING
		<u>FAULT TYPE</u>
0F	01111	SPINDLE DID NOT START/STOP IN 2 MINUTES AFTER ERSLO/ERSTP WAS NOTED (10000/10100)
10	10000	SPINDLE START GT 70 SEC
11	10001	NO SPINDLE MOVEMENT
12	10010	NO DRIVE TO SOLID STATE RELAY
13	10011	SOLID STATE RELAY FAILURE
14	10100	STOP TIMEOUT
15	10101	EMERGENCY RETRACT FAILURE
16	10110	NORMAL RETRACT FAILURE
17	10111	CYLINDER ADDRESS GT 822
18	11000	OFF TRACK GT 1200 USEC
19	11001	UNEXPECTED AGC IN HEAD LOAD
1A	11010	LOST AGC
1B	11011	RPM FAULT
1C	11100	LOST SPEED PULSES
1D	11101	ALLOWED TIME EXPIRED
1E	11110	NO TRACK LOCK IN SETTLING
1F	11111	MICROPROCESSOR FAULT CODE SUMMARY READOUT IS COMPLETE

*CR3-CR7. "1" means light on. "0" means light OFF.

01000000

10000000

6.9.1.2 Tables of Fault Types vs. Operation Phases

Table 6-8a through 6-8e shows the different fault codes that could show up for various phases of drive operation monitored by the microprocessor. For example in Table 6-8b, "Seek Operation", an error in phase 03 (AFTER SEEK SETTling) would also show one or more of the fault types 11010, 11101 and 11110 (see Table 6-7).

Table 6-8a. Spindle Start and Stop

ERROR						
PHASE	10000	10001	10010	10011	10100	01111
STOP					X ¹	X ²
START	X ³	X	X	X		X ⁴

¹ 30 SEC TIME LIMIT

² MAY OCCUR ONLY 2 MIN AFTER 10100 Code

³ 70 SEC TIME LIMIT

⁴ MAY OCCUR ONLY 2 MIN AFTER 10000 CODE

Table 6-8b. Seek Operation ¹

ERROR					
PHASE	10111	11010	11101 ¹	11110	11011
01			X		
02		X	X		
03		X	X	X	
06		X	X		
No Phase Code Stored	X				X

¹ 80 ms TIME LIMIT

Table 6-8c. RTZ ¹ and Head Load ²

ERROR

PHASE	11001	11010	11011	11100	11101	11110
05					X	
07	X				X	
08					X	
0A		X			X	X
09					X	
No Phase Code Stored			X	X		

¹ 500 ms TIME LIMIT

² 300 ms TIME LIMIT

Table 6-8d. Head Retract

ERROR

PHASE	11101 ¹	10101 ²
No Phase Code Stored	X	X

¹ 440 ms TIME LIMIT

² 500 ms TIME LIMIT (MAY OCCUR ONLY AFTER 11101 ERROR CODE ¹)

Table 6-8e. Idle and Offset

ERROR

PHASE	11010	11110	11101	11000	11100	11011
04	X	X ¹		X		
0B	X					
0C	X	X	X ²			
No Phase Code Stored					X	X

¹ ONLY IF 11000 ALSO PRESENT

² 20 ms TIME LIMIT

6.9.2 TEST POINTS

The test points on each of the printed wiring assembly boards are shown in Figures 5-4 through 5-9 (Section 5). Most of the small holes along the top edge of the boards which are called out on the figures as test points do not actually connect to any circuitry. All test points that do connect to circuitry are shown on the schematic drawings in Section 5.

VELOCITY GAIN ADJUSTMENT (OPERATOR ACTION)


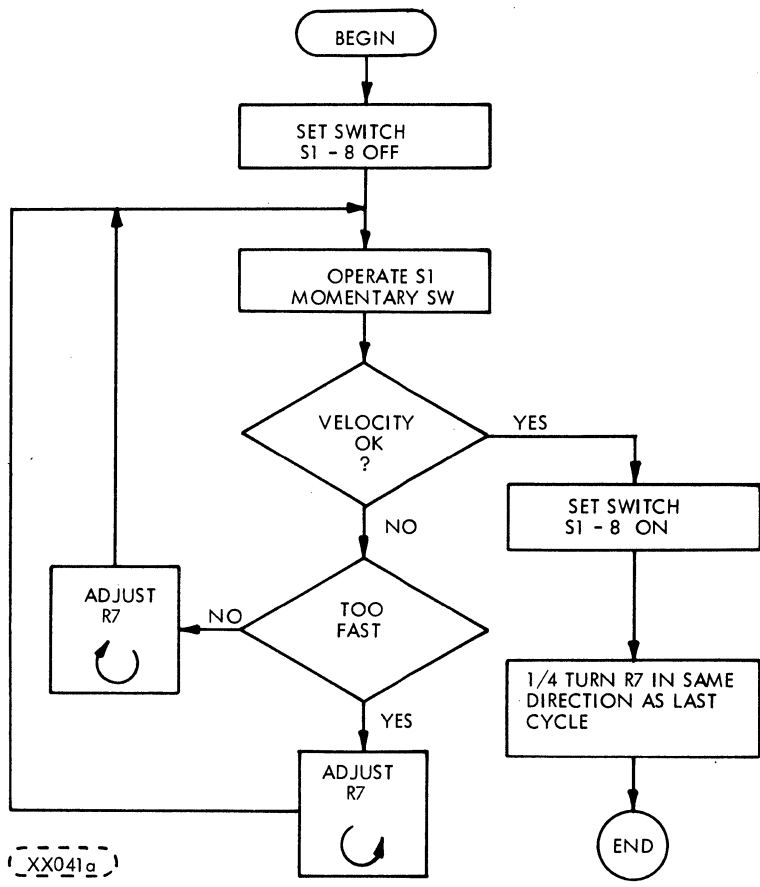


Figure 6-29. Flow Chart of Fault Display Logic (Sheet 1 of 3)

FAULT DISPLAY LOGIC FLOW (ON CNTL/MUX PWA)

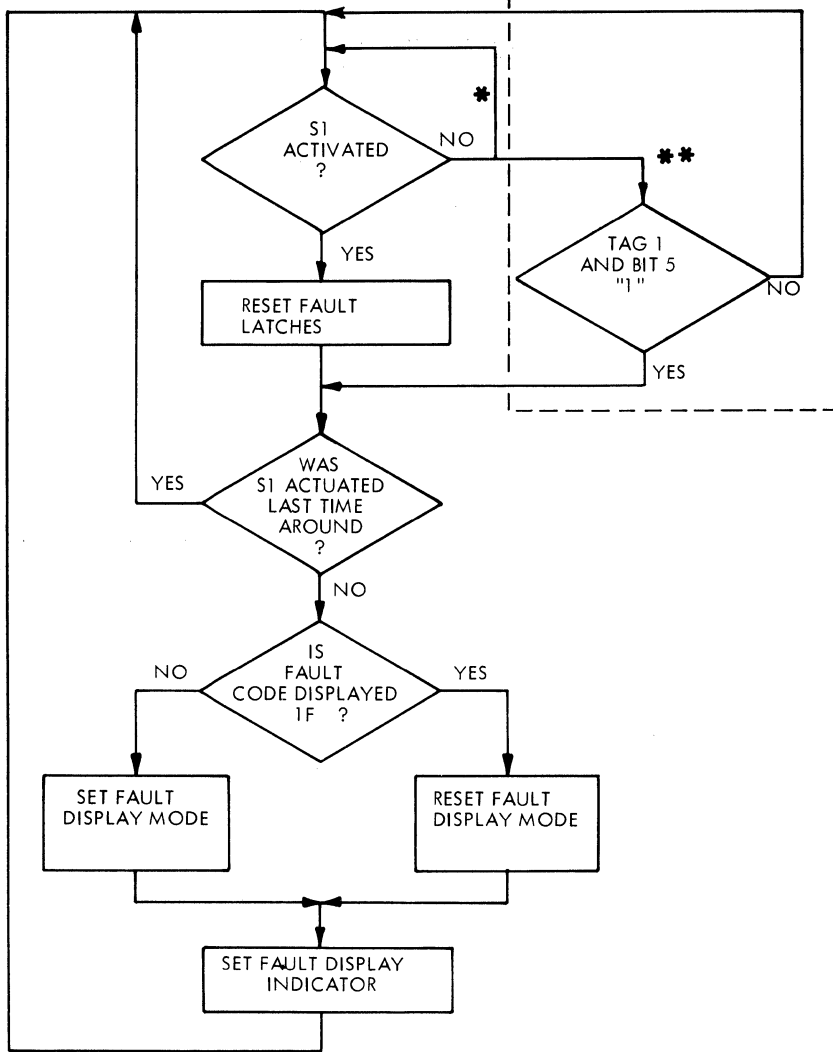


XX042a

- * FLOW WITH "OEM" INTERFACE
- ** FLOW WITH "STD-1" INTERFACE

Figure 6-29. Flow Chart of Fault Display Logic (Sheet 2 of 3)

M.P. PROGRAM

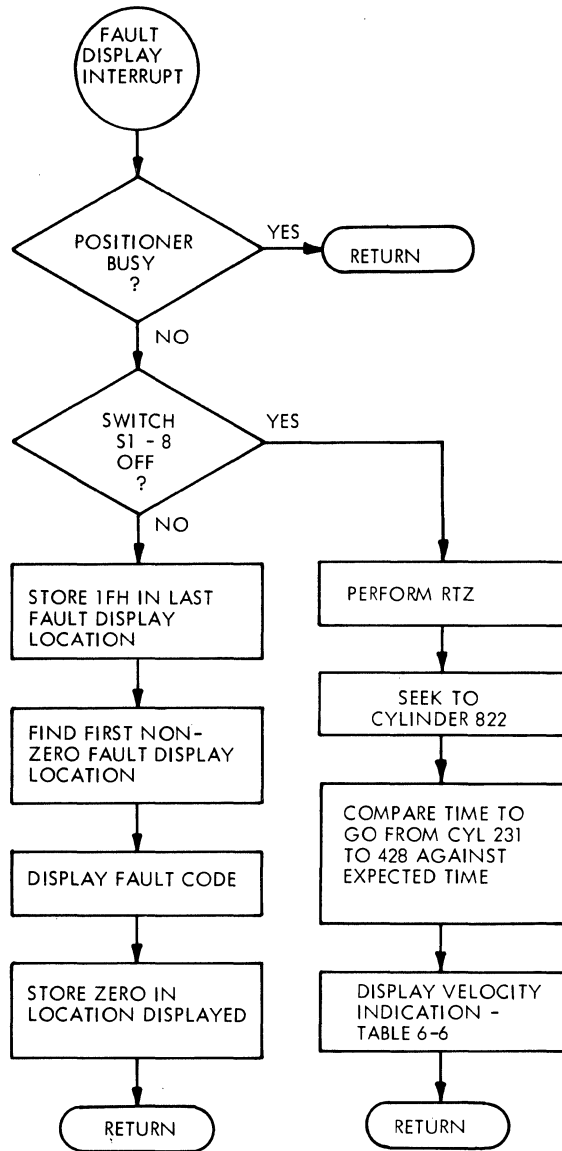

(XX042b)

Figure 6-29. Flow Chart of Fault Display Logic (Sheet 3 of 3)

APPENDIX 6A-1

Parts List for Head Alignment Kit P/N 75899096.

<u>Item No.</u>	<u>Parts No.</u>	<u>Item</u>
1	75886001	PWA Hd Alignment Ext
2	73576400	Meter-Hd Align
3	54285300	Comp Assy AZPV
4	77612337	Cable Asm 8 Pin 20 in
5	75882394	Hd Align Cable Assy
6	77614917	Head Align Proc

7.1 INTRODUCTION

This section contains an illustrated parts breakdown that describes and illustrates the Cartridge Module Drive (CMD) (Model 9448). In general, parts are in disassembly sequence but do not necessarily indicate the maximum recommended disassembly of parts in the field.

7.2 ILLUSTRATIONS

Item numbers within a circle (1) indicate an assembly (group of parts). Item numbers without a circle, 1, indicate a single part; a group of parts that are pinned or press fitted together; or a group of parts which is normally replaced as an assembly. Disassembly of certain assemblies is not recommended, however, and replacement of parts should be at the assembly level. These will be identified throughout the section.

7.3 PARTS LIST

In addition to the accompanying parts list on each illustration, two additional Parts Lists are available; the Top-Down Assembly/Component Parts List and the Cross Reference Index. Instruction for the use of all Parts Lists in paragraph 7.7.

7.4 ASSEMBLY BREAKDOWN

7.4.1 PRODUCT UNIQUE PARTS

Figure 7-1 illustrates of the unique customer selected items defined by the Parts Data Hardware Product Configurator (HPC) sheet. The Parts Data HPC sheet is included in the HPC package located in front of the manual. It may be desirable to insert the Parts Data HPC sheet in front of this Section.

7.4.2 TOP LEVEL ASSEMBLY

Figure 7-2 identifies device hardware mounting and the Final Mechanical Assembly.

7.4.3 FINAL MECHANICAL ASSEMBLY

The Final Mechanical Assembly is a detailed breakdown of the CMD device. It also identifies by sheet number, the location of all major assemblies not detailed in Figures 7-1 and 7-2 are broken down.

7.5 REPLACEMENT PARTS

When ordering replacement parts for the CMD, the inclusion of the Model No., the figure, item and part identification numbers for each part ordered will ensure positive identification of parts. Before ordering parts, refer to paragraph 7.6.

7.6 SPARE PARTS (SP)

This Illustrated Parts Breakdown is complete to the extent that all parts and assemblies are depicted and identified. Replacement part availability however, depends on the materials and provisioning operation of the supplier.

To assist the service representative in selecting replacement parts with minimum requisitioning lead times, engineering recommended spare parts which reflect the intended service level of the device are identified with the letters SP adjacent to the item number on the face of each illustration. Replaceable non-spared items will require longer requisitioning lead times.

7.7 PARTS LIST INSTRUCTIONS

7.7.1 ILLUSTRATION PARTS LISTS

The parts list for each illustration is an extract from the Top-Down Assembly/Component Parts List and contains only those parts depicted. Refer to paragraph 7.7.2 for explanation of parts list.

7.7.2 TOP-DOWN ASSEMBLY/COMPONENT PARTS LIST

- a. Starts at TLA level and lists all parts in Item Number sequence.
- b. Correlates Item Numbers with Part Identification Numbers and the Description of each.
- c. Indicates where each part is used (used column) within the device by listing the item number(s) of the next higher assembly.
- d. Defines the location of each part by listing the sheet number(s) where depicted.

NOTE

The same part may be used in any number of assemblies or sheet locations.

7.7.3 CROSS REFERENCE INDEX

- a. Lists all parts in numeric sequence (by Identification Number).
- b. In conjunction with the referenced sheet number (third column) and illustrations defines the physical location of each item identified.

7.7.4 SHEET NUMBER REFERENCING

Sheet number references of Parts Lists and Illustrations refers to sheet locations in this section. Example: Sheet reference 4 represents sheet 7-4, sheet 5 represents sheet 7-5, etc.




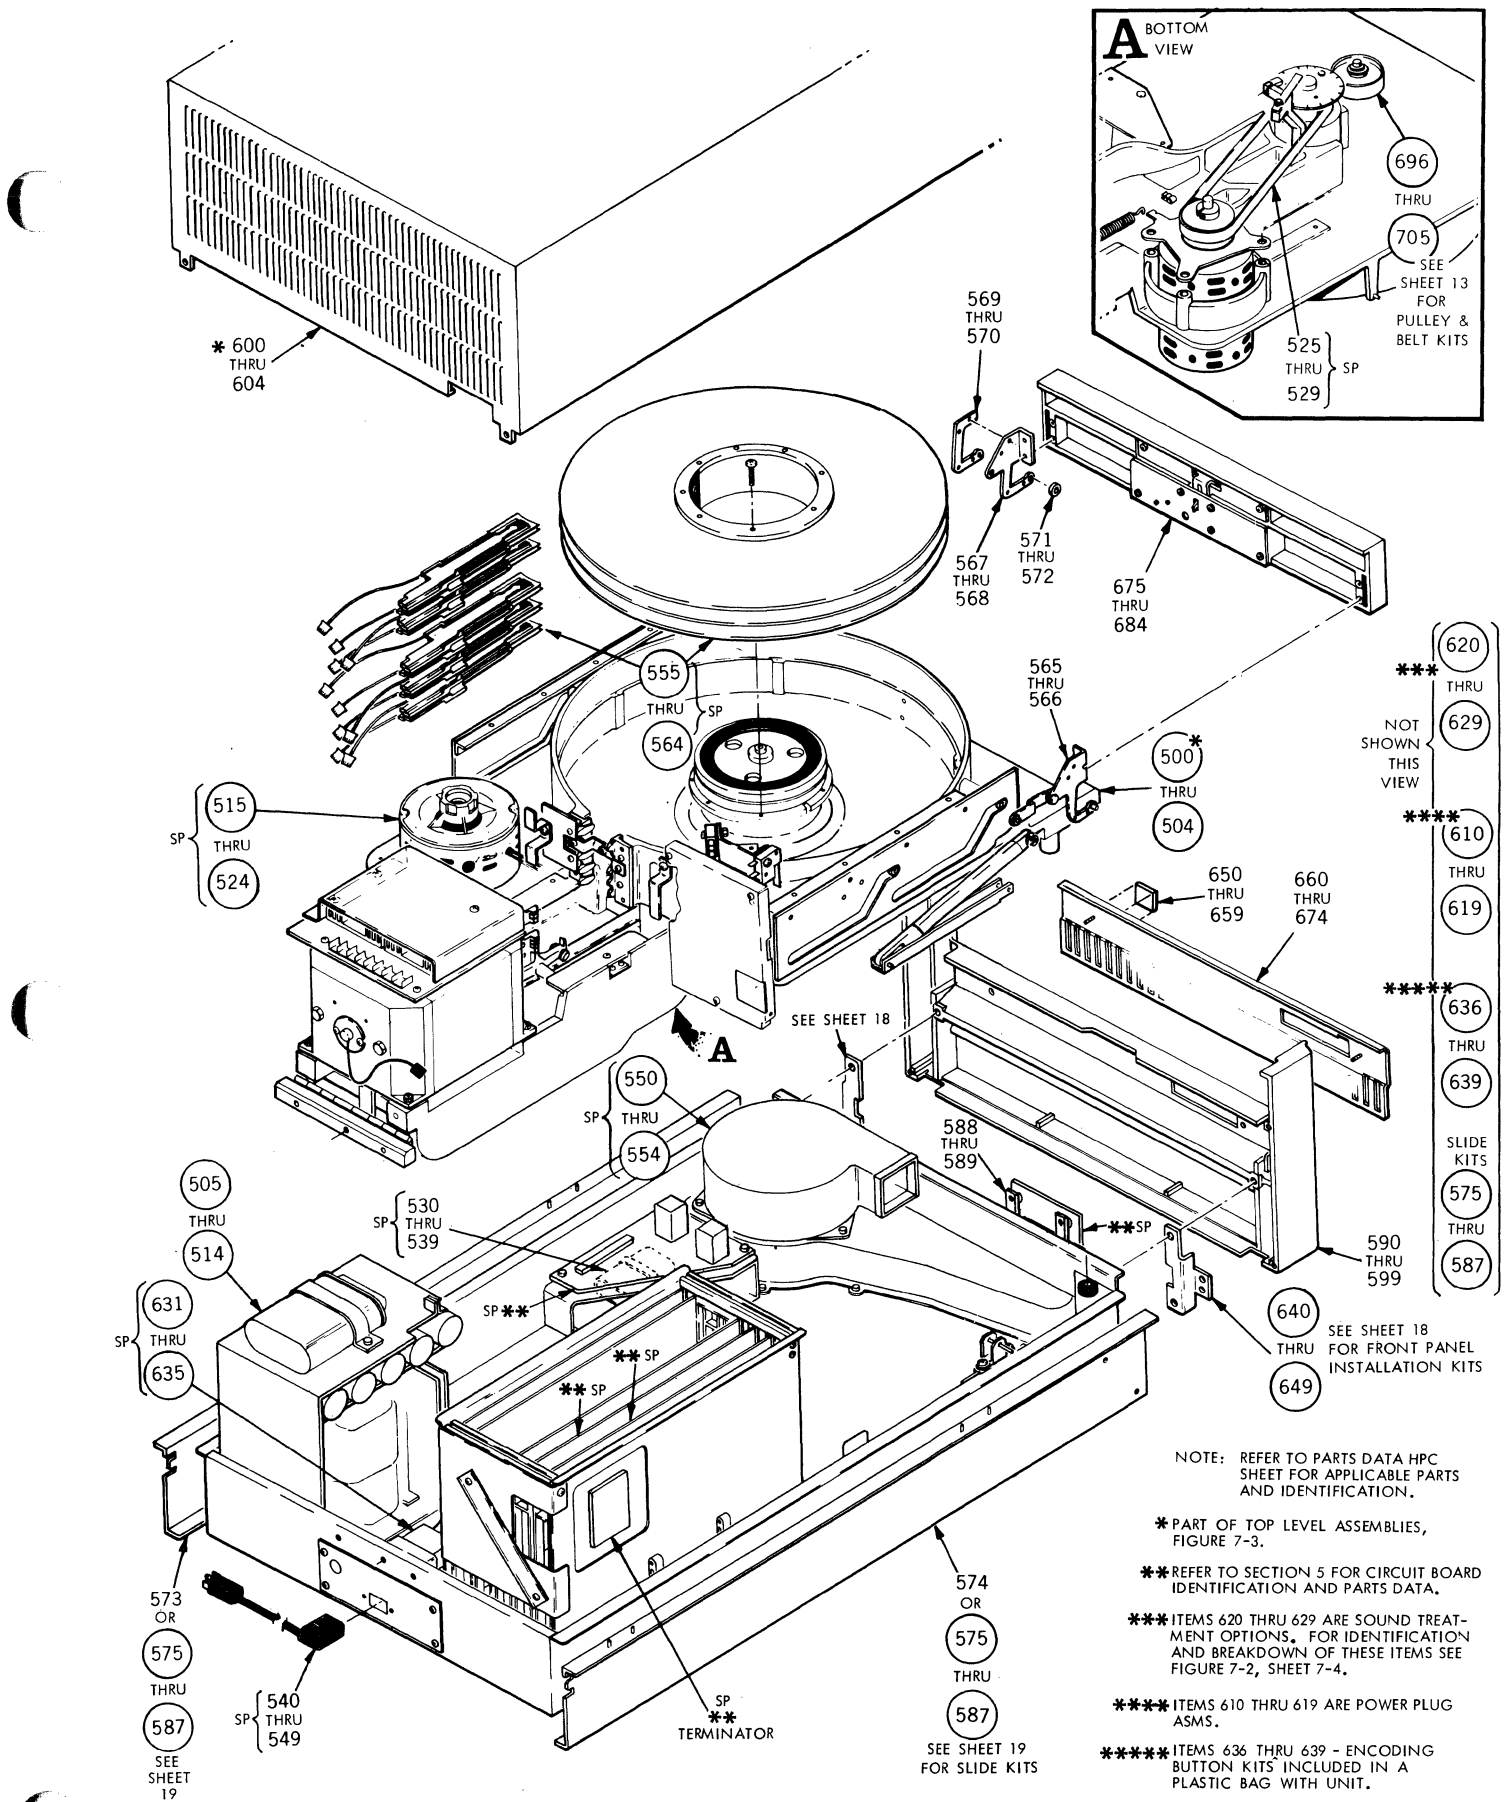


FIGURE 7-1. PRODUCT CONFIGURATION

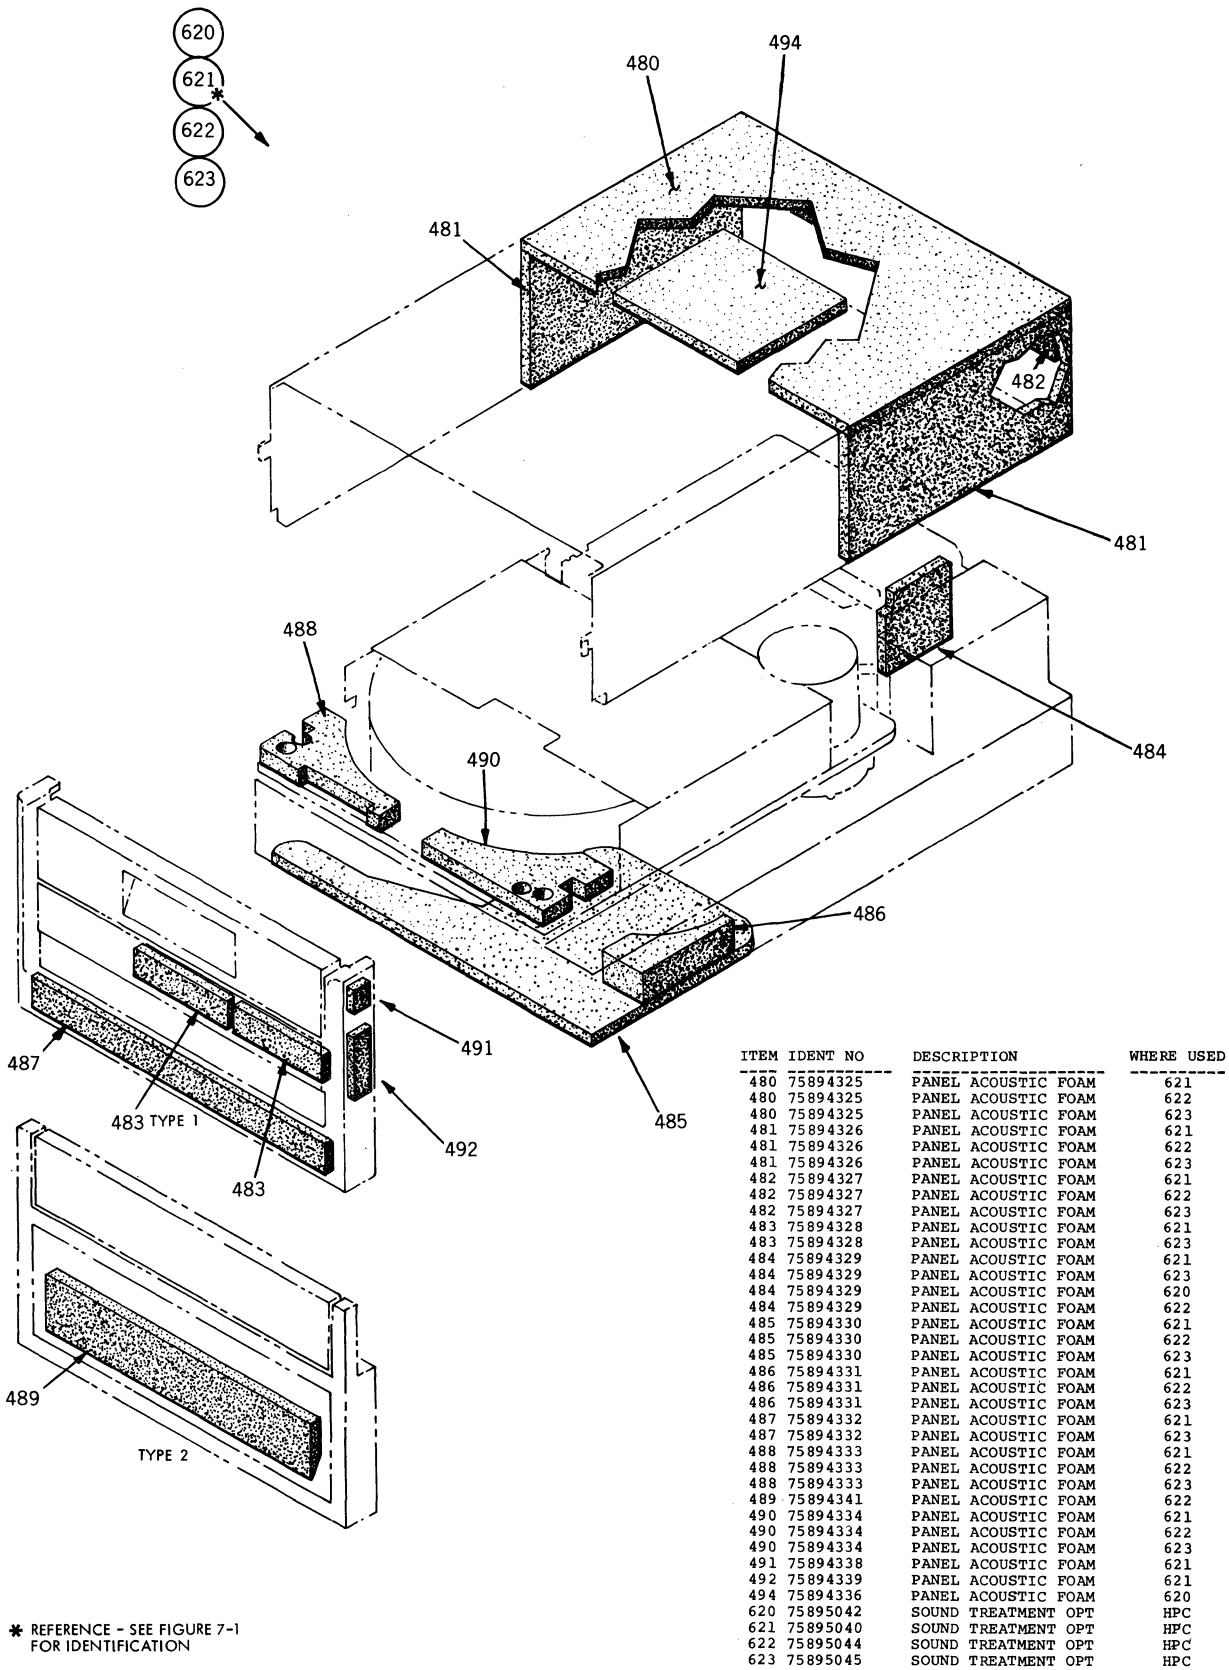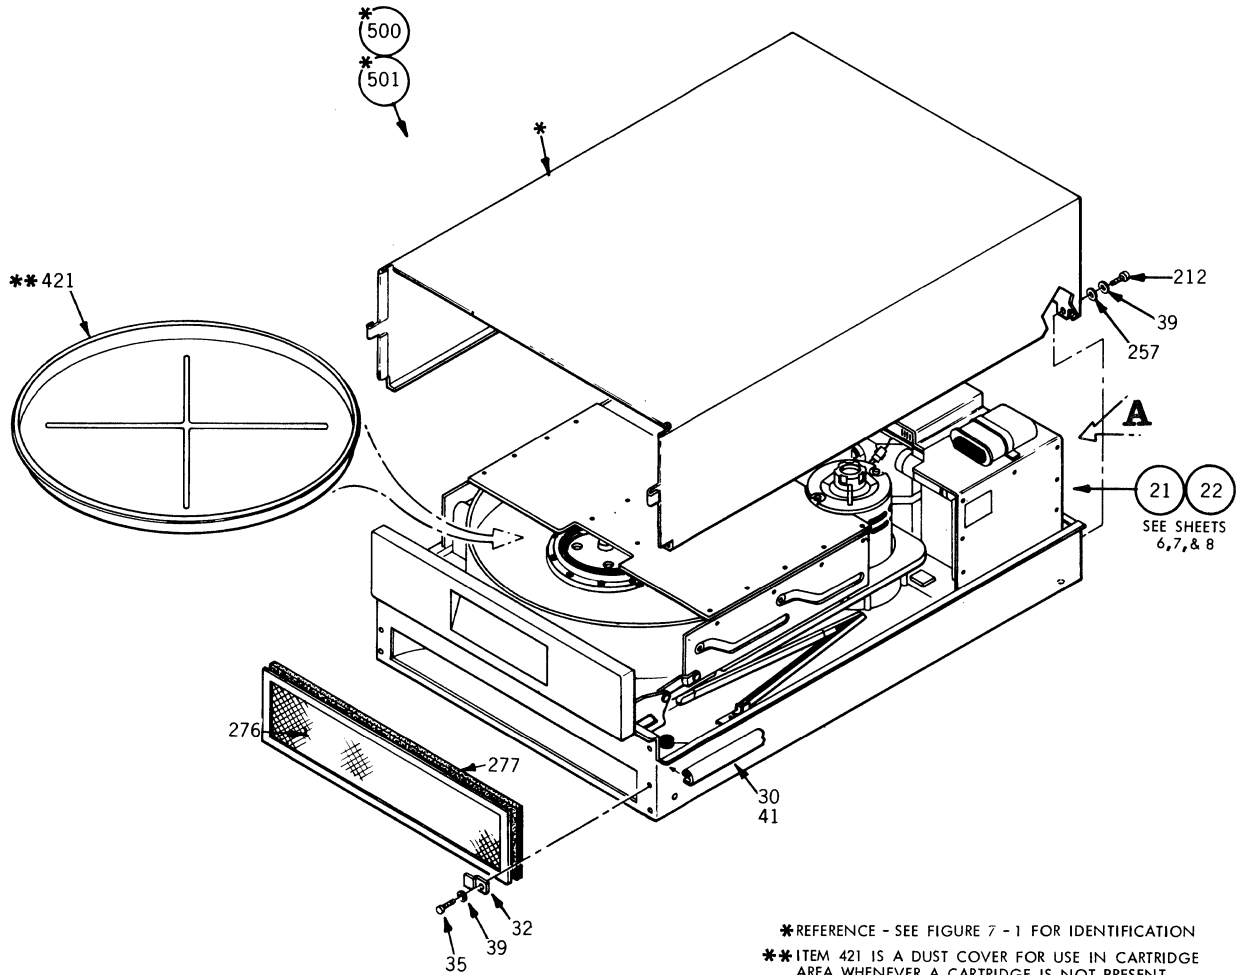

* REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION

FIGURE 7-2. SOUND TREATMENT OPT

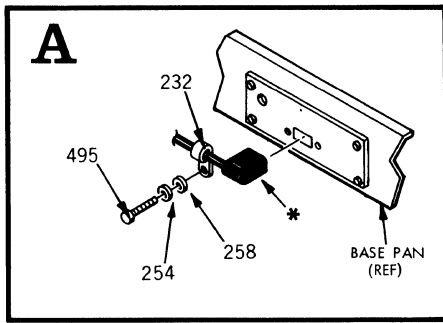


*REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION

**ITEM 421 IS A DUST COVER FOR USE IN CARTRIDGE AREA WHENEVER A CARTRIDGE IS NOT PRESENT

ITEM IDENT NO	DESCRIPTION	WHERE USED
021 75880900	FINAL MECHANICAL ASM	500
022 75880902	FINAL MECHANICAL ASM	501
030 75883045	GASKET	500
032 75881845	CLIP-PREFILTER MTG	500
035 10127111	SCREW, PAN HD	500
036 10127142	SCREW, PAN HD	500
039 10125803	WASHER, SPR LOCK	500
041 95033900	ADHESIVE	500
212 77617049	SCREW, PAN HD	500
232 24565004	CABLE CLAMP	500
254 10125804	WASHER, SPR LOCK	500
257 10125605	WASHER, PLAIN	500
258 10125606	WASHER, PLAIN	500
276 94364903	FILTER-AIR, AL WASH	500
277 83410518	GASKET STRIP	500
421 90603300	CLOSURE	500, 501
495 10127129	SCREW, PAN HD	500
500 75881025	TOP LEVEL ASM	HPC
501 75881027	TOP LEVEL ASM	HPC


FIGURE 7-3. TOP LEVEL ASSEMBLY

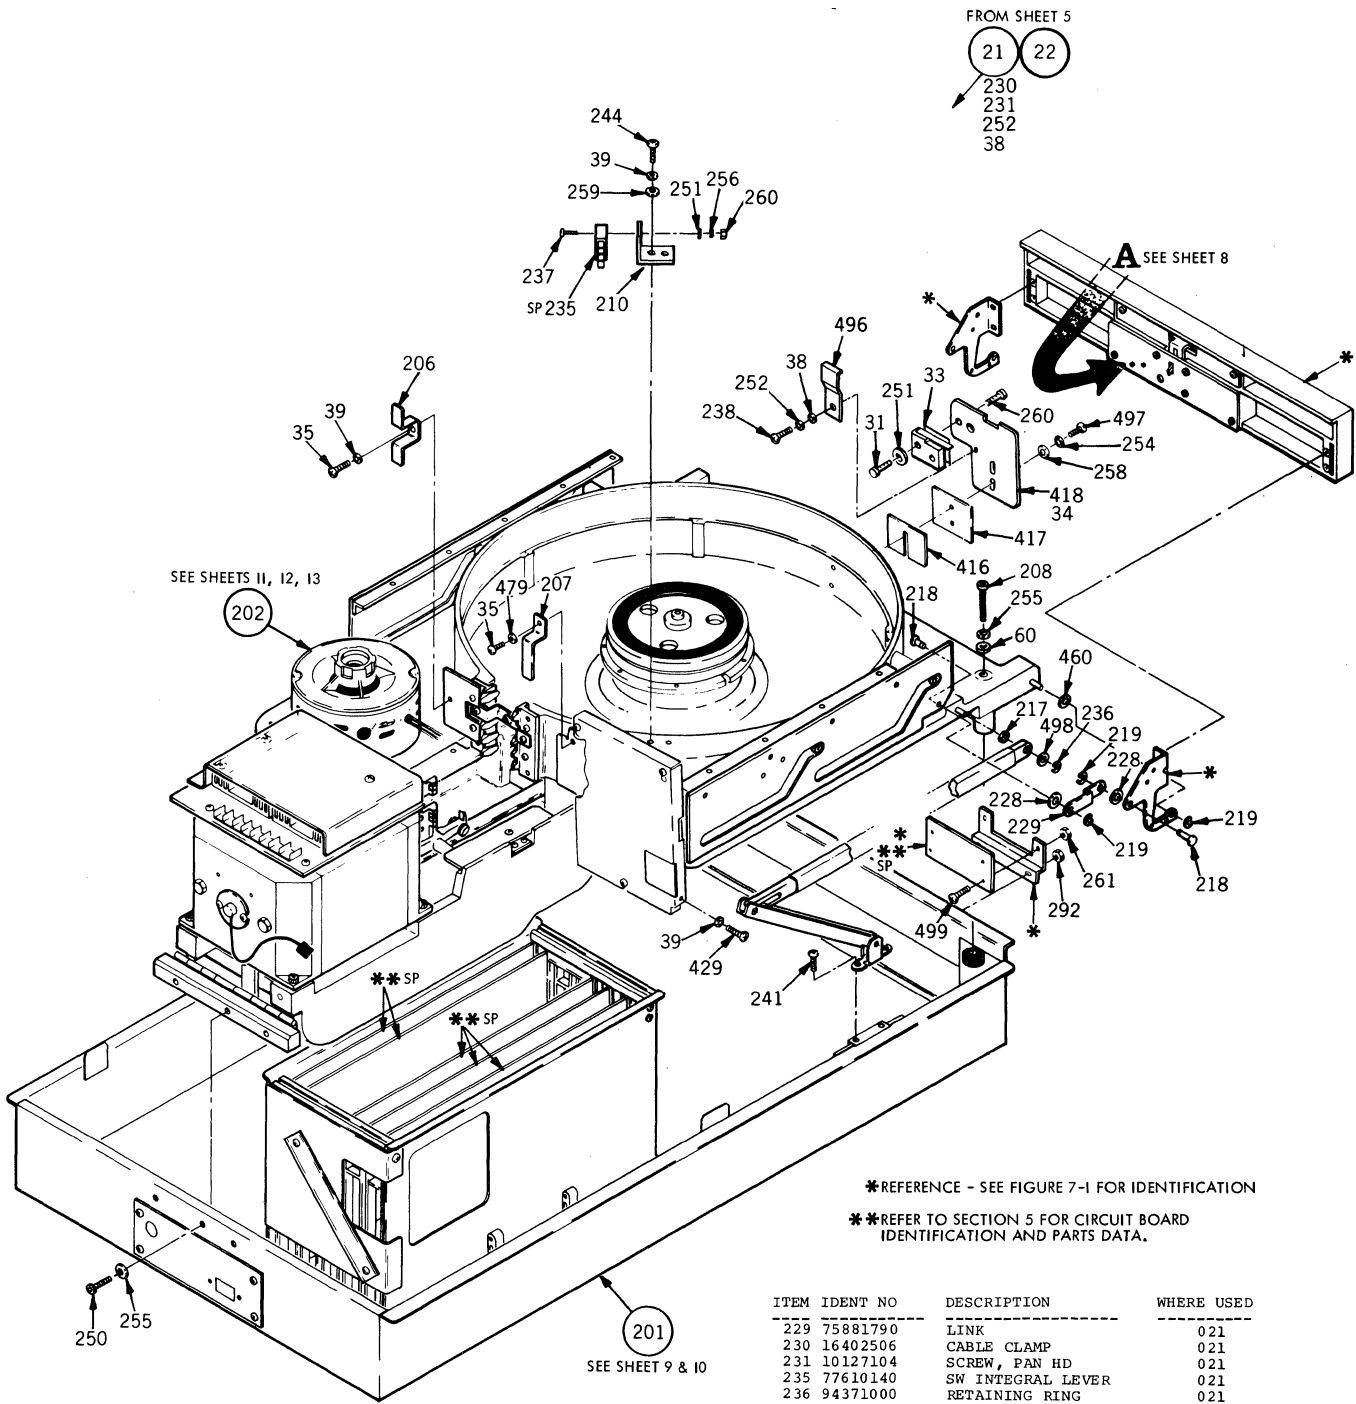

ITEM IDENT NO	DESCRIPTION	WHERE USED	
021	75880900	FINAL MECHANICAL ASM	500
022	75880902	FINAL MECHANICAL ASM	501
028	75881128	DECK SUPPORT LH	021
029	75881129	DECK SUPPORT RH	021
031	10127168	SCREW, PAN HD	021
033	94364401	SWITCH	021
034	95105904	POLYESTER TAPE	021
035	10127111	SCREW, PAN HD	021
038	10125603	WASHER, PLAIN	021
039	10125803	WASHER, SPR LOCK	021
060	10125608	WASHER, PLAIN	021
201	75880814	BASE PAN ASM	021
202	75880120	DECK ASM	021
206	75881542	RETAINER, HEAD CONN	021
207	75881395	RETAINER, HEAD CONN	021
208	10126263	SCREW, SOCKET HEAD	021
210	75883317	BRACKET, SWITCH	021
217	75892811	WASHER, SHOULDER	021
218	75892221	PIN	021
219	92033037	RETAINING RING	021
228	93564001	WASHER, NYLON	021

ITEM IDENT NO	DESCRIPTION	WHERE USED	
229	75881790	LINK	021
230	16402506	CABLE CLAMP	021
231	10127104	SCREW, PAN HD	021
235	77610140	SW INTEGRAL LEVER	021
236	94371000	RETAINING RING	021
237	92745012	SCREW, PAN HD	021
238	10127102	SCREW, PAN HD	021
241	93592158	SCREW, HEX ASH HD	021
244	10127113	SCREW, PAN HD	021
250	10126253	SCREW, HEX SOC HD CAP	021
251	10125800	WASHER SPR	021
252	10125801	WASHER SPR LOCK	021
254	10125804	WASHER, SPR LOCK	021
255	10125806	WASHER, SPR LOCK	021
256	10125602	WASHER, PLAIN	021
257	10125605	WASHER, PLAIN	021
258	10125606	WASHER, PLAIN	021
259	10125607	WASHER, PLAIN	021
260	10125102	SCREW, NUT-HEX	021
261	53777902	NUT & WASHER	021
292	53777900	NUT & CAPTIVE WASHER	021
416	75882106	SHIM, STRIKER	021
417	75882105	BLOCK, SPACER, STRIKER	021
418	75895214	STRIKER	021
429	10127112	SCREW, PAN HD	021
433	10127114	SCREW, PAN HD	021
460	75883025	SPACER, NYLON	021
496	75893211	BRACKET	021
497	10127125	SCREW, PAN HD	021
498	75887251	WASHER, NYLON	021
499	10127334	SCREW	021

FIGURE 7-4. FINAL MECHANICAL ASM (SHEET 1 OF 3)

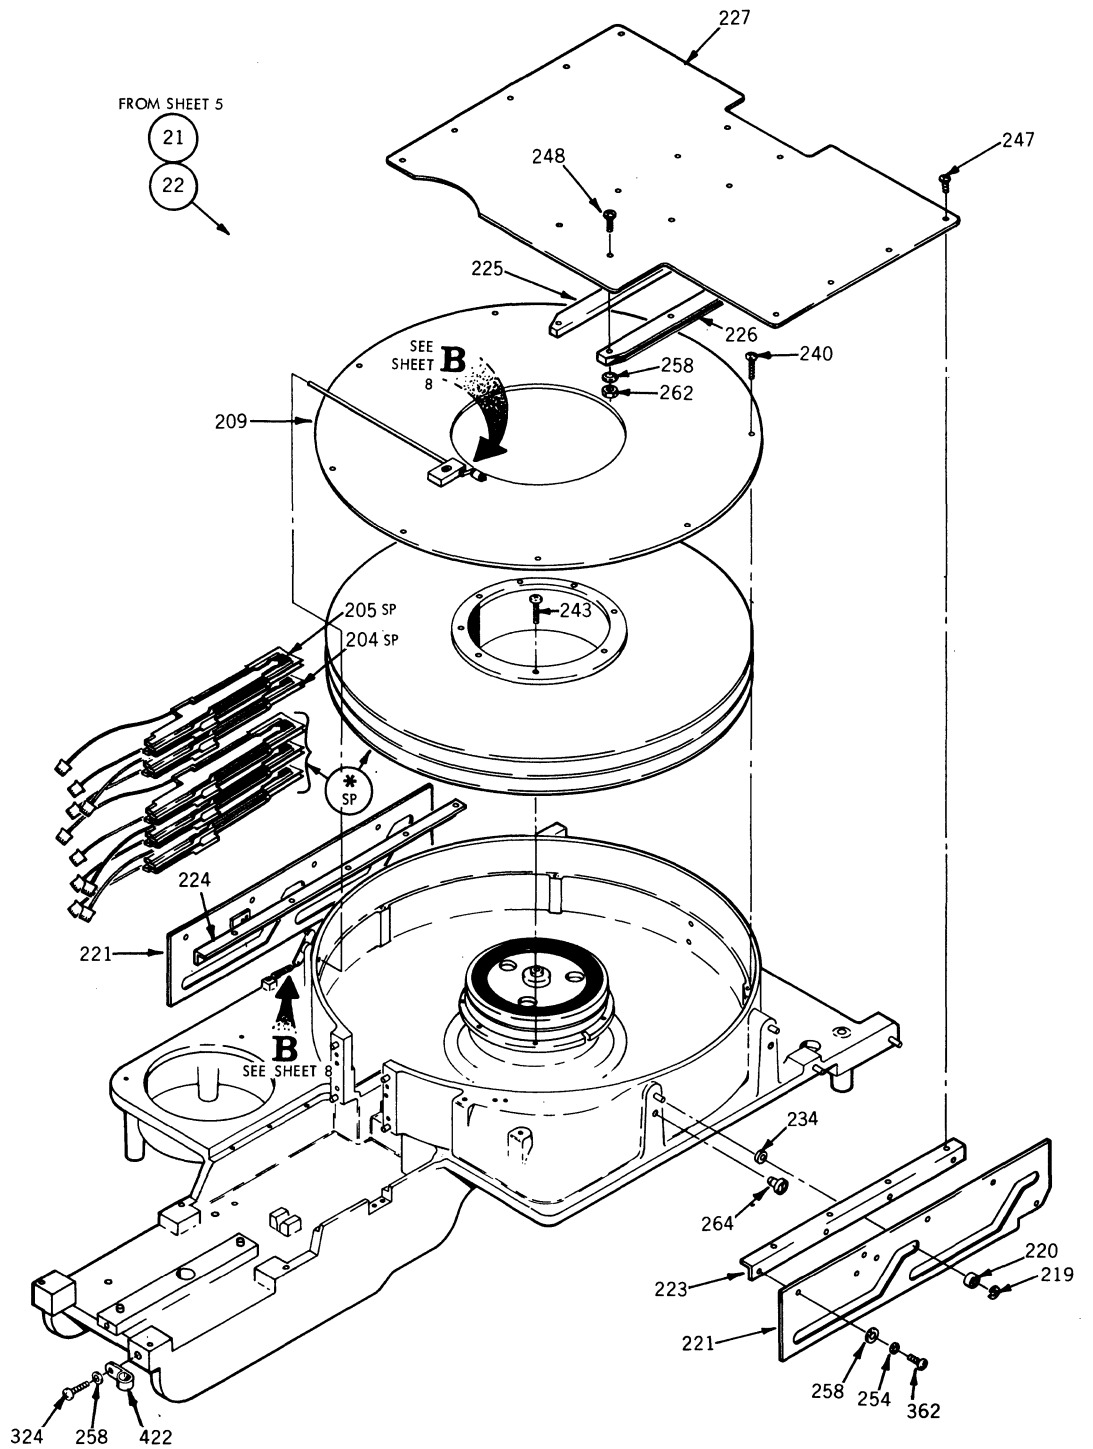

* REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION

ITEM IDENT NO	DESCRIPTION	WHERE USED	ITEM IDENT NO	DESCRIPTION	WHERE USED
021 75880900	FINAL MECHANICAL ASM	500	227 75887442	PLATE, RECEIVER	021
204 75010102	HEAD - ARM ASM	021, 513	234 75893958	SPACER	021
205 75010105	HEAD ARM ASM	021, 513	240 10125704	SCREW, FLAT HD	021
209 75893925	PLATE, SEPARATOR	021	243 10126219	SCREW, HEX SOC HD CAP	021
219 92033037	RETAINING RING	021	247 10125724	SCREW, FLAT HD	021
220 92054223	BALL BEARING	021	248 10125725	SCREW, FLAT HD	021
221 75883115	CAM PLATE	021	254 10125804	WASHER, SPR LOCK	021
223 75887452	RECEIVER BAR, LH	021	258 10125606	WASHER, P LAIN	021
224 75887447	RECEIVER BAR, RH	021	262 53777903	NUT & WASHER	021, 404
225 75882832	CARRIAGE RAIL	021	264 77830530	RIVET, SPLIT NYLON	021
226 75882831	CARRIAGE RAIL	021	324 10127122	SCREW, PAN HD	021
			362 10127123	SCREW, PAN HD	021
			422 92602004	CABLE CLAMP	021



FIGURE 7-5. FINAL MECHANICAL ASSEMBLY (SHEET 2 OF 3)

FROM SHEET 5

21


22

ITEM	IDENT NO	DESCRIPTION	WHERE USED
021	75880900	FINAL MECHANICAL ASM	500
022	75880902	FINAL MECHANICAL ASM	501
035	10127111	SCREW, PAN HD	021
039	10125803	WASHER, SPR LOCK	021
043	75882865	DOOR ASM	021
044	75883637	LATCH PLATE	043
045	75881840	PIN PAWL	043
046	75881730	PAWL	043
047	75881770	SPRING PAWL	043
048	75882694	SLIDE, LATCH	043
049	75883310	TENSION SPRING	043
050	75883642	SOLENOID BRACKET	043
051	75883056	SOLENOID ASM	043
052	75882689	LATCH COVER	043
053	75883465	JUMPER WIRE ASM	043
054	94376917	SCREW	043
055	94376918	SCREW	043
222	75889491	SUPPORT SHAFT	021
238	10127102	SCREW, PAN HD	043
242	92033033	RETAINING RING	043
244	10127113	SCREW, PAN HD	021
246	10127121	SCREW, PAN HD	021
252	10125801	WASHER, SPR LOCK	043
254	10125804	WASHER, SPR LOCK	021, 043
257	10125605	WASHER, PLAIN	021, 043
258	10125606	WASHER, PLAIN	021, 043
325	10127124	SCREW, PAN HD	043
427	10125702	SCREW, FLAT HD	043
471	75883110	SHAFT	021
472	75880481	BEARING	021
473	75882455	SPACER	021
474	75882665	LEVER, CAM	021
475	75882460	BLOCK, LINKAGE	021
476	93564001	NYLON WASHER	021
477	93094285	SET SCREW	021
478	77610461	SPRING	021

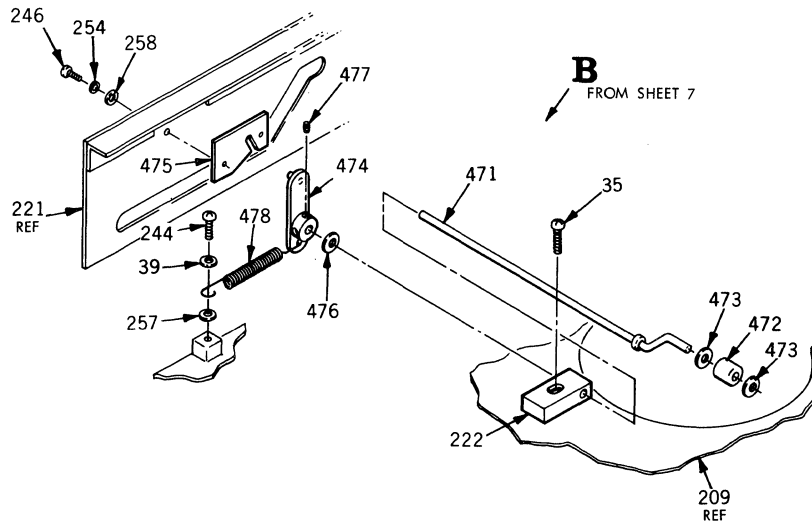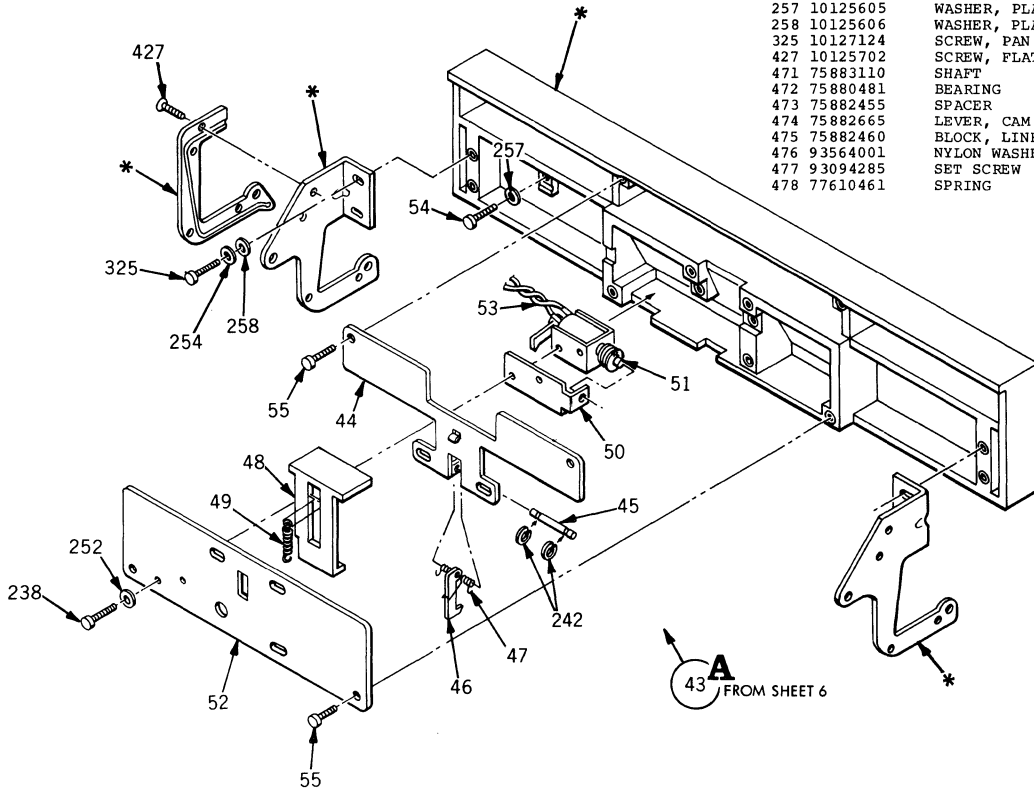

* REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION

FIGURE 7-6. FINAL MECHANICAL ASM DETAILS (SHEET 3 OF 3)

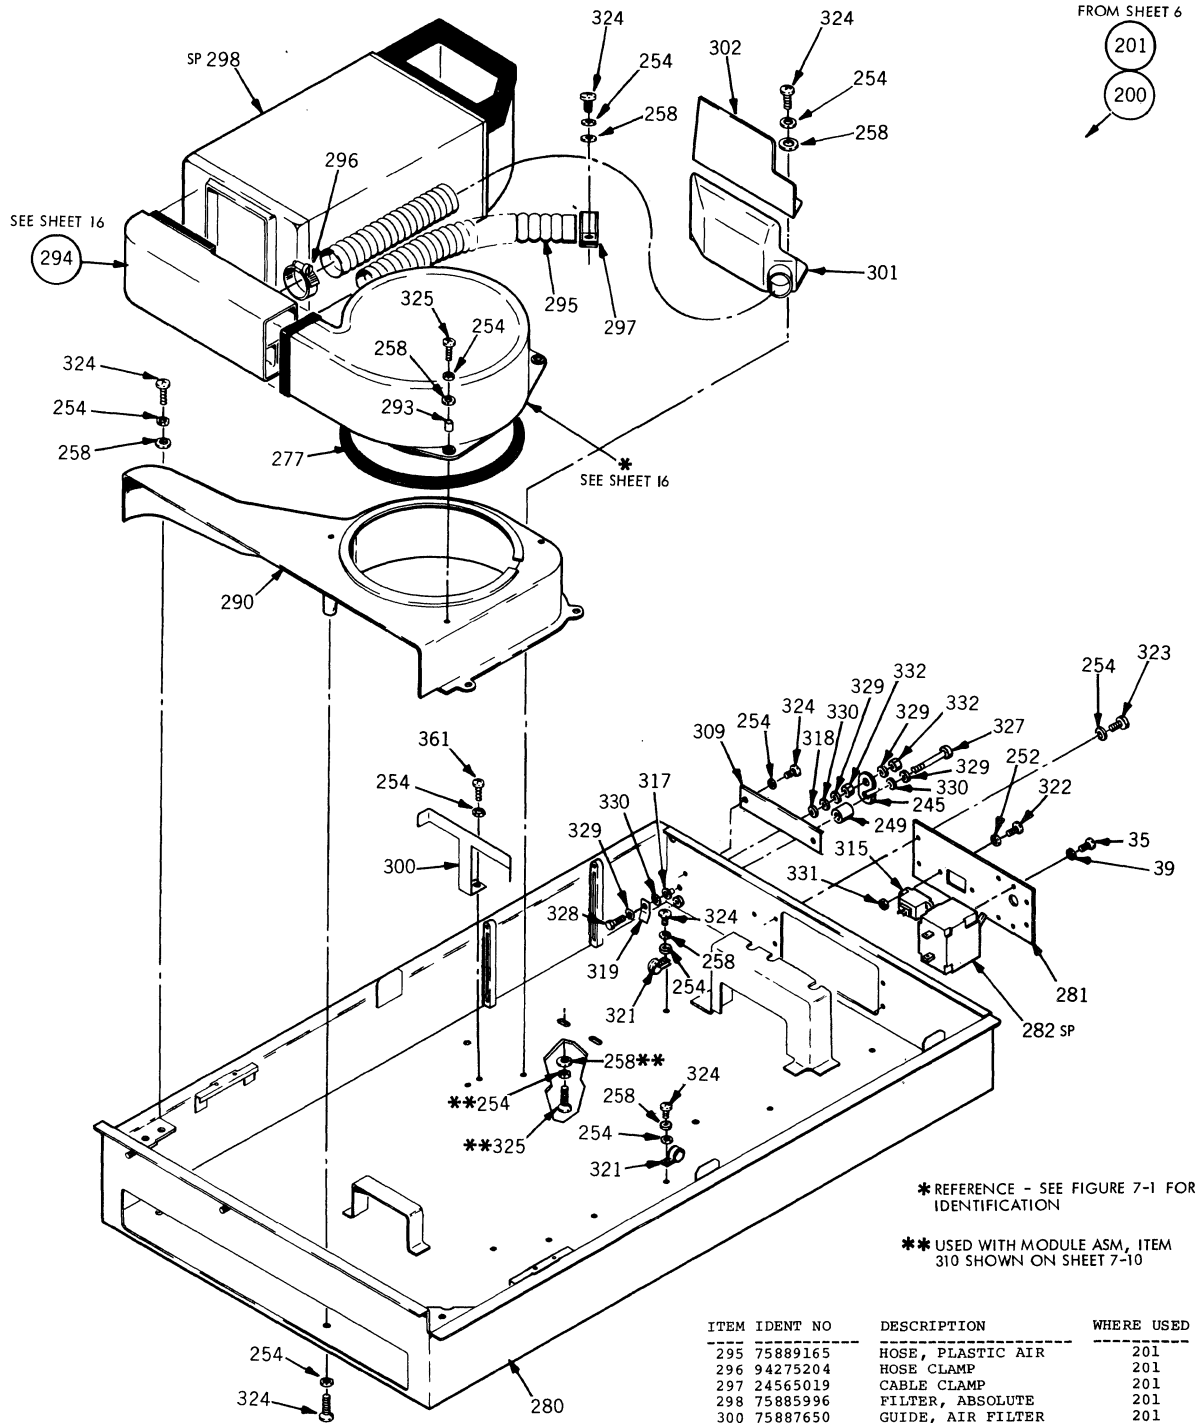


* REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION

** USED WITH MODULE ASM, ITEM 310 SHOWN ON SHEET 7-10

ITEM IDENT NO	DESCRIPTION	WHERE USED
035 10127111	SCREW, PAN HD	201
039 10125803	WASHER, SPR LOCK	201
200 75880816	BASE PAN ASM	022
201 75880814	BASE PAN ASM	021
245 75883475	GROUND STRAP	201
249 95694202	SPACER	201
252 10125801	WASHER SPR LOCK	201
254 10125804	WASHER, SPR LOCK	201
258 10125606	WASHER, PLAIN	201
277 83410518	GASKET STRIP	201
280 75897343	PAN, BASE	201
281 75882875	PANEL, POWER ENTRY	201
282 95587124	CIRCUIT BRKR	201
290 75886725	DUCT, AIR INLET	201
293 75887561	SPACER	201
294 75889881	MANIFOLD ASM	201

ITEM IDENT NO	DESCRIPTION	WHERE USED
295 75889165	HOSE, PLASTIC AIR	201
296 94275204	HOSE CLAMP	201
297 24565019	CABLE CLAMP	201
298 75885996	FILTER, ABSOLUTE	201
300 75887650	GUIDE, AIR FILTER	201
301 75881265	DEFLECTOR, AIR	201
302 75891004	COVER, AIR DEFLECTOR	201
309 75893761	CLAMP	201
315 51870400	AC PWR RECEPTACLE	201
317 75062803	WASHER, SHOULDER	201
318 75062400	WASHER, INSULATOR	201
319 94274140	RECEPTACLE, SLIDE ON	201
321 24565006	CABLE CLAMP	201
322 10127103	SCREW, PAN HD	201
323 10127120	SCREW, PAN HD	201
324 10127122	SCREW, PAN HD	201
325 10127124	SCREW, PAN HD	201
327 10127144	SCREW, PAN HD	201
328 10125066	SCREW, HEX HD	201
329 10126403	WASHER, EXT TOOTH LK	201
330 94047052	WASHER, SPECIAL	201
331 10125103	SCREW, NUT-HEX	201
332 10125108	NUT, HEX	201
361 10125106	NUT, HEX	201

FIGURE 7-7. BASE PAN ASSEMBLY (SHEET 1 OF 2)

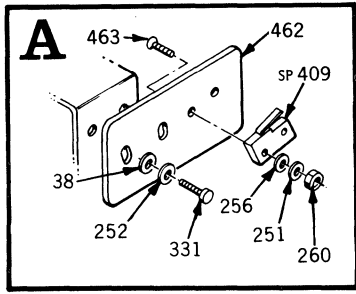


SEE SHEET 14

FROM SHEET 6

201

200

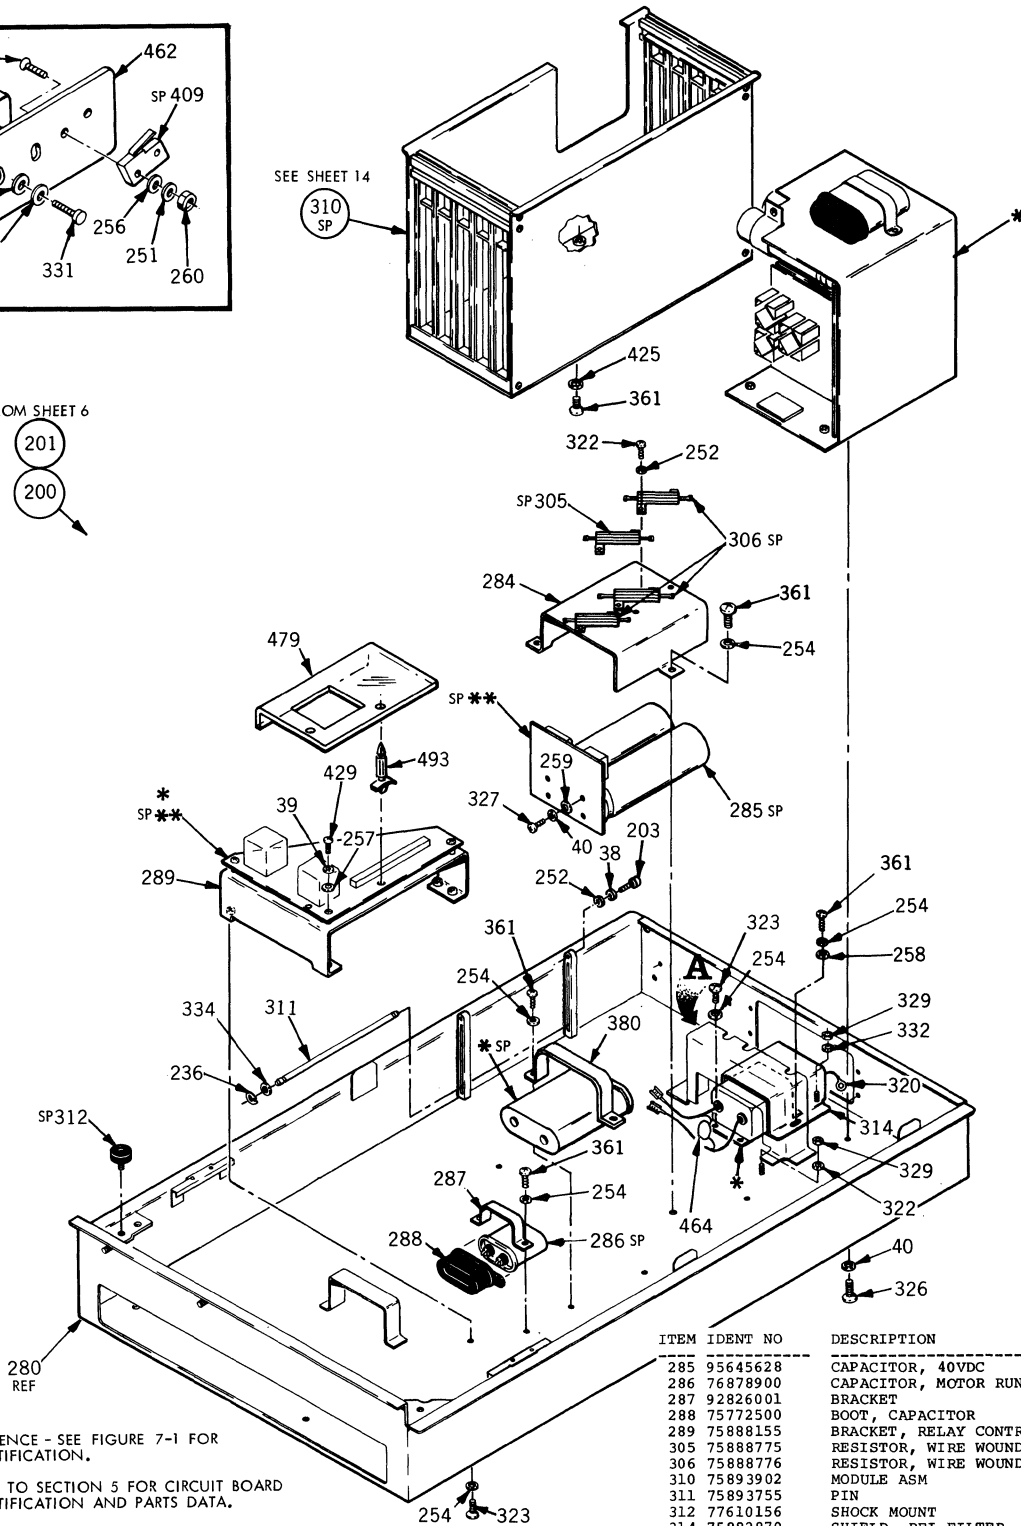

* REFERENCE - SEE FIGURE 7-1 FOR IDENTIFICATION.

** REFER TO SECTION 5 FOR CIRCUIT BOARD IDENTIFICATION AND PARTS DATA.

ITEM	IDENT NO	DESCRIPTION	WHERE USED
038	10125603	WASHER, PLAIN	201
039	10125803	WASHER, SPR LOCK	201
040	10125805	WASHERS, SPR LOCK	201
200	75880816	BASE PAN ASM	022
201	75880814	BASE PAN ASM	021
203	10127107	SCREW	201
236	94371000	RETAINING RING	201
251	10125800	WASHER SPR	201
252	10125801	WASHER SPR LOCK	201
254	10125804	WASHER, SPR LOCK	201
256	10125602	WASHER, PLAIN	201
257	10125605	WASHER, PLAIN	201
258	10125606	WASHER, PLAIN	201
259	10125607	WASHER, PLAIN	201
260	10125102	SCREW, NUT-HEX	201
280	75897343	PAN, BASE	201
284	75881350	BRACKET RESISTOR MTG	201

ITEM	IDENT NO	DESCRIPTION	WHERE USED
285	95645628	CAPACITOR, 40VDC	201
286	76878900	CAPACITOR, MOTOR RUN	201
287	92826001	BRACKET	201
288	75772500	BOOT, CAPACITOR	201
289	75888155	BRACKET, RELAY CONTR	201
305	75888775	RESISTOR, WIRE WOUND	201
306	75888776	RESISTOR, WIRE WOUND	201
310	75893902	MODULE ASM	201
311	75893755	PIN	201
312	77610156	SHOCK MOUNT	201
314	75882870	SHIELD, RFI FILTER	201
320	93541012	TERMINAL, RING TONGUE	201
322	10127103	SCREW, PAN HD	201
323	10127120	SCREW, PAN HD	201
326	10127141	SCREW, PAN HD	201
327	10127144	SCREW, PAN HD	201
329	10126403	WASHER, EXT TOOTH LK	201
331	10125103	SCREW, NUT-HEX	201
332	10125108	NUT, HEX	201
334	93564004	WASHER, NYLON	201
361	10125106	NUT, HEX	201
380	95643601	CLAMP, CAPACITOR	201
409	94141015	SW, INTEGRAL LEVER	201
425	10126402	WASHER, EXT TOOTH LK	201
429	10127112	SCREW, PAN HD	201
462	75883067	PLATE SW MTG	201
463	92932054	SCREW	201
464	75883006	VARISTOR	201
479	75883418	COVER, PWA RLY CNTL	201
493	51777344	SUPPORT - C.B.	201

FIGURE 7-8. BASE PAN ASSEMBLY (SHEET 2 OF 2)

ITEM IDENT NO	DESCRIPTION	WHERE USED
035 10127111	SCREW, PAN HD	202
039 10125803	WASHER, SPR LOCK	202
202 75880120	DECK ASM	021
238 10127102	SCREW, PAN HD	202
243 10126219	SCREW, HEX SOC HD CAP	202
244 10127113	SCREW, PAN HD	202
254 10125804	WASHER, SPR LOCK	202
257 10125605	WASHER, PLAIN	202
258 10125606	WASHER, PLAIN	202
316 75899546	BLK	202
333 10125301	NUT, HEX	202
335 10126221	SCREW	202
364 75880040	BASE PLATE ASM	202
365 75886281	SPINDLE	202
388 92723396	BUTTON SCREW	202
389 77832430	BUMPER	202
391 75893682	BUMPER MOUNT, LOWER	202
401 75888746	CAM-TOWER	202
402 75888747	CAM-TOWER	202
403 75889469	BUMPER MT, UPPER	202
411 75893943	MTG BRACKET	202
412 75893953	SERVO PREAMP SHIELD	202
413 75893990	CONNECTOR ASM	202
414 75881385	MTG PLATE	202
415 75886341	SHIELD, RD/WR PREAMP	202
419 75893915	COVER	202
422 92602004	CABLE CLAMP	202
424 10125029	SCREW, HEX	202
433 10127114	SCREW, PAN HD	202
434 10125718	SCREW, PAN HD	202
438 10125004	SCREW, HEX HD	202
445 18440201	SILICONE RUBBER	202


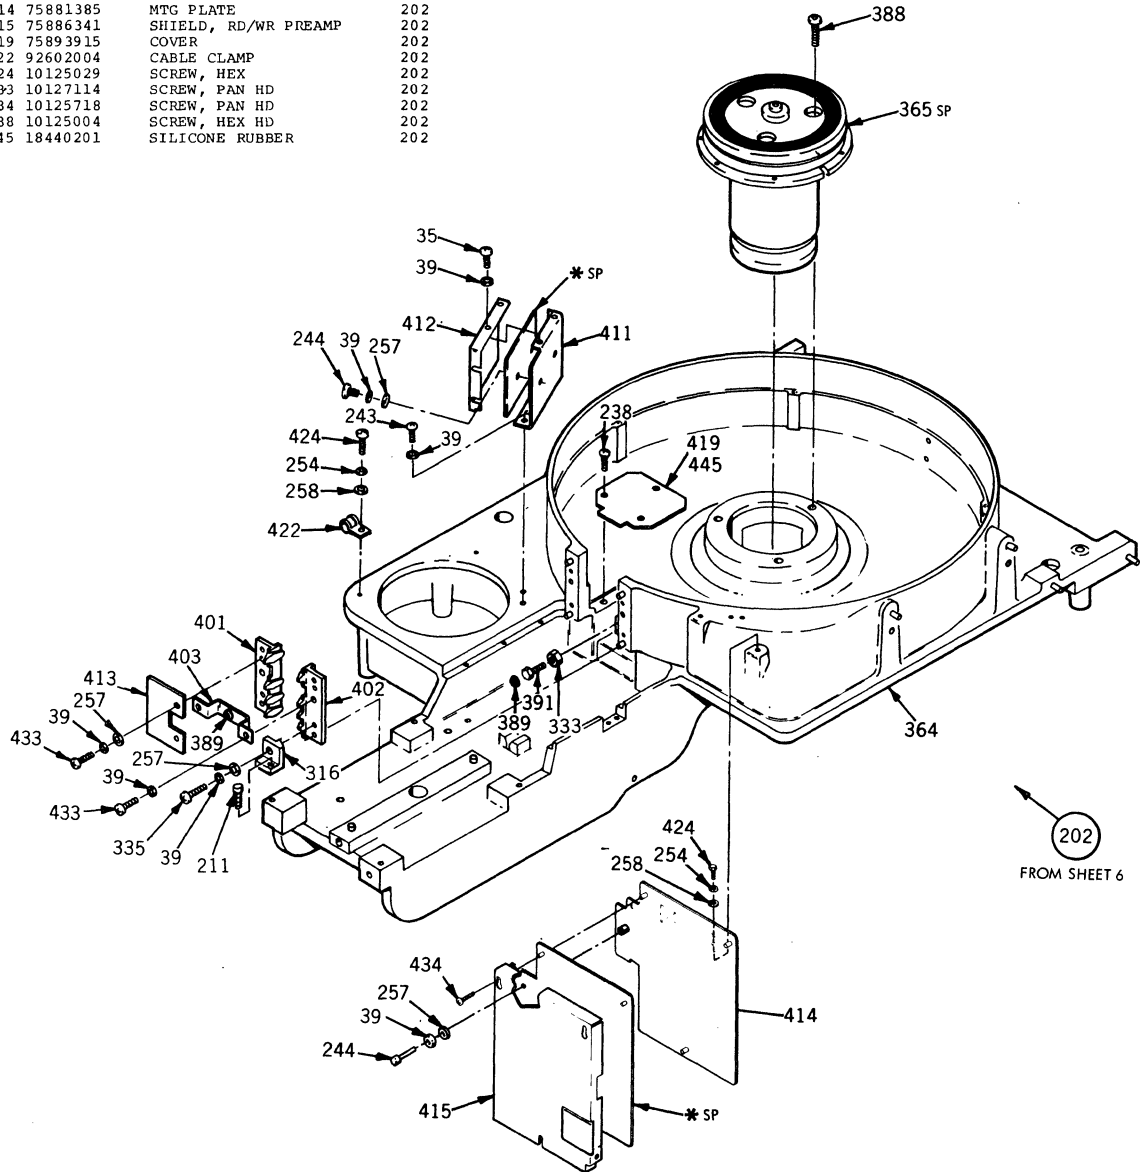



FIGURE 7-9. DECK ASSEMBLY (SHEET 1 OF 3)

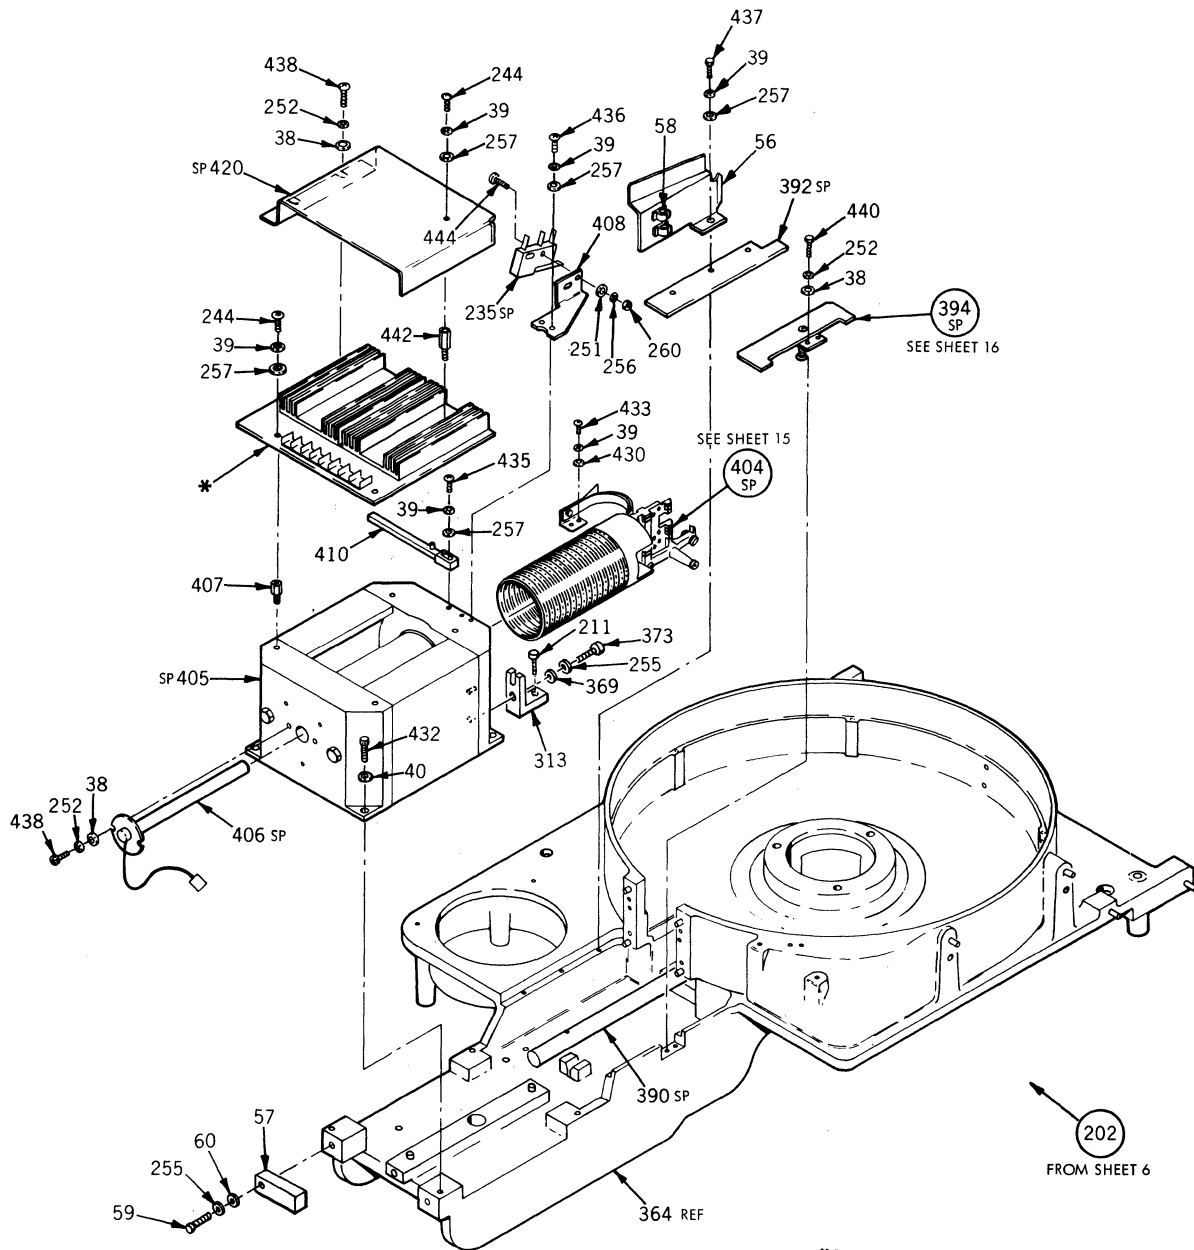

*REFER TO SECTION 5 FOR CIRCUIT BOARD IDENTIFICATION AND PARTS DATA.

ITEM	IDENT NO	DESCRIPTION	WHERE USED	ITEM	IDENT NO	DESCRIPTION	WHERE USED
038	10125603	WASHER, PLAIN	202	373	10126255	SCREW	202
039	10125803	WASHER, SPR LOCK	202	390	75886286	ROD-GUIDE	202
040	10125805	WASHERS, SPR LOCK	202	392	75886037	PLATE BEARING - FIXED	202
056	75881020	AIR BAFFLE	202	394	75891680	PLATE ASM	202
057	75882675	SPACER	202	404	75880135	CARRIAGE & COIL ASM	202
058	51853015	CLAMP	202	405	75886512	MAGNET ASM	202
059	10126256	SCREW	202	406	75894102	VEL XDUCER-CONN ASM	202
060	10125608	WASHER, PLAIN	202	407	51885515	STANDOFF, MALE-FEMALE	202
202	75880120	DECK ASM	021	408	75891011	BRACKET SWITCH	202
211	93096285	SCREW	202	410	75891573	CARRIAGE LKG TOOL	202
235	77610140	SW INTEGRAL LEVER	202	420	75893975	COVER, POWER AMP ASM	202
244	10127113	SCREW, PAN HD	202	430	10126401	WASHER, EXT TOOTH LK	202
251	10125800	WASHER SPR	202	432	10126245	SCREW, HEX SOC HD	202
252	10125801	WASHER SPR LOCK	202	433	10127114	SCREW, PAN HD	202
255	10125806	WASHER, SPR LOCK	202	435	10127115	SCREW, PAN HD	202
256	10125602	WASHER, PLAIN	202	436	10125016	SCREW, HEX HD	202
257	10125605	WASHER, PLAIN	202	437	10125018	SCREW, HEX HD	202
260	10125102	SCREW, NUT-HEX	202	438	10125004	SCREW, HEX HD	202
313	75899542	BLK	202	440	10125006	SCREW, HEX HD	202
364	75880040	BASE PLATE ASM	202	442	51885504	STANDOFF, MALE-FEMALE	202
369	92009012	WASHER, PLAIN	202	444	10127169	SCREW, PAN HD	202

FIGURE 7-10. DECK ASSEMBLY (SHEET 2 OF 3)

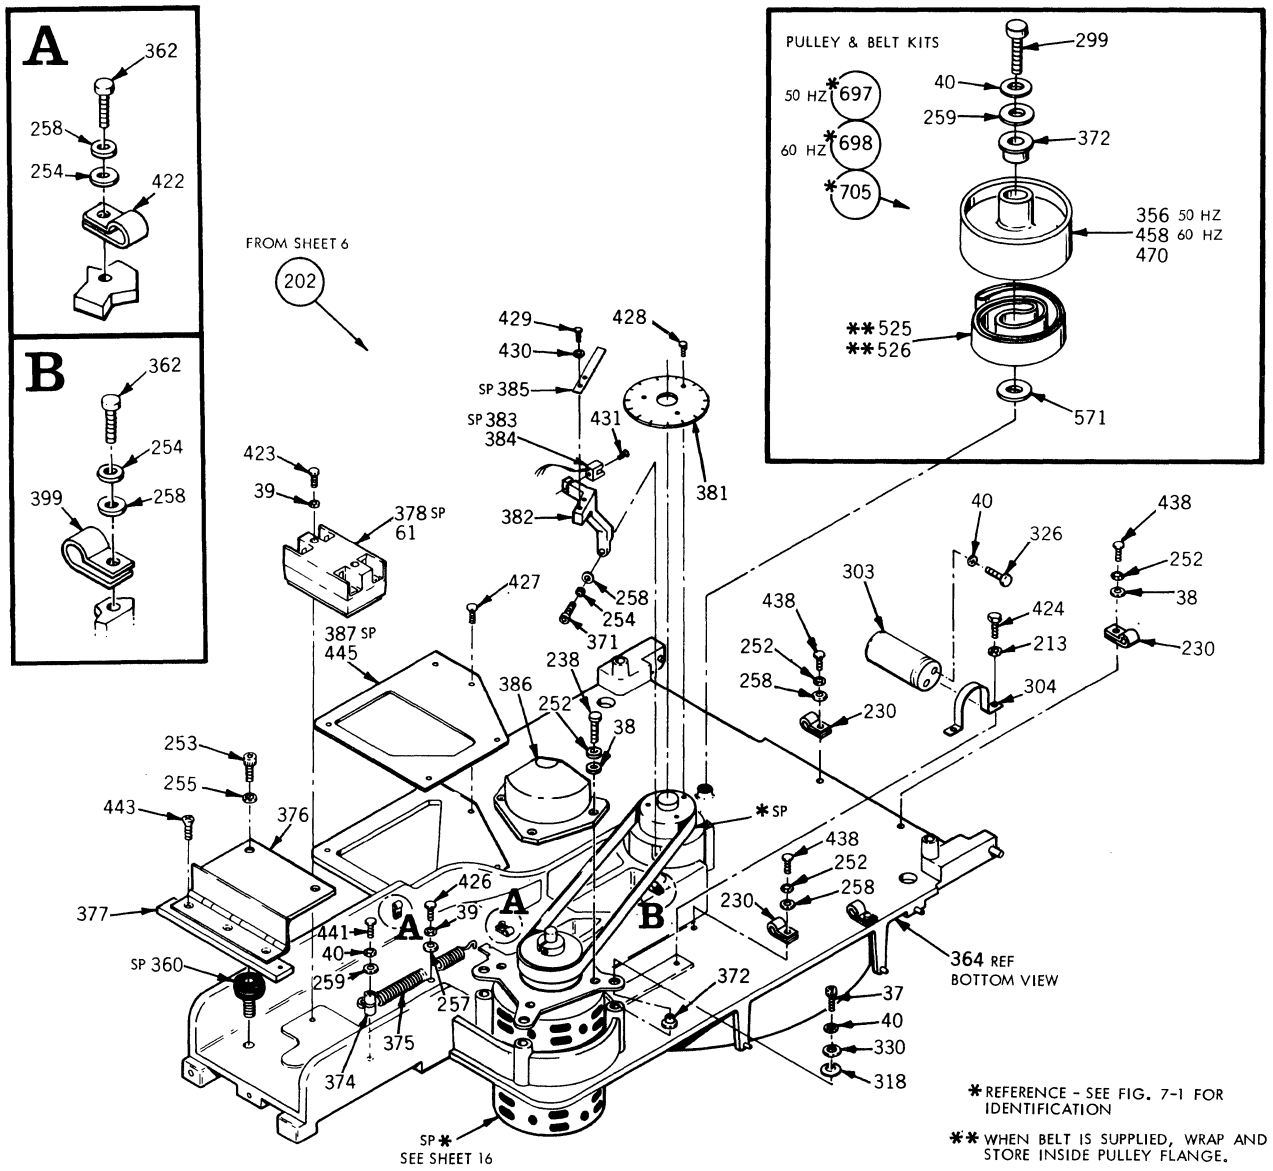


ITEM IDENT NO	DESCRIPTION	WHERE USED	ITEM IDENT NO	DESCRIPTION	WHERE USED
037	SCREW CAP	202	372	WASHER, SHOULDER	697
038	WASHER, PLAIN	202	372	WASHER, SHOULDER	698
039	WASHER, SPR LOCK	202	372	WASHER, SHOULDER	705
040	WASHERS, SPR LOCK	202	374	POST, MOTOR SPRING	202
040	WASHERS, SPR LOCK	697	375	SPRING, TENSION	202
040	WASHERS, SPR LOCK	698	376	HINGE	202
040	WASHERS, SPR LOCK	705	377	SPACER, HINGE	202
061	COMPOUND 340	202	378	P.A.C. RELAY (SSR)	202
202	DECK ASM	021	381	DISC, SPEED SENSOR	202
213	WASHER	202	382	SUPPORT, SPEED SENSOR	202
230	CABLE CLAMP	202	383	SPEED SENSOR	202
238	SCREW, PAN HD	202	384	OPTICAL SWITCH	383
252	WASHER SPR LOCK	202	385	GROUND SPRING	202
253	SCREW, SOCKET HD	202	386	PULLEY COVER	202
254	WASHER, SPR LOCK	202	387	PLATE, COVER	202
255	WASHER, SPR LOCK	202	399	CABLE CLAMP	202
257	WASHER, PLAIN	202	422	CABLE CLAMP	202
258	WASHER, PLAIN	202	423	SCREW PAN HD	202
259	WASHER, PLAIN	202	424	SCREW, HEX	202
259	WASHER, PLAIN	697	426	SCREW, HEX SOC HD	202
259	WASHER, PLAIN	698	427	SCREW, FLAT HD	202
259	WASHER, PLAIN	705	428	SCREW, SELF LOCKING	202
299	SCREW, CAP	697	429	SCREW, PAN HD	202
299	SCREW, CAP	698	430	WASHER, EXT TOOTH LK	202
299	SCREW, CAP	705	431	SCREW, FLAT HD	202
303	CAPACITOR	202	438	SCREW, HEX HD	202
304	CLAMP, CAPACITOR	202	441	SCREW, PAN HD	202
318	WASHER, INSULATOR	202	443	SCREW, HEX HD	202
326	SCREW, PAN HD	202	445	SCREW, FLAT HD	202
330	WASHER, SPECIAL	202	458	SCREW, FLAT HD	202
356	PULLEY	697	470	SILICONE RUBBER	202
360	SHOCK MOUNT	202	475	PULLEY	698
362	SCREW, PAN HD	202	475	MOTOR PULLEY	705
364	BASE PLATE ASM	202	525	DRIVE BELT 60 HZ	698
371	SCREW, SOCKET HD	202	526	DRIVE BELT 50 HZ	697
372	WASHER, SHOULDER	202	571	SPACER	697
			571	SPACER	698
			571	SPACER	705

FIGURE 7-11. DECK ASSEMBLY, BOTTOM VIEW (SHEET 3 OF 3)

FROM SHEET 10

310
SP

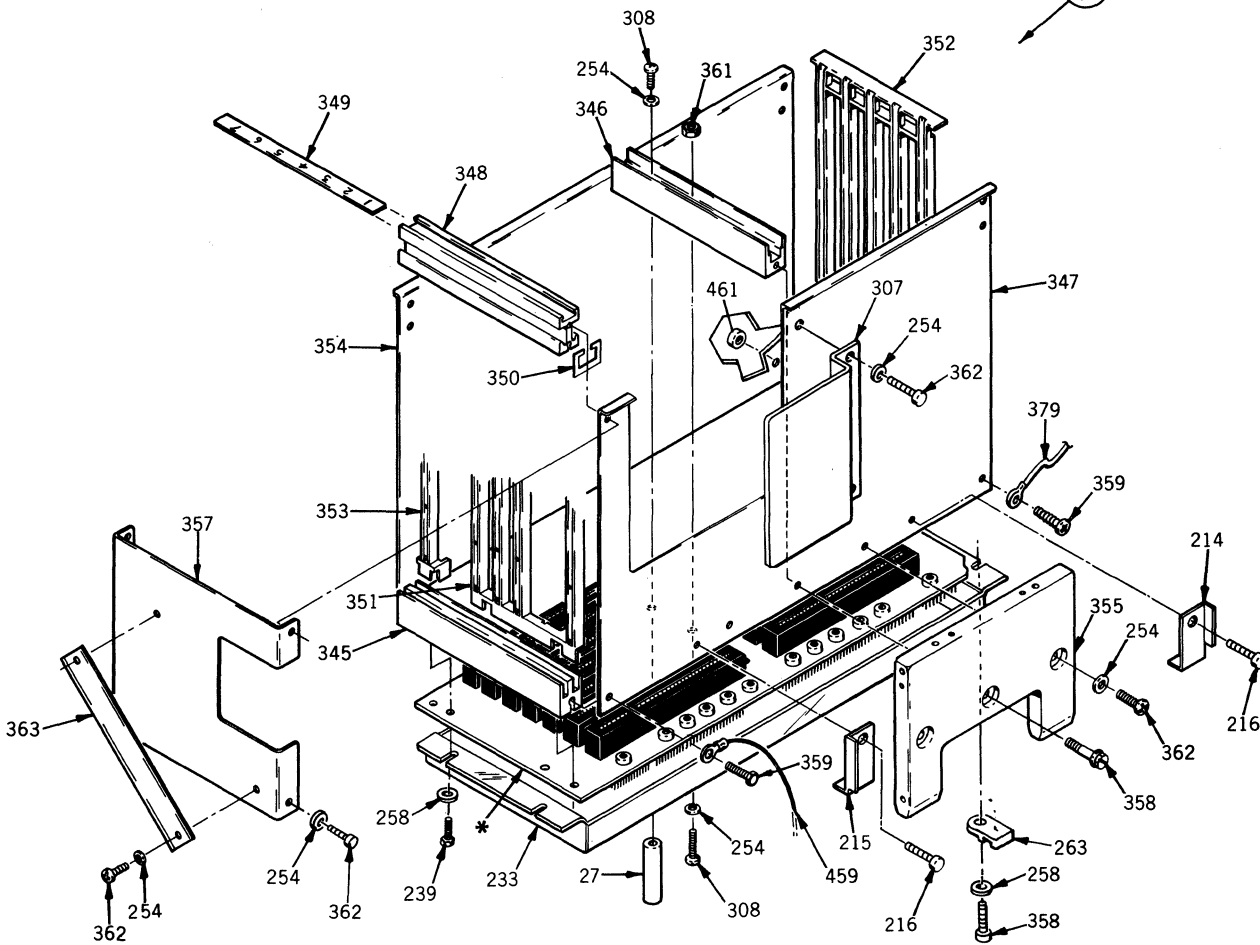


* REFER TO SECTION 5 FOR CIRCUIT BOARD IDENTIFICATION AND PARTS DATA

ITEM	IDENT NO	DESCRIPTION	WHERE USED
027	75880243	SPACER	310
214	75894320	BRACKET, RIGHT	310
215	75894321	BRACKET, LEFT	310
216	10125723	SCREW, FLAT HD	310
233	75883343	SHIELD, E MODULE	310
239	93592202	SCREW	310
254	10125804	WASHER, SPR LOCK	310
258	10125606	WASHER, PLAIN	310
263	94343210	CABLE TIE MOUNT	310
307	75883485	E-MODULE BRACKET	310
308	92745208	SCREW, PAN HD	310
310	75893902	MODULE ASM	201
345	75885836	SPRT BAR-CARD GUIDE	310
346	75885832	MTG BAR-GUIDE CTR	310
347	75886291	PANEL, LEFT SIDE	310
348	75885841	MTG BAR-CARD GUIDE	310
349	75885791	STRIP-CARD LOCATION	310
350	82316700	SPACER-GUIDE	310
351	75889960	GUIDE, CKT CARD MOD	310
352	82312001	GUIDE, CIRCUIT CARD	310, 351
353	82311701	GUIDE, CIRCUIT CARD	310
354	75885692	PANEL, RIGHT SIDE	310
355	75893765	BLOCK	310
357	75893775	BRACKET, I/O CABLE	310
358	93592204	SCREW, HEX WASHER	310
359	93592200	SCREW, TPG HEX PNL	310
361	10125106	NUT, HEX	310
362	10127123	SCREW, PAN HD	310
363	75893760	CLAMP	310
366	92745211	SCREW, PAN HD	310
379	75882357	GND WIRE	310
459	75882351	JUMPER WIRE	310
461	75895240	WASHER	310

FIGURE 7-12. MODULE ASSEMBLY

FROM SHEET 11

404
SP

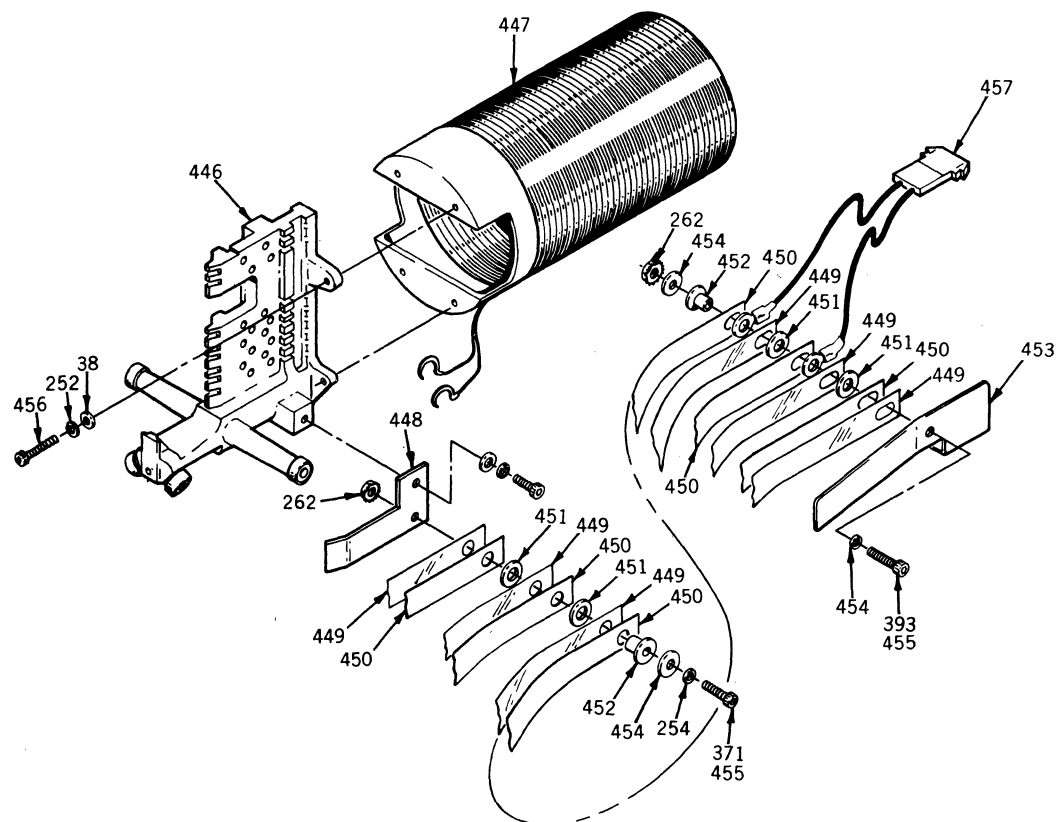

ITEM	IDENT NO	DESCRIPTION	WHERE USED
038	10125603	WASHER, PLAIN	404
252	10125801	WASHER SPR LOCK	404
254	10125804	WASHER, SPR LOCK	404
371	10126226	SCREW, SOCKET HD	404
393	10126227	SCREW, HEX SOC HD	404
404	75880135	CARRIAGE & COIL ASM	202
446	75880140	CARRIAGE & BEARINGS	404
447	75885981	COIL ASM	404
448	75889435	PLATE, COIL	404
449	75886540	LEAD FLEX, COIL	404
450	75886191	INSULATOR, FLEX LEAD	404
451	75276101	WASHER, PHENOLIC	404
452	75276201	SPACER, PHENOLIC	404
453	75888690	BRACKET, STRAP	404
454	77830612	WASHER, PLAIN	404
455	95044214	SEALANT	404
456	92815099	SCREW, SOCKET HD CAP	404
457	75881921	ACTUATOR WIRING ASM	404

FIGURE 7-13. CARRIAGE AND COIL ASSEMBLY



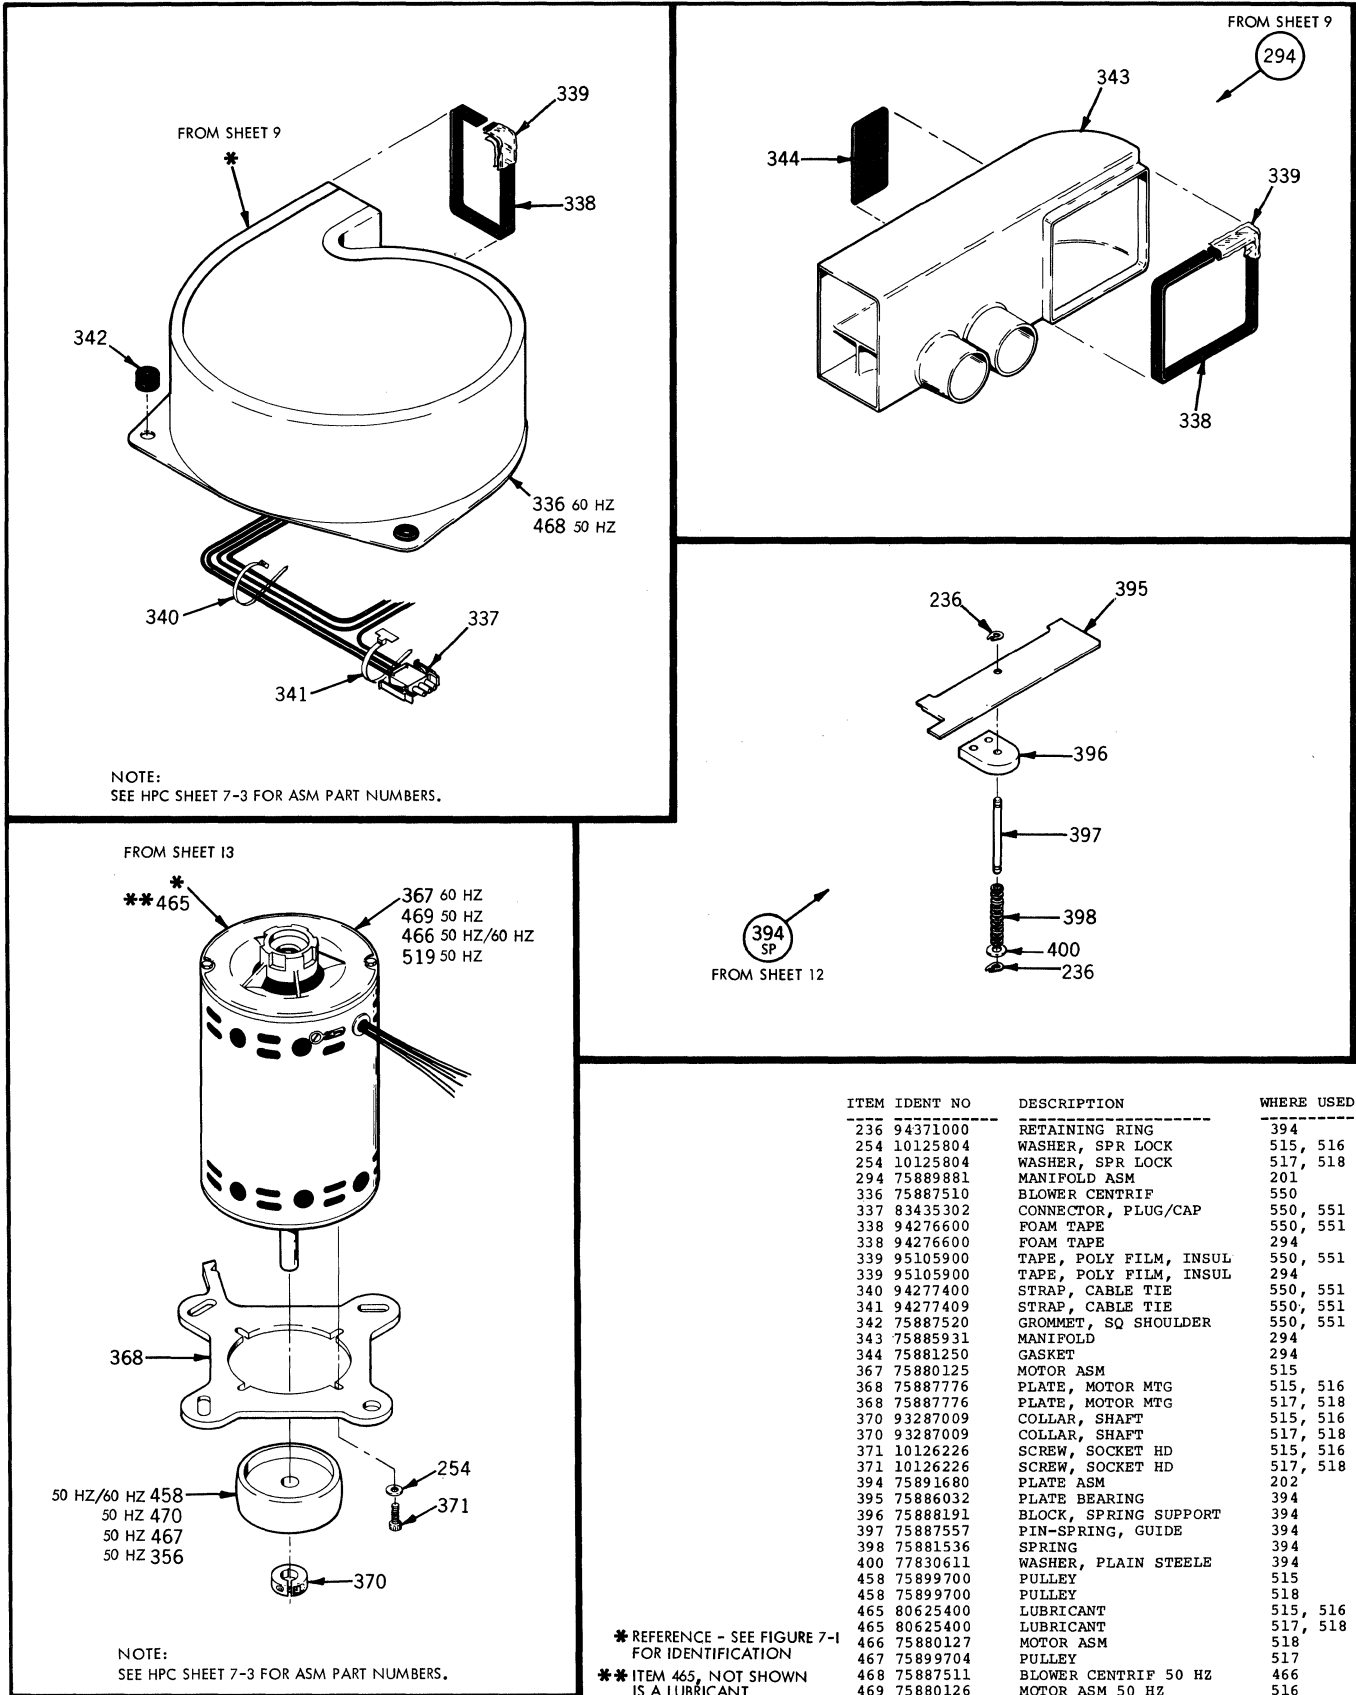


FIGURE 7-14. MISCELLANEOUS SUB-ASSEMBLIES

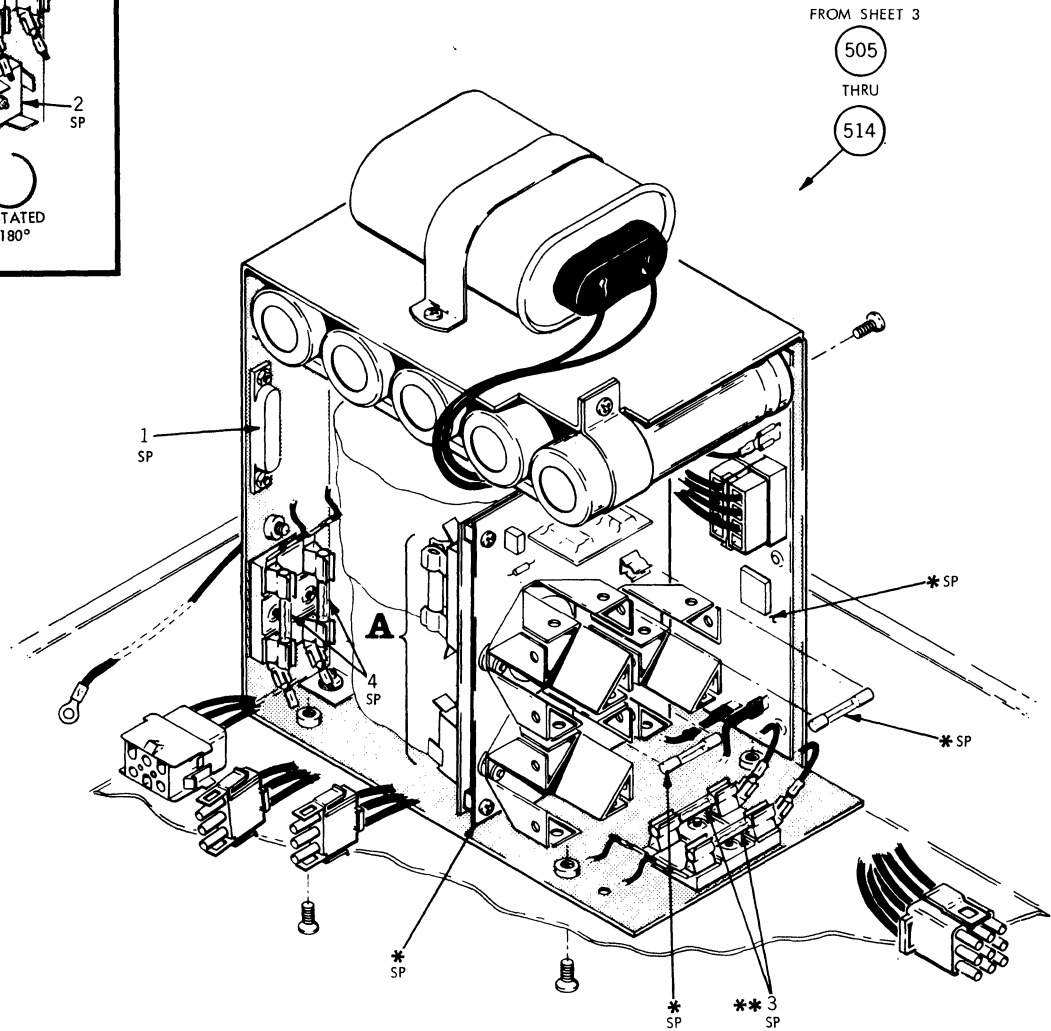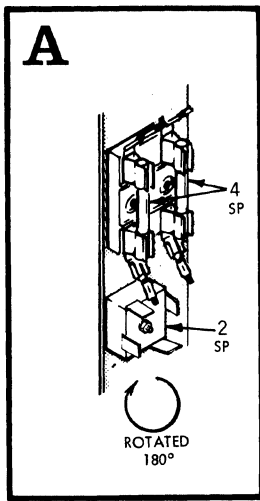


ITEM IDENT NUMBER	DESCRIPTION
001 95583504	RECTIFIER BLOCK
002 50242201	RECTIFIER BRIDGE
**003 93419228	FUSE
004 95647607	FUSE

NOTE: DETAILED PARTS INFORMATION NOT PROVIDED FOR THIS VIEW. ONLY PARTS CONSIDERED SERVICE LEVEL SPARES ARE SHOWN.

* REFER TO SECTION 5 FOR CIRCUIT BOARD IDENTIFICATION AND PARTS DATA.


** ITEM 4 USED ON 50 HZ UNITS.

FIGURE 7-15. SPARE PARTS PROVISIONING

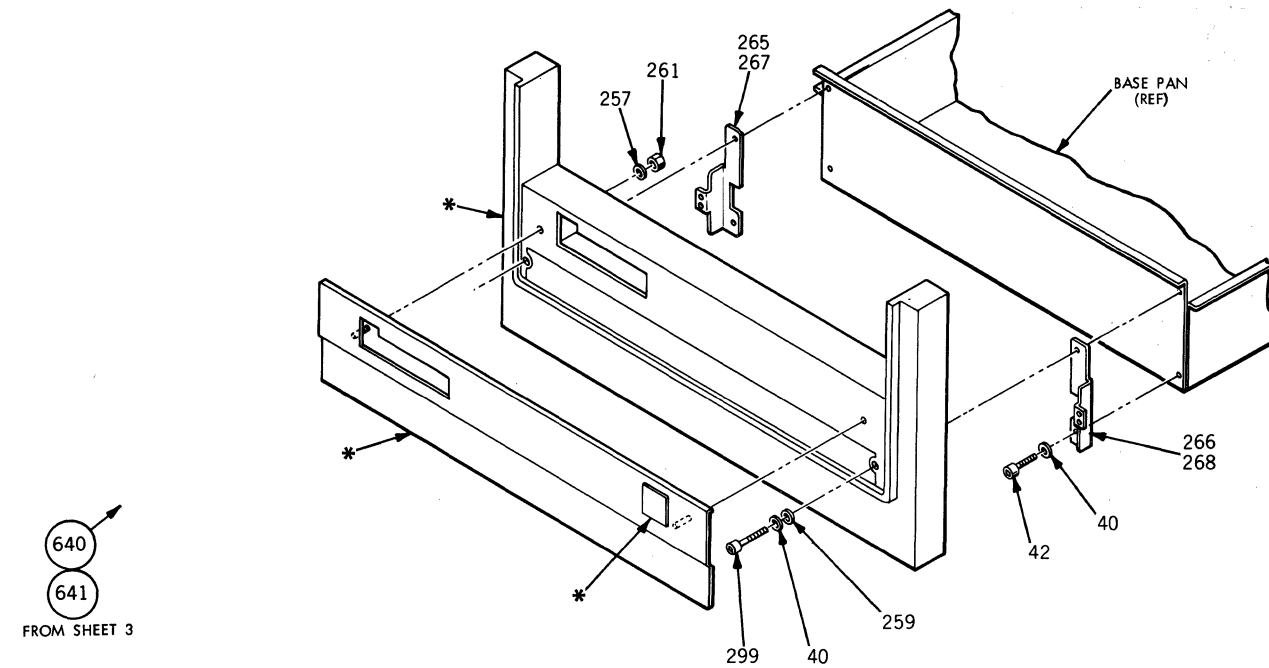

640
641
FROM SHEET 3

642
FROM SHEET 3

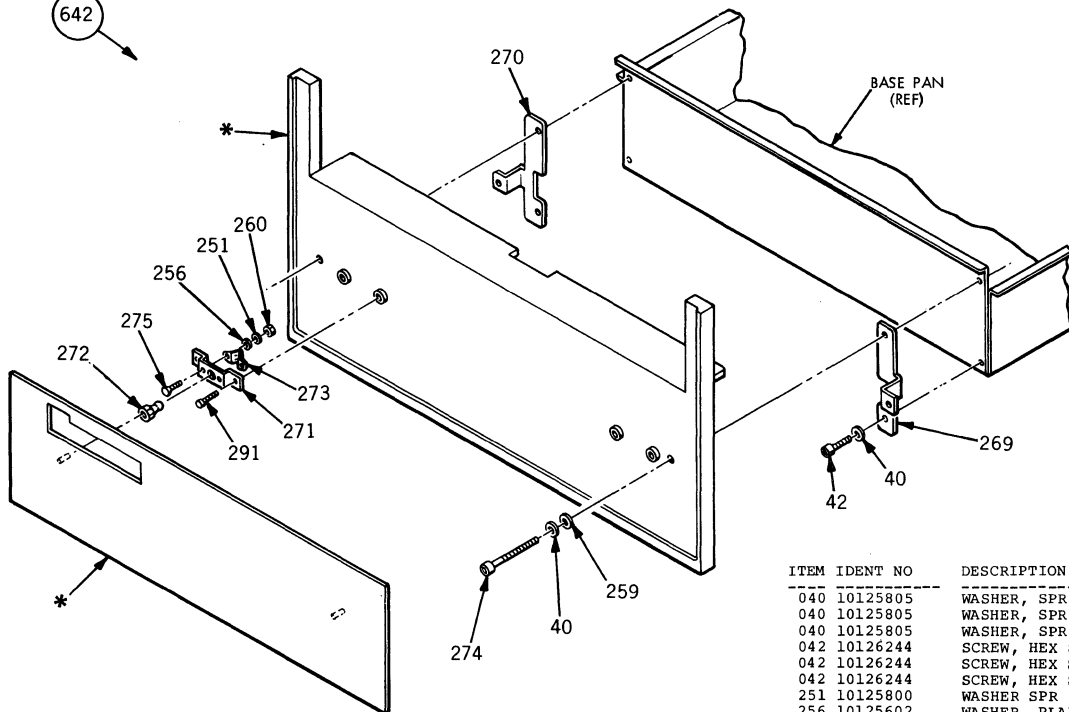


ITEM	IDENT NO	DESCRIPTION	WHERE USED
040	10125805	WASHER, SPR LOCK	640
040	10125805	WASHER, SPR LOCK	641
040	10125805	WASHER, SPR LOCK	642
042	10126244	SCREW, HEX SOC HD CAP	640
042	10126244	SCREW, HEX SOC HD CAP	641
042	10126244	SCREW, HEX SOC HD CAP	642
251	10125800	WASHER SPR	642
256	10125602	WASHER, PLAIN	642
257	10125605	WASHER, PLAIN	640
257	10125605	WASHER, PLAIN	641
259	10125607	WASHER, PLAIN	640
259	10125607	WASHER, PLAIN	641
259	10125607	WASHER, PLAIN	642
260	10125102	SCREW, NUT-HEX	642
261	53777902	NUT & WASHER	640
261	53777902	NUT & WASHER	641
265	75881906	BRACKET R & LH	640
266	75881907	BRACKET R & LH	640
267	75893012	BRACKET R & LH	641
268	75893013	BRACKET R & LH	641
269	75893010	BRACKET R & LH	642
270	75893011	BRACKET R & LH	642
271	75892742	PLATE CATCH BRACKET	642
272	93326006	STUD BALL	642
273	93325003	CATCH SPRING	642
274	10126251	SCREW, SOCKET HEAD	642
275	10125759	SCREW, FLAT HD	642
291	94376910	SCREW	642
299	10126250	SCREW, CAP	640
299	10126250	SCREW, CAP	641

* REFERENCE - SEE FIG 7-1 FOR IDENTIFICATION.

Figure 7-16. Front Panel Installation Kits

FROM SHEET 3

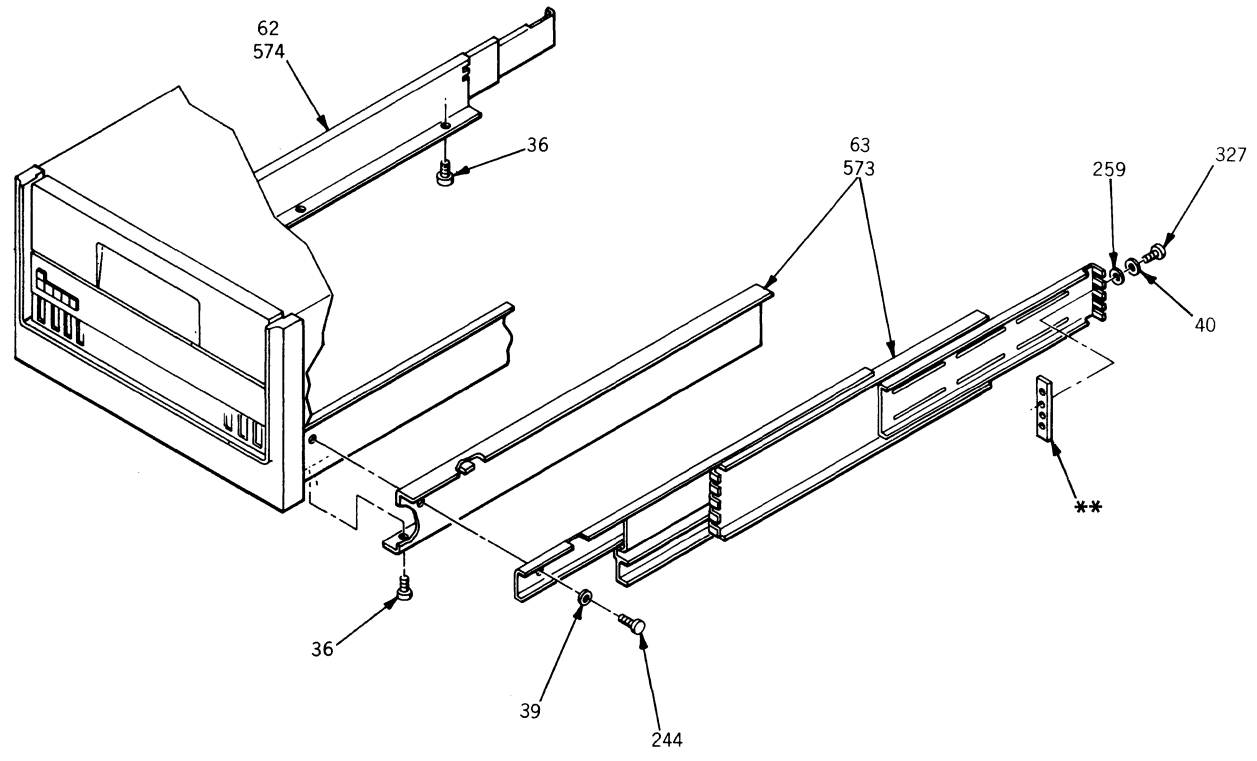

* REFERENCE - SEE FIG. 7-1 FOR IDENTIFICATION.
 ** NUT PLATES ARE FURNISHED WITH SLIDE ASSEMBLIES,
 ITEMS 573 AND 574 OR ITEMS 62 AND 63.

ITEM	IDENT NO	DESCRIPTION	WHERE USED
036	10127142	SCREW, PAN HD	575
039	10125803	WASHER, SPR LOCK	575
040	10125805	WASHER, SPR LOCK	575
062	75890945	DRAWER EXT SLIDE	576
063	75890946	DRAWER EXT SLIDE	576
244	10127113	SCREW, PAN HD	575
259	10125607	WASHER, PLAIN	575
327	10127144	SCREW, PAN HD	575
573	75890938	DRAWER EXT SLIDE	575
574	75890937	DRAWER EXT SLIDE	575
576	75897701	SLIDE KIT	HPC
575	75897340	SLIDE KIT	HPC

FIGURE 7-17. SLIDE KIT

ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET	ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET
021	75880900	FINAL MECHANICAL ASM	500	S5	205	75010105	HEAD ARM ASM	021, 513	S7
021	75880900	FINAL MECHANICAL ASM	500	S6	206	75881542	RETAINER, HEAD CONN	021	S6
021	75880900	FINAL MECHANICAL ASM	500	S7	207	75881395	RETAINER, HEAD CONN	021	S6
021	75880900	FINAL MECHANICAL ASM	500	S8	208	10126263	SCREW, SOCKET HEAD	021	S6
022	75880902	FINAL MECHANICAL ASM	501	S5	209	75893925	PLATE, SEPARATOR	021	S7
022	75880902	FINAL MECHANICAL ASM	501	S6	210	75883317	BRACKET, SWITCH	021	S6
022	75880902	FINAL MECHANICAL ASM	501	S7	211	93096285	SCREW	202	S12
022	75880902	FINAL MECHANICAL ASM	501	S8	212	77617049	SCREW, PAN HD	500	S5
023					213	10126104	WASHER	202	S13
024					214	75894320	BRACKET, RIGHT	310	S14
025					215	75894321	BRACKET, LEFT	310	S14
026					216	10125723	SCREW, FLAT HD	310	S14
027	75880243	SPACER	310	S14	217	75892811	WASHER, SHOULDER	021	S6
028	75881128	DECK SUPPORT LH	021	S6	218	75892221	PIN	021	S6
029	75881129	DECK SUPPORT RH	021	S6	219	92033037	RETAINING RING	021	S6
030	75883045	GASKET	500	S5	219	92033037	RETAINING RING	021	S7
031	10127168	SCREW, PAN HD	021	S6	220	92054223	BALL BEARING	021	S7
032	75881845	CLIP-PREFILTER MTG	500	S5	221	75883115	CAM PLATE	021	S7
033	94364401	SWITCH	021	S6	222	75889491	SUPPORT SHAFT	021	S8
034	95105904	POLYESTER TAPE	021	S6	223	75887452	RECEIVER BAR, LH	021	S7
035	10127111	SCREW, PAN HD	500	S5	224	75887447	RECEIVER BAR, RH	021	S7
035	10127111	SCREW, PAN HD	021	S6	225	75882834	CARRIAGE RAIL	021	S7
035	10127111	SCREW, PAN HD	201	S9	226	75882833	CARRIAGE RAIL	021	S7
035	10127111	SCREW, PAN HD	021	S8	227	75887442	PLATE, RECEIVER	021	S7
035	10127111	SCREW, PAN HD	202	S11	228	93564001	WASHER, NYLON	021	S6
036	10127142	SCREW, PAN HD	500	S5	229	75881790	LINK	021	S6
036	10127142	SCREW, PAN HD	575	S19	230	16402506	CABLE CLAMP	021	S6
037	10126246	SCREW CAP	202	S13	230	16402506	CABLE CLAMP	202	S13
038	10125603	WASHER, PLAIN	201	S10	231	10127104	SCREW, PAN HD	021	S6
038	10125603	WASHER, PLAIN	021	S6	232	24565004	CABLE CLAMP	500	S5
038	10125603	WASHER, PLAIN	202	S12	233	75883343	SHIELD, E MODULE	310	S14
038	10125603	WASHER, PLAIN	202	S13	234	75893958	SPACER	021	S7
038	10125603	WASHER, PLAIN	404	S15	235	77610140	SW INTEGRAL LEVER	021	S6
039	10125803	WASHER, SPR LOCK	500	S5	235	77610140	SW INTEGRAL LEVER	202	S12
039	10125803	WASHER, SPR LOCK	021	S6	236	94371000	RETAINING RING	021	S6
039	10125803	WASHER, SPR LOCK	021	S8	236	94371000	RETAINING RING	201	S10
039	10125803	WASHER, SPR LOCK	201	S9	236	94371000	RETAINING RING	394	S16
039	10125803	WASHER, SPR LOCK	201	S10	237	92745012	SCREW, PAN HD	021	S6
039	10125803	WASHER, SPR LOCK	202	S11	238	10127102	SCREW, PAN HD	202	S11
039	10125803	WASHER, SPR LOCK	202	S12	238	10127102	SCREW, PAN HD	202	S13
039	10125803	WASHER, SPR LOCK	202	S13	238	10127102	SCREW, PAN HD	043	S8
039	10125803	WASHER, SPR LOCK	575	S19	238	10127102	SCREW, PAN HD	021	S6
040	10125805	WASHERS, SPR LOCK	201	S10	239	93592202	SCREW	310	S14
040	10125805	WASHERS, SPR LOCK	202	S12	240	10125704	SCREW, FLAT HD	021	S7
040	10125805	WASHERS, SPR LOCK	202	S13	241	93592158	SCREW, HEX ASH HD	021	S6
040	10125805	WASHERS, SPR LOCK	697	S13	242	92033033	RETAINING RING	043	S8
040	10125805	WASHERS, SPR LOCK	698	S13	243	10126219	SCREW, HEX SOC HD CAP	021	S7
040	10125805	WASHERS, SPR LOCK	705	S13	243	10126219	SCREW, HEX SOC HD CAP	202	S11
040	10125805	WASHER, SPR LOCK	640	S18	244	10127113	SCREW, PAN HD	021	S6
040	10125805	WASHER, SPR LOCK	641	S18	244	10127113	SCREW, PAN HD	021	S8
040	10125805	WASHER, SPR LOCK	642	S18	244	10127113	SCREW, PAN HD	202	S11
040	10125805	WASHER, SPR LOCK	575	S19	244	10127113	SCREW, PAN HD	202	S12
041	95033900	ADHESIVE	500	S5	244	10127113	SCREW, PAN HD	575	S19
042	10126244	SCREW, HEX SOC HD CAP	640	S18	245	75883475	GROUND STRAP	201	S9
042	10126244	SCREW, HEX SOC HD CAP	641	S18	246	10127121	SCREW, PAN HD	021	S8
042	10126244	SCREW, HEX SOC HD CAP	642	S18	247	10125724	SCREW, FLAT HD	021	S7
043	75882865	DOOR ASM	021	S8	248	10125725	SCREW, FLAT HD	021	S7
044	75883637	LATCH PLATE	043	S8	249	95694202	SPACER	201	S9
045	75881840	PIN PAWL	043	S8	250	10126253	SCREW, HEX SOC HD CAP	021	S6
046	75881730	PAWL	043	S8	251	10125800	WASHER SPR	021	S6
047	75881770	SPRING PAWL	043	S8	251	10125800	WASHER SPR	201	S10
048	75882694	SLIDE, LATCH	043	S8	251	10125800	WASHER SPR	202	S12
049	75883310	TENSION SPRING	043	S8	251	10125800	WASHER SPR	642	S18
050	75883642	SOLENOID BRACKET	043	S8	252	10125801	WASHER SPR LOCK	201	S9
051	75883056	SOLENOID ASM	043	S8	252	10125801	WASHER SPR LOCK	021	S6
052	75882689	LATCH COVER	043	S8	252	10125801	WASHER SPR LOCK	201	S10
053	75883465	JUMPER WIRE ASM	043	S8	252	10125801	WASHER SPR LOCK	202	S12
054	94376917	SCREW	043	S8	252	10125801	WASHER SPR LOCK	202	S13
055	94376918	SCREW	043	S8	252	10125801	WASHER SPR LOCK	043	S8
056	75881020	AIR BAFFLE	202	S12	252	10125801	WASHER SPR LOCK	404	S15
057	75882675	SPACER	202	S12	253	10126254	SCREW, SOCKET HD	202	S13
058	51853015	CLAMP	202	S12	254	10125804	WASHER, SPR LOCK	021	S7
059	10126256	SCREW	202	S12	254	10125804	WASHER, SPR LOCK	021	S6
060	10125608	WASHER, PLAIN	202	S12	254	10125804	WASHER, SPR LOCK	021 043	S8
060	10125608	WASHER, PLAIN	021	S6	254	10125804	WASHER, SPR LOCK	201	S9
061	18748600	COMPOUND 340	202	S13	254	10125804	WASHER, SPR LOCK	201	S10
062	75890945	DRAWER EXT SLIDE	576	S19	254	10125804	WASHER, SPR LOCK	310	S14
063	75890946	DRAWER EXT SLIDE	576	S19	254	10125804	WASHER, SPR LOCK	202	S11
200	75880816	BASE PAN ASM	022	S9	254	10125804	WASHER, SPR LOCK	202	S13
200	75880816	BASE PAN ASM	022	S10	254	10125804	WASHER, SPR LOCK	404	S15
201	75880814	BASE PAN ASM	021	S6	254	10125804	WASHER, SPR LOCK	515, 516	S16
201	75880814	BASE PAN ASM	021	S9	254	10125804	WASHER, SPR LOCK	517, 518	S16
201	75880814	BASE PAN ASM	021	S10	254	10125804	WASHER, SPR LOCK	500	S5
202	75880120	DECK ASM	021	S6	255	10125806	WASHER, SPR LOCK	021	S6
202	75880120	DECK ASM	021	S11	255	10125806	WASHER, SPR LOCK	202	S12
202	75880120	DECK ASM	021	S12	255	10125806	WASHER, SPR LOCK	202	S13
202	75880120	DECK ASM	021	S13	256	10125602	WASHER, PLAIN	021	S6
203	10127107	SCREW	201	S10	256	10125602	WASHER, PLAIN	201	S10
204	75010102	HEAD - ARM ASM	021, 513	S7	256	10125602	WASHER, PLAIN	202	S12

TOP DOWN ASSEMBLY COMPONENT PARTS LIST

ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET	ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET
256	10125602	WASHER, PLAIN	642	S18	309	75893761	CLAMP	201	S9
257	10125605	WASHER, PLAIN	021	S6	310	75893902	MODULE ASM	201	S10
257	10125605	WASHER, PLAIN	021, 043	S8	310	75893902	MODULE ASM	201	S14
257	10125605	WASHER, PLAIN	201	S10	311	75893755	PIN	201	S10
257	10125605	WASHER, PLAIN	202	S11	312	77610156	SHOCK MOUNT	201	S10
257	10125605	WASHER, PLAIN	202	S12	313	75899542	BLK	202	S12
257	10125605	WASHER, PLAIN	202	S13	314	75882870	SHIELD, RFI FILTER	201	S10
257	10125605	WASHER, PLAIN	640	S18	315	51870400	AC PWR RECEPTACLE	201	S9
257	10125605	WASHER, PLAIN	641	S18	316	75899546	BLK	202	S11
257	10125605	WASHER, PLAIN	500	S5	317	75062803	WASHER, SHOULDER	201	S9
258	10125606	WASHER, PLAIN	021	S7	318	75062400	WASHER, INSULATOR	201	S9
258	10125606	WASHER, PLAIN	021	S6	318	75062400	WASHER, INSULATOR	202	S13
258	10125606	WASHER, PLAIN	021, 043	S8	319	94274140	RECEPTACLE, SLIDE ON	201	S9
258	10125606	WASHER, PLAIN	201	S9	320	93541012	TERMINAL, RING TONGUE	201	S10
258	10125606	WASHER, PLAIN	201	S10	321	24565006	CABLE CLAMP	201	S9
258	10125606	WASHER, PLAIN	202	S11	322	10127103	SCREW, PAN HD	201	S9
258	10125606	WASHER, PLAIN	202	S13	322	10127103	SCREW, PAN HD	201	S10
258	10125606	WASHER, PLAIN	310	S14	323	10127120	SCREW, PAN HD	201	S9
258	10125606	WASHER, PLAIN	500	S5	323	10127120	SCREW, PAN HD	201	S10
259	10125607	WASHER, PLAIN	021	S6	324	10127122	SCREW, PAN HD	201	S9
259	10125607	WASHER, PLAIN	201	S10	324	10127122	SCREW, PAN HD	021	S7
259	10125607	WASHER, PLAIN	202	S13	325	10127124	SCREW, PAN HD	201	S9
259	10125607	WASHER, PLAIN	697	S13	325	10127124	SCREW, PAN HD	043	S8
259	10125607	WASHER, PLAIN	698	S13	326	10127141	SCREW, PAN HD	201	S10
259	10125607	WASHER, PLAIN	705	S13	326	10127141	SCREW, PAN HD	202	S13
259	10125607	WASHER, PLAIN	640	S18	327	10127144	SCREW, PAN HD	201	S10
259	10125607	WASHER, PLAIN	641	S18	327	10127144	SCREW, PAN HD	201	S9
259	10125607	WASHER, PLAIN	642	S18	327	10127144	SCREW, PAN HD	575	S19
259	10125607	WASHER, PLAIN	575	S19	328	10125066	SCREW, HEX HD	201	S9
260	10125102	SCREW, NUT-HEX	021	S6	329	10126403	WASHER, EXT TOOTH LK	201	S9
260	10125102	SCREW, NUT-HEX	202	S12	329	10126403	WASHER, EXT TOOTH LK	201	S10
260	10125102	SCREW, NUT-HEX	201	S10	330	94047052	WASHER, SPECIAL	201	S9
260	10125102	SCREW, NUT-HEX	642	S18	330	94047052	WASHER, SPECIAL	202	S13
261	53777902	NUT & WASHER	021	S6	331	10125103	SCREW, NUT-HEX	201	S9
261	53777902	NUT & WASHER	640	S18	331	10125103	SCREW, NUT-HEX	201	S10
261	53777902	NUT & WASHER	641	S18	332	10125108	NUT, HEX	201	S9
262	53777903	NUT & WASHER	021, 404	S7	332	10125108	NUT, HEX	201	S10
263	94343210	CABLE TIE MOUNT	310	S14	333	10125301	NUT, HEX	202	S11
264	77830530	RIVET, SPLIT NYLON	021	S7	334	93564004	WASHER, NYLON	201	S10
265	75881906	BRACKET R & LH	640	S18	335	10126221	SCREW	202	S11
266	75881907	BRACKET R & LH	640	S18	336	75887510	BLOWER CENTRIF	550	S16
267	75893012	BRACKET R & LH	641	S18	337	83435302	CONNECTOR, PLUG/CAP	550, 551	S16
268	75893013	BRACKET R & LH	641	S18	338	94276600	FOAM TAPE	550, 551	S16
269	75893010	BRACKET R & LH	642	S18	338	94276600	FOAM TAPE	294	S16
270	75893011	BRACKET R & LH	642	S18	339	95105900	TAPE, POLY FILM, INSUL	550, 551	S16
271	75892742	PLATE CATCH BRACKET	642	S18	339	95105900	TAPE, POLY FILM, INSUL	294	S16
272	93326006	STUD BALL	642	S18	340	94277400	STRAP, CABLE TIE	550, 551	S16
273	93325003	CATCH SPRING	642	S18	341	94277409	STRAP, CABLE TIE	550, 551	S16
274	10126251	SCREW, SOCKET HEAD	642	S18	342	75887520	GROMMET, SQ SHOULDER	550, 551	S16
275	10125759	SCREW, FLAT HD	642	S18	343	75885931	MANIFOLD	294	S16
276	94364903	FILTER-AIR, AL WASH	500	S5	344	75881250	GASKET	294	S16
277	83410518	GASKET STRIP	500	S5	345	75885836	SPRT BAR-CARD GUIDE	310	S14
277	83410518	GASKET STRIP	201	S9	346	75885832	MTG BAR-GUIDE CTR	310	S14
278	76204650	FIXED PACK	555	S5	347	75886291	PANEL; LEFT SIDE	310	S14
279	75010103	HEAD-ARM ASM	555	S5	348	75885841	MTG BAR-CARD GUIDE	310	S14
280	75897343	PAN, BASE	201	S9	349	75885791	STRIP-CARD LOCATION	310	S14
280	75897343	PAN, BASE	201	S10	350	82316700	SPACER-GUIDE	310	S14
281	75882875	PANEL, POWER ENTRY	201	S9	351	75889960	GUIDE, CKT CARD MOD	310	S14
282	95587124	CIRCUIT BRKR	201	S9	352	82312001	GUIDE, CIRCUIT CARD	310, 351	S14
284	75881350	BRACKET RESISTOR MTG	201	S10	353	82311701	GUIDE, CIRCUIT CARD	310	S14
285	95645628	CAPACITOR, 40VDC	201	S10	354	75885692	PANEL, RIGHT SIDE	310	S14
286	76878900	CAPACITOR, MOTOR RUN	201	S10	355	75893765	BLOCK	310	S14
287	92826001	BRACKET	201	S10	356	75899706	PULLEY	697	S14
288	75772500	BOOT, CAPACITOR	201	S10	357	75893775	BRACKET, I/O CABLE	310	S13
289	75888155	BRACKET, RELAY CONTR	201	S10	358	93592204	SCREW, HEX WASHER	310	S14
290	75886725	DUCT, AIR INLET	201	S9	359	93592200	SCREW, TPG HEX PNL	310	S14
291	94376910	SCREW	642	S18	360	77610155	SHOCK MOUNT	202	S13
292	53777900	NUT & CAPTIVE WASHER	021	S6	361	10125106	NUT, HEX	310	S14
293	75887561	SPACER	201	S9	361	10125106	NUT, HEX	201	S9
294	75889881	MANIFOLD ASM	201	S9	361	10125106	NUT, HEX	201	S10
294	75889881	MANIFOLD ASM	201	S16	362	10127123	SCREW, PAN HD	310	S14
295	75889165	HOSE, PLASTIC AIR	201	S9	362	10127123	SCREW, PAN HD	021	S7
296	94275204	HOSE CLAMP	201	S9	362	10127123	SCREW, PAN HD	202	S13
297	24565019	CABLE CLAMP	201	S9	363	75893760	CLAMP	310	S14
298	75885996	FILTER, ABSOLUTE	201	S9	364	75880040	BASE PLATE ASM	202	S11
299	10126250	SCREW, CAP	640	S18	364	75880040	BASE PLATE ASM	202	S12
299	10126250	SCREW, CAP	641	S18	364	75880040	BASE PLATE ASM	202	S13
299	10126250	SCREW, CAP	697	S13	365	75886281	SPINDLE	202	S11
299	10126250	SCREW, CAP	698	S13	366	92745211	SCREW, PAN HD	310	S14
299	10126250	SCREW, CAP	705	S13	367	75880125	MOTOR ASM	515	S16
300	75887650	GUIDE, AIR FILTER	201	S9	368	75887776	PLATE, MOTOR MTG	515, 516	S16
301	75881265	DEFLECTOR, AIR	201	S9	368	75887776	PLATE, MOTOR MTG	517, 518	S16
302	75891004	COVER, AIR DEFLECTOR	201	S9	369	92009012	WASHER, PLAIN	202	S12
303	75774471	CAPACITOR	202	S13	370	93287009	COLLAR, SHAFT	515, 516	S16
304	75881270	CLAMP, CAPACITOR	202	S13	370	93287009	COLLAR, SHAFT	517, 518	S16
305	75888775	RESISTOR, WIRE WOUND	201	S10	371	10126226	SCREW, SOCKET HD	202	S13
306	75888776	RESISTOR, WIRE WOUND	201	S10	371	10126226	SCREW, SOCKET HD	515, 516	S16
307	75883485	E-MODULE BRACKET	310	S14	371	10126226	SCREW, SOCKET HD	517, 518	S16
308	92745208	SCREW, PAN HD	310	S14	371	10126226	SCREW, SOCKET HD	404	S15

TOP DOWN ASSEMBLY COMPONENT PARTS LIST

ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET	ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET
372	75062805	WASHER, SHOULDER	202	S13	445	18440201	SILICONE RUBBER	202	S11
372	75062805	WASHER, SHOULDER	697	S13	445	18440201	SILICONE RUBBER	202	S13
372	75062805	WASHER, SHOULDER	698	S13	446	75880140	CARRIAGE & BEARINGS	404	S15
372	75062805	WASHER, SHOULDER	705	S13	447	75885981	COIL ASM	404	S15
373	10126255	SCREW	202	S12	448	75889435	PLATE, COIL	404	S15
374	75881537	POST, MOTOR SPRING	202	S13	449	75886540	LEAD FLEX, COIL	404	S15
375	75887539	SPRING, TENSION	202	S13	450	75886191	INSULATOR, FLEX LEAD	404	S15
376	75891524	HINGE	202	S13	451	75276101	WASHER, PHENOLIC	404	S15
377	75887975	SPACER, HINGE	202	S13	452	75276201	SPACER, PHENOLIC	404	S15
378	77610050	P.A.C. RELAY (SSR)	202	S13	453	75888690	BRACKET, STRAP	404	S15
379	75882357	GND WIRE	310	S14	454	77830612	WASHER, PLAIN	404	S15
380	95643601	CLAMP, CAPACITOR	201	S10	455	95044214	SEALANT	404	S15
381	75887791	DISC, SPEED SENSOR	202	S13	456	92815099	SCREW, SOCKET HD CAP	404	S15
382	75893920	SUPPORT, SPEED SENSOR	202	S13	457	75881921	ACTUATOR WIRING ASM	404	S15
383	75880045	SPEED SENSOR	202	S13	458	75899700	PULLEY	515	S16
384	75885407	OPTICAL SWITCH	383	S13	458	75899700	PULLEY	518	S16
385	75887871	GROUND SPRING	202	S13	458	75899700	PULLEY	698	S13
386	75883480	PULLEY COVER	202	S13	459	75882351	JUMPER WIRE	310	S14
387	75891664	PLATE, COVER	202	S13	460	75883025	SPACER, NYLON	021	S6
388	92723396	BUTTON SCREW	202	S11	461	75895240	WASHER	310	S14
389	77832430	BUMPER	202	S11	462	75883067	PLATE SW MTPG	201	S10
390	75886286	ROD-GUIDE	202	S12	463	92932054	SCREW	201	S10
391	75893682	BUMPER MOUNT, LOWER	202	S11	464	75883006	VARISTOR	201	S10
392	75886037	PLATE BEARING - FIXED	202	S12	465	80625400	LUBRICANT	515, 516	S16
393	10126227	SCREW, HEX SOC HD	404	S15	465	80625400	LUBRICANT	517, 518	S16
394	75891680	PLATE ASM	202	S12	466	75880127	MOTOR ASM	518	S16
394	75891680	PLATE ASM	202	S16	467	75899704	PULLEY	517	S16
395	75886032	PLATE BEARING	394	S12	468	75887511	BLOWER CENTRIF 50 HZ	466	S16
396	75888191	BLOCK, SPRING SUPPORT	394	S16	469	75880126	MOTOR ASM 50 HZ	516	S16
397	75887557	PIN-SPRING, GUIDE	394	S16	470	75899703	MOTOR PULLEY	516	S16
398	75881536	SPRING	394	S16	470	75899703	MOTOR PULLEY	705	S13
399	92602002	CABLE CLAMP	202	S13	471	75883110	SHAFT	021	S8
400	77830611	WASHER, PLAIN STEELE	394	S16	472	75880481	BEARING	021	S8
401	75888746	CAM-TOWER	202	S11	473	75882455	SPACER	021	S8
402	75888747	CAM-TOWER	202	S11	474	75882665	LEVER, CAM	021	S8
403	75889469	BUMPER MT, UPPER	202	S11	475	75882460	BLOCK, LINKAGE	021	S8
404	75880135	CARRIAGE & COIL ASM	202	S12	476	93564001	NYLON WASHER	021	S8
404	75880135	CARRIAGE & COIL ASM	202	S15	477	93094285	SET SCREW	021	S8
405	75886512	MAGNET ASM	202	S12	478	77610461	SPRING	021	S8
406	75894102	VEL XDUCCER-CONN ASM	202	S12	479	75883418	COVER, PWA RLY CNTL	201	S10
407	51885515	STANDOFF, MALE-FEMALE	202	S12	480	75894325	PANEL ACOUSTIC FOAM	621	S4
408	75891011	BRACKET SWITCH	202	S12	480	75894325	PANEL ACOUSTIC FOAM	622	S4
409	94141015	SW, INTEGRAL LEVER	201	S10	480	75894325	PANEL ACOUSTIC FOAM	623	S4
410	75891573	CARRIAGE LKG TOOL	202	S12	481	75894326	PANEL ACOUSTIC FOAM	621	S4
411	75893943	MTG BRACKET	202	S11	481	75894326	PANEL ACOUSTIC FOAM	622	S4
412	75893953	SERVO PREAMP SHIELD	202	S11	481	75894326	PANEL ACOUSTIC FOAM	623	S4
413	75893990	CONNECTOR ASM	202	S11	482	75894327	PANEL ACOUSTIC FOAM	621	S4
414	75881385	MTG PLATE	202	S11	482	75894327	PANEL ACOUSTIC FOAM	622	S4
415	75886341	SHIELD, RD/WR PREAMP	202	S11	482	75894327	PANEL ACOUSTIC FOAM	623	S4
416	75882106	SHIM, STRIKER	021	S6	483	75894328	PANEL ACOUSTIC FOAM	621	S4
417	75882105	BLOCK, SPACER, STRIKER	021	S6	483	75894328	PANEL ACOUSTIC FOAM	623	S4
418	75895214	STRIKER	021	S6	484	75894329	PANEL ACOUSTIC FOAM	621	S4
419	75893915	COVER	202	S11	484	75894329	PANEL ACOUSTIC FOAM	623	S4
420	75893975	COVER, POWER AMP ASM	202	S12	484	75894329	PANEL ACOUSTIC FOAM	620	S4
421	90603300	CLOSURE	500, 501	S5	484	75894329	PANEL ACOUSTIC FOAM	622	S4
422	92602004	CABLE CLAMP	202	S11	485	75894330	PANEL ACOUSTIC FOAM	621	S4
422	92602004	CABLE CLAMP	021	S7	485	75894330	PANEL ACOUSTIC FOAM	622	S4
422	92602004	CABLE CLAMP	202	S13	485	75894330	PANEL ACOUSTIC FOAM	623	S4
423	10127119	SCREW PAN HD	202	S13	486	75894331	PANEL ACOUSTIC FOAM	621	S4
424	10125029	SCREW, HEX	202	S11	486	75894331	PANEL ACOUSTIC FOAM	622	S4
424	10125029	SCREW, HEX	202	S13	486	75894331	PANEL ACOUSTIC FOAM	623	S4
425	10126402	WASHER, EXT TOOTH LK	201	S10	487	75894332	PANEL ACOUSTIC FOAM	621	S4
426	10126222	SCREW, HEX SOC HD	202	S13	487	75894332	PANEL ACOUSTIC FOAM	623	S4
427	10125702	SCREW, FLAT HD	202	S13	488	75894333	PANEL ACOUSTIC FOAM	621	S4
427	10125702	SCREW, FLAT HD	043	S8	488	75894333	PANEL ACOUSTIC FOAM	622	S4
428	93788082	SCREW, SELF LOCKING	202	S13	488	75894333	PANEL ACOUSTIC FOAM	623	S4
429	10127112	SCREW, PAN HD	202	S13	489	75894341	PANEL ACOUSTIC FOAM	622	S4
429	10127112	SCREW, PAN HD	201	S10	490	75894334	PANEL ACOUSTIC FOAM	621	S4
429	10127112	SCREW, PAN HD	021	S6	490	75894334	PANEL ACOUSTIC FOAM	622	S4
430	10126401	WASHER, EXT TOOTH LK	202	S13	490	75894334	PANEL ACOUSTIC FOAM	623	S4
430	10126401	WASHER, EXT TOOTH LK	202	S12	491	75894338	PANEL ACOUSTIC FOAM	621	S4
431	10125760	SCREW, FLAT HD	202	S13	492	75894339	PANEL ACOUSTIC FOAM	621	S4
432	10126245	SCREW, HEX SOC HD	202	S12	493	51777344	SUPPORT - C.B.	201	S10
433	10127114	SCREW, PAN HD	202	S11	494	75894336	PANEL ACOUSTIC FOAM	620	S4
433	10127114	SCREW, PAN HD	202	S12	495	10127129	SCREW, PAN HD	500	S5
433	10127114	SCREW, PAN HD	021	S6	496	75893211	BRACKET	021	S6
434	10125718	SCREW, PAN HD	202	S11	497	10127125	SCREW, PAN HD	021	S6
435	10127115	SCREW, PAN HD	202	S12	498	75887251	WASHER, NYLON	021	S6
436	10125016	SCREW, HEX HD	202	S12	499	10127334	SCREW	021	S6
437	10125018	SCREW, HEX HD	202	S12	500	75881025	TOP LEVEL ASM	HPC	S3
438	10125004	SCREW, HEX HD	202	S11	500	75881025	TOP LEVEL ASM	HPC	S5
438	10125004	SCREW, HEX HD	202	S12	501	75881027	TOP LEVEL ASM	HPC	S3
438	10125004	SCREW, HEX HD	202	S13	501	75881027	TOP LEVEL ASM	HPC	S5
439	10125081	SCREW, HEX HD	202	S	505	77830535	POWER SUPPLY 60 HZ	HPC	S3
440	10125006	SCREW, HEX HD	202	S12	505	77830535	POWER SUPPLY 60 HZ	HPC	S17
441	10127148	SCREW, PAN HD	202	S13	506	77830536	POWER SUPPLY 50 HZ	HPC	S3
442	51885504	STANDOFF, MALE-FEMALE	202	S12	506	77830536	POWER SUPPLY 50 HZ	HPC	S17
443	10125747	SCREW, FLAT HD	202	S13	507	75887883	POWER SUPPLY 50 HZ/60 HZ	HPC	S3
444	10127169	SCREW, PAN HD	202	S12	507	75887883	POWER SUPPLY 50 HZ/60 HZ	HPC	S17

TOP DOWN ASSEMBLY COMPONENT PARTS LIST

ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET	ITEM	IDENT NO	DESCRIPTION	WHERE USED	SHEET
508	77610706	POWER SUPPLY 50 HZ	HPC	S3	662	75896893	PANEL INSERT	HPC	S3
508	77610706	POWER SUPPLY 50 HZ	HPC	S17	663	75896895	PANEL INSERT	HPC	S3
509	77610705	POWER SUPPLY	HPC	S3	664	75896805	PANEL INSERT	HPC	S3
509	77610705	POWER SUPPLY	HPC	S17	665	77632391	PANEL INSERT	HPC	S3
515	75891693	DRIVE MOTOR ASM 60 HZ	HPC	S3	675	75883787	DOOR	HPC	S3
516	75891690	DRIVE MOTOR ASM 50 HZ	HPC	S3	676	77615881	DOOR	HPC	S3
517	75891692	DRIVE MOTOR ASM 50 HZ	HPC	S3	677	75883793	DOOR	HPC	S3
518	75891694	DRV MOT ASM 50 HZ/60 HZ	HPC	S3	678	75883794	DOOR	HPC	S3
519	75891691	DRIVE MOTOR ASM	HPC	S3	679	75883792	DOOR	HPC	S3
525	92314113	DRIVE BELT 60 HZ	HPC	S3	680	75883739	DOOR	HPC	S3
525	92314113	DRIVE BELT 60 HZ	698	S13	681	75883705	DOOR	HPC	S3
526	92314127	DRIVE BELT 50 HZ	HPC	S3	682	75883706	DOOR	HPC	S3
526	92314127	DRIVE BELT 50 HZ	697	S13	697	75883072	PULLEY & BELT KIT (50 HZ)	HPC	S3
530	75738414	CAPACITOR 60 HZ	HPC	S3	698	75883073	PULLEY & BELT KIT (60 HZ)	HPC	S3
531	76879006	CAPACITOR 50 HZ	HPC	S3	705	75896655	PULLEY KIT	HPC	S3
532	77612915	CAPACITOR 50 HZ/60 HZ	HPC	S3					
540	75778719	POWER CORD 60 HZ	HPC	S3					
541	75778718	POWER CORD 50 HZ	HPC	S3					
542	75778725	POWER CORD	HPC	S3					
543	75892988	POWER CORD	HPC	S3					
544	75892987	POWER CORD	HPC	S3					
550	75889886	BLOWER ASM 60 HZ	HPC	S3					
551	75889887	BLOWER ASM 50 HZ	HPC	S3					
555	75880851	PACK & HEADS - 80 MB	HPC	S3					
556	75880852	PACK & HEADS - 48 MB	HPC	S3					
557	75880853	PACK & HEADS - 16 MB	HPC	S3					
558	75880854	PACK & HEADS - 0 MB	HPC	S3					
559	75880856	PACK & HEADS	HPC	S3					
560	75880857	PACK & HEADS	HPC	S3					
565	75881815	DOOR HINGE	HPC	S3					
566	75894830	DOOR HINGE LH	HPC	S3					
567	75881816	DOOR HINGE	HPC	S3					
568	75894831	DOOR HINGE RH	HPC	S3					
569	75883040	WIRE GUARD	HPC	S3					
570	75892737	WIRE GUARD	HPC	S3					
571	75883026	SPACER	HPC	S3					
571	75883026	SPACER	697	S13					
571	75883026	SPACER	698	S13					
571	75883026	SPACER	705	S13					
572	75883027	SPACER	HPC	S3					
573	75890938	DRAWER EXT SLIDE	HPC	S3					
573	75890938	DRAWER EXT SLIDE	575	S3					
573	75890938	DRAWER EXT SLIDE	575	S19					
574	75890937	DRAWER EXT SLIDE	HPC	S3					
574	75890937	DRAWER EXT SLIDE	575	S3					
574	75890937	DRAWER EXT SLIDE	575	S19					
575	75897340	SLIDE KIT	HPC	S3					
576	75897701	SLIDE KIT	HPC	S3					
576	75897701	SLIDE KIT	HPC	S19					
575	75897340	SLIDE KIT	HPC	S19					
588	75882826	BRACKET, PWB	HPC	S3					
589	75893020	BRACKET, PWB	HPC	S3					
590	75883887	FRONT PANEL	HPC	S3					
591	75883987	FRONT PANEL	HPC	S3					
592	75899681	FRONT PANEL	HPC	S3					
593	75883893	FRONT PANEL	HPC	S3					
594	75883894	FRONT PANEL	HPC	S3					
595	75883992	FRONT PANEL	HPC	S3					
596	75883805	FRONT PANEL	HPC	S3					
597	75883806	FRONT PANEL	HPC	S3					
600	75882706	COVER	HPC	S3					
601	75881547	COVER	HPC	S3					
610	75899076	POWER PLUG ASM 50 HZ	HPC	S3					
611	75899075	POWER PLUG ASM 60 HZ	HPC	S3					
612	75899079	POWER PLUG ASM 50 HZ	HPC	S3					
613	75899080	POWER PLUG ASM 50 HZ	HPC	S3					
614	75899085	POWER PLUG ASM	HPC	S3					
615	75899086	POWER PLUG ASM	HPC	S3					
616	75899082	POWER PLUG ASM	HPC	S3					
617	75899081	POWER PLUG ASM	HPC	S3					
618	75899087	POWER PLUG ASM	HPC	S3					
620	75895042	SOUND TREATMENT OPT	HPC	S3					
620	75895042	SOUND TREATMENT OPT	HPC	S4					
621	75895040	SOUND TREATMENT OPT	HPC	S3					
621	75895040	SOUND TREATMENT OPT	HPC	S4					
622	75895044	SOUND TREATMENT OPT	HPC	S3					
622	75895044	SOUND TREATMENT OPT	HPC	S4					
623	75895045	SOUND TREATMENT OPT	HPC	S3					
623	75895045	SOUND TREATMENT OPT	HPC	S4					
631	75893326	FILTER ASM, RFI	HPC	S3					
632	75893325	FILTER ASM, RFI	HPC	S3					
636	75896140	ENCODING BUTTON KIT	HPC	S3					
637	75896141	ENCODING BUTTON KIT	HPC	S3					
640	75893030	FRONT PANEL INSTL KIT	HPC	S3					
641	75893031	FRONT PANEL INSTL KIT	HPC	S3					
642	75893035	FRONT PANEL INSTL KIT	HPC	S3					
650	94397002	PROD IDENT EMBLEM	HPC	S3					
660	75896809	PANEL INSERT	HPC	S3					
661	77624581	PANEL INSERT	HPC	S3					

TOP DOWN ASSEMBLY COMPONENT PARTS LIST

ITEM	IDENT NO	SHEET
438	10125004	S11
438	10125004	S12
438	10125004	S13
440	10125006	S12
436	10125016	S12
437	10125018	S12
424	10125029	S11
424	10125029	S13
328	10125066	S9
439	10125081	S
260	10125102	S6
260	10125102	S12
260	10125102	S10
260	10125102	S18
331	10125103	S9
331	10125103	S10
361	10125106	S14
361	10125106	S9
361	10125106	S10
332	10125108	S9
332	10125108	S10
333	10125301	S11
256	10125602	S6
256	10125602	S10
256	10125602	S12
256	10125602	S18
038	10125603	S10
038	10125603	S6
038	10125603	S12
038	10125603	S13
038	10125603	S15
257	10125605	S6
257	10125605	S8
257	10125605	S10
257	10125605	S11
257	10125605	S12
257	10125605	S13
257	10125605	S18
257	10125605	S18
257	10125605	S5
258	10125606	S7
258	10125606	S6
258	10125606	S8
258	10125606	S9
258	10125606	S10
258	10125606	S11
258	10125606	S13
258	10125606	S14
258	10125606	S5
259	10125607	S6
259	10125607	S10
259	10125607	S13
259	10125607	S13
259	10125607	S13
259	10125607	S18
259	10125607	S18
259	10125607	S18
259	10125607	S19
060	10125608	S12
060	10125608	S6
427	10125702	S13
427	10125702	S8
240	10125704	S7
434	10125718	S11
216	10125723	S14
247	10125724	S7
248	10125725	S7
443	10125747	S13
275	10125759	S18
431	10125760	S13
251	10125800	S6
251	10125800	S10
251	10125800	S12
251	10125800	S18
252	10125801	S9
252	10125801	S6
252	10125801	S10
252	10125801	S12
252	10125801	S13
252	10125801	S8
252	10125801	S15
039	10125803	S5
039	10125803	S6
039	10125803	S8
039	10125803	S9
039	10125803	S10
039	10125803	S11
039	10125803	S12

ITEM	IDENT NO	SHEET
039	10125803	S13
039	10125803	S19
254	10125804	S7
254	10125804	S6
254	10125804	S8
254	10125804	S9
254	10125804	S10
254	10125804	S14
254	10125804	S11
254	10125804	S13
254	10125804	S15
254	10125804	S16
254	10125804	S16
254	10125804	S5
040	10125805	S10
040	10125805	S12
040	10125805	S13
040	10125805	S13
040	10125805	S13
040	10125805	S13
040	10125805	S18
040	10125805	S18
040	10125805	S18
040	10125805	S19
255	10125806	S6
255	10125806	S12
255	10125806	S13
213	10126104	S13
243	10126219	S7
243	10126219	S11
335	10126221	S11
426	10126222	S13
371	10126226	S13
371	10126226	S16
371	10126226	S16
371	10126226	S15
393	10126227	S15
042	10126244	S18
042	10126244	S18
042	10126244	S18
432	10126245	S12
037	10126246	S13
299	10126250	S18
299	10126250	S18
299	10126250	S13
299	10126250	S13
299	10126250	S13
274	10126251	S18
250	10126253	S6
253	10126254	S13
373	10126255	S12
059	10126256	S12
208	10126263	S6
430	10126401	S13
430	10126401	S12
425	10126402	S10
329	10126403	S9
329	10126403	S10
238	10127102	S11
238	10127102	S13
238	10127102	S8
238	10127102	S6
322	10127103	S9
322	10127103	S10
231	10127104	S6
203	10127107	S10
035	10127111	S5
035	10127111	S6
035	10127111	S9
035	10127111	S8
035	10127111	S11
429	10127112	S13
429	10127112	S10
429	10127112	S6
244	10127113	S6
244	10127113	S8
244	10127113	S11
244	10127113	S12
244	10127113	S19
433	10127114	S11
433	10127114	S12
433	10127114	S6
435	10127115	S12
423	10127119	S13
323	10127120	S9
323	10127120	S10
246	10127121	S8
324	10127122	S9
324	10127122	S7

ITEM	IDENT NO	SHEET
362	10127123	S14
362	10127123	S7
362	10127123	S13
325	10127124	S9
325	10127124	S8
497	10127125	S6
495	10127129	S5
326	10127141	S10
326	10127141	S13
036	10127142	S5
036	10127142	S19
327	10127144	S10
327	10127144	S9
327	10127144	S19
441	10127148	S13
031	10127168	S6
444	10127169	S12
499	10127334	S6
230	16402506	S6
230	16402506	S13
445	18440201	S11
445	18440201	S13
061	18748600	S13
232	24565004	S5
321	24565006	S9
297	24565019	S9
493	51777344	S10
058	51853015	S12
315	51870400	S9
442	51885504	S12
407	51885515	S12
292	53777900	S6
261	53777902	S6
261	53777902	S18
261	53777902	S18
262	53777903	S7
204	75010102	S7
205	75010105	S7
318	75062400	S9
318	75062400	S13
317	75062803	S9
372	75062805	S13
372	75062805	S13
372	75062805	S13
372	75062805	S13
451	75276101	S15
452	75276201	S15
530	75738414	S3
288	75772500	S10
303	75774471	S13
541	75778718	S3
540	75778719	S3
542	75778725	S3
364	75880040	S11
364	75880040	S12
364	75880040	S13
383	75880045	S13
202	75880120	S6
202	75880120	S11
202	75880120	S12
202	75880120	S13
367	75880125	S16
469	75880126	S16
466	75880127	S16
404	75880135	S12
404	75880135	S15
446	75880140	S15
027	75880243	S14
472	75880481	S8
201	75880814	S6
201	75880814	S9
201	75880814	S10
200	75880816	S9
200	75880816	S10
555	75880851	S3
556	75880852	S3
557	75880853	S3
558	75880854	S3
559	75880856	S3
560	75880857	S3
021	75880900	S5
021	75880900	S6
021	75880900	S7
021	75880900	S8
022	75880902	S5
022	75880902	S6
022	75880902	S7
022	75880902	S8
056	75881020	S12

CROSS REFERENCE

ITEM	IDENT NO	SHEET
500	75881025	S3
500	75881025	S5
501	75881027	S3
501	75881027	S5
028	75881128	S6
029	75881129	S6
344	75881250	S16
301	75881265	S9
304	75881270	S13
284	75881350	S10
414	75881385	S11
207	75881395	S6
398	75881536	S16
374	75881537	S13
206	75881542	S6
601	75881547	S3
046	75881730	S8
047	75881770	S8
229	75881790	S6
565	75881815	S3
567	75881816	S3
045	75881840	S8
032	75881845	S5
265	75881906	S18
266	75881907	S18
457	75881921	S15
417	75882105	S6
416	75882106	S6
459	75882351	S14
379	75882357	S14
473	75882455	S8
475	75882460	S8
474	75882665	S8
057	75882675	S12
052	75882689	S8
048	75882694	S8
600	75882706	S3
588	75882826	S3
226	75882833	S7
225	75882834	S7
043	75882865	S8
314	75882870	S10
281	75882875	S9
464	75883006	S10
460	75883025	S6
571	75883026	S3
571	75883026	S13
571	75883026	S13
571	75883026	S13
572	75883027	S3
569	75883040	S3
030	75883045	S5
051	75883056	S8
462	75883067	S10
697	75883072	S3
698	75883073	S3
471	75883110	S8
221	75883115	S7
049	75883310	S8
210	75883317	S6
233	75883343	S14
479	75883418	S10
053	75883465	S8
245	75883475	S9
386	75883480	S13
307	75883485	S14
044	75883637	S8
050	75883642	S8
681	75883705	S3
682	75883706	S3
680	75883739	S3
675	75883787	S3
679	75883792	S3
677	75883793	S3
678	75883794	S3
596	75883805	S3
597	75883806	S3
590	75883887	S3
593	75883893	S3
594	75883894	S3
591	75883987	S3
595	75883992	S3
384	75885407	S13
354	75885692	S14
349	75885791	S14
346	75885832	S14
345	75885836	S14
348	75885841	S14
343	75885931	S16

ITEM	IDENT NO	SHEET
447	75885981	S15
298	75885996	S9
395	75886032	S16
392	75886037	S12
450	75886191	S15
365	75886281	S11
390	75886286	S12
347	75886291	S14
415	75886341	S11
405	75886512	S12
449	75886540	S15
290	75886725	S9
498	75887251	S6
227	75887442	S7
224	75887447	S7
223	75887452	S7
336	75887510	S16
468	75887511	S16
342	75887520	S16
375	75887539	S13
397	75887557	S16
293	75887561	S9
300	75887650	S9
368	75887776	S16
368	75887776	S16
381	75887791	S13
385	75887871	S13
507	75887883	S3
507	75887883	S17
377	75887975	S13
289	75888155	S10
396	75888191	S16
453	75888690	S15
401	75888746	S11
402	75888747	S11
305	75888775	S10
306	75888776	S10
295	75889165	S9
448	75889435	S15
403	75889469	S11
222	75889491	S8
294	75889881	S9
294	75889881	S16
550	75889886	S3
551	75889887	S3
351	75889960	S14
574	75890937	S3
574	75890937	S3
574	75890937	S19
573	75890938	S3
573	75890938	S3
573	75890938	S19
062	75890945	S19
063	75890946	S19
302	75891004	S9
408	75891011	S12
376	75891524	S13
410	75891573	S12
387	75891664	S13
394	75891680	S12
394	75891680	S16
516	75891690	S3
519	75891691	S3
517	75891692	S3
515	75891693	S3
518	75891694	S3
218	75892221	S6
570	75892737	S3
217	75892742	S18
217	75892811	S6
544	75892987	S3
543	75892988	S3
269	75893010	S18
270	75893011	S18
267	75893012	S18
268	75893013	S18
589	75893020	S3
640	75893030	S3
641	75893031	S3
642	75893035	S3
496	75893211	S6
632	75893325	S3
631	75893326	S3
391	75893682	S11
311	75893755	S10
363	75893760	S14
309	75893761	S9
355	75893765	S14
357	75893775	S14

ITEM	IDENT NO	SHEET
310	75893902	S10
310	75893902	S14
419	75893915	S11
382	75893920	S13
209	75893925	S7
411	75893943	S11
412	75893953	S11
234	75893958	S7
420	75893975	S12
413	75893990	S11
406	75894102	S12
214	75894320	S14
215	75894321	S14
480	75894325	S4
480	75894325	S4
480	75894325	S4
481	75894326	S4
481	75894326	S4
481	75894326	S4
482	75894327	S4
482	75894327	S4
482	75894327	S4
483	75894328	S4
483	75894328	S4
484	75894329	S4
484	75894329	S4
484	75894329	S4
484	75894329	S4
484	75894329	S4
485	75894330	S4
485	75894330	S4
485	75894330	S4
486	75894331	S4
486	75894331	S4
486	75894331	S4
487	75894332	S4
487	75894332	S4
487	75894332	S4
488	75894333	S4
488	75894333	S4
488	75894333	S4
490	75894334	S4
490	75894334	S4
490	75894334	S4
494	75894336	S4
491	75894338	S4
492	75894339	S4
489	75894341	S4
566	75894830	S3
568	75894831	S3
621	75895040	S3
621	75895040	S4
620	75895042	S3
620	75895042	S4
622	75895044	S3
622	75895044	S4
623	75895045	S3
623	75895045	S4
418	75895214	S6
461	75895240	S14
636	75896140	S3
637	75896141	S3
705	75896655	S3
664	75896805	S3
660	75896809	S3
662	75896893	S3
663	75896895	S3
575	75897340	S3
575	75897340	S19
280	75897343	S9
280	75897343	S10
576	75897701	S3
576	75897701	S19
611	75899075	S3
610	75899076	S3
612	75899079	S3
613	75899080	S3
617	75899081	S3
616	75899082	S3
614	75899085	S3
615	75899086	S3
618	75899087	S3
313	75899542	S12
316	75899546	S11
592	75899681	S3
458	75899700	S16
458	75899700	S13
470	75899703	S16
470	75899703	S13
467	75899704	S16

CROSS REFERENCE

ITEM	IDENT NO	SHEET	ITEM	IDENT NO	SHEET
356	75899706	S13	041	95033900	S5
286	76878900	S10	455	95044214	S15
531	76879006	S3	339	95105900	S16
378	77610050	S13	339	95105900	S16
235	77610140	S6	034	95105904	S6
235	77610140	S12	282	95587124	S9
360	77610155	S13	380	95643601	S10
312	77610156	S10	285	95645628	S10
478	77610461	S8	249	95694202	S9
509	77610705	S3			
509	77610705	S17			
508	77610706	S3			
508	77610706	S17			
532	77612915	S3			
676	77615881	S3			
212	77617049	S5			
661	77624581	S3			
665	77632391	S3			
264	77830530	S7			
505	77830535	S3			
505	77830535	S17			
506	77830536	S3			
506	77830536	S17			
400	77830611	S16			
454	77830612	S15			
389	77832430	S11			
465	80625400	S16			
465	80625400	S16			
353	82311701	S14			
352	82312001	S14			
350	82316700	S14			
277	83410518	S5			
277	83410518	S9			
337	83435302	S16			
421	90603300	S5			
369	92009012	S12			
242	92033033	S8			
219	92033037	S6			
219	92033037	S7			
220	92054223	S7			
525	92314113	S3			
525	92314113	S13			
526	92314127	S3			
526	92314127	S13			
399	92602002	S13			
422	92602004	S11			
422	92602004	S7			
422	92602004	S13			
388	92723396	S11			
237	92745012	S6			
308	92745208	S14			
366	92745211	S14			
456	92815099	S15			
287	92826001	S10			
463	92932054	S10			
477	93094285	S8			
211	93096285	S12			
370	93287009	S16			
370	93287009	S16			
273	93325003	S18			
272	93326006	S18			
320	93541012	S10			
228	93564001	S6			
476	93564001	S8			
334	93564004	S10			
241	93592158	S6			
359	93592200	S14			
239	93592202	S14			
358	93592204	S14			
428	93788082	S13			
330	94047052	S9			
330	94047052	S13			
409	94141015	S10			
319	94274140	S9			
296	94275204	S9			
338	94276600	S16			
338	94276600	S16			
340	94277400	S16			
341	94277409	S16			
263	94343210	S14			
033	94364401	S6			
276	94364903	S5			
236	94371000	S6			
236	94371000	S10			
236	94371000	S16			
291	94376910	S18			
054	94376917	S8			
055	94376918	S8			
650	94397002	S3			

CROSS REFERENCE

8.1 INTRODUCTION

This section contains the wire list for the CMD Electronics Module backpanel.

8.2 SYMBOLOGY DEFINITION

Definitions of the symbology used in the wire list are as follows:

- a. NETNAM - Signal nomenclature used on circuit board schematics.
Inclosed Netname () indicates signal nomenclature applies to OEM CMD only.
- b. FLOC FPIN - Slot and pin location from which wire originates.
- c. TLOC TPIN - Slot and pin location to which wire connects.
- d. BK - Wrap level of wire on pin. E1 indicates single (or first) level wrap;
E2 indicates second level wrap.

A "Slot-to-Figure" cross reference is provided below as a quick reference to aid in locating the desired circuit board diagram in Section V.

SLOT	FIGURE
EM1	5-4
EM2	5-5
EM3	5-6
EM6	5-7
EM7	5-8

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
806-KHZ/-L	FM6P2B	38	FM3P2A	38	F1
AGC-ACT/-L	FM6P2B	03	FM3P2A	03	F1
AM-ENABLE/+L	FM2P1A	18	FM7P1B	18	F1
AM-FOUND/+L	EM2P1A	38	FM7P2A	04	F1
AM-FOUND/+L	FM4P1B	38	FM2P1A	38	F2
BUS-OUT-2WT0/+L	EM1P2A	08	FM2P2B	08	F1
BUS-OUT-2WT1/+L	FM1P2A	09	FM2P2B	09	F1
BUS-OUT-2WT2/+L	FM1P2A	10	FM2P2B	10	F1
BUS-OUT-2WT3/+L	FM1P2A	11	FM2P2B	11	F1
BUS-OUT-2WT6/+L (FXD/+L)	EM1P2B	22	FM2P2B	22	F1
BUS-OUT-2WT7/+L	EM1P2A	07	FM2P2B	07	F1
CLR-ATN/-L	EM1P1A	30	FM2P1B	30	F1
CLR-CHK-DIAG/-L	EM1P2A	25	FM2P2B	25	F1
CLR-FLT-STAT/-L	EM1P2A	24	FM2P2B	24	F1
CYL-ADDR-0/+L	EM1P2B	26	FM3P2B	26	F1
CYL-ADDR-1/+L	EM1P2B	27	FM3P2B	27	F1
CYL-ADDR-2/+L	EM1P2B	28	FM3P2B	28	F1
CYL-ADDR-3/+L	EM1P2B	29	FM3P2B	29	F1
CYL-ADDR-4/+L	FM1P2B	30	FM3P2B	30	F1
CYL-ADDR-5/+L	EM1P2B	31	FM3P2B	31	F1
CYL-ADDR-6/+L	EM1P2B	32	FM3P2B	32	F1
CYL-ADDR-7/+L	EM1P2B	33	FM3P2B	33	F1
CYL-ADDR-8/+L	EM1P2B	34	FM3P2B	34	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
CYL-ADDR-9/+L	FM1P2B	35	FM3P2B	35	F1
DB-0/+L	EM3P2A	24	FM4P2B	24	F1
DB-1/+L	EM3P2A	25	FM4P2B	25	F1
DB-2/+L	FM3P2A	26	FM4P2B	26	F1
DB-3/+L	FM3P2A	27	FM4P2B	27	F1
DB-4/+L	FM3P2A	28	FM4P2B	28	F1
DB-5/+L	EM3P2A	29	FM4P2B	29	F1
DB-6/+L	EM3P2A	31	FM4P2B	31	F1
DB-7/+L	EM3P2A	32	FM4P2B	32	F1
DIAG-AC-WRTCUR/	FM4P1A	10	FM2P1A	10	F1
DIAG-ACT-I-MON	EM3P1A	11	FM4P1B	11	F1
DIAG-AM-EN/+L	EM4P1B	17	FM2P1A	17	F1
DIAG-DR-MON	EM3P1A	12	EM4P1B	12	F1
DIAG-ENABLE/-L	FM4P1B	15	EM2P1A	15	F1
DIAG-ERLY-STROBE/+L	EM4P1B	09	FM2P1A	09	F1
DIAG-F.G.-MON	EM3P1A	10	FM4P1B	10	F1
DIAG-HD-0/+L	EM4P1B	03	FM2P1A	03	FE
DIAG-HD-1/+L	EM4P1B	04	FM2P1A	04	FE
DIAG-HD-2/+L	EM4P1B	05	FM2P1A	05	FE
DIAG-HD-4/+L	EM4P1B	07	FM2P1A	07	F1
DIAG-LATE-STROBE/+L	EM4P1B	08	FM2P1A	08	F1
DIAG-RD-AGC	EM7P1B	16	FM4P1A	16	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
DIAG-RD-CLK-GND	EM2P1A	35	FM4P1B	35	TP
DIAG-RD-CLK/-L	EM2P1A	34	FM4P1B	34	TP
DIAG-RD-DATA-GND	EM2P1A	33	FM4P1B	33	TP
DIAG-RD-DATA/-L	EM2P1A	32	FM4P1B	32	TP
DIAG-RD-GATE/+L	EM4P1A	11	FM2P1A	11	F1
DIAG-RD-PLO-LOCK/+L	EM7P2B	25	FM4P2A	25	F1
DIAG-WRT-CLK-GND	EM4P1B	31	FM2P1A	31	TP
DIAG-WRT-CLK/-L	EM4P1B	30	FM2P1A	30	TP
DIAG-WRT-DATA-GND	EM4P1B	29	FM2P1A	29	TP
DIAG-WRT-DATA/-L	EM4P1B	28	FM2P1A	28	TP
DIAG-WRT-GATE/+L	EM4P1A	12	FM2P1A	12	F1
EMER-RET-CAP/GND	EM3P1B	06	EM3P1B	11	E1
EN-FXD-SVO/-L	EM6P2B	04	FM4P2A	04	F1
EN-WRT-CUR-0/+L	EM3P1B	28	FM2P1A	24	F1
EN-WRT-CUR-1/+L	EM3P1B	29	FM2P1A	25	F1
EN-WRT-CUR-2/+L	EM3P1B	30	FM2P1A	26	F1
ERLY-STROBE/-L	EM2P1B	41	EM7P2B	03	F1
EXT-INT-1/-L	EM4P2B	35	EM3P2A	35	F1
FLT-0/+L	EM3P2B	16	EM2P2A	16	F1
FLT-1/+L	EM3P2B	17	EM2P2A	17	F1
FLT-2/+L	EM3P2B	18	EM2P2A	18	F1
FLT-3/+L	EM3P2B	19	EM2P2A	19	F1
FLT-4/+L	EM3P2B	20	EM2P2A	20	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
FLT-RESET/+L	EM2P2A	40	FM3P2B	40	F1
FXD-ADDR/-L	FM2P1A	41	FM6P1B	41	F1
GND	EM2P1B	04	FM2P1B	06	F1
GND	FM2P1B	06	FM2P1B	18	F2
GND	FM4P2B	36	FM3P2A	36	F1
GND	FM7P1A	06	FM7P1A	10	F2
HD-ADDR/-L	EM1P2A	17	FM2P2B	17	F1
HD-ALIGN-WP/-L	FM4P1B	22	FM2P1A	21	F1
IDX-BUF/-L	EM1P1A	13	EM2P1A	13	E1
INDEX/-L	EM4P1A	40	FM4P1B	40	F1
INDEX/-L	FM4P1B	40	FM1P1A	40	F2
INDEX/-L	EM6P1B	40	FM4P1A	40	F2
INHIBIT-SECTOR/+L	EM6P1B	38	FM1P1A	38	F1
INTERRUPT/-L	FM1P2A	19	FM2P2B	19	F1
I-SPE	EM4P1A	13	FM4P1B	13	F1
I-SPE	FM4P1B	13	FM3P1A	13	F2
I-SPE	EM6P1B	13	FM4P1A	13	F2
I/O-AM-ENABLE/+L	FM1P2A	30	FM2P2B	30	F1
I/O-ERLY-STROBE/-L	EM1P1A	37	EM2P1B	37	F1
I/O-LATE-STROBE/-L	EM1P1A	36	FM2P1B	36	F1
I/O-RD/-L	EM3P2A	05	FM4P2B	05	F1
I/O-READ-GATE/+L	EM1P1A	43	EM2P1B	43	F1
I/O-WRT-GATE/-L	EM1P1A	42	FM2P1B	42	F1
I/O-WRT/-L	EM3P2A	04	FM4P2B	04	F1
LATE-STROBE/-L	EM2P1A	42	EM7P2A	07	F1
LED-FLT/-L	FM2P1B	13	EM3P1B	40	F1
MADR-0/+L	EM3P2A	07	FM4P2B	07	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
MADR-1/+L	FM3P2A	08	FM4P2B	08	F1
MADR-2/+L	EM3P2A	09	FM4P2B	09	F1
MADR-3/+L	EM3P2A	10	FM4P2B	10	F1
MADR-4/+L	EM3P2A	11	FM4P2B	11	F1
MADR-5/+L	FM3P2A	12	FM4P2B	12	F1
MADR-6/+L	EM3P2A	13	FM4P2B	13	F1
MADR-7/+L	FM3P2A	14	FM4P2B	14	F1
MADR-8/+L	EM3P2A	15	FM4P2B	15	F1
MADR-9/+L	EM3P2A	16	FM4P2B	16	F1
MADR-A/-L	EM3P2A	17	FM4P2B	17	F1
MADR-B/-L	EM3P2A	18	FM4P2B	18	F1
MADR-C/-L	EM3P2A	19	FM4P2B	19	F1
MADR-D/+L	EM3P2A	20	FM4P2B	20	F1
MADR-E/+L	EM3P2A	21	FM4P2B	21	F1
MADR-F/+L	EM3P2B	22	FM4P2B	22	F1
MAINT-FLT-INT/-L	EM2P2A	37	EM3P2B	37	F1
MC+VLT-FLT/-L	EM2P2A	10	EM3P2B	10	F1
MC+VLT-FLT/-L	EM3P2B	10	FM4P2A	07	E2
MEM-RD/-L	EM3P2A	34	EM4P2B	34	F1
MEM-WRT/-L	EM3P2A	33	EM4P2B	33	F1
MOD-ADDR/-L	EM2P2B	20	EM1P2A	20	F1
M-P-FLT/+L	EM3P2B	38	EM2P2A	38	F1
MX-BIT-0/+L (FAULT/-L)	EM2P2B	26	FM1P2A	26	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
MX-BIT-1/+L (SK-ERR/-L)	EM2P2B	27	FM1P2A	27	F1
MX-BIT-2/+L (AM-FND/-L)	EM2P2B	28	FM1P2A	28	F1
MX-BIT-3/+L (WRT-PROT/-L)	EM2P2B	29	FM1P2A	29	F1
MX-BIT-4/+L	FM2P2B	31	FM1P2A	31	F1
MX-BIT-5/+L	FM2P2B	32	FM1P2A	32	F1
MX-BIT-6/+L	FM2P2B	33	FM1P2A	33	F1
MX-BIT-7/+L	FM2P2B	34	FM1P2A	34	F1
NRZ-DATA-OUT-GND	FM2P2A	33	FM7P2B	07	TP
NRZ-DATA-OUT/-L	EM2P2A	34	EM7P2B	08	TP
NRZ-WRT-GND	FM2P2A	31	FM7P2B	31	TP
NRZ-WRT/-L	EM2P2A	32	FM7P2B	32	TP
OFFSET-ACT/+L	EM2P2B	15	FM1P2A	15	F1
OFFSET-/+L	FM1P2B	24	EM3P2B	24	F1
OFFSET+/-L	FM1P2B	25	EM3P2B	25	F1
ON-CYL/-L	EM3P2B	13	FM2P2A	13	F1
ON-CYL/-L	EM2P2A	13	FM1P2B	13	F2
ON-TIME-EN/-L	EM2P1A	37	EM7P2A	16	F1
PLO-LOCKED/-L	EM6P2B	09	EM4P2A	09	F1
PWR-UP-MR/-L	EM2P2B	18	FM1P2A	18	F1
PWR-UP-MR/-L	EM2P1A	40	EM7P2A	03	F1
PWR-UP-MR/-L	EM2P1A	40	EM2P2B	18	F2
RD-CLK-GND	EM2P2A	26	EM7P2B	10	TP
RD-CLK/-L	EM2P2A	27	EM7P2B	09	TP
READ-GATE/+L	EM2P1B	38	FM7P2B	05	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
READY-BLINK/-L	EM3P2B	14	FM2P2A	14	FJ
READY-GATE/+L	EM2P1B	21	FM1P1A	21	F1
RFSFT-EXT-INT/-L	FM3P2B	15	FM2P2A	15	FJ
RTZ-OR-SEEK/+L	FM3P1A	42	FM6P1B	42	FJ
RTZ/-L	EM1P2B	12	FM2P2A	12	F1
RTZ/-L	EM2P2A	12	FM3P2B	12	F2
-5V	FM7P1A	02	FM7P1A	07	F1
+20V	FM7P1A	45	FM7P1A	08	F1
+5V	EM2P1B	03	FM2P1B	19	F1
+5V	FM2P1B	19	EM2P1B	44	F2
+5V	FM7P1A	44	FM7P1A	09	F1
SEC-BUF/-L	EM1P1A	14	EM2P1A	14	E1
SECTOR-PULSE/-L	EM1P2B	43	FM3P2B	43	FJ
SECTOR-SYNC/-L	EM6P2B	37	FM3P2A	37	F1
SEEK-ERROR/+L	FM3P2B	36	FM2P2A	36	F1
SEEK/-L	EM1P2B	21	EM2P2A	21	F1
SEEK/-L	EM2P2A	21	EM3P2B	21	F2
SELECT/-L	EM1P2A	16	EM2P2B	16	F1
SEQ-HOLD/+L	EM1P2A	04	FM3P2B	04	F1
SEQ-PICK/+L	EM1P2A	03	EM3P2B	03	FJ
SPE	EM4P1A	14	EM4P1B	14	F1
SPE	EM4P1B	14	FM3P1A	14	E2
SPE	EM6P1B	14	FM4P1A	14	E2
START/-L	EM2P1B	10	FM3P2B	11	F1
START/-L	EM2P1B	10	EM1P1A	10	F2
SVO-CLAMP/-L	EM3P2A	30	FM6P2A	30	F1
SVO-CLK2-GND	EM6P2B	41	FM2P2A	41	F1
SVO-CLK2-GND	EM6P2B	43	FM2P2A	43	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
SVO-CLK-N	EM6P2A	36	FM7P2B	36	FJ
SVO-CLK-N-GND	EM6P2A	35	FM7P2B	35	FJ
SVO-CLK-P	EM6P2A	37	FM7P2B	37	F1
SVO-CLK-P-GND	EM6P2A	38	FM7P2B	38	F1
SVO-CLK/-L	EM6P2B	42	FM2P2A	42	F1
SVO-RLY/+L	FM3P1B	36	FM2P1A	36	FJ
TAG-1/+L	EM1P2A	12	FM2P2B	12	FJ
TAG-2/+L	EM1P2A	13	FM2P2B	13	E1
TAG-3/+L	EM1P2A	14	FM2P2B	14	FJ
TGO/-L	EM1P2A	21	EM2P2B	21	F1
TGRG-2WT0/+L (SEL-0/+L)	EM1P2A	35	FM2P2B	35	FJ
TGRG-2WT1/+L (SEL-1/+L)	EM1P2A	36	FM2P2B	36	F1
TGRG-2WT2/+L (SEL-2/+L)	EM1P2A	37	EM2P2B	37	F1
TGRG-2WT3/+L (SEL-3/+L)	EM1P2A	38	FM2P2B	38	F1
TGRG-2WT4/+L	EM1P2A	40	EM2P2B	40	F1
TGRG-2WT5/+L	EM1P2A	41	EM2P2B	41	F1
TGRG-2WT6/+L	EM1P2A	42	EM2P2B	42	F1
TGRG-2WT7/+L	EM1P2A	43	EM2P2B	43	E1
UNSTABLE-SECT/+L	EM2P1B	22	FM1P1B	22	F1
UP-TO-SPEED/+L	EM3P2B	05	FM1P2A	05	F1
VOL-CHANGE/-L	EM3P1A	43	EM3P1B	43	F1
VOL-CHANGE/-L	FM3P1B	43	EM2P1A	43	F2
VOL-CHANGE/-L	EM6P1B	43	FM3P1A	43	F2
VOL-CHANGE/-L	EM2P1A	43	EM1P1B	43	F1

NETNAM	FLOC	FPIN	TLOC	TPIN	BK
WRT-CLK-GND	EM2P2A	28	EM7P2B	28	TP
WRT-CLK/-L	EM2P2A	29	EM7P2B	29	TP
WRT-CLOCK-ENABLE/-L	EM7P2B	12	EM6P2A	12	F.I.
WRT-GATE/-L	EM2P1B	40	EM7P2B	04	F.I.
WRT-PLO-N	EM6P2A	41	EM7P2B	41	F.I.
WRT-PLO-N-GND	EM6P2A	40	EM7P2B	40	F.I.
WRT-PLO-P	EM6P2A	42	EM7P2B	42	F.I.
WRT-PLO-P-GND	EM6P2A	43	EM7P2B	43	F.I.
XFER-CHAR/+L	EM1P2B	09	EM2P2A	09	F.I.
XFER-ZERO/+L	EM1P2B	08	EM2P2A	08	F.I.

STAPLE


STAPLE

FOLD

FOLD

BUSINESS REPLY MAIL
 No Postage Stamp Necessary If Mailed In The United States

FIRST CLASS
 Permit Number 1332
 OKLAHOMA CITY
 OKLAHOMA

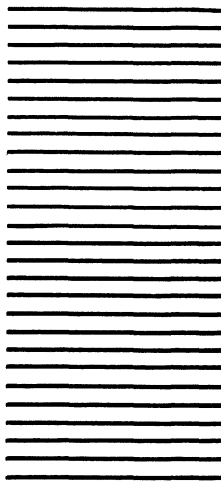

POSTAGE WILL BE PAID BY

MAGNETIC PERIPHERALS INC.

P.O. BOX 12313
 OKLAHOMA CITY, OKLAHOMA 73112

ATTN: TECHNICAL PUBLICATIONS OKH144

FOLD

FOLD

CUT ALONG LINE

77615062
CNFG-004

HARDWARE PRODUCT CONFIGURATOR
DOCUMENT PACKAGE AND
MANUAL TO EQUIPMENT LEVEL
CORRELATION

SCOPE

The documentation provided in this package supplements the Model 9443 Hardware Maintenance Manual and makes it unique to the equipment described below. This documentation package, when referenced, should be identified by the Hardware Product Configurator (HPC) number, and the title 'HPC Document Package', i.e., 77615062 HPC Document Package.

EQUIPMENT

HPC NUMBER 77615062

PACKAGE CONTENTS

DEVICE SPEC AND SWITCH SELECTION 77615062
PARTS DATA CONFIGURATOR 77615062

MANUAL/EQUIPMENT CORRELATION

This package and the Hardware Maintenance Manual listed below will support the above described equipment containing the following ECO's:

ENGINEERING CHANGE ORDER PL 22313
ENGINEERING CHANGE ORDER PL 22326

OTHER INFORMATION

PWA I/O PER SECTION 5 OF HMM 77618950
PWA CNTL/MUX PER SECTION 5 OF HMM 77622350
PWA OPERATOR CNTL PER SEC 5 OF HMM 77622300
PWA RELAY CNTL PER SEC 5 OF HMM 75898850
PWA TERMINATOR PER SEC 5 OF HMM 75886100
HARDWARE MAINTENANCE MANUAL STD-1 75888325
COVERS, HONEYWELL SOFT BLUE



DEVICE SPECIFICATIONS AND SWITCH SELECTIONS

1.0 SCOPE

This document defines the unique mechanical/electrical requirements and switch adjustment selections for the CMD Disk Storage Drive Hardware Product Configurator (HPC) number 77615062 .

Immediately following the Device Specification Summary, Paragraph 2.0, are the switch selection adjustments for the following Printed Circuit Boards:

<u>BOARD TITLE (STD-1)</u>	<u>SHEET</u>
Control Multiplexer Board	4
Coarse Servo Board	5
I/O Board	6

2.0 DEVICE SPECIFICATION SUMMARY

The following is a summary of customer selected items. This configuration has been prepared to meet the requirements of the HPC specified in paragraph 1.0.

Indicates Selection

1. Input Voltage

120 Volts,

2. Frequency

50 Hz

60 Hz

3. RPM

2400

3600

4. Sectoring

Number of Sectors Req. 64

5. Capacity

16 MB

32 MB

64 MB

96 MB

6. Mounting

Rack

Cabinet

7. Terminator

56 Ohms

None

Unique _____

8. Controller Interface

STD - 1

OTHER _____

9. Special Options

1 1/2" Front Panel

10. Standard Options

Full Acoustic

11. PWA Options

Servo Coarse

- a. ON CYL goes false when offset is changed or terminated
- b. ON CYL stays true when offset is changed or terminated



Relay Control

- a. Power configuration is 50 Hz, 220/30/40 Volts
- b. Power configuration is not 50 Hz, 220/30/40 Volts

Control/Mux - 1

- a. ATTENTION false when power applied and CHECK DIAGNOSTIC true brings READY false.
- b. ATTENTION false when power applied and CHECK DIAGNOSTIC does not change READY
- c. ATTENTION true when power applied and CHECK DIAGNOSTIC true brings READY false.
- d. ATTENTION true when power applied and CHECK DIAGNOSTIC does not change READY.

STD-1 CONTROL/MULTIPLEXER BOARD

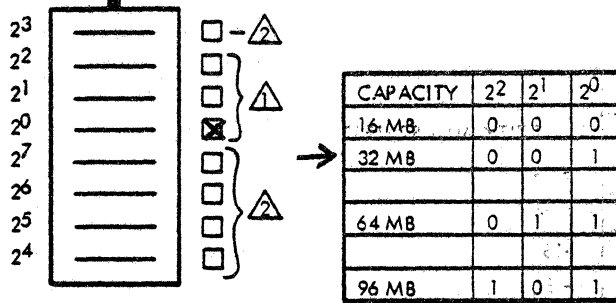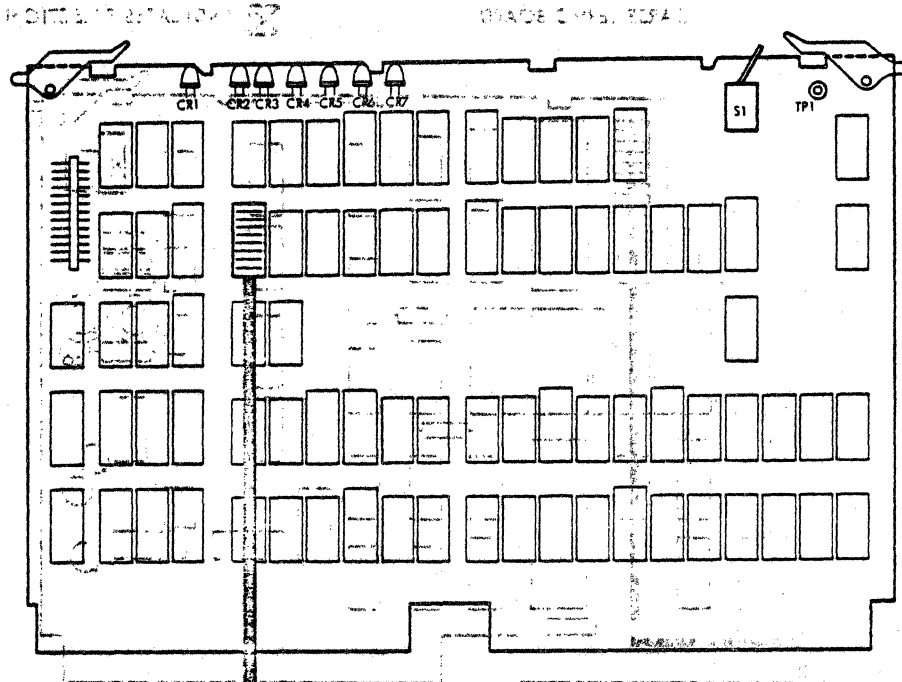



NOTES: = CUT JUMPER (LOGIC 1 IN TABLE)
 VACANT FOR FUTURE USE

X400a

COARSE SERVO BOARD

COARSE SERVO BOARD

☒ INDICATES SELECTION

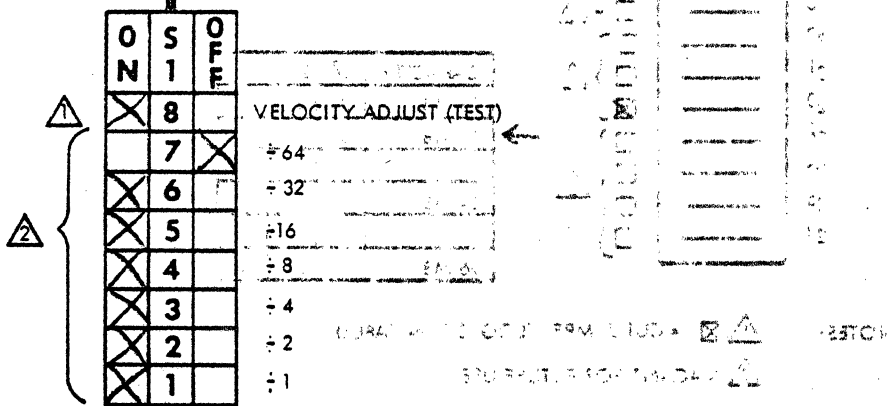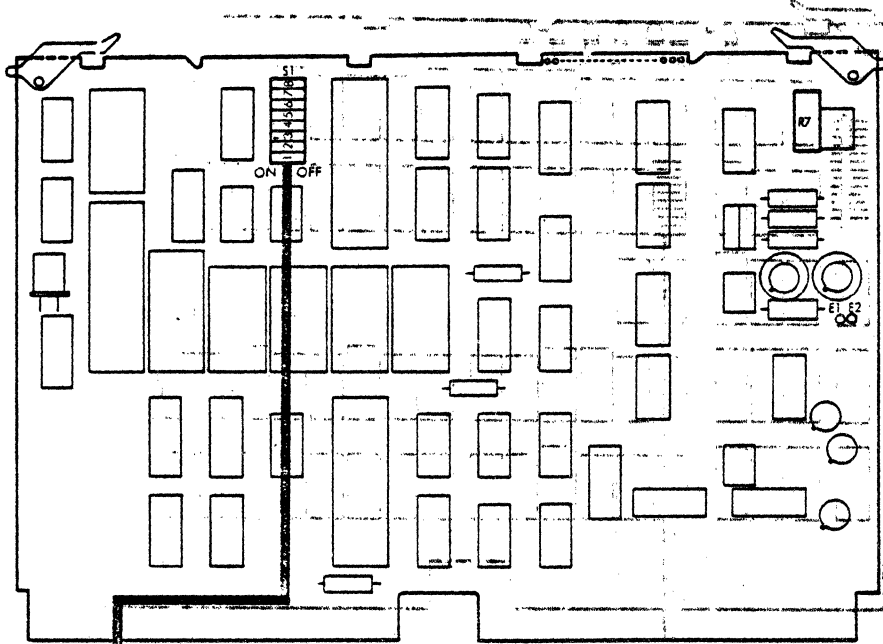


- NOTES:
- 1 S1-8 MUST BE ON (DOWN) FOR NORMAL I/O OPERATION.
 - 2 NO OF SECTORS ARE SET BY SELECTING COMPLEMENT, I.E., FOR 64 SECTORS SET S1-7 OFF AND S1-1 THRU S1-6 ON. -- FOR 24 SECTORS SET S1-5 AND S1-4 OFF, LEAVE ALL OTHERS ON.

X392a

I/O PWA (STD - 1)

INDICATES SELECTION

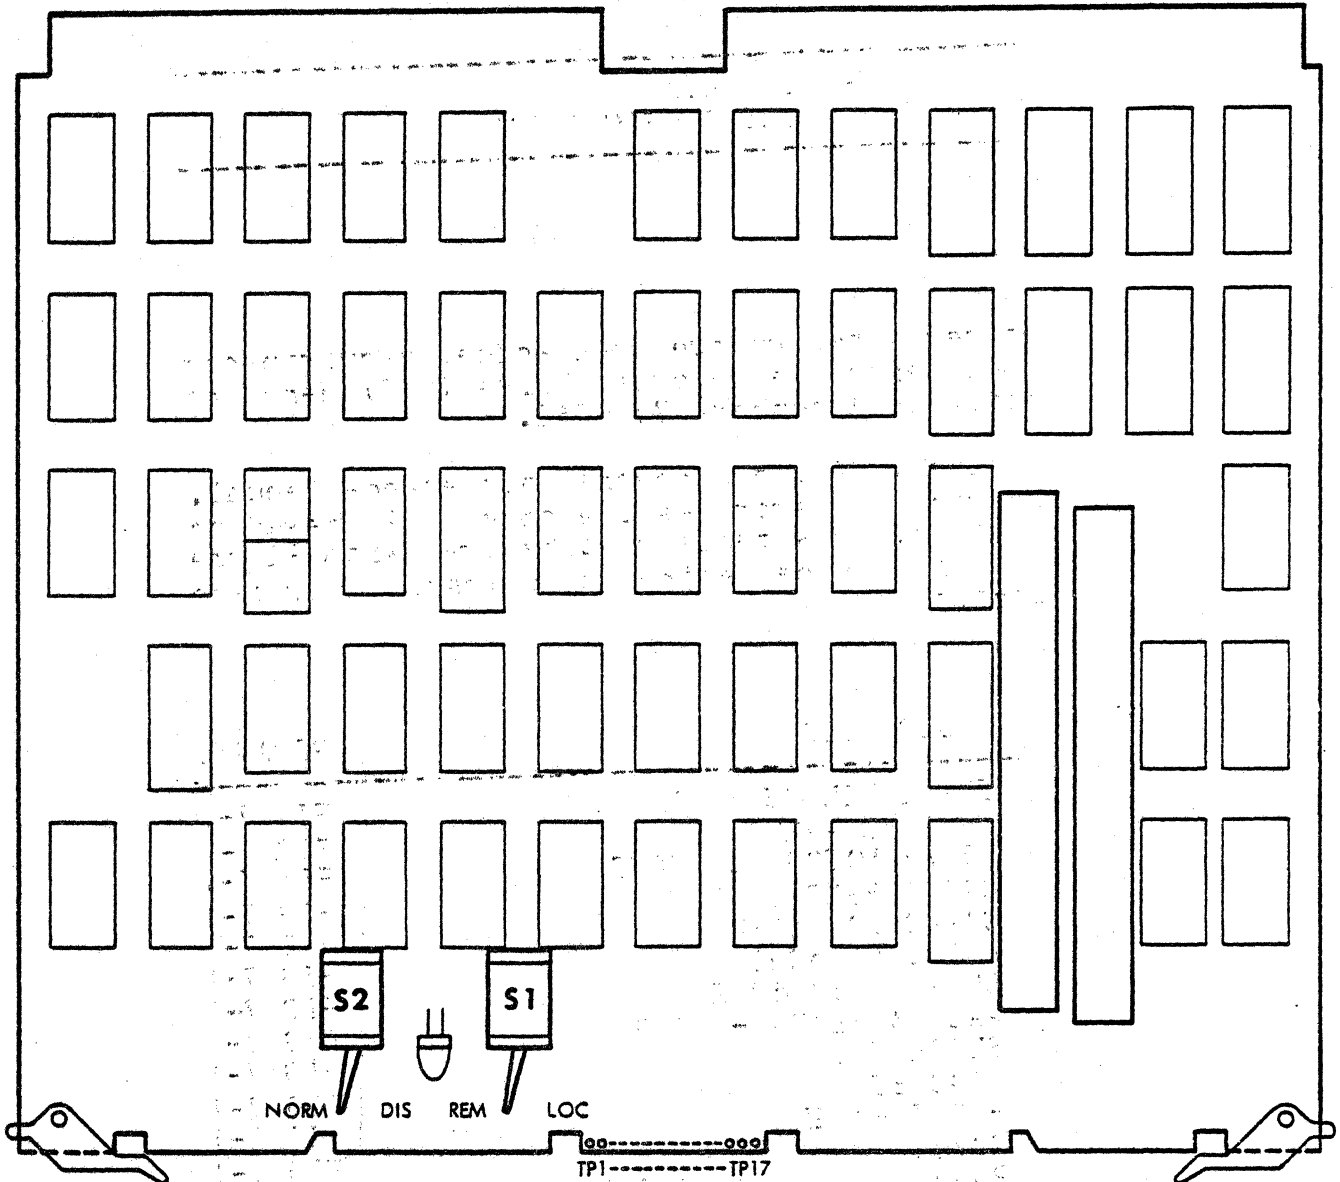

X307a

= NORMAL = REMOTE
 = DISABLE = LOCAL

1 - NORMAL - FOR NORMAL INTERFACE OPERATION.
 - DISABLE - DISABLES INTERFACE CONTROL.
 2 - REMOTE - START BY PICK AND HOLD SEQUENCING FROM I/O.
 - LOCAL - START BY OPERATOR PANEL.

77615062

77615062
CNFG-00J

PARTS DATA
HARDWARE-PRODUCT CONFIGURATOR

SCOPE

This document defines the unique mechanical requirements for the Model 9448 Cartridge Module Drive (CMD) Hardware Product Configurator (HPC) number 77615062.

When used with Section 7 of the Hardware Maintenance Manual, the table below physically describes the above HPC based on customer selected items. This table must be used with Figure 7-1 of Section 7 and it may be desirable to insert this page in front of the Section.

ITEM IDENT NO	DESCRIPTION	REMARKS
500	TOP LEVEL ASSEMBLY	FIG 7-1
509	POWER SUPPLY	FIG 7-1
515	DRIVE MOTOR ASM 60HZ	FIG 7-1
525	DRIVE BELT 60HZ	FIG 7-1
530	CAPACITOR 60HZ	FIG 7-1
540	PWR CORD 60HZ	FIG 7-1
550	BLOWER ASM 60HZ	FIG 7-1
557	PACK & HEADS - 16MB	FIG 7-1
575	SLIDE KIT	FIG 7-1
588	BRACKET PWB	FIG 7-1
595	FRONT PANEL	FIG 7-1
602	COVER	FIG 7-1
610	POWER PLUG ASM 50HZ & 60HZ	FIG 7-1
623	SOUND TREATMENT OPT	FIG 7-1
632	FILTER ASM, RFI	FIG 7-1
636	ENCODING BUTTON KIT (NOT SHOWN)	FIG 7-1
641	FRONT PANEL INSTL KIT	FIG 7-1
664	PANEL, INSERT	FIG 7-1
679	DOOR	FIG 7-1
710	BASE PAN	FIG 7-1
721	FILTER FRAME	FIG 7-1
726	FILTER KIT	FIG 7-1

